



---

## A

about RTM [11-23](#)

administrator

granting rights [14-2](#)

revoking rights [14-2](#)

Alarm configuration, described [2-1](#)

Alarm definitions

catalog descriptions [3-4](#)

creating user-defined

procedure [3-3](#)

described [3-1](#)

searching and viewing

procedure [3-2](#)

searching for [3-2](#)

user-defined, creating [3-3](#)

viewing [3-2](#)

Alarms

applying configuration to all nodes [2-4](#)

configuring, procedure [2-2](#)

definitions

catalogs [3-4](#)

definitions window [4-5](#)

event properties window [4-4](#)

example [4-4](#)

destinations [2-6](#)

destination settings [2-6](#)

directing Syslog messages to a local server [24-3](#)

directing Syslog messages to CiscoWorks2000 server [24-4](#)

event levels [2-7](#)

event level settings [2-7](#)

Event Viewer [2-6](#)

information, described [4-1](#)

SDI trace library [2-6](#)

SDL trace library [2-6](#)

Syslog [2-6](#)

updating, procedure [2-2](#)

viewing information

text format [4-1](#)

XML format [4-2](#)

alert icon

Real-Time Monitoring Tool [11-24](#)

alert notification

configuration

parameters for counter [11-45](#)

parameters for directory servers [11-21](#)

configuring

for a counter [11-34](#)

for directory servers [11-17](#)

- for gateway [11-55](#)
- for heartbeat monitoring [11-13](#)
- e-mail
  - for counter [11-34](#)
  - for directory servers [11-17](#)
  - for gateway [11-55](#)
  - window [11-38](#)
- message [11-34, 11-55](#)
- port/channel status [11-55](#)
- preferences [11-12](#)
- schedule [11-34, 11-55](#)
- thresholds [11-34](#)
- alerts
  - enabling or disabling, by mail [15-14](#)
- automatic
  - database purge [14-28](#)
  - report generation [15-12](#)

---

## B

- base rate [15-2](#)
- bill
  - department [16-3](#)
  - department detail, report results [A-4](#)
  - department summary, report results [A-2](#)
  - individual [16-2](#)
  - individual detail, report results [A-4](#)
  - individual summary, report results [A-2](#)
- Bulk Trace Analysis

- correlation tags [21-12](#)
- creating a report [21-6](#)
- creating a report with multiple views [21-12](#)
- customizing report table headings [21-16](#)
- displaying view information [21-15](#)
- downloading [21-1](#)
- installing [21-2](#)
- opening a report [21-8](#)
- printing a report [21-9](#)
- saving master report [21-10](#)
- searching for data [21-10](#)
- starting and exiting [21-4](#)
- using [21-3](#)
- window [21-5](#)

---

## C

- call data, line graph of (figure) [20-6](#)
- Call Detail Records (CDR) [23-2](#)
- CallMgr Info button [11-8](#)
- call termination
  - CDR search by [19-4, 19-5](#)
- call termination details [19-5](#)
- call types
  - QoS by [17-10](#)
  - QoS by, report results [A-12](#)
- CAR
  - assistant call usage configuration [16-16](#)
  - automatic database purge configuration [14-28](#)

- automatic report generation/alert configuration [15-12](#)
- call termination details, viewing [19-5](#)
- CDR database alerts configuration [14-26](#)
- CDR error report [17-21](#)
- CDR error report configuration [17-21](#)
- CDR search [19-1](#)
- CDR search by cause for call termination configuration [19-4](#)
- CDR search by gateway configuration [19-3](#)
- CDR search by user extension configuration [19-1](#)
- CDR service parameters [13-4](#)
- Cisco IP manager/assistant, described [16-14](#)
- Cisco IP Phone services report configuration [16-19](#)
- conference bridge utilization report [18-15](#)
- configuration, gateway [14-8](#)
- CTI port configuration [16-18](#)
- department bills configuration [16-3](#)
- device report, described [18-1](#)
- dial plan default values [14-6](#)
- disabling automatic database purge [14-29](#)
- error log report output [14-34](#)
- event log report output [14-34](#)
- event log report status [14-32](#)
- gateway report [18-1](#)
- generate report fields [17-8](#), [17-11](#), [17-14](#), [17-17](#)
- individual bills configuration [16-2](#)
- load CDR and CMR values [14-12](#)
- loading [13-5](#)
- logging off [13-7](#)
- logging on [13-7](#)
- log reports, described [14-34](#)
- manager call usage configuration [16-15](#)
- manual database purge configuration [14-29](#)
- notification limits configuration [15-14](#)
- overview [13-1](#)
- QoS by call types configuration [17-10](#)
- QoS by call types report [17-10](#)
- QoS by gateway configuration [17-8](#)
- QoS by gateway report [17-8](#)
- QoS default values [15-11](#)
- QoS detail report
  - call types [17-3](#)
  - voice quality [17-4](#), [17-16](#)
- QoS detail report configuration [17-2](#)
- QoS parameter operators [17-22](#)
- QoS parameters
  - call types [17-12](#)
  - described [17-7](#)
- QoS reports, described [17-2](#)
- QoS summary report [17-5](#)
  - call types [17-6](#)
- QoS summary report configuration [17-5](#)
- QoS values, defining [15-9](#)
- rating engine configuration [15-1](#)
- report configuration, described [15-1](#)
- report results, understanding [A-1](#)
- reports, understanding [A-1](#)

- restoring database purge defaults [14-30](#)
- restoring dial plan default values [14-6](#)
- searching for users [16-21](#)
- system configuration [14-1](#)
- system log screens, described [14-31](#)
- system overview report [17-19](#)
- system overview report configuration [17-19](#)
- system preferences parameters [14-11](#)
- system reports, described [17-1](#)
- top N, described [16-5](#)
- top N by charge
  - call types [16-6](#)
  - report types [16-7](#)
- top N by charge configuration [16-6](#)
- top N by duration
  - call types [16-9](#)
  - report types [16-10](#)
- top N by duration configuration [16-8](#)
- top N by number of calls
  - call types [16-12](#)
  - report types [16-13](#)
- top N by number of calls configuration [16-11](#)
- traffic summary (extn), call types [17-18](#)
- traffic summary, call types [17-14](#)
- traffic summary by extensions report [17-17](#)
- traffic summary by extensions report configuration [17-17](#)
- traffic summary report [17-13](#)
- traffic summary report configuration [17-13](#)
- uninhibited loading of CDR values [14-13](#)
- user reports, described [16-1](#)
- voice mail utilization report [18-17](#)
- category tabs
  - creating a category [11-25](#)
  - Real-Time Monitoring Tool [11-25](#)
  - removing a category [11-27](#)
  - renaming a category [11-27](#)
  - table view [11-25](#)
- CDP
  - accessing CDP driver control [25-2](#)
  - advertisement support [25-1](#)
  - Cisco device support [25-1](#)
  - default settings [25-8](#)
  - driver, usage [25-2](#)
  - enabling CDP protocol driver [25-5](#)
  - installing CDP protocol driver [25-3](#)
  - list of topics [25-1](#)
  - locating updated driver [25-7](#)
  - periodic messages [25-1](#)
  - protocol driver
    - enabling [25-5](#)
    - installing [25-3](#)
  - settings [25-8](#)
  - showing CDP protocol driver property [25-6](#)
  - starting CDP protocol driver [25-4](#)
  - updating IP address for CDP protocol driver [25-6](#)
- CDR
  - automatic database purge configuration [14-28](#)

- CAR plugin, installing [13-1](#)
  - CAR plugin, uninstalling [13-3](#)
  - database alerts, configuration [14-26](#)
  - disabling automatic database purge [14-29](#)
  - disabling loading [14-15](#)
  - dump table [A-27](#)
  - enabling loading [14-16](#)
  - error, report results [A-18](#)
  - error report [17-21](#)
  - load schedule configuration [14-12](#)
  - logging
    - enable [23-3](#)
    - setting up [23-2](#)
  - restoring database purge defaults [14-30](#)
  - restoring the default load schedule [14-14](#)
  - search [19-1](#)
  - search by cause for call termination [19-4, 19-5](#)
  - search by gateway [19-3](#)
  - search by gateway, report results [A-24](#)
  - search by user extension [19-1](#)
  - search by user extension, report results [A-24](#)
  - service parameters, configuring [13-3](#)
  - setting up logging [23-2](#)
  - values
    - CDR load [14-12](#)
- CDR Analysis and Reporting Tool
- described [13-1](#)
  - loading [13-5](#)
  - logging off [13-7](#)
  - logging on [13-7](#)
- CDR service parameters [13-4](#)
- CDR values
- uninhibited loading [14-13](#)
- chart
- counters
    - adding [11-32](#)
    - configuring [11-30](#)
    - performance monitoring [11-32](#)
- Cisco Bulk Trace Analysis tool, described [21-1](#)
- Cisco CallManager, service [5-6](#)
- Cisco CallManager, starting performance tool [20-1](#)
- Cisco CallManager service heartbeat [11-24](#)
- Cisco CDR Insert service [5-11](#)
- Cisco CTIManager service [5-13](#)
- Cisco Database Layer Monitor service [5-15](#)
- Cisco Discovery Protocol (CDP) [22-3, 25-1](#)
- Cisco IP manager/assistant [16-15, 16-16](#)
- assistant call usage [16-16](#)
  - manager call usage [16-15](#)
- Cisco IP phone services, report results [A-7](#)
- Cisco IP Phone services report, configuration [16-19](#)
- Cisco IP Voice Media Streaming Application service [5-19](#)
- Cisco Messaging Interface service [5-22](#)
- Cisco MOH Audio Translator service [5-24](#)
- Cisco RIS Data Collector service [5-26](#)
- Cisco Secure Telnet

- applications [26-3](#)
- components
  - relay server [26-2](#)
  - Telnet client [26-2](#)
  - Telnet server [26-2](#)
- executables [26-3](#)
- list of topics [26-1](#)
- proxy [26-4](#)
- terminate session [26-6](#)
- usage scenario [26-7](#)
- Cisco Telephony Call Dispatcher service [5-29](#)
- Cisco TFTP service [5-31](#)
- CiscoWorks2000
  - defined [22-2](#)
  - list of topics [22-1](#)
  - messages directed to server [24-4](#)
  - SNMP requests [24-4](#)
  - Syslog messages [24-4](#)
- clusters, Real-Time Monitoring Tool [11-7](#)
- CMR dump table [A-27](#)
- CMR values, CDR load [14-12](#)
- commands
  - show.exe [27-1](#)
  - show CDP [25-2](#)
  - show command
    - list of topics [27-1](#)
    - options [27-2](#)
    - parameters [27-2](#)
  - show tech [27-2](#)
  - show win [27-2](#)
  - tndconnect [26-4](#)
- conference bridge utilization, report
  - results [A-23](#)
- conference bridge utilization report [18-15](#)
- configuration, changing Real-Time Monitoring Tool [11-10](#)
- Control Center
  - list of topics [10-1](#)
  - service status [10-3](#)
  - start a service [10-6](#)
  - status icons [10-3](#)
  - stop a service [10-5](#)
  - view status [10-4](#)
- conventions [xxi](#)
- correlation tags, Bulk Trace Analysis [21-12](#)
- counters
  - adding a counter to monitor [11-32](#)
  - alert notification parameters [11-45](#)
  - chart view [11-30](#)
  - configuring alert notification [11-34](#)
  - data sample [11-42](#)
  - data sample parameters [11-43](#)
  - properties [11-41](#)
  - removing from monitoring window [11-40](#)
  - table view [11-30](#)
  - viewing data [11-44](#)
  - zooming [11-39](#)
- creating a Bulk Trace Analysis report [21-6](#)

creating a Bulk Trace Analysis report with multiple views [21-12](#)

CTI port

enabled [16-18](#)

CTI port, configuration [16-18](#)

customizing, reports for automatic generation [15-12](#)

customizing report table headings for Bulk Trace Analysis [21-16](#)

## D

daily charges, notification limits configuration [15-14](#)

daily reports

restoring default schedule [14-21](#)

scheduling [14-16](#)

database

automatic purge configuration [14-28](#)

disabling automatic purge [14-29](#)

restoring purge defaults [14-30](#)

data sample

configuring

parameters [11-43](#)

data sample, Real-Time Monitoring Tool [11-42](#)

debug trace levels

Cisco CallManager fields [5-4, 5-7](#)

Cisco IP Voice Media Streaming Application fields [5-20](#)

Database Layer Monitor fields [5-16](#)

defined [5-34](#)

RIS Data Collector fields [5-27](#)

Telephony Call Dispatcher fields [5-30](#)

TFTP fields [5-32](#)

Trace configuration filter settings [5-46](#)

Trace configuration output settings [5-47](#)

department bill

detail [16-3](#)

summary [16-3](#)

department bill detail, report results [A-4](#)

department bill summary, report results [A-2](#)

detail

department bill [16-3](#)

department bill, report results [A-4](#)

gateway [18-2](#)

gateway, report results [A-19](#)

individual bill [16-2](#)

individual bill, report results [A-4](#)

QoS, report results [A-8](#)

QoS report [17-2](#)

Device Manager menu [25-3](#)

device name based trace monitoring [5-35](#)

device reports [18-1](#)

devices

information window [11-51](#)

monitoring

adding [11-47](#)

gateway [11-54](#)

phones [11-50](#)

re-select [11-31](#)

- viewing gateway status [11-54](#)
  - dial plan, configuration [14-4](#)
  - directory servers
    - alert notification parameters [11-21](#)
    - configuring alert notification [11-17](#)
    - enabling [11-15](#)
    - status [11-15, 11-21](#)
  - directory servers, Real-Time Monitoring Tool [11-21](#)
  - disabling
    - alerts by mail [15-14](#)
    - automatic CAR and CDR database purge [14-29](#)
    - automatic database purge [14-29](#)
    - CDR loading [14-15](#)
  - displaying view information for Bulk Trace Analysis [21-15](#)
  - document
    - audience [xviii](#)
    - conventions [xxi](#)
    - organization [xviii](#)
    - preface [xvii](#)
    - purpose [xvii](#)
  - documentation
    - related [xxi](#)
  - downloading Bulk Trace Analysis [21-1](#)
  - driver
    - CDP driver
      - control [25-2](#)
      - locating interface files [25-7](#)
      - locating updated CDP driver [25-7](#)
      - using [25-2](#)
    - CDP protocol
      - enabling [25-5](#)
      - installing [25-3](#)
      - showing property [25-6](#)
      - starting [25-4](#)
      - updating IP address [25-6](#)
  - dump table, CDR and CMR [A-27](#)
  - duration [15-2](#)
- 
- ## E
- enabling
    - alerts by mail [15-14](#)
    - CDR loading [14-16](#)
    - reports for automatic generation [15-12](#)
  - error
    - CDR report [17-21](#)
    - CDR report, results [A-18](#)
  - error log
    - generating [14-33](#)
    - understanding the details [14-35](#)
    - understanding the output [14-34](#)
  - error log report, output [14-34](#)
  - event levels for alarms [2-7](#)
  - event log
    - generating [14-31](#)
    - understanding the output [14-34](#)

event log report

output [14-34](#)

status [14-32](#)

exiting Bulk Trace Analysis [21-4](#)

extension

CDR search by [19-1](#)

CDR search by, report results [A-24](#)

---

## F

features, remote network management [22-2](#)

---

## G

gateway

CDR search by [19-3](#)

CDR search by, report results [A-24](#)

configuration for CAR [14-8](#)

configuring alert notification [11-55](#)

polling intervals [11-58](#)

QoS by [17-8](#)

QoS by, report results [A-12](#)

refresh rate [11-58](#)

status [11-54](#)

viewing port/channel status [11-54](#)

gateway detail

call types [18-3](#), [18-6](#)

voice quality [18-4](#)

gateway detail, report results [A-19](#)

gateway detail report [18-2](#)

gateway report, configuring [18-1](#)

gateway summary, report results [A-20](#)

gateway summary report [18-5](#)

gateway utilization, report results [A-22](#)

gateway utilization report [18-7](#)

generate report fields [18-8](#), [18-10](#), [18-12](#), [18-14](#),  
[18-16](#), [18-18](#)

generating

error log [14-33](#)

event log [14-31](#)

granting administrator rights [14-2](#)

---

## H

heartbeat

configuring alert notification [11-13](#)

help, Real-Time Monitoring Tool [11-24](#)

---

## I

individual bill

configuration [16-2](#)

detail [16-2](#)

summary [16-2](#)

individual bill detail, report results [A-4](#)

individual bill summary, report results [A-2](#)

initial user ID and password [13-4](#)

installing Bulk Trace Analysis [21-2](#)

introduction, serviceability [1-1](#)  
IOS messages, from ISDN trace files [8-1](#)  
IP path analysis [22-2](#)  
IP Phone Problem Reports  
    listing [12-2](#)  
    list of topics [12-1](#)  
    procedure [12-2](#)  
ISDN trace files, translating to IOS format [8-1](#)

---

## L

line graph of static call data (figure) [20-6](#)  
load  
    CDR schedule configuration [14-12](#)  
    disabling CDR [14-15](#)  
    enabling CDR [14-16](#)  
    restoring the default CDR schedule [14-14](#)  
loading CDR Analysis and Reporting Tool [13-5](#)  
log files, Trace [5-43](#)  
logging off CAR [13-7](#)  
logging on to CAR [13-7](#)

---

## M

mailing a report [16-20](#)  
mail server parameters [14-3](#)  
manual database purge, configuration [14-29](#)  
media information [A-26](#)  
menus, Device Manager [25-3](#)

messages  
    CDP [25-1](#)  
    directing messages to syslog [24-3](#)  
    syslog [24-2](#)  
message translator, using [8-1](#)  
MIB  
    CISCO-CCM-MIB, Updating [28-10](#)  
    control of CDP driver [25-2](#)  
    enable device discovery [25-2](#)  
Microsoft Performance tool [20-1](#)  
monitoring  
    configuring alert notification [11-13](#)  
    performance  
        adding a counter [11-32](#)  
        extending data display [20-5](#)  
        line graph of static call data (figure) [20-6](#)  
        Real-Time Monitoring Tool [11-32](#)  
        report icons (figure) [20-5](#)  
        setting up (figure) [20-3](#)  
        Windows 2000 tool (figure) [20-2](#)  
monthly reports  
    restoring default schedules [14-21](#)  
    scheduling [14-19](#)

---

## N

notification limits [15-14](#)  
NT Event Viewer [2-6](#)

---

**O**

opening a Bulk Trace Analysis report [21-8](#)

organization [xviii](#)

overview

    automatic report generation [15-12](#)

    CAR [13-1](#)

    department bill reports [16-3](#)

    device reports [18-1](#)

    individual bill reports [16-2](#)

    system report [17-19](#)

---

**P**

parameters

    factoring time of day for rating [15-3](#)

    factoring voice quality for rating [15-5](#)

    mail server configuration [14-3](#)

    restoring default values for rating [15-7](#)

    setting the base rate and duration for rating [15-2](#)

    system configuration [14-1](#)

password, initial use [13-4](#)

path analysis, configuration [23-1](#)

PathTool [22-2](#)

performance

    monitoring

        extending data display [20-5](#)

        line graph of static call data (figure) [20-6](#)

        report icons (figure) [20-5](#)

        setting up (figure) [20-3](#)

        Windows 2000 (figure) [20-2](#)

    removing a counter [11-40](#)

    tool, starting [20-1](#)

    viewing performance statistics [20-4](#)

phones

    Real-Time Monitoring Tool [11-50](#)

    viewing information [11-50](#)

plug-in software, Bulk Trace Analysis [21-1](#)

polling intervals

    configuring sample rate [11-28](#)

    refresh rate for gateway [11-58](#)

port/channel status [11-54](#)

preface [xvii](#)

preferences

    alert notification [11-12](#)

    creating Real-Time Monitoring Tool configuration [11-10](#)

    Real-Time Monitoring Tool [11-8](#)

    system configuration [14-10](#)

    viewing Real-Time Monitoring Tool [11-9](#)

printing a Bulk Trace Analysis report [21-9](#)

process activity, Real-Time Monitoring Tool [11-20](#)

properties, counter [11-41](#)

purge

    automatic database configuration [14-28](#)

    disabling automatic database [14-29](#)

    restoring database defaults [14-30](#)

**Q**

## Q931 translator

- list of topics [8-1](#)
- message, using [8-1](#)
- procedure [8-1](#)

## QoS

- default values [15-11](#)
  - defining values [15-9](#)
  - notification limits configuration [15-14](#)
  - restoring default values [15-10](#)
- QoS by call types, report results [A-12](#)
- QoS by call types report [17-10](#)
- QoS by gateway, report results [A-12](#)
- QoS by gateway report [17-8](#)
- QoS detail, report results [A-8](#)
- QoS detail report
- call types [17-3](#)
  - voice quality [17-4, 17-16](#)
- QoS parameter operators [17-22](#)
- QoS parameters, call types [17-12](#)
- QoS summary, report results [A-10](#)
- QoS summary report
- call types [17-6](#)

**R**

- rating engine, configuration [15-1](#)
- rating parameters

- factoring time of day [15-3](#)
- factoring voice quality [15-5](#)
- restoring default values [15-7](#)
- setting the base rate and duration [15-2](#)

Real-Time Information Server (RIS) data collector [28-8](#)

## Real-Time Monitoring Tool

- about [11-23](#)
- adding a counter to monitor [11-32](#)
- adding a CTI application to monitor [11-62](#)
- adding a CTI manager device to monitor [11-63](#)
- adding a device to monitor [11-47](#)
- adding CTI manager lines to monitor [11-65](#)
- alert icon
  - viewing [11-24](#)
- alert notification [11-12](#)
- CallMgr Info button [11-8](#)
- category tabs
  - creating [11-25](#)
  - described [11-25](#)
  - removing [11-27](#)
  - renaming [11-27](#)
- changing configuration [11-10](#)
- chart view, configuring [11-30](#)
- cluster information [11-7](#)
- configuring alert notification for counter [11-34](#)
- configuring alert notification for gateway [11-55](#)
- counter alert configuration parameters [11-45](#)

- counter data sample configuration
  - parameters [11-43](#)
- counter properties [11-41](#)
- counters
  - adding [11-32](#)
  - alert notify [11-34](#)
  - chart view [11-30](#)
  - data sample [11-42](#)
  - monitor [11-32](#)
  - properties [11-41](#)
  - removing [11-40](#)
  - table view [11-30](#)
  - viewing data [11-44](#)
  - zooming [11-39](#)
- creating configuration preferences [11-10](#)
- CTI application monitoring,
  - understanding [11-61](#)
- customizing Real-Time Monitoring Tool
  - window [11-6](#)
- data samples [11-42](#)
- default configuration [11-5](#)
- directory servers alert configuration
  - parameters [11-21](#)
- gateway status [11-54](#)
- heartbeat, procedure [11-12](#)
- help [11-24](#)
- list of topics [11-1](#)
- loading [11-3](#)
- performance counters, understanding [11-32](#)
- performance monitoring [11-32](#)
- polling interval [11-58](#)
  - polling interval, configuring [11-28](#)
  - preferences [11-8](#)
  - removing a counter [11-40](#)
  - re-select [11-31](#)
  - resource usage [11-18](#)
  - sample rate [11-28](#)
  - sample rate, configuring [11-28](#)
  - status bar [11-4](#)
  - table view, configuring [11-30](#)
  - viewing data [11-44](#)
  - viewing directory servers [11-21](#)
  - viewing gateway status [11-54](#)
  - viewing last 24 hr. calls [11-18](#)
  - viewing phone information [11-50](#)
  - viewing process activity [11-20](#)
- window
  - displayed [11-5](#)
  - overview [11-4](#)
  - with CM-default configuration [11-6](#)
- window options
  - creating a category [11-25](#)
  - removing a category [11-27](#)
  - renaming a category [11-27](#)
  - re-select [11-31](#)
  - zooming a counter [11-39](#)
- related documentation [xxi](#)
- remote network management, features [22-2](#)
- report
  - call termination details [19-5](#)

- CDR error [17-21](#)
- CDR search [19-1](#)
- CDR search by cause for call termination [19-4](#)
- CDR search by gateway [19-3](#)
- CDR search by user extension [19-1](#)
- Cisco IP manager/assistant [16-15, 16-16](#)
- Cisco IP phone services [16-19](#)
- conference bridge utilization [18-15](#)
- CTI port enabled [16-18](#)
- department bill [16-3](#)
- device [18-1](#)
- for Bulk Trace Analysis [21-3](#)
- gateway detail report [18-2](#)
- gateway summary [18-5](#)
- gateway utilization [18-7](#)
- individual bill [16-2](#)
- mailing [16-20](#)
- QoS by call types report [17-10](#)
- QoS by gateway report [17-8](#)
- QoS detail [17-2](#)
- QoS summary report [17-5](#)
- route group utilization [18-9](#)
- route list utilization [18-11](#)
- route pattern utilization [18-13](#)
- system [17-1](#)
- system overview [17-19](#)
- top N by charge [16-6](#)
- top N by duration [16-8](#)
- top N by number of calls [16-11](#)
- traffic summary [17-13](#)
- traffic summary by extensions [17-17](#)
- voice mail utilization [18-17](#)
- report configuration, CAR [15-1](#)
- report icons, performance (figure) [20-5](#)
- report results
  - CDR error [A-18](#)
  - CDR search by gateway [A-24](#)
  - CDR search by user extension [A-24](#)
  - Cisco IP phone services [A-7](#)
  - conference bridge [A-23](#)
  - department bill, detail [A-4](#)
  - department bill, summary [A-2](#)
  - gateway detail [A-19](#)
  - gateway summary [A-20](#)
  - gateway utilization [A-22](#)
  - individual bill, detail [A-4](#)
  - individual bill, summary [A-2](#)
  - QoS by call types [A-12](#)
  - QoS by gateway [A-12](#)
  - QoS detail [A-8](#)
  - QoS summary [A-10](#)
  - route group utilization [A-22](#)
  - route list utilization [A-22](#)
  - route pattern utilization [A-22](#)
  - system overview [A-16](#)
  - top N by charge [A-6](#)
  - top N by duration [A-6](#)
  - top N by number of calls [A-6](#)

- traffic summary [A-14](#)
  - traffic summary by extensions [A-14](#)
  - voice mail [A-23](#)
  - reports
    - automatic generation configuration [15-12](#)
    - automatic report generation/alert [15-12](#)
    - customizing for automatic generation [15-12](#)
    - enabling for automatic generation [15-12](#)
    - restoring default schedules [14-21](#)
    - scheduling daily [14-16](#)
    - scheduling monthly [14-19](#)
    - scheduling weekly [14-18](#)
    - user [16-1](#)
  - re-select a device status [11-31](#)
  - resource usage
    - Real-Time Monitoring Tool [11-18](#)
    - viewing directory servers [11-21](#)
    - viewing last 24 hr. calls [11-18](#)
    - viewing process activity [11-20](#)
  - restoring
    - CAR and CDR database purge defaults [14-30](#)
    - default CDR load schedule [14-14](#)
    - default QoS values [15-10](#)
    - default schedule for daily, weekly, and monthly reports [14-21](#)
    - default values for rating parameters [15-7](#)
  - revoking administrator rights [14-2](#)
  - rights
    - granting administrator [14-2](#)
    - revoking administrator [14-2](#)
  - RIS data collector [28-8](#)
  - route
    - group utilization, report results [A-22](#)
    - list utilization, report results [A-22](#)
    - pattern utilization, report results [A-22](#)
  - route group utilization report [18-9](#)
  - route list utilization report [18-11](#)
  - route pattern utilization report [18-13](#)
- 
- ## S
- sample rate, configuring [11-28](#)
  - saving the Bulk Trace Analysis master report [21-10](#)
  - schedule
    - CDR load configuration [14-12](#)
    - restoring the default CDR load [14-14](#)
  - scheduling
    - daily reports [14-16](#)
    - monthly reports [14-19](#)
    - weekly reports [14-18](#)
  - SDI log file, saving to IOS format [8-1](#)
  - SDI trace [6-2](#)
  - SDL configuration
    - characteristics
      - Cisco CallManager service [5-41](#)
      - Cisco CTIManager service [5-42](#)
    - filter settings
      - Cisco CallManager service [5-39](#)
      - Cisco CTIManager [5-40](#)

- procedure [5-39](#)
- SDL trace [6-5](#)
- search
  - CDR by cause for call termination [19-4, 19-5](#)
  - CDR by gateway [19-3](#)
  - CDR by gateway, report results [A-24](#)
  - CDR by user extension [19-1](#)
  - CDR by user extension, report results [A-24](#)
  - CDRs [19-1](#)
- searching for data in a Bulk Trace Analysis report [21-10](#)
- searching for users, CAR [16-21](#)
- server, mail parameters [14-3](#)
- serviceability
  - introduction [1-1](#)
- Service Activation
  - activate services [9-3](#)
  - activation status [9-2](#)
  - deactivate services [9-5](#)
  - delete services [9-9](#)
  - list of topics [9-1](#)
  - service considerations [9-6](#)
- services
  - checking status using Control Center [10-3](#)
  - checking status using Service Activation [9-2](#)
  - status icons [10-3](#)
- SESSIONTIMEOUT [14-11](#)
- show CDP command [25-2](#)
- show command
  - list of topics [27-1](#)
  - options [27-2](#)
  - parameters [27-2](#)
  - syntax [27-1](#)
- SNMP
  - agent, enabling [24-4](#)
  - Cisco CallManager traps
    - configuring [28-5](#)
  - list of topics [28-1](#)
  - RIS data collector [28-8](#)
  - SNMP agent
    - configuring SNMP security [28-2](#)
    - setting SNMP trap receiver [28-3](#)
  - SNMP extension agent
    - starting [28-4](#)
    - stopping [28-7](#)
  - SNMP RIS data collector
    - starting [28-8](#)
    - stopping [28-9](#)
  - support [22-3](#)
- starting Bulk Trace Analysis [21-4](#)
- status bar [11-4](#)
- summary
  - department bill [16-3](#)
  - department bill, report results [A-2](#)
  - gateway [18-5](#)
  - gateway, report results [A-20](#)
  - individual bill [16-2](#)
  - individual bill, report results [A-2](#)
  - QoS [17-5](#)

- QoS, report results [A-10](#)
- traffic [17-13](#)
- traffic, report results [A-14](#)
- traffic by extensions [17-17](#)
- traffic by extensions, report results [A-14](#)
- syntax
  - show command [27-1](#)
  - tndconnect [26-4](#)
- Syslog
  - analyzer [22-2](#)
  - collector [22-2](#)
- syslog
  - analysis, components (figure) [24-2](#)
  - directing messages [24-2](#)
  - directing messages to CiscoWorks2000 server [24-4](#)
  - directing messages to local server [24-3](#)
- system logging, components (figure) [24-2](#)
- system log management
  - configuration [24-1](#)
  - described [24-1](#)
- system log screens
  - CAR [14-31](#)
- system overview, report results [A-16](#)
- system overview report [17-19](#)
- system parameters, configuration [14-1](#)
- system preferences
  - configuration [14-10](#)
- system preferences parameters for CAR [14-11](#)

---

## T

- table, CDR and CMR dump [A-27](#)
- table view, creating [11-25](#)
- Telnet
  - connect with daemon [26-6](#)
  - plan for Windows [26-7](#)
  - terminate session [26-6](#)
- Telnet, Cisco Secure
  - applications [26-3](#)
  - components
    - relay server [26-2](#)
    - Telnet client [26-2](#)
    - Telnet server [26-2](#)
  - executables [26-3](#)
  - list of topics [26-1](#)
  - proxy [26-4](#)
  - terminate session [26-6](#)
  - usage scenario [26-7](#)
- time of day [15-3](#)
- tndconnect
  - connect with Telnet daemon [26-6](#)
  - display all options [26-5](#)
  - program structure [26-5](#)
  - syntax [26-4](#)
  - terminate session [26-4](#)
- Tools
  - phone problem reports viewer [12-1](#)
- top N

- by charge [16-6](#)
- by charge, report results [A-6](#)
- by duration [16-8](#)
- by duration, report results [A-6](#)
- by number of calls [16-11](#)
- by number of calls, report results [A-6](#)
- top N by charge [16-6](#)
  - call types [16-6](#)
  - report types [16-7](#)
- top N by charge, report results [A-6](#)
- top N by duration [16-8](#)
  - call types [16-9](#)
  - configuration [16-8](#)
  - report types [16-10](#)
- top N by duration, report results [A-6](#)
- top N by number of calls [16-11](#)
  - call types [16-12](#)
  - configuration [16-11](#)
  - report types [16-13](#)
- top N by number of calls, report results [A-6](#)
- Trace
  - analysis
    - list of topics [7-1](#)
    - records in XML format [7-8](#)
    - results [7-7](#)
    - SDI trace [7-2](#)
    - SDL trace [7-5](#)
  - analysis configuration, described [7-1](#)
  - Cisco CallManager service
    - configuring [5-6](#)
    - SDL configuration characteristics [5-41](#)
    - SDL configuration filter settings [5-39](#)
    - trace fields [5-4, 5-7](#)
  - Cisco CDR Insert service [5-11](#)
  - Cisco CTIManager service
    - configuring [5-13](#)
    - SDL configuration characteristics [5-42](#)
    - SDL configuration filter settings [5-40](#)
  - Cisco Database Layer Monitor service
    - configuring [5-15](#)
    - trace fields [5-16](#)
  - Cisco Extended Functions service
    - configuring [5-3](#)
  - Cisco IP Voice Media Streaming Application service
    - configuring [5-19](#)
    - trace fields [5-20](#)
  - Cisco Messaging Interface service [5-22](#)
  - Cisco MOH Audio Translator service [5-24](#)
  - Cisco RIS Data Collector service
    - configuring [5-26](#)
    - trace fields [5-27](#)
  - Cisco Telephony Call Dispatcher service
    - configuring [5-29](#)
    - trace fields [5-30](#)
  - Cisco TFTP service
    - configuring [5-31](#)
    - trace fields [5-32](#)
  - collection

- list of topics [6-1](#)
- results [6-3](#)
- results exceed 2 MB [6-5](#)
- SDI trace information [6-2](#)
- SDL trace information [6-5](#)
- collection configuration, described [6-1](#)
- configuration
  - described [5-1](#)
  - filter settings [5-46](#)
  - list of topics [5-1](#)
  - output settings [5-47](#)
- debug trace levels [5-34](#)
- device name based trace monitoring [5-35](#)
- log files
  - field descriptions [5-45](#)
  - viewing [5-43](#)
- Q931 translator [8-1](#)
- records in XML format [7-8](#)
- SDI trace
  - analysis [7-2](#)
  - collection [6-2](#)
- SDL trace
  - analysis [7-5](#)
  - collection [6-5](#)
- traffic summary [17-13](#)
- traffic summary (extn), call types [17-18](#)
- traffic summary, call types [17-14](#)
- traffic summary, report results [A-14](#)
- traffic summary by extensions, report results [A-14](#)

- traffic summary by extensions report [17-17](#)

---

## U

- uninhibited loading of CDR values [14-13](#)
- user-defined alarm descriptions [3-3](#)
- user ID, initial use [13-4](#)
- user reports, described [16-1](#)
- using Bulk Trace Analysis [21-3](#)
- utilization
  - conference bridge [18-15](#)
  - conference bridge, report results [A-23](#)
  - gateway [18-7](#)
  - gateway, report results [A-22](#)
  - route group [18-9](#)
  - route group, report results [A-22](#)
  - route list [18-11](#)
  - route list, report results [A-22](#)
  - route pattern [18-13](#)
  - route pattern, report results [A-22](#)
  - voice mail [18-17](#)
  - voice mail, report results [A-23](#)

---

## V

- voice mail utilization, report results [A-23](#)
- voice mail utilization report [18-17](#)
- voice quality [15-5](#)

---

**W**

weekly reports

restoring default schedule [14-21](#)

scheduling [14-18](#)

windows

customizing Real-Time Monitoring  
Tool [11-6](#)

device monitoring [11-4](#)

options

renaming a category [11-27](#)

sample rate [11-28](#)

performance monitoring [11-4](#)

Real-Time Monitoring Tool

displayed [11-5](#)

overview [11-4](#)

Real-Time Monitoring Tool with CM-default  
configuration [11-6](#)

status bar [11-4](#)

Windows 2000 performance monitoring tool  
(figure) [20-2](#)

---

**X**

XML

trace files, Q931 translator [8-1](#)

using with Bulk Trace Analysis [21-1](#)

XML format, Trace records in [7-8](#)

XML format, viewing alarms [4-2](#)

---

**Z**

zooming a counter [11-39](#)