



INDEX

A

- alert central, accessing [7-1](#)
- alert notification
 - configuring parameters for counter (table) [5-4](#)
 - e-mail for counter [5-3](#)
 - message [5-3](#)
 - schedule [5-3](#)
 - thresholds [5-3](#)
- alert notification, configuring [7-5](#)
- alerts
 - accessing alert central [7-1](#)
 - action configuration (table) [6-5](#)
 - configuring actions [7-6](#)
 - configuring e-mail for [7-5](#)
 - customization (table) [6-3](#)
 - emailing notification [4-3](#)
 - logs, described [6-6](#)
 - notification for a counter [4-3](#)
 - preconfigured [6-2](#)
 - scheduling notification [4-3](#)
 - setting properties [7-2](#)
 - suspending [7-5](#)
 - thresholds [4-3](#)

C

- category
 - adding [2-8](#)
 - deleting [2-9](#)
 - renaming [2-8](#)
- category tabs [4-2](#)
- sample rates [4-3](#)

- Cisco Analog Access
 - perfmon object and counters [B-2](#)
- Cisco Annunciator Device
 - perfmon object and counters [B-2](#)
- Cisco CallManager
 - perfmon object and counters [B-3](#)
- Cisco CallManager Attendant Console
 - perfmon object and counters [B-10](#)
- Cisco CallManager System Performance
 - perfmon object and counters [B-12](#)
- Cisco CTIManager
 - perfmon object and counters [B-14](#)
- Cisco Dual-Mode Mobility perfmon object and counters [B-15](#)
- Cisco Extension Mobility
 - perfmon object and counters [B-16](#)
- Cisco Gatekeeper
 - perfmon object and counters [B-17](#)
- Cisco H.323
 - perfmon object and counters [B-17](#)
- Cisco Hunt Lists
 - perfmon object and counters [B-18](#)
- Cisco HW Conference Bridge Device
 - perfmon object and counters [B-19](#)
- Cisco IP Manager Assistant
 - perfmon object and counters [B-20](#)
- Cisco Lines
 - perfmon object and counters [B-20](#)
- Cisco Locations
 - perfmon object and counters [B-20](#)
- Cisco Media Streaming Application
 - perfmon object and counters [B-21](#)
- Cisco Messaging Interface

- perfmon object and counters [B-24](#)
- Cisco MGCP BRI Device
 - perfmon object and counters [B-25](#)
- Cisco MGCP FXO Device
 - perfmon object and counters [B-26](#)
- Cisco MGCP FXS Device
 - perfmon object and counters [B-26](#)
- Cisco MGCP Gateways
 - perfmon object and counters [B-27](#)
 - Cisco MGCP Gateways [B-27](#)
- Cisco MGCP PRI Device
 - perfmon object and counters [B-27](#)
- Cisco MGCP TICAS Device
 - perfmon object and counters [B-28](#)
- Cisco MOH Device
 - perfmon object and counters [B-29](#)
- Cisco MTP Device
 - perfmon object and counters [B-30](#)
- Cisco Phones
 - perfmon object and counters [B-31](#)
- Cisco Presence Feature
 - perfmon object and counters [B-31](#)
- Cisco QSIG Features
 - perfmon object and counters [B-32](#)
- Cisco SIP
 - perfmon object and counters [B-32](#)
- Cisco SIP Stack
 - perfmon object and counters [B-33](#)
- Cisco SW Conf Bridge Device
 - perfmon object and counters [B-42](#)
- Cisco TFTP Server
 - perfmon object and counters [B-43](#)
- Cisco Tomcat Connector
 - perfmon object and counters [A-2](#)
- Cisco Transcode Device
 - perfmon object and counters [B-46](#)
- Cisco Video Conference Bridge
 - perfmon object and counters [B-47](#)
- Cisco WebDialer
 - perfmon object and counters [B-48](#)
- Cisco WSM Connector
 - perfmon object and counters [B-48](#)
- configuration profile
 - adding [2-6](#)
 - deleting [2-7](#)
 - restoring [2-7](#)
 - using default [2-6](#)
- conventions [I-xi](#)
- counters
 - adding [4-3](#)
 - alert notification [4-3](#)
 - alert notification parameters (table) [5-4](#)
 - chart [4-3](#)
 - configuring alert notification for [5-3](#)
 - data sample, configuring [5-7](#)
 - data sample parameters (table) [5-8](#)
 - properties [4-3](#)
 - viewing data [5-8](#)
 - zooming [4-3, 5-6](#)
- CTI
 - Cisco CTIManager
 - perfmon object and counters [B-14](#)
 - finding CTI devices [12-4](#)
 - monitoring CTI applications [12-7](#)
 - monitoring CTI devices [12-8](#)
 - monitoring CTI lines [12-9](#)
 - viewing CTIManager information [12-7](#)

D

- Database Change Notification Client
 - perfmon object and counters [A-5](#)
- Database Change Notification Server
 - perfmon object and counters [A-6](#)
- Database Change Notification Subscription
 - perfmon object and counters [A-6](#)
- Database Local DSN
 - perfmon object and counters [A-6](#)

data sample
 configuring parameters (table) [5-8](#)

DB User Host Information Counters
 perfmon object and counters [A-7](#)

document
 audience [I-x](#)
 conventions [I-xi](#)
 organization [I-x](#)
 purpose [I-ix](#)

documentation
 related [I-xi](#)

E

e-mail configuration
 alerts [7-5](#)

Enterprise Replication DBSpace Monitors
 perfmon object and counters [A-7](#)

Enterprise Replication Perfmon Counters
 perfmon object and counters [A-7](#)

I

IP
 perfmon object and counters [A-7](#)

L

Log Partition Monitoring
 configuring [8-1](#)

logs
 alerts [6-6](#)

M

Memory
 perfmon object and counters [A-9](#)

monitoring

CTI applications [12-7](#)

CTI devices [12-4, 12-8](#)

CTI lines [12-9](#)

gateways [12-4](#)

H.323 devices [12-4](#)

hunt list [12-4](#)

media resources [12-4](#)

performance [4-3](#)

phones [12-4](#)

SIP trunk [12-4](#)

voice-mail devices [12-4](#)

N

Network Interface
 perfmon object and counters [A-10](#)

Number of Replicates
 perfmon object and counters [A-11](#)

O

object and counters
 Database Change Notification Client [A-5](#)

organization [I-x](#)

P

Partition
 perfmon object and counters [A-11](#)

perfmon
 counters
 adding [4-3](#)
 category tabs, described [4-2](#)
 chart [4-3](#)
 properties [4-3](#)
 sample rates [4-3](#)
 zooming [4-3](#)

object and counters

- Cisco Analog Access [B-2](#)
- Cisco Annunciator Device [B-2](#)
- Cisco CallManager [B-3](#)
- Cisco CallManager Attendant Console [B-10](#)
- Cisco CallManager System Performance [B-12](#)
- Cisco CTIManager [B-14](#)
- Cisco Dual-Mode Mobility [B-15](#)
- Cisco Extension Mobility [B-16](#)
- Cisco Gatekeeper [B-17](#)
- Cisco H.323 [B-17](#)
- Cisco Hunt Lists [B-18](#)
- Cisco HW Conference Bridge Device [B-19](#)
- Cisco IP Manager Assistant [B-20](#)
- Cisco Lines [B-20](#)
- Cisco Locations [B-20](#)
- Cisco MbilityManager [B-29](#)
- Cisco Media Streaming Application [B-21](#)
- Cisco Messaging Interface [B-24](#)
- Cisco MGCP FXO Device [B-26](#)
- Cisco MGCP FXS Device [B-26](#)
- Cisco MGCP Gateways [B-27](#)
- Cisco MGCP PRI Device [B-27](#)
- Cisco MGCP T1CAS Device [B-28](#)
- Cisco MOH Device [B-29](#)
- Cisco MTP Device [B-30](#)
- Cisco Phones [B-31](#)
- Cisco Presence Feature [B-31](#)
- Cisco QSIG Feature [B-32](#)
- Cisco SIP [B-32](#)
- Cisco SIP Stack [B-33](#)
- Cisco SIP Station [B-41](#)
- Cisco SW Conf Bridge Device [B-42](#)
- Cisco TFTP Server [B-43](#)
- Cisco Tomcat Connector [A-2](#)
- Cisco Transcode Device [B-46](#)
- Cisco Video Conference Bridge [B-47](#)
- Cisco WebDialer [B-48](#)
- Cisco WSM Connector [B-48](#)
- Database Change Notification Server [A-6](#)
- Database Change Notification Subscription [A-6](#)
- Database Local DSN [A-6](#)
- DB User Host Information [A-7](#)
- Enterprise Replication [A-7](#)
- Enterprise Replication DBSpace Monitors [A-7](#)
- IP [A-7](#)
- Memory [A-9](#)
- Network Interface [A-10](#)
- Partition [A-11](#)
- Process [A-12](#)
- Processor [A-13](#)
- System [A-14](#)
- TCP [A-14](#)
- Thread [A-15](#)
- Tomcat JVM [A-4](#)
- Tomcat Web Application [A-4](#)
- Perfmon data logging [5-12](#)
- performance counter
 - adding a counter instance [5-3](#)
 - removing [5-3](#)
- performance counters
 - displaying in chart format [5-1](#)
 - displaying in table format [5-1](#)
- performance monitoring
 - category tabs, described [4-2](#)
 - configuring alert notification for counters [5-3](#)
 - counters
 - adding [4-3](#)
 - chart [4-3](#)
 - properties [4-3](#)
 - zooming [4-3](#)
- Number of Replicates [A-11](#)
- object and counters
 - Cisco Analog Access [B-2](#)
 - Cisco Annunciator Device [B-2](#)
 - Cisco CallManager [B-3](#)
 - Cisco CallManager Attendant Console [B-10](#)
 - Cisco CallManager System Performance [B-12](#)
 - Cisco CTIManager [B-14](#)

- Cisco Dual-Mode Mobility [B-15](#)
 - Cisco Extension Mobility [B-16](#)
 - Cisco Gatekeeper [B-17](#)
 - Cisco H.323 [B-17](#)
 - Cisco Hunt Lists [B-18](#)
 - Cisco HW Conference Bridge Device [B-19](#)
 - Cisco IP Manager Assistant [B-20](#)
 - Cisco Lines [B-20](#)
 - Cisco Locations [B-20](#)
 - Cisco Media Streaming Application [B-21](#)
 - Cisco Messaging Interface [B-24](#)
 - Cisco MGCP BRI Device [B-25](#)
 - Cisco MGCP FXO Device [B-26](#)
 - Cisco MGCP FXS Device [B-26](#)
 - Cisco MGCP Gateways [B-27](#)
 - Cisco MGCP PRI Device [B-27](#)
 - Cisco MGCP TICAS Device [B-28](#)
 - Cisco MobilityManager [B-29](#)
 - Cisco MOH Device [B-29](#)
 - Cisco MTP Device [B-30](#)
 - Cisco Phones [B-31](#)
 - Cisco Presence Feature [B-31](#)
 - Cisco QSIG Feature [B-32](#)
 - Cisco SIP [B-32](#)
 - Cisco SIP Stack [B-33](#)
 - Cisco SIP Station [B-41](#)
 - Cisco SW Conf Bridge Device [B-42](#)
 - Cisco TFTP Server [B-43](#)
 - Cisco Tomcat Connector [A-2](#)
 - Cisco Transcode Device [B-46](#)
 - Cisco Video Conference Bridge [B-47](#)
 - Cisco WebDialer [B-48](#)
 - Cisco WSM Connector [B-48](#)
 - Database Change Notification Server [A-6](#)
 - Database Change Notification Subscription [A-6](#)
 - Database Local DSN [A-6](#)
 - DB User Host Information [A-7](#)
 - Enterprise Replication [A-7](#)
 - Enterprise Replication DBSpace Monitors [A-7](#)
 - IP [A-7](#)
 - Memory [A-9](#)
 - Network Interface [A-10](#)
 - Number of Replicates [A-11](#)
 - Partition [A-11](#)
 - Process [A-12](#)
 - Processor [A-13](#)
 - System [A-14](#)
 - Thread [A-15](#)
 - Tomcat JVM [A-4](#)
 - Tomcat Web Application [A-4](#)
 - sample rates [4-3](#)
 - viewing counter data [5-8](#)
 - plugins
 - accessing [8-1](#)
 - downloading [8-1](#)
 - polling intervals
 - sample rate [4-3](#)
 - polling rate [12-6](#)
 - Process
 - perfmon object and counters [A-12](#)
 - Processor
 - perfmon object and counters [A-13](#)
-
- ## Q
- Q931 Translator, using [9-19](#)
-
- ## R
- Real-Time Monitoring Tool
 - alert notification
 - configuring for a counter [5-3](#)
 - alerts
 - accessing alert central [7-1](#)
 - action configuration (table) [6-5](#)
 - configuring alert actions [7-6](#)
 - configuring e-mail for [7-5](#)

- customization (table) [6-3](#)
 - logs, described [6-6](#)
 - notification for a counter [4-3](#)
 - preconfigured [6-2](#)
 - setting properties [7-2](#)
 - suspending [7-5](#)
 - category
 - adding [2-8](#)
 - deleting [2-9](#)
 - renaming [2-8](#)
 - category tabs, described [4-2](#)
 - collecting a crash dump [9-13](#)
 - collecting traces [9-3](#)
 - collecting traces using the query wizard [9-6](#)
 - collecting traces using the schedule collection option [9-9](#)
 - configuration profile
 - adding [2-6](#)
 - deleting [2-7](#)
 - restoring [2-7](#)
 - using default [2-6](#)
 - counters
 - adding [4-3](#)
 - alert notification [4-3](#)
 - chart [4-3](#)
 - data sample [5-7](#)
 - displaying property description [5-7](#)
 - monitor [4-3](#)
 - viewing data [5-8](#)
 - zooming [5-6](#)
 - data samples [5-7](#)
 - deleting scheduled collections [9-12](#)
 - finding
 - CTI applications [12-7](#)
 - CTI devices [12-8](#)
 - CTI lines [12-9](#)
 - devices [12-4](#)
 - installing multiple copies [2-3](#)
 - logging and report generation
 - call log [11-3](#)
 - device log [11-7](#)
 - server log [1-4](#)
 - service log [11-5](#)
 - polling interval [4-3](#)
 - polling rate, configuring [12-6](#)
 - related topics for trace collection [9-24](#)
 - sample rate [4-3](#)
 - SysLog Viewer [10-1](#)
 - updating trace configuration settings [9-24](#)
 - using the real time trace option [9-21](#)
 - using the real time trace option, monitor user event [9-22](#)
 - using the real time trace option, view real time data [9-21](#)
 - viewing
 - CTIManager information [12-7](#)
 - device properties [12-6](#)
 - phone information [12-5](#)
 - viewing trace collection status [9-12](#)
 - viewing trace files using the local browse option [9-15](#)
 - viewing trace files using the remote browse option [9-16](#)
 - zooming a counter [4-3, 5-6](#)
 - related documentation [I-xi](#)
-
- ## S
- sample rate [4-3](#)
 - server authentication certificates
 - importing using the trace collection option [9-2](#)
 - SysLog Viewer [10-1](#)
-
- ## T
- TCP [A-14](#)
 - perfmon object and counters [A-14](#)
 - Thread
 - perfmon object and counters [A-15](#)

Tomcat JVM

perfmon object and counters [A-4](#)

Tomcat Web Application

perfmon object and counters [A-4](#)

Trace

collection

collecting crash dump option [9-13](#)

collecting files option [9-3](#)

configuration, described [9-1](#)

deleting scheduled collections [9-12](#)

list of topics [9-1](#)

related topics [9-24](#)

schedule collection option [9-9](#)

using the local browse option [9-15](#)

using the query wizard option [9-6](#)

using the real time trace option [9-21](#)

using the real time trace option, monitor user event [9-22](#)

using the real time trace option, view real time data [9-21](#)

using the remote browse option [9-16](#)

viewing status [9-12](#)

troubleshooting

Perfmon data logging

configuring [5-12](#)

parameters [5-13](#)

viewing log files [5-11](#)

Y

system

perfmon object and counters [A-14](#)

Z

zooming a counter [4-3, 5-6](#)

