



Status

Use Status to display the Cisco Unified Presence Server System status.

Viewing the System Status

Use the following procedure to view the system status.

Procedure

- Step 1**
- Choose **System > Status**.
The Unified Presence Server System Status window displays.
- Step 2**
- For a description of the status parameters, see [Table 6-1](#).

Table 6-1 Sync Status Parameters

Parameter	Description
Sync Information	This read-only field displays the IP address of the publisher server and when the sync occurred.
System Information	System Information displays the following read-only fields: • Number of end users • Number of phone devices • Number of licensed Cisco Unified Presence Server end users • Number of licensed Cisco Unified Personal Communicator end users • Number of assigned Microsoft Office Communicator end users

Finding Licensed Users

To find licensed users, follow this procedure:

Procedure

-
- Step 1** From the first Unified Presence Server System Status window drop-down list box, choose one of the following criteria:
- begins with
 - contains
 - is exactly
 - ends with
 - is empty
 - is not empty

- Step 2** Specify the appropriate search text, if applicable, and click **Find**.



Tip To find all licensed users that are registered in the database, click **Find** without entering any search text.

A list of discovered licensed users displays.

- Step 3** To display the devices associated with a user, click the **Devices** link.
-