



Privacy ACL

Using the Privacy Access Control List (ACL), you can configure patterns that control which outgoing hosts and domains can have access to the network from Cisco Unified Presence Server.

Finding Privacy ACL Entries

Because you might have several ACL entries your network, Cisco Unified Presence Server lets you locate specific privacy ACL entries on the basis of specific criteria. Use the following procedure to locate ACL entries.



Note

During your work in a browser session, the cookies on the client machine store your find/list search preferences. If you navigate to other menu items and return to this menu item, or if you close the browser and then open a new browser window, the system retains your Cisco Unified Presence Server search preferences until you modify your search.

Procedure

Step 1 Choose **Unified Presence Server > Proxy Server > Privacy ACL**.

The Find and List Allowed Destination Hosts window displays. Use the drop-down list box to search for ACL entries.

Step 2 From the drop-down list box, choose one of the following criteria for the address pattern:

- begins with
- contains
- is exactly
- ends with
- is empty
- is not empty

Step 3 Specify the appropriate search text, if applicable, and click **Find**.



Tip

To find all ACL entries that are registered in the database, click **Find** without entering any search text.

A list of discovered ACL entries displays.

- Step 4** From the list of records, click the ACL entry that matches your search criteria.
The window displays the ACL entry that you choose.
-

Additional Information

See the [“Related Topics” section on page 13-3](#).

Configuring Privacy ACL

This section describes how to add or update privacy ACL information in the Cisco Unified Presence Server database.

Procedure

- Step 1** Perform one of the following tasks:
- To add an privacy ACL entry, choose **Unified Presence Server > Proxy Server > Privacy ACL** and click **Add New**.
 - To update an privacy ACL entry, find the ACL entry by using the procedure in the [“Finding Privacy ACL Entries” section on page 13-1](#).
- The Privacy Access Control List Configuration window displays.
- Step 2** Enter the appropriate settings as described in [Table 13-1](#).
- Step 3** To save the data, click the **Save** icon that displays in the tool bar in the upper, left corner of the window (or click the **Save** button that displays at the bottom of the window).
-

Additional Information

See the [“Related Topics” section on page 13-3](#).

Privacy ACL Configuration Settings

[Table 13-1](#) describes the privacy ACL configuration settings. For related procedures, see the [“Related Topics” section on page 13-3](#).

Table 13-1 Privacy ACL Configuration Settings

Field	Description
Description	This parameter specifies a general description of the privacy ACL entry.
Address Pattern	This parameter specifies the address or pattern of the outgoing host or domain as either an IP address or a fully qualified domain name.

Deleting an Privacy ACL Entry

This section describes how to delete an privacy ACL entry.

Procedure

-
- | | |
|---------------|---|
| Step 1 | Find the ACL entry by using the procedure in the “Finding Privacy ACL Entries” section on page 13-1. |
| Step 2 | From list of matching records, choose the ACL entry that you want to delete. |
| Step 3 | To delete the ACL entry, click the Delete Selected Item icon that displays in the tool bar in the upper, left corner of the window (or click the Delete Selected button that displays at the bottom of the window).
If the ACL entry is not in use, Cisco Unified Presence Server deletes it. If it is in use, a message displays. |
-

Additional Information

See the [“Related Topics”](#) section on page 13-3.

Related Topics

- [Finding Privacy ACL Entries, page 13-1](#)
- [Configuring Privacy ACL, page 13-2](#)
- [Deleting an Privacy ACL Entry, page 13-3](#)

