



# CHAPTER 31

## Proxy Profile

---

Use proxy profile settings to configure settings that are related to the SIP proxy server, including primary servers, standby servers, and the users that are associated with the profile. You can use this window to search for specific profiles and change individual settings.

### Finding a Proxy Profile

Because you might have several proxy profiles in your network, Cisco Unified Presence lets you locate specific proxy profiles on the basis of specific criteria. Use the following procedure to locate specific proxy profiles.



**Note**

During your work in a browser session, the cookies on the client machine store your find/list search preferences. If you navigate to other menu items and return to this menu item, or if you close the browser and then open a new browser window, the system retains your Cisco Unified Presence search preferences until you modify your search.

---

#### Procedure

---

**Step 1** Choose **Application > Cisco Unified Personal Communicator > Proxy Profile**.

The Find and List Proxy Profiles window displays. Records from an active (prior) query may also display in the window.

**Step 2** To find all records in the database, ensure the dialog box is empty; go to [Step 3](#).

To filter or search records

- From the first drop-down list box, choose a search parameter.
- From the second drop-down list box, choose a search pattern.
- Specify the appropriate search text, if applicable.



**Note**

To add additional search criteria, click the **+** button. When you add criteria, the system searches for a record that matches all criteria that you specify. To remove criteria, click the **-** button to remove the last added criterion or click the **Clear Filter** button to remove all added search criteria.

---

**Step 3** Click **Find**.

All matching records display. You can change the number of items that display on each window by choosing a different value from the Rows per Page drop-down list box.



**Note** You can delete multiple records from the database by checking the check boxes next to the appropriate record and clicking **Delete Selected**. You can delete all configurable records for this selection by clicking **Select All** and then clicking **Delete Selected**.

**Step 4** From the list of records that display, click the link for the record that you want to view.

**Note** To reverse the sort order, click the up or down arrow, if available, in the list header.

The window displays the item that you choose.

**Additional Information**

See the [“Related Topics” section on page 31-4](#).

## Configuring a Proxy Profile

This section describes how to add or update a proxy profile in the Cisco Unified Presence database.

**Procedure****Step 1** Perform one of the following tasks:

- To add a proxy profile, choose **Application > Cisco Unified Personal Communicator > Proxy Profile** and click **Add New**.
- To update a proxy profile, find the profile by using the procedure in the [“Finding a Proxy Profile” section on page 31-1](#).

The Proxy Profile Configuration window displays.

**Step 2** Enter the appropriate settings as described in [Table 31-1](#).**Step 3** To associate users with the proxy profile, click **Add Users to Profile**.

The Find and List Users window displays.

**Step 4** To find all records in the database, ensure the dialog box is empty; go to [Step 5](#).

To filter or search records

- From the first drop-down list box, choose a search parameter.
- From the second drop-down list box, choose a search pattern.
- Specify the appropriate search text, if applicable.



**Note** To add additional search criteria, click the + button. When you add criteria, the system searches for a record that matches all criteria that you specify. To remove criteria, click the – button to remove the last added criterion or click the **Clear Filter** button to remove all added search criteria.

**Step 5** Click **Find**.

All matching records display. You can change the number of items that display on each window by choosing a different value from the Rows per Page drop-down list box.

**Step 6** From the list of records, click the users that you want to add to the proxy profile or click **Select All**.

**Step 7** To add the users to the proxy profile, click **Add Selected**.

**Step 8** To exit the Find and List Users window, click **Close**.

**Step 9** To save the data and to add the proxy profile to the database, click the **Save** icon that displays in the tool bar in the upper, left corner of the window (or click the **Save** button that displays at the bottom of the window).

**Additional Information**

See the “[Related Topics](#)” section on page 31-4.

## Proxy Profile Configuration Settings

Table 31-1 describes the proxy profile configuration parameters. For related procedures, see the “[Related Topics](#)” section on page 31-4.

**Table 31-1** proxy Profile Configuration Parameters

Field	Description
Name	This parameter specifies the name of the proxy profile.
Description	This parameter provides a general description of the proxy profile.
Proxy Listener	This parameter specifies the proxy listener. From the dropdown menu, choose one of the following proxy listeners: <ul style="list-style-type: none"> <li>• Default Cisco SIP Proxy TCP Listener</li> <li>• Default Cisco SIP Proxy TLS Listener-Peer Auth</li> <li>• Default Cisco SIP Proxy TLS Listener-Server Auth</li> <li>• Default Cisco SIP Proxy UDP Listener</li> </ul>
Primary Proxy Server	This parameter specifies the primary proxy server. From the dropdown list, you can choose from the proxy servers that you already defined on the system.
Backup Proxy Server	This parameter specifies the backup proxy server. From the dropdown list, you can choose from the proxy servers that you already defined on the system. You can specify two backup proxy servers.

# Deleting a Proxy Profile

This section describes how to delete a proxy profile.

## Procedure

---

- Step 1** Find the proxy profile by using the procedure in the [“Finding a Proxy Profile”](#) section on page 31-1.
- Step 2** From list of matching records, choose the proxy profile that you want to delete.
- Step 3** To delete the profile, click the **Delete Selected Item** icon that displays in the tool bar in the upper, left corner of the window (or click the **Delete Selected** button that displays at the bottom of the window).  
If the proxy profile is not in use, Cisco Unified Presence deletes it. If it is in use, a message displays.
- 

## Additional Information

See the [“Related Topics”](#) section on page 31-4.

## Related Topics

- [Finding a Proxy Profile, page 31-1](#)
- [Configuring a Proxy Profile, page 31-2](#)
- [Deleting a Proxy Profile, page 31-4](#)