



Monitoring and Maintaining Cisco Unified SRST

Revised: July 11, 2008

To monitor and maintain Cisco Unified Survivable Remote Site Telephony (SRST), use the following commands in privileged EXEC mode.

Command	Purpose
Router# show running-config	Displays the configuration.
Router# show call-manager-fallback all	Displays the detailed configuration of all the Cisco Unified IP phones, voice ports, and dial peers of the Cisco Unified SRST Router.
Router# show call-manager-fallback dial-peer	Displays the output of the dial peers of the Cisco Unified SRST Router.
Router# show call-manager-fallback ephone-dn	Displays Cisco Unified IP Phone destination numbers when in call manager fallback mode.
Router# show call-manager-fallback voice-port	Displays output for the voice ports.
Router# show ephone phone	Displays Cisco Unified IP Phone status.
Router# show ephone offhook	Displays Cisco Unified IP Phone status for all phones that are off hook.
Router# show ephone registered	Displays Cisco Unified IP Phone status for all phones that are currently registered.
Router# show ephone remote	Displays Cisco Unified IP Phone status for all nonlocal phones (phones that have no Address Resolution Protocol [ARP] entry).
Router# show ephone ringing	Displays Cisco Unified IP Phone status for all phones that are ringing.
Router# show ephone summary	Displays a summary of all Cisco Unified IP Phones.
Router# show ephone telephone-number phone-number	Displays Unified IP Phone status for a specific phone number.
Router# show ephone unregistered	Displays Unified IP Phone status for all unregistered phones.
Router# show ephone-dn tag	Displays Unified IP Phone destination numbers.
Router# show ephone-dn summary	Displays a summary of all Cisco Unified IP Phone destination numbers.
Router# show ephone-dn loopback	Displays Cisco Unified IP Phone destination numbers in loopback mode.

Command	Purpose
Router# <code>show voice port summary</code>	Displays a summary of all voice ports.
Router# <code>show dial-peer voice summary</code>	Displays a summary of all voice dial peers.

Where to Go Next

For more information about these commands, see the [Cisco Unified SRST and Cisco Unified SIP SRST Command Reference \(All Versions\)](#).

For additional information, see the “Additional References” section on page 44 in the “Overview of Cisco Unified SRST” section on page 31.