

To start recording a call, press the **Option** soft key while on an active call. Select **Start Recording** from the Options menu. “Rec” now appears on the status line of your screen.

To stop recording a call, press the **Option** soft key, and then select **Stop Recording** from the Options menu.

Monitoring/Recording Notification

You might or might not be notified when your supervisor monitors or records your calls, depending on how the system is set up.

If notification is turned on and your supervisor monitors and/or records your call, you will see one of the following displayed on the status line:

- Rec (recording)
- Mon (monitoring)
- Rec/Mon (recording and monitoring)

4 Logging Out

You can log out from the Not Ready, Ready, Work, and Talking agent states.

Step 1 Press the **State** soft key and select **Logout** from the menu.

Step 2 If your system is configured to require reason codes, the reason code menu appears. Choose the appropriate reason code. IP Phone Agent returns to the Login screen, and you are logged out of the ACD.

Corporate Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 526-4100

CCSP, CCVP, the Cisco Square Bridge logo, Follow Me Browsing, and StackWise are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn, and iQuick Study are service marks of Cisco Systems, Inc.; and Access Registrar, Aironet, ASIST, BPX, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Empowering the Internet Generation, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, FormShare, GigaDrive, GigaStack, HomeLink, Internet Quotient, IOS, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, LightStream, Linksys, MeetingPlace, MGX, the Networkers logo, Networking Academy, Network Registrar, Packet, PIX, Post-Routing, Pre-Routing, ProConnect, RateMUX, ScriptShare, SlideCast, SMARTnet, StrataView Plus, TeleRouter, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0502R)



Quick Reference



Cisco IP Phone Agent Quick Reference CAD 6.4 for Cisco Unified Contact Center Express 5.0

- 1 Logging In
- 2 IP Phone Agent Screen
- 3 Common Tasks
- 4 Logging Out



1 Logging In

Logging in is the only task in IP Phone Agent that requires you to enter data.

- Step 1** Press the **Services** button on your IP phone to display the Services menu
- Step 2** Choose the **IP Phone Agent** service from the menu (the service name depends on how it is set up by your system administrator). The Agent Login screen appears.
- Step 3** Enter your agent ID, password, and phone extension in the appropriate fields.


Use the scroll key to move from field to field. If you make a mistake, use the << soft key to delete your entries one character at a time.



Note The IP Phone Agent Login Screen may be configured to accept both letters and numbers. When you press a number key, a menu appears that shows that number and its corresponding letters. (For example, if you press the 4 key, you see a menu that includes g, h, i, 4, G, H, and I.) Press the number key until you highlight the correct character. When you stop pressing the key, your choice appears in the field.

- Step 4** Press the **Submit** soft key to log in to the ACD. You are automatically set in the Not Ready agent state.

2 IP Phone Agent Screen

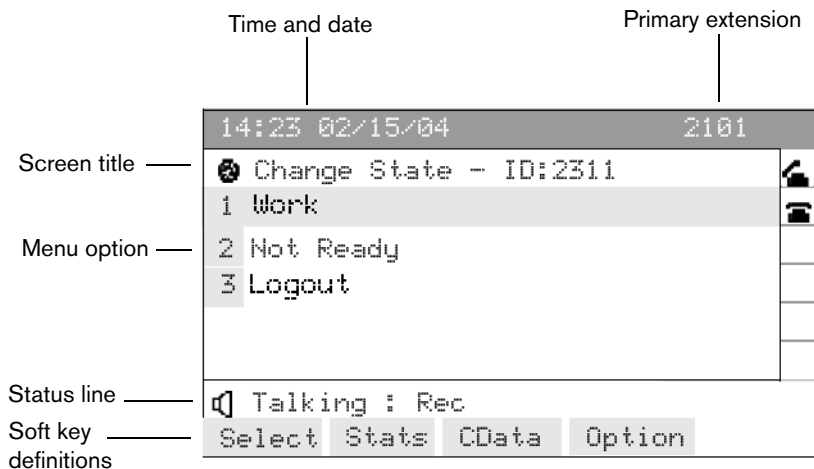

3 Common Tasks

Change Agent State

Change agent state by pressing the **State** soft key and selecting the appropriate state from the Change State screen. The menu you see displays only the states available from your current state. Your current agent state is always noted on the bottom line of the screen.

To change agent state during a call, first press the **Stats** soft key, and from the Skill Stats screen, press the **State** soft key.



Note When you change agent state while on a call, the agent state shown on the screen does not change. Your screen continues to show Talking as your state. As soon as you complete the call your new state will be displayed.

Enter a Reason Code

Whenever you change to the Not Ready state or log out, you might be prompted to enter a reason code. These codes are set up by your administrator.

To enter a reason code, choose the appropriate reason code from the menu.

Enter Wrapup Data

Whenever you change to the Work state, you might be prompted to enter wrapup data. Wrapup data descriptions are set up by your administrator.

To enter a wrapup data description, choose the appropriate description from the menu.

View Contact Service Queue Statistics

CSQ statistics are available for viewing whenever you are logged into IP Phone Agent. The CSQ statistics displayed are set up by your administrator.

To display CSQ statistics, press the **Stats** soft key.

View Caller Data

Caller data is displayed when a call rings on your phone and during the call. The type of data displayed on the Caller Data screen is determined by your system administrator.

To display caller data, press the **CData** soft key.

Record a Call (Enhanced and Premium Only)

If enabled by your administrator, you can record any call you receive on your IP phone. You cannot listen to any recording you make, only a supervisor can.