



Version 9.0
SNMP Alerting Module Guide

Edition

Information in this document applies to version 9.0 of the SNMP Alerting Module Guide.

Copyright Notice

©2004 Captaris. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the written permission of Captaris. Captaris products Interchange, RightFax and Teemplate are trademarks of Captaris. All other company, brand and product names are the property and/or trademarks of their respective companies.

Captaris
10885 NE 4th Street
Suite 400
Bellevue, WA 98004
(425) 455-6000
<http://www.captaris.com>

Information in this document is subject to change without notice. Companies, names, and data used in examples herein are fictitious unless otherwise noted.

AGFA *IntelliFont*

JetPCL PCL Emulation Software copyright 1990-2003 Tech Know Systems, Ltd. Company, All rights reserved. Portions copyright ©1999 Ligature. All rights reserved. Portions copyright ©1988, 1996 Aladdin Enterprises. All rights reserved. Portions copyright ©1993 Soft Horizons. All rights reserved. Outside In® Viewer Technology copyright ©1992-2003 Inso Corporation. All rights reserved. Copyright © TMS, Inc. 1994-2002. All rights reserved. Portions copyright ©2001 artofcode LLC. Portions Copyright ©1996, 2001 Artifex Software Inc. Portions Copyright ©1998 Soft Horizons. All Rights Reserved. Adobe, Acrobat, and the Acrobat logo are trademarks of Adobe Systems Incorporated. Includes Adobe® PDF Library technology. All rights reserved. PostScript is a trademark of Adobe Systems Incorporated. This software is based in part on the work of the Independent JPEG Group.

For More Information

Captaris is a leading provider of Business Information Delivery solutions that integrate, process and automate the flow of messages, data and documents. Captaris produces a suite of proven products and services, in partnership with leading enterprise technology companies, delivered through a global distribution network. Captaris has installed over 80,000 systems in 44 countries, with 93 of the Fortune 100 using the company's award-winning products and services to reduce costs and increase the performance of critical business information investments. For more information please contact us at www.captaris.com or call +1.520.320.7000.

Contents

Chapter 1	Installing and Configuring the SNMP Alerting Module	5
	Activating the RightFax SNMP Alerting Module on the RightFax Server	5
	Installing the Microsoft SNMP Service.....	5
	Configuring the SNMP Service on the RightFax Server	6
	Configuring the Network Monitor Application.....	6
Chapter 2	RightFax Alerts and Status Information	7
	Receiving RightFax Alerts in Your Network Monitor	7
	Querying RightFax Status Variables	9
	Controlling RightFax Services From Your Network Monitor.....	15
Appendix A	Files Installed By the SNMP Alerting Module.....	17
Appendix B	Troubleshooting the RightFax Alerts	19
Index		23

Chapter 1

Installing and Configuring the SNMP Alerting Module

The RightFax SNMP Alerting Module acts as an interface between an SNMP-capable network monitoring application and RightFax servers. The RightFax SNMP Alerting module collects status data from the RightFax server and returns it to the monitoring application for processing and reporting. The SNMP Alerting module also actively sends status messages and alerts to your network monitor application for realtime monitoring of RightFax processes. RightFax alerts are divided into four severities: Critical, Error, Warning, and Informational, and alerts can be enabled or disabled according to their severity. The RightFax SNMP Alerting module also allows RightFax services to be stopped and restarted directly from your network monitor application.

On the RightFax server, the following is required:

- RightFax 8.5 or higher.
- The SNMP service in Windows 2000 (The RightFax SNMP Alerting Module is not supported in Windows 2003.)

On the network server that will monitor messages, the following is required:

- The SNMP service in Windows 2000 (The RightFax SNMP Alerting Module is not supported in Windows 2003.)

Activating the RightFax SNMP Alerting Module on the RightFax Server

The files required by the RightFax SNMP Alerting Module are installed on all RightFax servers during the server installation. However, the SNMP Alerting Module must be licensed and activated before its functionality will be enabled.

To activate the SNMP Alerting Module, you must have licensed a RightFax server type that includes this module, or purchased and licensed this module separately. For information on activating new components on the RightFax server, refer to the *RightFax Installation Guide*.

Installing the Microsoft SNMP Service

If the SNMP service has not already been installed on the RightFax server, follow these steps to install it:

1. On the RightFax server, select the **Network** program in Windows Control Panel, and then click the **Services** tab.
2. If **SNMP Service** does not appear in the **Network Services** list, click **Add**.

3. Click **SNMP Service** and click **OK**. You will be prompted to insert your Windows CD. Insert the CD, specify the drive letter of your CD-ROM drive, and click **Continue**.
4. Once the SNMP service has been installed, close the **Network** dialog box.

Configuring the SNMP Service on the RightFax Server

To configure the SNMP service properties

1. On the RightFax server, select the **Network** program in Control Panel, and then click the **Services** tab.
2. Double-click **SNMP Service** in the list of network services, and then click the **Traps** tab.
3. In the **Community Name** box, add the community name **Public**.
4. In the **Trap Destination** box, enter the IP address of each machine on your network where you want to send RightFax SNMP alerts (each machine used for network monitoring). RightFax alerts can be sent to an unlimited number of network monitoring stations on your network. Click **OK**.

Configuring the Network Monitor Application

Before it can receive SNMP alerts from the RightFax servers, your organization's network monitor application must be configured to recognize the RightFax SNMP Alerting module's Management Information Base (MIB) variables and trap definitions.

In the network monitor, execute the appropriate command(s) to load new SNMP MIB variables and trap definitions. The MIB variables for the RightFax SNMP Alerting module are located in a

file called `Avtc.mib` and the trap definitions are located in `Rftrapd.conf`. Both of these files are installed by default to the RightFax server in the `RightFax\SNMP` folder.

The RightFax SNMP Alerting module software includes a utility that automates this configuration for HP OpenView Network Node Manager. To automatically load the MIB variables and trap definitions in Network Node Manager, run the file `Rfhpov.bat` from a command line on the Network Node Manager machine. This file is installed by default to the RightFax server in the `RightFax\SNMP` folder.

■ ■ ■

Chapter 2

RightFax Alerts and Status Information

The RightFax SNMP Alerting module actively pushes RightFax alerts to your SNMP-capable network monitoring application. This helps you ensure that problems with the RightFax server are reported and addressed promptly. The SNMP Alerting module also lets you query several variables on the RightFax server so you can view the status of the fax server in real time.

Receiving RightFax Alerts in Your Network Monitor

The fax server can send up to nine alerts to your SNMP network monitor. The following table defines each RightFax alert. The default RightFax severity is also listed, however your network monitor software may be configured to use different terminology. In RightFax terms, “Critical” is severity level one, “Error” is severity level two, and “Warning” is severity level three.

For information on diagnosing and resolving the causes of each alert see [Appendix B, “Troubleshooting the RightFax Alerts”](#).

Table 2a RightFax SNMP Alerts

Alert message	Default severity	Definition
“All BoardServers are down. Fax sending and receiving is not currently operating.”	Critical	All BoardServers attached to this fax server have gone down.
“One or more drives on the fax server are approaching critically low disk space (<150 MB).”	Warning	One or more drives on the RightFax server have less than 150 MB free.
“One or more drives on the fax server are critically low on disk space (<50 MB). Many fax server functions have been suspended.”	Critical	One or more drives on the RightFax server have less than 50 Mb free.
“Possible phone line failure on channel #, three consecutive no-dial tone errors within 45 minutes.”	Critical	One or more fax channels have gone down due to line failure.

Table 2a RightFax SNMP Alerts (Continued)

Alert message	Default severity	Definition
“RightFax E-mail Gateway Module on <i>FaxServerName</i> : The Exchange Connector has not responded in a timely fashion. Inbound message processing temporarily disabled.”	Warning	The RightFax server is unable to communicate with the Exchange server.
“The fax server internal queue is more than 90% utilized.”	Critical	The RightFax internal event queue is more than 90 percent utilized.
“The fax server process was not properly shutdown.”	Critical	A fax server was shut down unexpectedly.
“The send queue depth on server <i>ServerName</i> is currently: #/# (faxes/pgs).”	Critical	There are more than 1,000 faxes or 10,000 fax pages in the fax queue.
“Unable to communicate with BoardServer <i>ServerName</i> (error 2)”	Error	One BoardServer is down, but at least one other BoardServer is still running.

Each alert severity indicates how vital the component is to the operation of the RightFax server. “Critical” and “Error” alerts indicate a loss of fax functionality. “Warning” and “Informational” alerts indicate a loss of fax capacity. These severity levels may use different names in your network monitoring application, but the hierarchy of severities remains the same. RightFax does *not* send specific “clearing” alerts that indicate when the cause of an alert has been resolved.

Alerts generated by the RightFax SNMP Alerting module are stored in your network monitor under the “RightFax Server Alerts” category. Please refer to your network monitoring application’s documentation for information on displaying and managing alarm messages.

Because SNMP alerts are generated from the Windows Event Log on the RightFax server machine, the event log level of each individual RightFax service module must be set to an appropriate level. The “Terse” setting records critical errors only. “Verbose” records all significant events and is most useful for tracking and resolving problems but can cause the event log to fill up quickly, which may prevent new events from being logged. For information on configuring the event log level for each RightFax service module, refer to the *RightFax Administrator’s Guide*.

Enabling and disabling RightFax alerts

The RightFax SNMP MIB contains four variables that let you enable or disable the RightFax alerts according to severity. To edit these variables, expand the MIB tree to:

```
.iso.org.dod.internet.private.enterprises.AVTC.Right-FAX.  
rfFaxServer.rfServerTraps
```

This object contains four editable (read/write) variables:

- rfSvrEnableCriticalTraps
- rfSvrEnableErrorTraps
- rfSvrEnableWarningTraps
- rfSvrEnableInformationalTraps


Each variable can be set to either “objectENABLE” or “objectDISABLE.” Changes to these variables take effect immediately. Please refer to your network monitoring application’s documentation for information on editing variables in the MIB.

Querying RightFax Status Variables

The RightFax SNMP MIB is comprised of 12 objects, each made up of several variables. These variables provide realtime status information on the RightFax server. To query the RightFax variables in your network monitoring application, expand the MIB tree to:

.iso.org.dod.internet.private.enterprises.AVTC.Right-FAX.
rfFaxServer

All addresses below this branch point to a RightFax SNMP object or variable. The following tree lists each object in the RightFax SNMP MIB tree. Objects in bold contain variables.

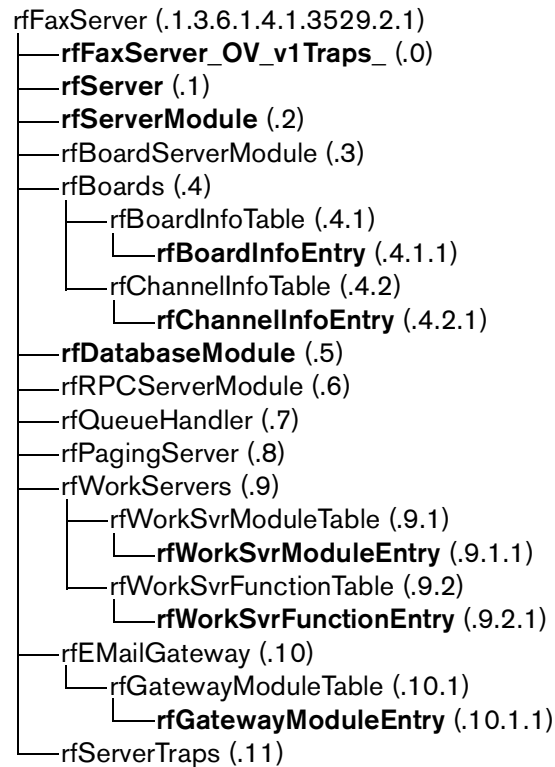

The following tables list each of the RightFax SNMP variables and their definitions grouped according to the objects they are contained in. Variables in boldface are editable. For information on using your network monitoring application to access the MIB tree and query variables in the MIB, please refer to the documentation for your particular application. For more information on RightFax modules and services, please refer to the *RightFax Administrator's Guide*.

rfFaxServer_OV_v1traps_

Table 2b Variables in the rfFaxServer_OV_v1Traps_ MIB Object

Variable	Type	Definition
rfSvrCriticalTrap	Notif.	Text of critical alert reported by the RightFax server. This is a notification type variable and cannot be queried or edited.
rfSvrErrorTrap	Notif.	Text of error alert reported by the RightFax server. This is a notification type variable and cannot be queried or edited.
rfSvrWarningTrap	Notif.	Text of warning alert reported by the RightFax server. This is a notification type variable and cannot be queried or edited.
rfSvrInformationalTrap	Notif.	Text of informational alert reported by the RightFax server. This is a notification type variable and cannot be queried or edited.

rfServer

Table 2c Variables in the rfServer MIB Object

Variable	Type	Definition
rfSvrQueueUsage	Integer	Percentage of the fax server's internal Event Queue currently in use.
rfSvrEventsProcessed	Integer	Total number of events processed by the fax server since the Fax Server Module was started.
rfSvrBoardSvrAvailIndex	Integer	Availability of the server's fax boards).
rfSvrCurrentFaxesQueued	Integer	Current number of outgoing faxes waiting to be sent.
rfSvrCurrentPagesQueued	Integer	Current number of outgoing fax pages waiting to be sent.
rfSvrDiskAvailForfaxImages	Integer	Percentage of disk space on the fax server available for storing fax images.
rfSvrDiskAvailForfaxDB	Integer	Percentage of disk space on the fax server available for storing fax database information.
rfSvrAllTimeFaxesSent	Integer	Total number of faxes sent from this server since the All-Time Counter starting date (rfSvrAllTimeCounterStart).
rfSvrAllTimePagesSent	Integer	Total number of fax pages sent from this server since the All-Time Counter starting date (rfSvrAllTimeCounterStart).

Table 2c Variables in the rfServer MIB Object (Continued)

Variable	Type	Definition
rfSvrAllTimeFaxesReceived	Integer	Total number of faxes received on this server since the All-Time Counter starting date (rfSvrAllTimeCounterStart).
rfSvrAllTimePagesReceived	Integer	Total number of fax pages received on this server since the All-Time Counter starting date (rfSvrAllTimeCounterStart).
rfSvrAllTimeCounterStart	Integer	Starting date from which the "All-Time" statistics are calculated.

rfServerModule

Table 2d Variables in the rfServerModule MIB Object

Variable	Type	Definition
rfSvrModuleServiceName	String	Fax Server module service name.
rfSvrModuleVersionNumber	String	Fax Server module version number.
rfSvrModuleServiceStatus	Integer	Current Fax Server service state.
rfSvrModuleTimeRunning	String	Length of time the Fax Server service has been running.

rfBoardServerModule

Table 2e Variables in the rfBoardServerModule MIB Object

Variable	Type	Definition
rfBoardSvrModuleServiceName	String	BoardServer service name.
rfBoardSvrVersionNumber	String	BoardServer module version number.
rfBoardSvrModuleStatus	Integer	Current BoardServer service state.
rfBoardSvrModuleTimeRunning	String	Length of time the BoardServer has been running.

rfBoards.rfBoardInfoTable.rfBoardInfoEntry

Table 2f Variables in the rfBoards.rfBoardInfoTable.rfBoardInfoEntry MIB Object

Variable	Type	Definition
rfBoardIndex	Integer	Fax board index.
rfBoardName	String	Each installed fax board type.

rfBoards.rfChannelInfoTable.rfChannelInfoEntry

Table 2g Variables in the rfBoards.rfChannelInfoTable.rfChannelInfoEntry MIB Object

Variable	Type	Definition
rfChannelIndex	Integer	Channel table index (lists each installed fax channel).
rfChannelChannel	String	Channel numbers and [S] or [R] flag indicating send or receive functionality.
rfChannelOperation	String	Current operational status of all channels.
rfChannelRoutingCode	String	Inbound routing code for all incoming faxes.
rfChannelPhoneNumber	String	Destination phone number of outgoing faxes.
rfChannelUserID	String	Destination User ID for incoming faxes.
rfChannelState	String	Channel state.
rfChannelRemoteID	String	Remote ID of machines sending incoming faxes.
rfChannelRate	String	Current rate of transmission.
rfChannelCompression	String	Data compression method.
rfChannelPagesInCall	Integer	Number of fax pages being transmitted during this call.
rfChannelMinutesRemain	Integer	Estimated number of minutes remaining until end of transmission.

rfDatabaseModule

Table 2h Variables in the rfDatabaseModule MIB Object

Variable	Type	Definition
rfDatabaseSvrModuleServiceName	String	Database module service name.
rfDatabaseSvrVersionNumber	String	Database module version number.
rfDatabaseSvrModuleStatus	Integer	Current Database module service state.
rfDatabaseSvrModuleTimeRunning	String	Length of time the Database service has been running.

rfRPCServerModule

Table 2i Variables in the rfRPCServerModule MIB Object

Variable	Type	Definition
rfRPCSvrModuleServiceName	String	RPC module service name.
rfRPCSvrVersionNumber	String	RPC module version number.
rfRPCSvrModuleStatus	Integer	Current RPC module service state.
rfRPCSvrModuleTimeRunning	String	Length of time the RPC service has been running.

rfQueueHandler

Table 2j Variables in the rfQueueHandler MIB Object

Variable	Type	Definition
rfQueueHandlerModuleServiceName	String	Queue handler service name.
rfQueueHandlerModuleStatus	Integer	Current Queue handler service state.
rfQueueHandlerModuleTimeRunning	String	Length of time the queue handler has been running.

rfPagingServer

Table 2k Variables in the rfPagingServer MIB Object

Variable	Type	Definition
rfPagingSvrModuleServiceName	String	Paging module service name.
rfPagingSvrVersionNumber	String	Paging module version number.
rfPagingSvrModuleStatus	Integer	Current Paging module service state.
rfPagingSvrModuleTimeRunning	String	Length of time the Paging module has been running.

rfWorkServers.rfWorkSvrModuleTable.rfWorkSvrModuleEntry

Table 2l Variables in the rfWorkServers.rfWorkSvrModuleTable.rfWorkSvrModuleEntry MIB Object

Variable	Type	Definition
rfWorkSvrModuleIndex	Integer	WorkServer module table index (lists all WorkServers).
rfWorkSvrModuleServiceName	String	Each WorkServer module service name.
rfWorkSvrModuleVersionNumber	String	Each WorkServer module version number.
rfWorkSvrModuleStatus	Integer	Each WorkServer module service state.
rfWorkSvrModuleTimeRunning	String	Length of time each WorkServer has been running.

rfWorkServers.rfWorkSvrFunctionTable.rfWorkSvrFunctionEntry

Table 2m Variables in the rfWorkServers.rfWorkSvrFunctionTable.rfWorkSvrFunctionEntry MIB Object

Variable	Type	Definition
rfWorkSvrFunctionIndex	Integer	Workserver function table index (lists all WorkServers).
rfWorkSvrFunctionArchive	Integer	Is Archive service processed? (Yes/No)

Table 2m Variables in the rfWorkServers.rfWorkSvrFunctionTable.rfWorkSvrFunctionEntry MIB Object (Continued)

Variable	Type	Definition
rfWorkSvrFunctionCoverSheet	Integer	Is Cover sheet service processed? (Yes/No)
rfWorkSvrFunctionCVL	Integer	Is CVL service processed? (Yes/No)
rfWorkSvrFunctionFileRoute	Integer	Is FileRoute service processed? (Yes/No)
rfWorkSvrFunctionOverlay	Integer	Is Overlay service processed? (Yes/No)
rfWorkSvrFunctionPCL5	Integer	Is PCL5 service processed? (Yes/No)
rfWorkSvrFunctionPrint	Integer	Is Print service processed? (Yes/No)
rfWorkSvrFunctionNetMessaging	Integer	Is Network Messaging service processed? (Yes/No)
rfWorkSvrFunctionDellImageFile	Integer	Is Delete Image File service processed? (Yes/No)
rfWorkSvrFunctionOCR	Integer	Is OCR service processed? (Yes/No)
rfWorkSvrFunctionInterConnect	Integer	Is InterConnect service processed? (Yes/No)
rfWorkSvrFunctionPostscript	Integer	Is PostScript service processed? (Yes/No)

rfEMailGateway.rfGatewayModuleTable.rfGatewayModuleEntry

Table 2n Variables in the rfEMailGateway.rfGatewayModuleTable.rfGatewayModuleEntry MIB Object

Variable	Type	Definition
rfGatewayModuleIndex	Integer	Gateway module table entry index (lists each e-mail gateway).
rfGatewayModuleServiceName	String	Each gateway service name.
rfGatewayModuleVersionNumber	String	Each gateway module version number.
rfGatewayModuleStatus	Integer	Current state of each gateway service.
rfGatewayModuleTimeRunning	String	Length of time each gateway has been running.

rfServerTraps

Table 2o Variables in the rfServerTraps MIB Object

Variable	Type	Definition
rfSvrTrapComputer	String	Computer that generated the alert. This variable is used only for trap notifications and cannot be queried or edited.
rfSvrTrapSource	String	Source of the alert. This variable is used only for trap notifications and cannot be queried or edited.

Table 2o Variables in the rfServerTraps MIB Object (Continued)

Variable	Type	Definition
rfSvrTrapSeverity	Integer	Severity of the alert. This variable is used only for trap notifications and cannot be queried or edited.
rfSvrTrapMessage	String	Alert notification message. This variable is used only for trap notifications and cannot be queried or edited.
rfSvrEnableCriticalTraps	Integer	Critical alerts enabled/disabled.
rfSvrEnableErrorTraps	Integer	Error alerts enabled/disabled.
rfSvrEnableWarningTraps	Integer	Warning alerts enabled/disabled.
rfSvrEnableInformationalTraps	Integer	Informational alerts enabled/disabled.

Controlling RightFax Services From Your Network Monitor

Each RightFax service object in the MIB contains a status variable. For example, the rfDatabaseModule object contains the variable rfDatabaseSvrModuleStatus. There are a total of eight service status variables, each contained in a separate MIB object:

- rfSvrModuleServiceStatus
- rfBoardSvrModuleStatus
- rfDatabaseSvrModuleStatus
- rfRPCSvrModuleStatus
- rfQueueHandlerModuleStatus
- rfPagingSvrModuleStatus
- rfWorkSvrModuleStatus
- rfGatewayModuleStatus

When queried, these variables list the current state of the service on the RightFax service (such as stopped, started, or paused).

You can also edit these variables to manually start or stop the services on the RightFax server. Each variable can be set to either "statSERVICE_STOPPED" or "statSERVICE_RUNNING." Changing any of these variables automatically instructs the RightFax server to start or stop the appropriate service. Please refer to your network monitoring application's documentation for information on editing variables in the MIB.

■ ■ ■

Appendix A

Files Installed By the SNMP Alerting Module

By default, the RightFax SNMP Alerting module installs the following files to your RightFax server. All files are located in the RightFax folder:

- Avtc.mib
- Rftrapd.conf
- Rfhpov.bat
- Readme.txt
- Rfsnmpui.dll

The Avtc.mib and Rftrapd.conf MIB definition files must also be separately installed to each machine that will be monitoring and receiving alerts from RightFax.

In addition, these files are installed to your RightFax server in the WinNT folder:

- Rfifax32.dll
- Rfsnmp.dll
- Boardrpc.dll
- Rfstat.dll

For information on installing the RightFax SNMP Alerting module to the RightFax server and copying the MIB definitions to your network monitoring applications, see [Chapter 1, "Installing and Configuring the SNMP Alerting Module"](#).

■ ■ ■

Troubleshooting the RightFax Alerts

SNMP alerts are designed to call attention to events or conditions on the RightFax server that may effect your server's ability to send and receive faxes. The actual causes of these events and conditions are not reported as part of the SNMP alerts. In most cases, reviewing the Event Log on the server which is reporting the alert will provide details as to the cause of the alert.

The troubleshooting information in this chapter is designed to point network administrators who have a familiarity with RightFax to the most common causes and solutions for each the nine SNMP RightFax alerts. However, as a client-server application, RightFax relies on the network for much of its functionality. Because network related problems can trigger RightFax alerts, the steps included here may not always resolve the cause of the alert. If RightFax alerts persist after following these steps, contact your RightFax administrator and/or network administrator.

All BoardServers down

This alert indicates that all primary and remote BoardServer services have failed.

1. Run Enterprise Fax Manager or the Windows Services application and attempt to restart the BoardServer(s). If the BoardServer(s) fail to start, check the application log in the Windows Event Viewer for details.
2. If the application log does not provide adequate information to resolve the problem, attempt to run the BoardServer in a window. On the RightFax server and any machines running remote BoardServers, change to the RFBoard folder and enter:

```
boardsrv.exe -d -1
```

This runs the BoardServer module as a session in a window in debug mode. As the board initializes, debug information is displayed and the reason for the BoardServer failure should appear as the last line of the debug text. (There may be additional lines of information associated with the BoardServer module shutting down again after the failure.)

3. If a RightFax BoardServer module on a remote machine starts and appears to be running normally but the alert persists, the failure may be due to problems with network connectivity between the remote BoardServer machine and the RightFax server.

Critically low disk space

This alert indicates that one or more drives on the RightFax server have fallen below 50 MB of available space.

1. Run Enterprise Fax Manager and check the status of the RightFax services. If the RightFax Server Module has not already stopped, stop it. RightFax will automatically stop processing additional fax traffic until both the drive that RightFax is installed on and the drive that Windows is installed on have more than 50 MB available. Additional SNMP alerts may be generated as a result of this action.
2. Uninstall any unnecessary applications from the RightFax server using the Add/Remove Software program in Control Panel.
3. If this does not alleviate the storage problem, check the RightFax\Image folder. If it is exceptionally large, consider running the FAXAGE utility. This will delete faxes from the server database based on the age of the fax. For information on running Faxage.exe please refer to the *RightFax Administrator's Guide*.
4. If running FAXAGE is not an option, you can move the RightFax\Image folder to a new drive. First, create a RightFax\Image folder on a new drive with sufficient free storage space. Stop the RightFax Server Module and move all of the images from the old RightFax\Image folder to the new one. Run Regedt32.exe on the RightFax server and add a new REG_SZ entry called "Image" to the HKEY_LOCAL_MACHINE\Software\RightFax key and set its value to "D:\RIGHTFAX\IMAGE" (where D is the new drive). Restart the RightFax Server Module.

Exchange server is not responding

This alert indicates that the RightFax server is unable to communicate with the Exchange server. This is probably due to a failure of the RightFax connector for Exchange which is the service responsible for all communications between the two systems.

1. Attempt to restart the connector on the Exchange server through Windows Services.
2. If the connector still appears to be running, shut down and restart the connector.

Fax server event queue full

This alert indicates that the RightFax internal event queue is more than 90% utilized. This indicates that too many events currently require the attention of the RightFax Server Module.

1. To get the RightFax server back online, the event queue size needs to be increased. A modest increase to the event queue size will not have any adverse effects on the RightFax server itself. On the RightFax server run REGEDT32. Look for the REG_DWORD entry "QueueSize" in the HKEY_LOCAL_MACHINE\Software\RightFax\FaxServer key. If the entry is there, change the value to 3000 (decimal). If the entry is *not* there, add it and set its value to 3000. Run the Services program from Control Panel and stop and restart the RightFax Server Module. The fax server should return to normal operation.
2. During a period of low fax traffic, run the Services program from Control Panel and stop the RightFax Server Module. This will automatically stop the Database Module and the WorkServer Modules. Go to the RightFax\Database folder and check the size of the Faxdata.D0F file. If the is between 500 KB and 2 MB, the alert was probably the result of a large fax broadcast or unusually high fax volume. Increasing the event queue will prevent this from happening again. Restart the RightFax Server Module.

3. If the Faxdata.DOF file is 2 MB or larger, too many events are queued and not being resolved. The most common cause of this file becoming too large is unresolved work requests involving fax notifications and/or OCR. If users are set to receive notifications via Network Broadcast and no WorkServer is set to perform the "Network Broadcast" task, all the notification requests for the users will remain in the Faxdata.DOF file. Similarly, if users have enabled automatic OCR of received faxes and no WorkServers are set to perform OCR, the work requests will go unresolved and stack up. Also, if users have a large number of faxes in their FaxUtil mailboxes with a status of "Info Not Complete," the fax server will constantly monitor the faxes and repeatedly notify the users that their faxes need attention, occupying event queue resources.

For more information on diagnosing and resolving RightFax database problems, please refer to the *RightFax Administrator's Guide*.

Low disk space

This alert indicates that one or more drives on the RightFax server have less than 150 MB free. This condition by itself should not effect your server's fax functionality, but is intended to warn you that resources are getting low. Please see the troubleshooting steps for "Critically Low Disk Space" ([page 20](#)) for information on resolving this alert.

Probable line failure

This alert indicates that one or more of the fax channels have gone down due to line failure. This alert is only generated when the BoardServer returns certain errors in sequence over a given period of time and is the direct result of phone line problems as opposed to a failure on the RightFax server.

1. To prevent additional alerts while diagnosing the problem, run the BoardServer configuration program and deactivate the channel that is generating the alerts.
2. Verify that all phone lines are correctly and securely attached to the fax board(s).
3. Disconnect the phone lines from the server and attach a standard phone to verify that the line is still active.
4. If using a of PBX, verify that the line is still active through the PBX.
5. For T1 installations, confirm that the green light on the fax board that indicates the T1 line is active is lit.

Send queue too deep

This alert indicates that there are more than a predefined number of faxes or fax pages in the fax queue waiting to send.

1. Verify that there are no other problems being reported with the server or phone lines that might prevent all of your outbound fax channels from being used.
2. If this alert appears frequently, too few fax channels may be dedicated to outbound faxing. Run the BoardServer configuration program and reevaluate each channel's send/receive capability.
3. If your fax traffic exceeds the capability of all of your fax channels, consider increasing your total number of channels.

Server improperly shut down

This alert indicates that a fax server was shut down unexpectedly. This indicates a sudden and unexpected loss of power.

1. Ensure that the server has recovered properly and is stable. The RightFax services should restart automatically. Monitor services and the Event Viewer for any problems.
2. The most common result of an unexpected shutdown is database corruption, which, if severe, can prevent the RightFax Server Module from starting. For information on diagnosing and resolving RightFax database problems, please refer to the *RightFax Administrator's Guide*.
3. Faxes that were in progress during the shutdown may need to be released or resent by the creator of the fax. To “release” a fax, highlight the fax in FaxUtil, and then select **Fax > Status > Release**.

One BoardServer down

A BoardServer attached to this server has gone down, but at least one other BoardServer is still running.

This alert is generally not produced as the result of a BoardServer going down, but rather the loss of network connectivity between the RightFax server and a remote BoardServer machine. You can verify this by running the Windows Services application on each remote BoardServer machine to confirm that they are all operating correctly. If this is the case, contact your network administrator.

If one or more BoardServer services are down, refer to the instructions for the “All BoardServers down” alert ([page 19](#)).

■ ■ ■

Index

A

- alert messages
 - all BoardServers down 19
 - critically low disk space 20
 - Exchange server is not responding 20
 - fax server event queue full 20
 - low disk space 21
 - one BoardServer down 22
 - probable line failure 21
 - send queue too deep 21
 - server improperly shut down 22
- alerts
 - clearing 8
 - enabling and disabling 8
 - receiving 7
 - severity 8
 - troubleshooting 19
- all BoardServers down 19

B

- BoardServers down 19, 22

C

- clearing alerts 8
- Community Name 6

- configure
 - network monitor application 6
 - SNMP service 6
- critically low disk space 20

D

- disable alerts 8
- disk space low 20, 21

E

- enable alerts 8
- event log level 8
- event queue full 20
- Exchange server is not responding 20

F

- fax server event queue full 20

H

- HP OpenView 6

I

- install
 - RightFax SNMP Agent 5
 - SNMP service 5

L

- line failure 21
- low disk space 21

M

- MIB 6
- MIB tree 8, 9
- MIB variables 9-14

N

- network monitor, configuring 6
- Network Node Manager 6

O

- one BoardServer down 22

P

- probable line failure 21

Q

- query RightFax status variables 9

R

- rfBoards.rfBoardInfoTable.rfBoardInfoEntry 1
- rfBoards.rfChannellInfoTable.rfChannellInfoEntry 11
- rfBoardServerModule 11
- rfDatabaseModule 12
- rfEMailGateway.rfGatewayModuleTable.rfGatewayModuleEntry 14
- rfFaxServer_OV_v1Traps_ 9
- RFHPOV.BAT 6
- rfPagingServer 12
- rfQueueHandler 12
- rfRPCServerModule 12
- rfServer 10
- rfServerModule 10
- rfServerTraps 14
- rfSvrEnableCriticalTraps 8
- rfSvrEnableErrorTraps 8
- rfSvrEnableInformationalTraps 8
- rfSvrEnableWarningTraps 8
- RFTRAPD.CONF 6
- rfWorkServers.RfWorkSvrFunctionTable.rfWorkSvrFunctionEntry 13
- rfWorkServers.RfWorkSvrModuleTable.rfWorkSvrModuleEntry 13
- RightFax alerts, receiving 7
- RightFax MIB tree 9
- RightFax services, controlling 15
- RightFax services, starting and stopping 15

S

- send queue too deep 21
- server improperly shut down 22
- severity 8
- SNMP Agent, installing 5
- SNMP alerts 7

SNMP service

- configuring 6
- installing 5
- start RightFax services 15
- statSERVICE_RUNNING 15
- statSERVICE_STOPPED 15
- status, RightFax 9
- stop RightFax services 15

T

- trap definitions 6
- Trap Destination 6
- troubleshooting alerts 19

V

- variables, MIB 9-14
- variables, query 9

W

- Windows Event Log 8