



# Fuse Replacement Procedure for the Cisco MeetingPlace 8106

---

This procedure describes how to replace the fuses for the Cisco MeetingPlace 8106 and contains the following topics:

- [Additional References, page 1](#)
- [Before Replacing Fuses, page 1](#)
- [How To Replace Fuses, page 2](#)

## Additional References

Follow these general guidelines:

- If you want information about installing the Cisco MeetingPlace 8100 series hardware for the first time or information about upgrading the Cisco MeetingPlace 8100 series software, see the *Installation and Upgrade Guide* for Cisco MeetingPlace Audio Server Release 5.3 at the following URL:  
<http://www.cisco.com/univercd/cc/td/doc/product/conf/mtgplace/audio/53/53inst/index.htm>.
- If you want information about configuring the Cisco MeetingPlace 8100 series, see the *Configuration Guide* for Cisco MeetingPlace Audio Server Release 5.3 at the following URL:  
<http://www.cisco.com/univercd/cc/td/doc/product/conf/mtgplace/audio/53/53config/index.htm>.
- For complete information about all of the Cisco conferencing documentation, including *Regulatory Compliance and Safety Information for the Cisco MeetingPlace Series 8100*, see the *Guide to Cisco Conferencing Documentation and Support* at the following URL:  
<http://www.cisco.com/univercd/cc/td/doc/product/conf/mtgplace/roadmap.htm>.

## Before Replacing Fuses

Ensure that you have the following tools to replace fuses in your Cisco MeetingPlace 8106:

- Flat-head screwdriver
- ESD protection



---

Corporate Headquarters:  
Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

Copyright © 2005 Cisco Systems, Inc. All rights reserved.

# How To Replace Fuses

Replacing fuses for the Cisco MeetingPlace 8106 consists of the following activities:

- [Powering Down the Cisco MeetingPlace 8106, page 2](#)
- [Removing Fuses, page 2](#)
- [Installing Fuses, page 3](#)
- [Powering Up the Cisco MeetingPlace 8106, page 4](#)

## Powering Down the Cisco MeetingPlace 8106



Note

As a courtesy, notify any current users that you are powering down the Cisco MeetingPlace 8106.

- 
- Step 1** Access the CLI.
- Step 2** Log in as an administrator. The tech\$ prompt appears.
- Step 3** To stop new Cisco MeetingPlace activity, enter **down**. A verification prompt appears.
- Step 4** At the prompt, enter **y**. The software shutdown process begins.
- Step 5** Wait about 2 minutes for the software shutdown process to complete.
- Step 6** At the tech\$ prompt, enter **halt**. A verification prompt appears.
- Step 7** At the prompt, enter **y**.
- Step 8** Locate the power switch on the back of the Cisco MeetingPlace 8106 and turn it to the off position (“O”).
- Step 9** Remove the power cable from the back of the Cisco MeetingPlace 8106.



Note

The power cable is part of the fuse holder module. You must disconnect the power cable before you can open the fuse panel and replace the fuses.

## Removing Fuses




Warning

Do not touch any of the exposed leads, terminals, or components of the Cisco MeetingPlace 8106 unless you have powered it off and removed the power cord. Hazardous voltages, capable of causing death, are present in this product. Removing or touching the fuse module before disconnecting the power cord will expose you to these hazardous voltages.

- 
- Step 1** Locate the fuse holder module. It is part of the power cord assembly on the back of the Cisco MeetingPlace 8106. See [Figure 1](#).

**Figure 1** Back of Cisco MeetingPlace 8106 with the Fuse Holder Module

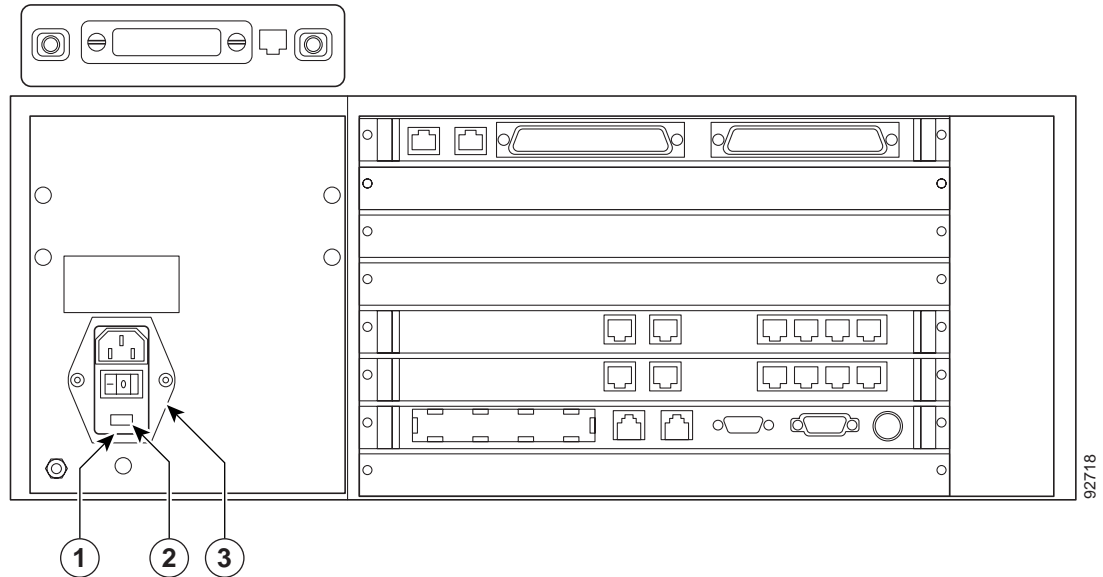

1	Fuse panel notch	3	Fuse holder module
2	Fuse holder		

- Step 2** There is a notch at the bottom of the fuse panel where you can insert a flat-head screwdriver or some other flat object. Pry open the fuse panel. It opens upward from the bottom.
- Step 3** Pull out the red fuse holder. The red fuse holder has a fuse on each side.
- Step 4** Remove the old fuses by gently pulling them out.

## Installing Fuses



**Warning**

Do not touch any of the exposed leads, terminals, or components of the Cisco MeetingPlace 8106 unless you have powered it off and removed the power cord. Hazardous voltages, capable of causing death, are present in this product. Removing or touching the fuse module before disconnecting the power cord will expose you to these hazardous voltages.

- Step 1** Pop the new fuses, one on each side, into the red fuse holder. The Cisco MeetingPlace 8106 uses two 4-amp, 250-volt, AGC-type fuses that have a 0.25 inch diameter and are 1.25 inches long.
- Step 2** Slide the red fuse holder back into the fuse holder module.
- Step 3** Snap shut the cover of the fuse panel.

## Powering Up the Cisco MeetingPlace 8106

---

- Step 1** Plug the power cable into the back of the Cisco MeetingPlace 8106.
  - Step 2** Locate the power switch on the back of the Cisco MeetingPlace 8106 and turn it to the on position (“|”).
-