



## INDEX

---

### A

- adapter pinouts [2-10, 2-11](#)
- auxiliary port
  - adapter [2-11](#)
  - pinouts [2-10, 2-11](#)
- auxiliary port, connecting devices to [2-6](#)

---

### B

- baud rate, console terminal [2-5, 2-6](#)

---

### C

- cables
  - RJ-45-to-Bare wire [2-14](#)
  - RJ-45-to-RJ-45 [2-13](#)
- Cisco L2511 Terminal Server [2-20](#)
- connecting
  - console terminal (figure) [2-6](#)
  - Ethernet hub (figure) [2-3](#)
  - modem (figure) [2-7](#)
- connections
  - console terminal [2-4](#)
  - modem [2-4](#)
- console port
  - adapter [2-11](#)
  - baud rate settings [2-5, 2-6](#)
  - cables [2-10](#)
  - connecting devices to [2-5](#)
  - pinouts [2-10, 2-11](#)
- console terminal, connecting (figure) [2-6](#)
- cross-over (null modem) cables [2-20, 2-22](#)

---

### D

- DB25 adapter [2-22](#)
- DB9 adapter [2-22](#)

---

### E

- EIA/TIA-232
  - auxiliary port connections [2-6](#)
  - console port connections [2-5](#)
- Ethernet hub, connecting (figure) [2-3](#)

---

### H

- hardware
  - installation procedures [?? to 2-6](#)

---

### I

- installation
  - network connections [2-3](#)

---

### L

- LAN connections [2-3](#)

---

### M

- modem, connecting [2-6](#)
- modem, connecting (figure) [2-7](#)

---

## P

pin-outs, serial ports [2-22](#)

procedures

    installation [?? to 2-6](#)

---

## R

RJ-45-to-Bare wire interface cable [2-14](#)

RJ-45-to-RJ-45 interface cable [2-13](#)

rollover cable (figure) [2-5](#)

rollover cable, identifying [2-4, 2-5](#)

---

## S

Serial A/LOM port [2-20](#)

serial connection [2-20, 2-23](#)

---

## T

terminal, connecting [2-4](#)

terminal servers [2-20](#)

---