



A

- accounts
 - administration [7-2](#)
 - creating for the Cisco Unity installation [7-3](#)
 - directory services [7-2](#)
 - installation [7-2](#)
 - local services [7-2](#)
 - message store services [7-2](#)
 - required for the Cisco Unity installation [7-2](#)
 - resetting SQL Server services logon [5-15](#)
 - setting Exchange permissions for [7-13](#)
 - setting rights and permissions for [7-7](#)
- Active Directory
 - extending schema for Cisco Unity [6-11](#)
 - installing on Cisco Unity server [5-13](#)
- adding
 - administration account to an admins group [7-6](#)
 - Cisco Unity server to existing domain [5-13](#)
- administration account
 - adding to an admins group [7-6](#)
 - creating [7-3](#)
 - description [7-2](#)
- Anonymous authentication
 - advantages and disadvantages of [10-2](#)
 - how it works with Cisco Unity Administrator [10-4](#)
 - using with Cisco Unity Administrator [10-2](#)
- assigning IP address [5-10](#)
- attaching peripheral devices to Cisco Unity server [3-5](#)
- authentication
 - methods available for Cisco Unity Administrator [10-2](#)

B

- browser, installing with Cisco Unity System Preparation Assistant [5-2](#)

C

- challenge/response authentication [10-2](#)
- changing
 - folder settings in Windows Explorer [5-11](#)
- Cisco Security Agent for Cisco Unity
 - disabling service [5-12](#)
 - installing [5-8](#)
 - re-enabling service [8-22](#)
- Cisco Unity Administrator
 - authentication methods available [10-2](#)
 - description [10-1](#)
 - setting up to use SSL [8-18](#)
- Cisco Unity Installation and Configuration Assistant
 - configuring Cisco Unity for message store [8-8](#)
 - configuring services [8-8](#)
 - description [8-3](#)
 - installing Cisco Unity software [8-4](#)
 - installing license files [8-6](#)
 - integrating phone system with Cisco Unity [8-11](#)
 - setting default passwords [8-7](#)
 - setting up the Cisco PCA to use SSL [8-12](#)
- Cisco Unity Install License File wizard, running [8-6](#)
- Cisco Unity Message Store Configuration wizard, running [8-8](#)
- Cisco Unity Permissions wizard
 - permissions set by [D-1](#)
 - running for Exchange 2003 and/or Exchange 2000 [7-8](#)
 - running for Exchange 5.5 [7-12](#)

Cisco Unity server

- adding to existing domain [5-13](#)
- attaching peripheral devices to [3-5](#)
- connecting phone system to [3-5](#)
- connecting to network [5-8](#)
- hardening [8-23](#)
- installing Active Directory [5-13](#)
- placement of [3-5](#)

Cisco Unity Services Configuration wizard, running [8-8](#)

Cisco Unity software

- downloading for installation [2-4](#)
- exiting [B-1](#)
- installing [8-4](#)
- registering [2-1](#)

Cisco Unity System Preparation Assistant [5-2](#)

- manual procedures for software installed by [C-1](#)

Cisco Unity Telephony Integration Manager,
running [8-11](#)

configuring

- Cisco Unity for message store [8-8](#)
- Cisco Unity software [8-3](#)
- dual NICs in Cisco Unity server [5-9](#)
- IIS so Cisco Unity Administrator and Status Monitor use
Anonymous authentication [10-5](#)
- pcAnywhere [9-2](#)
- RAID arrays [4-1](#)
- services [8-8](#)
- TCP/IP properties [5-10](#)

connecting

- Cisco Unity server to network [5-8](#)
- peripheral devices to Cisco Unity server [3-5](#)
- phone system to Cisco Unity server [3-5](#)

conventions, documentation [ix](#)

creating

- accounts for the Cisco Unity installation [7-3](#)
- organizational units and mailbox store [6-11](#)

DD/120JCT-Euro [A-4](#)D/120JCT-LS [A-4](#)D/240PCI-T1 [A-8](#)D/41EPCI [A-1](#)D/41JCT-Euro [A-1](#)D/41JCT-LS [A-1](#)databases, moving Exchange 2000 (VM, Exchange 2000
on Cisco Unity server) [6-9](#)data store, installing manually [C-4](#)demonstration system, default license file for [2-3](#)

Dialogic. See voice cards

directory and message store services account

- creating [7-3](#)
- setting Exchange permissions for [7-13](#)
- setting rights and permissions with Cisco Unity
Permissions wizard [7-7](#)

directory services account

- creating [7-3](#)
- description [7-2](#)
- setting Exchange permissions for [7-13](#)
- setting rights and permissions with Cisco Unity
Permissions wizard [7-7](#)

disabling

- Cisco Security Agent service [5-12](#)
- Found New Hardware wizard for voice cards [5-7](#)
- virus-scanning services [5-12](#)

documentation

- audience and use [ix](#)
- conventions [ix](#)
- required for the Cisco Unity installation [2-3](#)

domain

- accounts required for the Cisco Unity installation [7-2](#)
- adding Cisco Unity server to existing [5-13](#)

Domainprep, running on Cisco Unity server [6-8](#)downloading software for installation [2-4](#)

drive locations for files
 determining [2-5](#)
 large-scale system (table) [2-8](#)
 medium-scale system (table) [2-8](#)
 small-scale system (table) [2-7](#)
 drivers-missing error message [3-1](#)
 dual NICs, configuring [5-9](#)

E

error message, unknown PCI device [3-1](#)
 Example Administrator account, securing against toll fraud [8-19](#)
 Exchange
 installing 2000 administration software on the Cisco Unity server [6-4](#)
 installing 2000 on the Cisco Unity server [6-7](#)
 installing 2003 administration software on the Cisco Unity server [6-3](#)
 installing 5.5 administration software on the Cisco Unity server [6-6](#)
 moving 2000 transaction and system logs, and databases (VM, Exchange 2000 on Cisco Unity server) [6-9](#)
 required permissions (table) [7-13](#)
 Exchange 2000, running Cisco Unity Permissions wizard for [7-8](#)
 Exchange 2003, running Cisco Unity Permissions wizard for [7-8](#)
 Exchange 5.5, running Cisco Unity Permissions wizard for [7-12](#)
 Exchange server, determining the partner [6-2](#)
 excluding from virus scanning directory in which Cisco Unity is installed [8-17](#)
 exiting Cisco Unity software [B-1](#)
 extending Active Directory schema for Cisco Unity [6-11](#)

F

files, drive locations for [2-5](#)
 folder settings, changing in Windows Explorer [5-11](#)

Forestprep, running on Cisco Unity server [6-7](#)
 Found New Hardware wizard, disabling for voice cards [5-7](#)

H

hardening Cisco Unity server [8-23](#)
 hot fix associated with Microsoft Security Bulletin MS03-007, installing manually [C-7](#)

I

IIS, configuring so Cisco Unity Administrator and Status Monitor use Anonymous authentication [10-5](#)
 installation
 accounts required for [7-2](#)
 overview of mandatory tasks [1-1](#)
 required documentation for [2-3](#)
 installation account
 creating [7-3](#)
 description [7-2](#)
 installing
 Active Directory on Cisco Unity server [5-13](#)
 administration software for MSDE [5-5](#)
 browser with Cisco Unity System Preparation Assistant [5-2](#)
 Cisco Security Agent for Cisco Unity [5-8](#)
 Cisco Unity software [8-4](#)
 data store, manually [C-4](#)
 Exchange 2000 administration software on the Cisco Unity server [6-4](#)
 Exchange 2000 on the Cisco Unity server [6-7](#)
 Exchange 2003 administration software on the Cisco Unity server [6-3](#)
 Exchange 5.5 administration software on the Cisco Unity server [6-6](#)
 hot fix associated with Microsoft Security Bulletin MS03-007, manually [C-7](#)
 Internet Explorer 6.0 Service Pack 1, manually [C-3](#)
 latest service packs and updates for Exchange [6-10](#)

latest service packs and updates for Windows and SQL Server 2000/MSDE 2000 [5-6](#)

license files [8-6](#)

Message Queuing Services, manually [C-3](#)

Microsoft .NET Framework, manually [C-6](#)

Microsoft Certificate Services component [8-3](#)

MSDE, manually [C-4](#)

MSDE with Cisco Unity System Preparation Assistant [5-2](#)

MSXML 3.0 with Service Pack 1, manually [C-1](#)

NNTP Service, manually [C-2](#)

pcAnywhere [9-2](#)

recommended service packs and updates [9-1](#)

RSA SecurID [9-2](#)

service packs and updates with Cisco Unity System Preparation Assistant [5-2](#)

SQL Server, manually [C-4](#)

SQL Server with Cisco Unity System Preparation Assistant [5-2](#)

virus-scanning software [5-8](#)

voice cards [3-1](#)

Windows 2000 Server [4-4](#)

Windows 2000 Service Pack 3, manually [C-3](#)

Windows components with Cisco Unity System Preparation Assistant [5-2](#)

Windows Terminal Services, manually [C-2](#)

Integrated Windows authentication

- advantages and disadvantages of [10-2](#)
- how it works with Cisco Unity Administrator [10-3](#)
- using with Cisco Unity Administrator [10-2](#)

integrating phone system with Cisco Unity [8-11](#)

Intel Dialogic. See voice cards

Internet Explorer 6.0 Service Pack 1, manually installing [C-3](#)

IP/TCP properties, configuring [5-10](#)

IP address

- assigning [5-10](#)
- verifying [5-11](#)

J

jumpers and switches

- D/240PCI-T1 [A-9](#)
- D/41EPCI [A-2](#)
- D/41JCT-LS and D/41JCT-Euro [A-4](#)

L

LDAP, changing port number of Exchange 5.5 server (when Active Directory is installed) [6-6](#)

license files

- default for Cisco Unity demonstration system [2-3](#)
- getting a replacement copy [2-2](#)
- installing [8-6](#)
- obtaining [2-1](#)

local services account [7-2](#)

logical drives, setting up [4-9](#)

logs, moving Exchange 2000 transaction and system [6-9](#)

M

MAC address of Cisco Unity computer [2-1](#)

mailbox store, creating [6-11](#)

manual procedures for software installed by Cisco Unity System Preparation Assistant [C-1](#)

Message Queuing Services, manually installing [C-3](#)

message store, configuring Cisco Unity for [8-8](#)

message store services account

- creating [7-3](#)
- description [7-2](#)
- setting Exchange permissions for [7-13](#)
- setting rights and permissions with Cisco Unity Permissions wizard [7-7](#)

Microsoft .NET Framework, installing manually [C-6](#)

Microsoft Certificate Services component, installing [8-3](#)

missing-drivers error message [3-1](#)

moving

- SQL Server or MSDE databases and transaction log files [8-20](#)

MSDE

- installing administration software for [5-5](#)
 - installing manually [C-4](#)
 - installing with Cisco Unity System Preparation Assistant [5-2](#)
 - moving databases [8-20](#)
 - setting sa password [5-5](#)
- MSSQLServer service, resetting logon account [5-15](#)
- MSXML 3.0 with Service Pack 1, manually installing [C-1](#)

N**network**

- connecting Cisco Unity server to [5-8](#)
 - hardening Cisco Unity server [8-23](#)
 - verifying connection [5-11](#)
- network interface card. *See* NICs [5-9](#)
- NICs, configuring dual [5-9](#)
- NNTP Service, manually installing [C-2](#)
- non-universal PCI cards, slot placement [3-1](#)
- NTLM authentication [10-2](#)

O

- obtaining license files [2-1](#)
 - organizational units, creating [6-11](#)
- OUs. *See* organizational units

P

- PAK, location of [2-1](#)
 - partner Exchange server, determining [6-2](#)
 - Password Hardening wizard, running [8-7](#)
- passwords
- changing for the Example Administrator account [8-19](#)
 - sa for MSDE [5-5](#)
- passwords, setting default [8-7](#)

pcAnywhere

- installing [9-2](#)
 - recommended configuration for [9-2](#)
- peripheral devices, attaching [3-5](#)
- permissions
- manually setting Exchange [7-13](#)
 - required Exchange (table) [7-13](#)
 - set by Cisco Unity Permissions wizard [D-1](#)
 - setting with Cisco Unity Permissions wizard [7-7](#)
- Permissions wizard. *See* Cisco Unity Permissions wizard
- phone system
- connecting to Cisco Unity server [3-5](#)
 - integrating with Cisco Unity and testing integration [8-11](#)
- Platform Configuration discs
- utility for configuring RAID arrays [4-2](#)
 - utility to install Windows 2000 Server [4-4](#)
- procedures
- adding the Cisco Unity administration account to the Domain Admins group (only when the Cisco Unity server is a domain controller) [7-7](#)
 - adding the Cisco Unity administration account to the local Administrators group (only when the Cisco Unity server is a member server) [7-6](#)
 - adding the Cisco Unity server to an existing domain [5-15](#)
 - attaching peripheral devices and connecting the phone system [3-5](#)
 - changing folder settings in Windows Explorer [5-12](#)
 - changing the LDAP port number of the Exchange 5.5 server (when Active Directory is installed) [6-6](#)
 - changing the password on the Example Administrator account [8-19](#)
 - changing the pcAnywhere video mode to Compatibility [9-2](#)
 - configuring Cisco Unity for the message store (Exchange 2003 or Exchange 2000) [8-9](#)
 - configuring Cisco Unity for the message store (Exchange 5.5) [8-10](#)
 - configuring dual NICs in the Cisco Unity server [5-9](#)
 - configuring IIS so that the Cisco Unity Administrator and Status Monitor use Anonymous authentication [10-5](#)

- procedures (continued)
- configuring pcAnywhere so that it does not start automatically when you restart the server [9-2](#)
 - configuring services [8-8](#)
 - configuring TCP/IP properties [5-10](#)
 - configuring the RAID arrays by using the Cisco-provided utility (HP) [4-2](#)
 - configuring the RAID arrays by using the Cisco-provided utility (IBM) [4-2](#)
 - configuring the RAID arrays by using the manufacturer-provided utility [4-3](#)
 - connecting the Cisco Unity server to the network [5-9](#)
 - creating domain accounts for Cisco Unity installation, administration, and services
 - Method A [7-4](#)
 - Method B [7-5](#)
 - determining the current setting for the Intel Dialogic quiet parameter [A-11](#)
 - disabling the Found New Hardware wizard for the voice cards [5-7](#)
 - excluding from virus scanning the directory in which Cisco Unity is installed [8-18](#)
 - extending the Active Directory schema for Cisco Unity [6-11](#)
 - getting the MAC address of the Cisco Unity computer [2-2](#)
 - granting Exchange permissions to the installation and directory services accounts (subscribers homed in Exchange 2003/2000 and 5.5) [7-16](#)
 - granting Exchange permissions to the installation and directory services accounts (subscribers homed only in Exchange 2003/2000) [7-14](#)
 - granting services account admin permissions to directory services and message store services accounts (subscribers homed in Exchange 2003/2000 and 5.5) [7-17](#)
 - granting services account admin permissions to the installation and directory and message services accounts (subscribers homed only in Exchange 5.5) [7-15](#)
 - installing Active Directory on the Cisco Unity server [5-13](#)
 - installing Enterprise Manager for MSDE [5-5](#)
 - installing Exchange 2000 administration software on the Cisco Unity server [6-4](#)
 - installing Exchange 2000 on the Cisco Unity server [6-8](#)
 - installing Exchange 2003 administration software on the Cisco Unity server [6-3](#)
 - installing Exchange 5.5 administration software on the Cisco Unity server (UM, Exchange 5.5 on separate server) [6-6](#)
 - installing Exchange 5.5 Service Pack 4 (UM, Exchange 5.5 on separate server) [6-7](#)
 - installing license files (without failover or on primary server with failover) [8-6](#)
 - installing the Cisco Unity software [8-4](#)
 - installing the default license file on the secondary Cisco Unity server [8-7](#)
 - installing the latest Microsoft service packs for Exchange [6-10](#)
 - installing the latest Microsoft service packs for Windows and SQL Server 2000/MSDE 2000 [5-6](#)
 - installing the latest Microsoft updates for Exchange [6-10](#)
 - installing the latest Microsoft updates for Windows and SQL Server 2000/MSDE 2000 [5-6](#)
 - installing the Microsoft Certificate Services component [8-3](#)
 - installing voice cards in the Cisco Unity computer or in an expansion chassis [3-3](#)
 - installing Windows 2000 Server by using the Cisco Unity Platform Configuration discs (HP) [4-5](#)
 - installing Windows 2000 Server by using the manufacturer's guided system-setup utility and a retail Windows 2000 disc [4-7](#)
 - installing Windows 2000 Server by using the Platform Configuration discs (IBM) [4-6](#)
 - integrating the phone system with Cisco Unity (without failover or on a primary server with failover) [8-11](#)
 - integrating the phone system with Cisco Unity on the secondary server [8-12](#)
 - moving SQL or MSDE databases and transaction log files [8-20](#)
 - moving the Exchange 2000 transaction and system logs, and databases [6-9](#)
 - registering and obtaining license files [2-2](#)
 - removing Intel Dialogic software [A-12](#)
 - resetting the account that SQL Server services log on as [5-15](#)

procedures (continued)

- resetting the Intel Dialogic quiet parameter [A-13](#)
 - running Cisco Unity System Preparation Assistant [5-2](#)
 - running Domainprep on the Cisco Unity server [6-8](#)
 - running Forestprep on the Cisco Unity server [6-7](#)
 - running the Cisco Unity Permissions wizard for Exchange 2003 and/or Exchange 2000 [7-8](#)
 - running the Cisco Unity Permissions wizard for Exchange 5.5 [7-12](#)
 - selecting the country for D/120JCT-Euro voice cards [A-7](#)
 - setting pcAnywhere to run on one or more specific processors [9-3](#)
 - setting the D/120JCT-LS and D/120JCT-Euro card switches [A-6](#)
 - setting the D/240PCI-T1 protocol [A-10](#)
 - setting the D/41EPCI card switches and jumpers [A-2](#)
 - setting the D/41JCT-LS and D/41JCT-Euro card switches and jumpers [A-4](#)
 - setting the D240PCI-T1 card switches and jumpers [A-9](#)
 - setting the sa password for MSDE [5-6](#)
 - setting up the Cisco Unity Administrator and Status Monitor to use SSL [8-18](#)
 - setting up the logical drives [4-9](#)
 - verifying the IP address and the network connection [5-11](#)
- product authorization key, location of [2-1](#)

Q

quiet parameter

- determining Intel Dialogic [A-11](#)
- resetting Intel Dialogic [A-13](#)

R

RAID arrays

- configuring [4-1](#)
- utilities on server manufacturer disc [4-3](#)
- utility on Platform Configuration discs [4-2](#)

re-enabling

- Cisco Security Agent service [8-22](#)
- virus-scanning services [8-22](#)

registering Cisco Unity software [2-1](#)

removing

- Intel Dialogic software [A-11](#)

resetting

- account that SQL Server services log on as [5-15](#)
- Intel Dialogic quiet parameter [A-13](#)

rights, setting with Cisco Unity Permissions wizard [7-7](#)RSA SecurID, installing [9-2](#)**S**sa password, setting for MSDE [5-5](#)schema, extending Active Directory for Cisco Unity [6-11](#)securing the Example Administrator account against toll fraud [8-19](#)

service packs

- installing Exchange 5.5 SP4 (UM, Exchange 5.5 on separate server) [6-7](#)
- installing latest for Exchange [6-10](#)
- installing latest for Windows and SQL Server 2000/MSDE 2000 [5-6](#)
- installing recommended [9-1](#)
- installing with Cisco Unity System Preparation Assistant [5-2](#)

services, configuring [8-8](#)

setting

- Exchange permissions, manually [7-13](#)
- rights and permissions with Cisco Unity Permissions wizard [7-7](#)
- sa password for MSDE [5-5](#)

setting up

- Cisco Unity Administrator and Status Monitor to use SSL [8-18](#)
- Cisco Unity to use SSL, manually [E-1](#)
- logical drives [4-9](#)
- the Cisco PCA to use SSL [8-12](#)
- Setup program, Cisco Unity [8-4](#)

software

- configuring for D/120JCT-Euro voice card [A-7](#)
- configuring for D/240PCI-T1 voice card [A-10](#)
- downloading for installation [2-4](#)
- exiting Cisco Unity [B-1](#)
- installing Cisco Unity [8-4](#)
- installing Exchange 2000 administration on the Cisco Unity server [6-4](#)
- installing Exchange 2000 on Cisco Unity server (VM, Exchange 2000 on Cisco Unity server) [6-7](#)
- installing Exchange 2000 on the Cisco Unity server [6-7](#)
- installing Exchange 2003 administration on the Cisco Unity server [6-3](#)
- installing Exchange 5.5 administration on the Cisco Unity server [6-6](#)
- registering Cisco Unity [2-1](#)
- removing Intel Dialogic [A-11](#)

SQL Server

- installing Enterprise Manager for MSDE [5-5](#)
- installing manually [C-4](#)
- installing with Cisco Unity System Preparation Assistant [5-2](#)
- moving databases [8-20](#)
- resetting services logon account [5-15](#)

SQLServerAgent service, resetting logon account [5-15](#)

SSL

- determining whether to use [8-2](#)
- installing Microsoft Certificate Services component [8-3](#)
- manual procedures for setting up Cisco Unity to use [E-1](#)
- setting up Cisco Unity Administrator and Status Monitor to use [8-18](#)
- setting up the Cisco PCA to use [8-12](#)

static IP address, assigning [5-10](#)

Status Monitor, setting up to use SSL [8-18](#)

switches and jumpers

- D/240PCI-T1 [A-9](#)
- D/41EPCI [A-2](#)
- D/41JCT-LS and D/41JCT-Euro [A-4](#)

T

TCP/IP properties, configuring [5-10](#)

toll fraud, preventing [8-19](#)

transaction log files, moving [8-20](#)

U

universal PCI voice cards, slot placement [3-1](#)

unknown PCI device error message [3-1](#)

updates

- installing latest for Exchange [6-10](#)
- installing latest for Windows and SQL Server 2000/MSDE 2000 [5-6](#)
- installing recommended [9-1](#)

utilities

- RAID array configuration, on disc from server manufacturer [4-3](#)
- RAID array configuration, on Platform Configuration discs [4-2](#)
- Windows 2000 Server installation, on disc from server manufacturer [4-7](#)
- Windows 2000 Server installation, on Platform Configuration discs [4-4](#)

UTIM. See Cisco Unity Telephony Integration Manager

V

verifying IP address and network connection [5-11](#)

virus scanning

- disabling services [5-12](#)
- excluding directory in which Cisco Unity is installed [8-17](#)
- installing software [5-8](#)
- re-enabling services [8-22](#)

voice cards

- D/120JCT-Euro [A-4](#)
- D/120JCT-LS [A-4](#)
- D/240PCI-T1 [A-8](#)
- D/41EPCI [A-1](#)

D/41JCT-Euro [A-1](#)
D/41JCT-LS [A-1](#)
disabling Found New Hardware wizard for [5-7](#)
installing [3-1](#)
removing Intel Dialogic software [A-11](#)
slot placement [3-1](#)

W

Windows 2000 Advanced Server
See also Windows 2000 Server
Windows 2000 Server, installing [4-4](#)
Windows 2000 Service Pack 3, manually installing [C-3](#)
Windows components, installing with Cisco Unity System
Preparation Assistant [5-2](#)
Windows Explorer, changing folder settings in [5-11](#)
Windows Terminal Services, manually installing [C-2](#)

