



A

- accounts
 - administration [7-2](#)
 - creating for the Cisco Unity installation [7-3](#)
 - directory and message store services [7-2](#)
 - installation [7-2](#)
 - local services [7-2](#)
 - required for the Cisco Unity installation [7-2](#)
 - resetting account that SQL Server 2000 services log on as [5-14](#)
 - setting Exchange permissions for [7-5](#)
 - setting rights and permissions for [7-4](#)
- adding
 - administration account to local Administrators group [7-3](#)
 - Cisco Unity server to existing domain [5-13](#)
- administration account
 - adding to local Administrators group [7-3](#)
 - creating [7-3](#)
 - description [7-2](#)
- Anonymous authentication
 - advantages and disadvantages of [10-2](#)
 - how it works with Cisco Unity Administrator [10-4](#)
 - using with Cisco Unity Administrator [10-2](#)
- assigning IP address [5-11](#)
- attaching peripheral devices to Cisco Unity server [3-5](#)
- authentication, methods available for Cisco Unity Administrator [10-2](#)

B

- browser, installing with Cisco Unity System Preparation Assistant [5-6](#)

C

- challenge/response authentication [10-2](#)
- changing folder settings in Windows Explorer [5-8](#)
- Cisco Security Agent for Cisco Unity
 - disabling service [5-12](#)
 - downloading [2-3](#)
 - installing [5-11](#)
 - re-enabling service [8-20](#)
- Cisco Unity Administrator
 - authentication methods available [10-2](#)
 - description [10-1](#)
 - setting up to use SSL [8-16](#)
- Cisco Unity Installation and Configuration Assistant
 - configuring Cisco Unity for message store [8-8](#)
 - configuring services [8-7](#)
 - description [8-3](#)
 - installing Cisco Unity software [8-4](#)
 - installing license files [8-6](#)
 - integrating phone system with Cisco Unity [8-9](#)
 - setting default passwords [8-9](#)
 - setting up Cisco PCA to use SSL [8-10](#)
- Cisco Unity Install License File wizard, running [8-6](#)
- Cisco Unity Message Store Configuration wizard, running [8-8](#)
- Cisco Unity Permissions wizard, running [7-4](#)
- Cisco Unity server
 - adding to existing domain [5-13](#)
 - attaching peripheral devices to [3-5](#)
 - connecting phone system to [3-5](#)
 - physical location of [3-5](#)
 - restarting [B-2](#)

securing [8-21](#)
 shutting down [B-2](#)
 Cisco Unity Services Configuration wizard, running [8-7](#)
 Cisco Unity software
 downloading for installation [2-2, 2-4](#)
 exiting [B-1](#)
 installing [8-4](#)
 registering [5-4](#)
 starting [B-3](#)
 Cisco Unity System Preparation Assistant
 description [5-6](#)
 manual procedures for software installed by [C-1](#)
 Cisco Unity Telephony Integration Manager, running [8-9](#)
 configuring
 Cisco Unity for message store [8-8](#)
 Cisco Unity services [8-7](#)
 Cisco Unity software [8-3](#)
 dual NIC in Cisco Unity server [5-2](#)
 IIS so Cisco Unity Administrator and Status Monitor use
 Anonymous authentication [10-5](#)
 pcAnywhere [9-2](#)
 RAID arrays [4-1](#)
 TCP/IP properties [5-11](#)
 connecting
 peripheral devices to Cisco Unity server [3-5](#)
 phone system [3-5](#)
 conventions, documentation [ix](#)
 creating accounts for the Cisco Unity installation [7-3](#)

D

D/120JCT-Euro [A-4](#)
 D/120JCT-LS [A-4](#)
 D/240PCI-T1 [A-8](#)
 D/41EPCI [A-1](#)
 D/41JCT-Euro [A-1](#)
 D/41JCT-LS [A-1](#)

databases, moving SQL Server 2000 [8-18](#)
 data store software, installing manually [C-4](#)
 demonstration system, default license file for [5-6](#)
 Dialogic. *See* voice cards
 directory and message store services account
 creating [7-3](#)
 description [7-2](#)
 setting Exchange permissions for [7-5](#)
 setting rights and permissions with Cisco Unity
 Permissions wizard [7-4](#)
 disabling
 Cisco Security Agent service [5-12](#)
 Found New Hardware wizard for voice cards [5-9](#)
 virus-scanning services [5-12](#)
 documentation
 audience and use [ix](#)
 conventions [ix](#)
 required for the Cisco Unity installation [2-1](#)
 domain
 accounts required for the Cisco Unity installation [7-2](#)
 adding Cisco Unity server to existing [5-13](#)
 downloading software for installation [2-2](#)
 drive locations for files, determining [2-4](#)
 drivers-missing error message [3-1](#)
 dual NIC, configuring [5-2](#)

E

error message, unknown PCI device [3-1](#)
 Example Administrator account, securing against toll
 fraud [8-17](#)
 Exchange
 determining the partner server [6-1](#)
 installing 5.5 administration software on the Cisco Unity
 server [6-2](#)
 excluding from virus scanning directory in which Cisco
 Unity is installed [8-16](#)
 exiting Cisco Unity software [B-1](#)

-
- F**
- files, drive locations for [2-4](#)
 - folder settings, changing in Windows Explorer [5-8](#)
 - Found New Hardware wizard, disabling for voice cards [5-9](#)
-
- H**
- hardening Cisco Unity server [8-21](#)
-
- I**
- IIS, configuring so Cisco Unity Administrator and Status Monitor use Anonymous authentication [10-5](#)
 - installation
 - accounts required for [7-2](#)
 - overview of mandatory tasks [1-1](#)
 - required documentation for [2-1](#)
 - installation account
 - creating [7-3](#)
 - description [7-2](#)
 - setting Exchange permissions for [7-5](#)
 - installing
 - browser with Cisco Unity System Preparation Assistant [5-6](#)
 - Cisco Security Agent for Cisco Unity [5-11](#)
 - Cisco Unity service release [8-15](#)
 - Cisco Unity software [8-4](#)
 - data store software, manually [C-4](#)
 - Exchange 5.5 administration software on the Cisco Unity server [6-2](#)
 - Internet Explorer 6.0 with Service Pack 1, manually [C-3](#)
 - latest service pack and updates for Exchange [6-3](#)
 - latest service packs and updates for Windows, Internet Explorer, and SQL Server 2000 [5-9](#)
 - license files [8-6](#)
 - Message Queuing Services, manually [C-2](#)
 - Microsoft .NET Framework, manually [C-5](#)
 - Microsoft Certificate Services component [8-3](#)
 - MSXML 3.0 with Service Pack 1, manually [C-1](#)
 - NIC-configuration utility [5-3](#)
 - NNTP Service, manually [C-2](#)
 - optional software [9-3](#)
 - pcAnywhere [9-1](#)
 - RSA SecurID [9-1](#)
 - service packs and updates with Cisco Unity System Preparation Assistant [5-6](#)
 - SQL Server 2000, manually [C-4](#)
 - SQL Server 2000 with Cisco Unity System Preparation Assistant [5-6](#)
 - virus-scanning software [5-10](#)
 - voice cards [3-1](#)
 - Windows 2000 Server [4-3](#)
 - Windows 2000 Service Pack 4, manually [C-3](#)
 - Windows components with Cisco Unity System Preparation Assistant [5-6](#)
 - Windows Terminal Services, manually [C-2](#)
 - Integrated Windows authentication
 - advantages and disadvantages of [10-2](#)
 - how it works with Cisco Unity Administrator [10-3](#)
 - using with Cisco Unity Administrator [10-2](#)
 - integrating phone system with Cisco Unity [8-9](#)
 - Intel Dialogic. *See* voice cards
 - Intel NetStructure PBX-IP Media Gateway (PIMG) [A-11](#)
 - Internet Explorer 6.0 with Service Pack 1, installing manually [C-3](#)
 - IP address
 - assigning [5-11](#)
 - verifying [5-12](#)
-
- J**
- jumpers and switches
 - D/240PCI-T1 [A-9](#)
 - D/41EPCI [A-2](#)
 - D/41JCT-LS and D/41JCT-Euro [A-4](#)

L

LDAP, changing port number of Exchange 5.5 server
(when Active Directory is installed) [6-2](#)

license files

- default for Cisco Unity demonstration system [5-6](#)
- getting a replacement copy [5-5](#)
- installing [8-6](#)
- obtaining [5-4](#)

local services account [7-2](#)

logical drives, setting up [4-7](#)

logs, moving SQL Server 2000 [8-18](#)

M

MAC address of Cisco Unity server [5-4](#)

manual procedures for software installed by Cisco Unity
System Preparation Assistant [C-1](#)

Message Queuing Services, installing manually [C-2](#)

message store, configuring Cisco Unity for [8-8](#)

Microsoft .NET Framework, installing manually [C-5](#)

Microsoft Certificate Services component, installing [8-3](#)

missing-drivers error message [3-1](#)

moving SQL Server 2000 databases and transaction
logs [8-18](#)

MSSQLServer service, resetting logon account [5-14](#)

MSXML 3.0 with Service Pack 1, installing manually [C-1](#)

N

network

- securing Cisco Unity server [8-21](#)
- verifying connection [5-12](#)

network interface card. *See* NIC [5-2](#)

NIC

- configuration utility, installing [5-3](#)
- configuring dual [5-2](#)

NNTP Service, installing manually [C-2](#)

non-universal PCI cards, slot placement [3-1](#)

NTLM authentication [10-2](#)

O

obtaining license files [5-4](#)

optional software, installing [9-3](#)

P

PAK, location of [5-4](#)

partner Exchange server, determining [6-1](#)

Password Hardening wizard, running [8-9](#)

passwords

- changing for the Example Administrator account [8-17](#)
- setting default [8-9](#)

PBX-IP Media Gateway (PIMG) [A-11](#)

pcAnywhere

- installing [9-1](#)
- recommended configuration for [9-2](#)

peripheral devices, attaching [3-5](#)

permissions

- manually setting Exchange [7-5](#)
- setting with Cisco Unity Permissions wizard [7-4](#)

Permissions wizard, running [7-4](#)

phone system

- integrating with Cisco Unity and testing integration [8-9](#)
- making connections from [3-5](#)

PIMG units, connecting phone system to [3-5](#)

Platform Configuration discs

- utility for configuring RAID arrays [4-2](#)
- utility to install Windows 2000 Server [4-4](#)

product authorization key, location of [5-4](#)

Q

quiet parameter

- determining Intel Dialogic [A-12](#)
- resetting Intel Dialogic [A-14](#)

R

RAID arrays

- configuring [4-1](#)
- utilities on server manufacturer disc [4-3](#)
- utility on Platform Configuration discs [4-2](#)

re-enabling

- Cisco Security Agent service [8-20](#)
- virus-scanning services [8-20](#)

registering Cisco Unity software [5-4](#)removing Intel Dialogic software [A-12](#)

resetting

- account that SQL Server 2000 services log on as [5-14](#)
- Intel Dialogic quiet parameter [A-14](#)

restarting Cisco Unity server [B-2](#)rights, setting with Cisco Unity Permissions wizard [7-4](#)RSA SecurID, installing [9-1](#)

S

securing

- Cisco Unity and the Cisco Unity server [8-21](#)
- Example Administrator account against toll fraud [8-17](#)

service packs

- downloading Cisco Unity CDs [2-4](#)
- downloading latest [2-3](#)
- installing Exchange 5.5 SP4 [6-3](#)
- installing latest for Exchange [6-3](#)
- installing latest for Windows, Internet Explorer, and SQL Server 2000 [5-9](#)
- installing with Cisco Unity System Preparation Assistant [5-6](#)

service release

- downloading [2-3](#)
- installing [8-15](#)

services, configuring Cisco Unity [8-7](#)

setting

- Exchange permissions, manually [7-5](#)
- rights and permissions with Cisco Unity Permissions wizard [7-4](#)

setting up

- Cisco PCA to use SSL [8-10](#)
- Cisco Unity Administrator and Status Monitor to use SSL [8-16](#)
- logical drives [4-7](#)

Setup program, Cisco Unity [8-4](#)shutting down Cisco Unity server [B-2](#)

software

- configuring for D/120JCT-Euro voice card [A-7](#)
- configuring for D/240PCI-T1 voice card [A-10](#)
- configuring for PIMG units [A-12](#)
- downloading for installation [2-2](#)
- exiting Cisco Unity [B-1](#)
- installing Cisco Unity [8-4](#)
- installing Exchange 5.5 administration on the Cisco Unity server [6-2](#)
- installing optional [9-3](#)
- registering Cisco Unity [5-4](#)
- removing Intel Dialogic [A-12](#)
- starting Cisco Unity [B-3](#)

SQL Server 2000

- installing manually [C-4](#)
- installing with Cisco Unity System Preparation Assistant [5-6](#)
- moving databases and transaction logs [8-18](#)
- resetting account that services log on as [5-14](#)

SQLServerAgent service, resetting logon account [5-14](#)

SSL

- determining whether to use [8-2](#)
- installing Microsoft Certificate Services component [8-3](#)

setting up Cisco PCA to use [8-10](#)
 setting up Cisco Unity Administrator and Status Monitor
 to use [8-16](#)
 starting Cisco Unity software [B-3](#)
 Status Monitor, setting up to use SSL [8-16](#)
 switches and jumpers
 D/240PCI-T1 [A-9](#)
 D/41EPCI [A-2](#)
 D/41JCT-LS and D/41JCT-Euro [A-4](#)

T

TCP/IP properties, configuring [5-11](#)
 toll fraud, preventing [8-17](#)
 transaction logs, moving SQL Server 2000 [8-18](#)

U

universal PCI voice cards, slot placement [3-1](#)
 unknown PCI device error message [3-1](#)
 updates
 downloading latest [2-3](#)
 installing latest for Exchange [6-3](#)
 installing latest for Windows, Internet Explorer, and
 SQL Server 2000 [5-9](#)
 utilities
 RAID array configuration, on disc from server
 manufacturer [4-3](#)
 RAID array configuration, on Platform Configuration
 discs [4-2](#)
 Windows 2000 Server installation, on disc from server
 manufacturer [4-5](#)
 Windows 2000 Server installation, on Platform
 Configuration discs [4-4](#)
 UTIM. *See* Cisco Unity Telephony Integration Manager

V

verifying IP address and network connection [5-12](#)

virus scanning
 disabling services [5-12](#)
 excluding directory in which Cisco Unity is
 installed [8-16](#)
 installing software [5-10](#)
 re-enabling services [8-20](#)
 voice cards
 D/120JCT-Euro [A-4](#)
 D/120JCT-LS [A-4](#)
 D/240PCI-T1 [A-8](#)
 D/41EPCI [A-1](#)
 D/41JCT-Euro [A-1](#)
 D/41JCT-LS [A-1](#)
 disabling Found New Hardware wizard for [5-9](#)
 installing [3-1](#)
 removing Intel Dialogic software [A-12](#)
 slot placement [3-1](#)

W

Windows 2000 Server
 installing [4-3](#)
 Service Pack 4, installing manually [C-3](#)
 Windows components, installing with Cisco Unity System
 Preparation Assistant [5-6](#)
 Windows Explorer, changing folder settings in [5-8](#)
 Windows Terminal Services, installing manually [C-2](#)