



A

- Active Directory, moving Cisco Unity server to another domain (without failover) [6-1](#)
- Active Directory, moving primary and secondary failover servers to another domain at same time [6-6](#)
- adding
 - AMIS Networking [2-37](#)
 - Bridge Networking [2-39](#)
 - Cisco CallManager integration [2-42](#)
 - Cisco Unity user licenses [2-22](#)
 - Digital Networking [2-42](#)
 - failover [2-48](#)
 - features to Cisco Unity 4.x system (task list) [2-1](#)
 - Internet Subscribers [2-42](#)
 - IP integration [2-42](#)
 - languages [2-25](#)
 - networking options [2-42](#)
 - SIP integration [2-42](#)
 - text to speech [2-31](#)
 - voice cards [2-2](#)
 - voice messaging ports [2-10](#)
 - VPIM Networking [2-40](#)
- AMIS Networking, adding [2-37](#)
- audience and use, description [1-ix](#)

B

- backing up
 - Cisco Unity data for 4.x upgrade to shipping version [1-9](#)
 - messages with Cisco Unity data for 4.x upgrade to shipping version [1-10](#)
- Bridge Networking, adding [2-39](#)

C

- certificate services component, installing for 4.x upgrade to shipping version [1-11](#)
- changing
 - Active Directory password for Unity_ and EAdmin accounts [8-6](#)
 - codec format of existing greetings and recorded names [5-6](#)
 - codec format of system prompts [5-7](#)
 - Domino server specified in primary subscriber address book settings for Cisco Unity 4.0(4) and earlier [4-4](#)
 - Domino server specified in subscriber address book settings for Cisco Unity 4.0(5) and later [4-1](#)
 - Domino server to which Cisco Unity sends voice messages [4-5](#)
 - IP address of Cisco Unity server [7-1](#)
 - message recording and storage codec [5-2](#)
 - message retrieval codec [5-4](#)
 - Notes password on Cisco Unity server (with failover configured) [8-7](#)
 - Notes password on Cisco Unity server (without failover) [8-6](#)
 - passwords on Cisco Unity service accounts (with failover configured) [8-3](#)
 - passwords on Cisco Unity service accounts (without failover) [8-1](#)
 - phone system codec [5-2](#)
- checking consistency of Cisco Unity database for 4.x upgrade to shipping version [1-9](#)
- Cisco CallManager Express, enabling integration features [1-22](#)
- Cisco CallManager integration, adding [2-42](#)
- Cisco PCA, setting up to use SSL for 4.x upgrade to shipping version [1-17](#)

Cisco Security Agent for Cisco Unity

- disabling service [1-12](#)
- downloading for 4.x upgrade to shipping version [1-8](#)
- re-enabling service [1-22](#)

Cisco Unity

- data, backing up for 4.x upgrade to shipping version [1-9](#)
- downloading CDs for 4.x upgrade to shipping version [1-9](#)
- renaming primary and secondary servers at same time [6-6](#)
- uninstalling [12-1](#)

Cisco Unity Administrator, setting up to use SSL for 4.x upgrade to shipping version [1-24](#)

Cisco Unity Directory Walker utility

- checking the consistency of Cisco Unity database for 4.x upgrade to shipping version [1-9](#)
- downloading latest version for 4.x upgrade to shipping version [1-8](#)

Cisco Unity Disaster Recovery Backup tool, backing up Cisco Unity data for 4.x upgrade to shipping version [1-9](#)

Cisco Unity Disaster Recovery tools

- backing up Cisco Unity data for 4.x upgrade to shipping version [1-9](#)
- downloading latest version for 4.x upgrade to shipping version [1-8](#)

Cisco Unity server

- changing Notes password on (with failover configured) [8-7](#)
- changing Notes password on (without failover) [8-6](#)
- moving primary and secondary to another domain at same time [6-6](#)
- moving to another domain (without failover) [6-1](#)
- renaming (without failover) [6-1](#)
- replacing (without failover) [10-1](#)
- restarting [A-3](#)
- shutting down [A-3](#)
- uninstalling Cisco Unity [12-1](#)

Cisco Unity software

- downloading for 4.x upgrade to shipping version [1-7](#)
- exiting [A-1](#)
- starting [A-3](#)

upgrading 4.x to shipping version with failover configured, task list [1-4](#)

upgrading 4.x upgrade to shipping version without failover, task list [1-2](#)

upgrading and configuring for 4.x upgrade to shipping version [1-15](#)

Cisco Unity System Preparation Assistant, running for 4.x upgrade to shipping version [1-12](#)

Cisco Unity user licenses, adding [2-22](#)

codecs

changing format of existing greetings and recorded names [5-6](#)

changing format of system prompts [5-7](#)

changing message recording and storage [5-2](#)

changing message retrieval [5-4](#)

confirming or changing phone system [5-2](#)

list of supported [5-3](#)

task list for changing [5-2](#)

testing configuration changes [5-9](#)

configuring

Cisco Unity message store for 4.x upgrade to shipping version [1-15](#)

pcAnywhere [3-1](#)

services for 4.x upgrade to shipping version [1-15](#)

conventions, documentation [x](#)

converting

primary server to permanent regular Cisco Unity server without failover [10-22](#)

secondary server to 60-day Cisco Unity server without primary server [10-16](#)

secondary server to permanent regular Cisco Unity server without failover [10-17](#)

D

data, backing up Cisco Unity for 4.x upgrade to shipping version [1-9](#)

database, checking consistency of Cisco Unity for 4.x upgrade to shipping version [1-9](#)

DbWalker. See *Cisco Unity Directory Walker utility*

Digital Networking, adding [2-42](#)

directory changes

- changing Domino server specified in primary subscriber address book settings for Cisco Unity 4.0(4) and earlier [4-4](#)
- changing Domino server specified in subscriber address book settings for Cisco Unity 4.0(5) and later [4-1](#)

DiRT. See *Cisco Unity Disaster Recovery tools*

disabling

- Cisco Security Agent service [1-12](#)
- virus-scanning services [1-12](#)

documentation

- audience and use [ix](#)
- conventions [x](#)

domain

- moving Cisco Unity server to another (without failover) [6-1](#)
- moving primary and secondary failover servers to another at same time [6-6](#)

Domino servers

- changing server specified in primary subscriber address book settings for Cisco Unity 4.0(4) and earlier [4-4](#)
- changing server specified in subscriber address book settings for Cisco Unity 4.0(5) and later [4-1](#)
- changing server to which Cisco Unity sends voice messages [4-5](#)

downgrading from SQL Server 2000 to MSDE 2000 [11-3](#)

downloading software for 4.x upgrade to shipping version [1-7](#)

E

EAdmin account, changing Active Directory password for [8-6](#)

Example Administrator, securing against toll fraud for 4.x upgrade to shipping version [1-26](#)

Example Subscriber, securing against toll fraud for 4.x upgrade to shipping version [1-26](#)

exiting Cisco Unity software [A-1](#)

F

failover

- adding [2-48](#)
- uninstalling [10-15](#)

G

greetings and recorded names, changing codec format of [5-6](#)

I

installing

- latest service packs and updates for 4.x upgrade to shipping version [1-14](#)
- Microsoft Certificate Services component for 4.x upgrade to shipping version [1-11](#)
- optional software [3-3](#)
- pcAnywhere [3-1](#)
- RSA SecurID [3-1](#)

integration, enabling features for Cisco CallManager Express [1-22](#)

Internet Subscribers, adding [2-42](#)

IP address, changing on Cisco Unity server [7-1](#)

IP integration, adding [2-42](#)

L

languages, adding [2-25](#)

M

message recording and storage codec, changing [5-2](#)

message retrieval codec, changing [5-4](#)

messages, backing up with Cisco Unity data for 4.x upgrade to shipping version [1-10](#)

message store, configuring Cisco Unity for, for 4.x upgrade to shipping version [1-15](#)

MSDE 2000, downgrading to, from SQL Server 2000 [11-3](#)

N

networking options, adding [2-42](#)

Notes

changing password on Cisco Unity server (with failover configured) [8-7](#)

changing password on Cisco Unity server (without failover) [8-6](#)

O

optional software, installing [3-3](#)

P

passwords

changing Active Directory for Unity_ and EAdmin accounts [8-6](#)

changing Notes on Cisco Unity server (with failover configured) [8-7](#)

changing Notes on Cisco Unity server (without failover) [8-6](#)

changing on Cisco Unity service accounts (with failover configured) [8-3](#)

changing on Cisco Unity service accounts (without failover) [8-1](#)

pcAnywhere

installing [3-1](#)

recommended configuration for [3-1](#)

phone system

changing codec [5-2](#)

designating Cisco Call Manager Express [1-22](#)

ports. See voice messaging ports

primary server

converting to permanent regular Cisco Unity server without failover [10-22](#)

renaming at same time as secondary server [6-6](#)

replacing [10-3](#)

replacing at same time as secondary server [10-10](#)

R

re-enabling

Cisco Security Agent service [1-22](#)

virus-scanning services [1-22](#)

removing

Cisco Unity from the server [12-1](#)

voice cards [2-2](#)

renaming

Cisco Unity server (without failover) [6-1](#)

primary and secondary servers at same time [6-6](#)

replacing

Cisco Unity server (without failover) [10-1](#)

primary and secondary servers at same time [10-10](#)

primary server only [10-3](#)

secondary server only [10-8](#)

restarting Cisco Unity server [A-3](#)

RSA SecurID, installing [3-1](#)

S

secondary server

converting to 60-day Cisco Unity server without primary server [10-16](#)

converting to permanent regular Cisco Unity server without failover [10-17](#)

renaming at same time as primary server [6-6](#)

replacing [10-8](#)

replacing at same time as primary server [10-10](#)

securing Example Administrator and Example Subscriber against toll fraud for 4.x upgrade to shipping version [1-26](#)

service accounts

changing passwords on Cisco Unity (with failover configured) [8-3](#)

changing passwords on Cisco Unity (without failover) [8-1](#)

service packs

downloading Cisco Unity CDs for 4.x upgrade to shipping version [1-9](#)

- downloading latest for 4.x upgrade to shipping version [1-8](#)
- installing for 4.x upgrade to shipping version by using Cisco Unity System Preparation Assistant [1-12](#)
- installing latest for 4.x upgrade to shipping version [1-14](#)
- service releases, downloading for 4.x upgrade to shipping version [1-8](#)
- services
 - Cisco Unity 4.x when Domino is message store [B-1](#)
 - configuring for 4.x upgrade to shipping version [1-15](#)
- setting up
 - Cisco PCA to use SSL for 4.x upgrade to shipping version [1-17](#)
 - Cisco Unity Administrator and Status Monitor to use SSL for 4.x upgrade to shipping version [1-24](#)
- shutting down Cisco Unity server [A-3](#)
- SIP integration, adding [2-42](#)
- software
 - downloading for 4.x upgrade to shipping version [1-7](#)
 - exiting Cisco Unity [A-1](#)
 - optional, installing [3-3](#)
 - starting Cisco Unity [A-3](#)
 - upgrading and configuring Cisco Unity for 4.x upgrade to shipping version [1-15](#)
 - upgrading Cisco Unity 4.x upgrade to shipping version with failover configured, task list [1-4](#)
 - upgrading Cisco Unity 4.x upgrade to shipping version without failover, task list [1-2](#)
- SQL Server 2000, upgrading to, from MSDE 2000 [11-1](#)
- SSL
 - determining whether to set up Cisco Unity to use for 4.x upgrade to shipping version [1-10](#)
 - setting up Cisco PCA to use for 4.x upgrade to shipping version [1-17](#)
 - setting up Cisco Unity Administrator and Status Monitor to use, for 4.x upgrade to shipping version [1-24](#)
- starting Cisco Unity software [A-3](#)
- Status Monitor, setting up to use SSL for 4.x upgrade to shipping version [1-24](#)
- system prompts, changing codec format of [5-7](#)

T

- task lists
 - adding, exchanging, or removing voice cards [2-2](#)
 - adding, exchanging, or removing voice cards (with failover configured) [2-3](#)
 - adding AMIS Networking [2-37](#)
 - adding an IP integration (Cisco CallManager or SIP) [2-43](#)
 - adding an IP integration (Cisco CallManager or SIP) (with failover configured) [2-43](#)
 - adding an IP integration (Cisco CallManager or SIP) (without failover) [2-43](#)
 - adding Cisco Unity user licenses (with failover configured) [2-22](#)
 - adding Cisco Unity user licenses (without failover) [2-22](#)
 - adding failover [2-48](#)
 - adding features to the Cisco Unity 4.x system [2-1](#)
 - adding languages (with failover configured) [2-26](#)
 - adding languages (without failover) [2-25](#)
 - adding text to speech (with failover configured) [2-32](#)
 - adding text to speech (without failover) [2-31](#)
 - adding voice messaging ports (with failover configured) [2-10](#)
 - adding voice messaging ports (without failover) [2-10](#)
 - adding VPIM Networking [2-40](#)
 - changing Cisco Unity codecs [5-2](#)
 - uninstalling Cisco Unity [12-1](#)
 - upgrading Cisco Unity 4.x software to the shipping version with failover configured [1-4](#)
 - upgrading Cisco Unity 4.x software to the shipping version without failover [1-2](#)
- testing codec configuration changes [5-9](#)
- text to speech, adding [2-31](#)

U

- uninstalling
 - Cisco Unity [12-1](#)
 - failover [10-15](#)

- Unity_account, changing Active Directory password for [8-6](#)
- updates
 - downloading latest for 4.x upgrade to shipping version [1-8](#)
 - installing for 4.x upgrade to shipping version by using Cisco Unity System Preparation Assistant [1-12](#)
 - installing latest for 4.x upgrade to shipping version [1-14](#)
- upgrading
 - Cisco Unity 4.x software to shipping version with failover configured, task list [1-4](#)
 - Cisco Unity 4.x software to the shipping version without failover, task list [1-2](#)
 - Cisco Unity software from 4.x to shipping version [1-15](#)
 - from MSDE 2000 to SQL 2000 [11-1](#)
- user licenses, adding Cisco Unity [2-22](#)

V

- virus scanning
 - disabling services [1-12](#)
 - re-enabling services [1-22](#)
- voice cards, adding, exchanging, or removing [2-2](#)
- voice messages, changing Domino server to which Cisco Unity sends [4-5](#)
- voice messaging ports, adding [2-10](#)
- VPIM Networking, adding [2-40](#)