



A

- access lists **9, 22**
- active calls
 - backup **107**
 - restore **110**
- addressing remote messages **148**
- administration
 - CLI **14**
 - differences **16**
 - GU and CLI **29**
 - GUI **14**
- administrative privileges **84**
- administrator
 - Cisco CallManager **16**
 - Cisco Unity Express **16**
 - password **9, 22**
 - user ID **9, 22**
 - web **16**
- AIM module
 - usage **82**
 - wear **82**
- alternate welcome greeting **10, 23**
- application command **130**
- applications
 - deleting **76**
- atrace.log file **82**
- auto attendant
 - configuring **63**
 - creating a script **70**
 - deleting a greeting **69**
 - deleting a prompt **69**
 - deleting a script **70**

- GMS **10, 68**
 - maximum retries **64**
 - maximum sessions **64**
 - operator extension **64**
 - recording a greeting **10, 64, 68**
 - telephone number **64**
 - uploading greeting file **68**
 - uploading script file **70**
- auto-provisioning **12**

B

- backup
 - active calls **107**
 - command **105**
 - FTP server **103**
 - numbering scheme **107**
 - offline mode **103**
 - parameters **105**
 - procedure **107**
 - restrictions **12, 103, 104**
 - revision number **103**
- backup category command **107**
- backup history report **117**
- blind addressing **148**
- broadcast messaging restrictions **11**
- bulk provisioning **5**

C

- call processing **9, 22**
- capacity, configuring **79**
- ccn application command **61, 64, 126**

- ccn copy script command **70**
- ccn copy url command **68, 70**
- ccn delete command **69, 70**
- ccn engine command **124**
- ccn trigger command **71, 130**
- centralized message storage **12**
- Cisco CallManager
 - CTI ports **9, 22**
 - database **15**
 - description **15**
 - JTAPI user **9, 22**
 - route point **9, 22**
 - software version **2**
- Cisco Feature Navigator **2**
- Cisco IOS software images **2**
- Cisco Unity Express
 - database **15**
 - description **15**
 - software files **41, 52**
- Cisco Unity Express prompt **134**
- Cisco Unity Express software website **38, 41, 52**
- CiscoWorks configmaker **12**
- CLI administration **14, 29**
- clock timezone command **144**
- CNS/SNAP **12**
- command
 - application **130**
 - backup **105**
 - backup category **107**
 - ccn application **61, 64, 126**
 - ccn copy script **70**
 - ccn copy url **68, 70**
 - ccn delete **69, 70**
 - ccn engine **124**
 - ccn trigger **71, 130**
 - clock timezone **144**
 - continue **107**
 - copy ftp **113**
 - copy running-config **85, 91, 114**
 - copy startup-config **113**
 - copy tftp **115**
 - default **124, 126, 130**
 - description **64, 96, 126**
 - enabled
 - enabled command **64**
 - expiration **96**
 - greeting **96**
 - groupname
 - config mode **91**
 - EXEC mode **91**
 - hostname **134**
 - idletimeout **130**
 - interface Service-Engine **25**
 - ip address **25**
 - ip domain-name **136**
 - ip name-server **136**
 - ip unnumbered **25**
 - locale **130**
 - log trace **82**
 - mailbox size **96**
 - maxsessions **61, 64, 71, 126, 130**
 - maxsteps **124**
 - message size **96**
 - mwi refresh **102**
 - no ccn application **76**
 - no ccn trigger **74, 76**
 - no parameter **131**
 - ntp server **138, 140**
 - offline **107, 110**
 - parameter **126**
 - parameters, auto attendant **64**
 - parameters, voicemail **61**
 - reload **110**
 - restore id **110**
 - script **126**
 - service-module **25, 27**
 - session **27**
 - show backup **105**

- show backup history **107, 110**
 - show backup server **107, 110**
 - show ccn application **61, 64, 76, 126**
 - show ccn engine **124**
 - show ccn scripts **61, 64, 126**
 - show ccn trigger **71, 74, 76, 131**
 - show clock detail **144**
 - show group detail groupname **91**
 - show groups **91**
 - show hosts **134**
 - show interface ide 0 **82**
 - show ip route **136**
 - show ntp configuration **138, 140**
 - show ntp status **138, 140**
 - show user detail username **85**
 - show users **85**
 - show voicemail **96**
 - telnet **27**
 - troubleshooting
 - log **121**
 - show **121**
 - trace **121**
 - username
 - config mode **85**
 - EXEC mode **85**
 - voice mailbox **96**
 - voice mailbox unlock **101**
 - voicemail capacity time **80**
 - voicemail default **80**
 - voicemail operator telephone **80**
 - voicemail recording time **80**
 - command environment **26**
 - commands **14, 119**
 - communication link to Cisco CallManager **24**
 - configuration **120**
 - running **114**
 - startup, copying **113**
 - TFTP **115**
 - configuration mode
 - backup commands **103**
 - definition **26**
 - configurations, copying **113**
 - configuring
 - auto attendant **63**
 - capacity **79**
 - DNS server **136**
 - expiration date **79**
 - greeting management system **63**
 - hostname **134**
 - IP addresses **24**
 - language **79**
 - mailbox size **79**
 - message length **79**
 - multiple triggers **130**
 - NTP server **138**
 - operator extension **79**
 - recording time **79**
 - script steps **124**
 - system parameters **124**
 - voice mail **60**
 - configuring time zone **144**
 - connectivity to Cisco CallManager **24**
 - console display, system messages **142**
 - continue command **107**
 - copy ftp command **113**
 - copy running-config command **85, 91, 114**
 - copy startup-config command **113**
 - copy tftp command **115**
 - copying log files, troubleshooting **120**
 - copying, configurations **113**
 - CTI ports **9, 22**
-
- D**
 - database
 - Cisco CallManager **15**
 - Cisco Unity Express **15**
 - date and time restrictions **11**

daylight savings time **119**

default command **124, 126, 130**

default gateway **24**

default mailbox size **13, 14**

default values

- system-wide **79**

deleting

- applications **76**
- greetings **69**
- messages **95**
- prompts **69**
- scripts **70**
- triggers **74, 76**

deployment

- Cisco Unity **15**
- Cisco Unity Express **15**

description command **64, 96, 126**

Device option **9, 22**

differences

- administration **16**
- administrators **16**
- passwords **16, 84, 86, 88**
- user IDs **16, 84, 86, 88**
- users **16**

distribution lists restrictions **11**

DNS server **9, 22**

- resolving host name to IP address **138**

DNS server, configuring **136**

downloading license files **38**

E

editor for scripts **10**

EXEC mode, definition **26**

expiration command **96**

expiration date, configuring **79**

expired messages **95**

expiry timer **95**

extension, group **90**

external syslog server **142**

F

factory-set system limits **13**

Fast Ethernet ports **11**

Feature Navigator **2**

file

- atrace.log **82**
- messages.log **82, 142**

file size

- messages.log **82**
- prompt **68**
- script **70**

flash memory **26, 114**

- log and trace **82**
- module
- wear **82**

FTP

- backup and restore **103**
- configuration **113**
- server **38**

FTP server **5**

G

G.711 U-law **10**

G711 ulaw **68**

GDM **95**

general delivery mailboxes **95**

GMS **63, 84**

- recording a greeting **68**
- telephone numbers **63**

GMS, recording a greeting **10**

greeting

- recording alternate **23**
- types **96**

greeting command **96**

greeting management system **84**

 configuring **63**

 user, privileges **84**

greetings

 deleting a file **69**

 recording alternate **10**

 uploading **68**

greetings restrictions **11**

group

 definition **90**

 extension **90**

 mailbox **90**

 owner **90**

groupname command

 config mode **91**

 EXEC mode **91**

GUI administration **14, 29**

H

hard disk

 replacing restrictions **11**

hardware platforms **1**

hostname command **134**

hostname configuration **134**

I

idletimeout **71, 130**

idletimeout command **130**

initialization wizard **29**

installer file **38**

installing

 software image **40, 51**

interface Service-Engine command **25**

IP

 addressing **24, 119**

 communication link **24**

 default-gateway **119**

 unnumbered **119**

ip address command **25**

IP address, Cisco Unity Express module **10, 23**

ip domain-name command **136**

ip name-server command **136**

IP network access **5**

ip unnumbered command **25**

J

JTAPI

 deleting triggers **74**

 triggers **71**

 user **9, 22**

JTAPI route point **130**

JTAPI traffic, prioritizing **9, 22**

L

language

 configuring **79**

language restrictions **11**

license

 SKUs **5**

license files **38**

 downloading **38**

 installing **38**

Linux software **4**

Linux system access **12**

locale command **130**

log files

 system **5**

 troubleshooting **118, 120**

log trace command **82**

loop, voice mail **80**

lost data, troubleshooting **120**

M

mailbox

- zerooutnumber **96**

mailbox size

- configuring **79**

- default **13, 14**

mailbox size command **96**mailboxes **95**

- expiration time **96**

- general delivery **95**

- greetings **96**

- group **90**

- limitations **95**

- message size **96**

- number of **13, 14**

- number supported **84**

- personal **95**

- storage size **95**

- telephones supported **95**

- types **95**

- unlocking **101**

maximum

- retries, auto attendant **64**

sessions

- trigger **71**

- sessions, auto attendant **64**

- users, voice mail **61**

maximum callers **130**maximum sessions **130**maximum steps **124**maxsessions command **61, 64, 71, 126, 130**maxsteps command **124**maxsteps parameter **124**members of a group, definition **90**

message

- configuring length **79**

- expired **95**

- tutorial **96**

message size command **96**

message storage

- restrictions **12**

messages.log file **82, 142**messages.log, file size **82**modes, EXEC and configuration **26**module IP address **10, 23**modules restrictions **11**

MWI lights

- refreshing **102**

- troubleshooting **121**

mwi refresh command **102**

N
NDR **147**

network module

- description **15**

- restrictions **11**

- spare **5**

network module card

- processor **4**

- software **4**

networked configurations **147**networking **16**no ccn application command **76**no ccn trigger command **74, 76**no parameter command **131**Non Deliver Record **147**NTP server **9, 22**

- hostname **138**

- IP address **138**

- removing **140**

ntp server command **138, 140**NTP server, configuring **138**

number of

- mailboxes **13, 14**

- ports **13, 14**

number of concurrent administrators **11**

number of concurrent users **11**
 numbering scheme, backup files **107**

O

offline command **107, 110**
 offline mode **107, 110**
 backup commands **103**
 OIR
 restrictions **11**
 troubleshooting **119**
 online insertion and replacement
 restrictions **11**
 operator extension
 auto attendant **64**
 configuring **79**
 option
 Device **9, 22**
 User **9, 22**
 owner of a group **90**

P

parameter command **64, 126**
 parameters
 backup **105**
 capacity **79**
 expiration date **79**
 language **79**
 mailbox size **79**
 maxsteps **124**
 message length **79**
 operator extension **79**
 recording time **79**
 system-wide, configuring **79**
 voicemail **61**
 passwords, characters allowed **16, 84, 86, 88**
 personal mailboxes **95**

pinging internal address **119**
 platforms
 hardware **1**
 ports
 Fast Ethernet **11**
 number of **13, 14**
 restrictions **11**
 privileges
 administrative **84**
 prompt
 file size **68**
 prompt, formation **134**
 prompts, deleting **69**
 provisioning
 bulk **5**

R

rebooting network module **118**
 rebooting router **118**
 recording
 GMS **68**
 recording a greeting **64**
 auto attendant **10, 68**
 GMS **10**
 recording time, configuring **79**
 refreshing MWI lights **102**
 reload command **110**
 removing an NTP server **140**
 reports
 backup **117**
 call history **117**
 CPU usage **117**
 mailbox **117**
 mailbox size **117**
 memory **117**
 message status **117**
 restore **117**
 system **5**

- system hardware **117**
- requirements
 - software **2**
- resolving host name to IP address **138**
- restore
 - active calls **110**
 - FTP server **103**
 - procedure **110**
 - restrictions **12, 103, 104**
 - selective **12**
- restore history report **117**
- restore id command **110**
- restrictions
 - administrators **11**
 - auto-provisioning with CNS/SNAP **12**
 - backup and restore **103, 104**
 - backups **12**
 - broadcast messaging **11**
 - centralized message storage **12**
 - CiscoWorks configmaker **12**
 - date and time **11**
 - distribution lists **11**
 - greetings **11**
 - language **11**
 - Linux system access **12**
 - managing with SNMP **12**
 - modules **11**
 - OIR **11**
 - replacing hard disk **11**
 - restores **12**
 - selective backup **12**
 - selective restore **12**
 - users **11**
- route point **9, 22**

S

- saving data, troubleshooting **120**
- script command **126**

- script editor **70**
- script steps **124**
- scripts
 - creating **10, 70**
 - deleting a file **70**
 - downloading **70**
 - editor software **10**
 - file size **10, 70**
 - uploading **70**
- selective backup restrictions **12**
- selective restore restrictionsbackup
 - selective **12**
- server
 - syslog **142**
- servers
 - DNS **9, 22**
 - NTP **9, 22**
- service-module command **25, 27**
- service-module, troubleshooting **119**
- session command **27**
- sessions **130**
- setting daylight savings time **119**
- severity level, system messages **142**
- show backup command **105**
- show backup history command **107, 110**
- show backup server command **107, 110**
- show ccn application **61**
- show ccn application command **64, 76, 126**
- show ccn engine command **124**
- show ccn scripts command **61, 64, 126**
- show ccn trigger command **71, 74, 76, 131**
- show clock detail command **144**
- show group detail groupname command **91**
- show groups command **91**
- show hosts command **134**
- show interface ide 0 command **82**
- show ip route command **136**
- show ntp configuration command **138, 140**
- show ntp status command **138, 140**

- show user detail username command **85**
 - show users command **85**
 - show voicemail command **96**
 - SKUs **13, 14, 37**
 - SNMP **12**
 - software files **41, 52**
 - installer **38**
 - license **38**
 - software image, installing **40, 51**
 - software requirements **2**
 - spare network modules **5**
 - speed of internal line **119**
 - startup configuration, copying **113**
 - steps
 - configuring **124**
 - maximum number **124**
 - storage hours **13, 14**
 - superuser **84**
 - superuser, privileges **84**
 - syslog server **142**
 - system access using IP network **5**
 - system capacities **13, 14**
 - system limits
 - factory set **13**
 - system log files **5**
 - system messages
 - console display **142**
 - severity **142**
 - system parameters
 - configuring **124**
 - system reports **5, 117**
 - system-wide
 - default values **79**
 - parameters, configuring **79**
-
- T**
- Table
 - Table 4 Configuration Task Sequence **30**
 - Table 5 Troubleshooting Commands **121**
 - telephone number
 - auto attendant **64**
 - triggers **71, 130**
 - telephone numbers
 - auto attendant **64**
 - GMS **63**
 - voice mail **60**
 - telephones supported for voice mail **95**
 - telnet command **27**
 - Telnet session **26**
 - TFTP
 - configuration **115**
 - time zone
 - configuring **144**
 - timeout **71, 130**
 - total storage hours **13, 14**
 - trigger
 - maximum sessions **71**
 - triggers
 - auto attendant **71**
 - configuring multiple **130**
 - deleting **74, 76**
 - sessions **130**
 - telephone number **71, 130**
 - timeout **71, 130**
 - voice mail **71**
 - troubleshooting
 - access to GUI **118**
 - copying log files **120**
 - IP address **119**
 - IP unnumbered **119**
 - IP, default-gateway **119**
 - log files **118**
 - lost data **120**
 - MWI lights **121**
 - OIR **119**
 - opening a session **119**
 - pinging internal address **119**

rebooting network module **118**
 rebooting router **118**
 saving data **120**
 service-module status **119**
 speed of terminal line **119**
 unknown caller **121**
 user password **118**
 user PIN **118**
 users and groups **118**
 voice mail **121**

TUI

recording a greeting **68**
 TUI, recording a greeting **10**
 tutorial command **96**

U

unknown caller
 troubleshooting **121**
 unlocking a mailbox **101**
 usage, flash memory **82**
 user IDs, characters allowed **16, 84, 86, 88**
 User option **9, 22**
 user password, troubleshooting **118**
 user PIN, troubleshooting **118**
 username command
 config mode **85**
 EXEC mode **85**
 users
 adding **84**
 modifying **84**
 number supported **84**

V

voice mail
 configuring **60**
 conflicting extensions **80**

loop **80**
 maximum users **61**
 networking **16**
 telephone numbers **60**
 telephones supported **95**
 troubleshooting **121**
 voice mailbox command **96**
 voice mailbox unlock command **101**
 Voice Profile for Internet Mail protocol **147**
 voicemail capacity time command **80**
 voicemail default command **80**
 voicemail operator telephone command **80**
 voicemail recording time command **80**
 VPIM **147**

W

wav file **10, 68**
 wear, flash memory **82**
 web administrator **16**

Z

zerooutnumber command **96**