



Channels and Maximum Power Levels

For channel and maximum power level settings, refer to the *Channels and Maximum Power Settings for Cisco Aironet Autonomous Access Points and Bridges* or the *Channels and Maximum Power Settings for Cisco Aironet Lightweight Access Points and Bridges* documents available on the Cisco Wireless documentation page of Cisco.com.

To browse to the documents, follow these steps:

-
- Step 1** Click this link to the Cisco Wireless documentation home page:
http://www.cisco.com/en/US/products/hw/wireless/tsd_products_support_category_home.html
 - Step 2** Click **Cisco Aironet 1100 Series** listed under Access Points.
 - Step 3** Click **Install and Upgrade Guides**.
 - Step 4** Click **Channels and Maximum Power Settings for Cisco Aironet Autonomous Access Points and Bridges** or the **Channels and Maximum Power Settings for Cisco Aironet Lightweight Access Points and Bridges**.
-

