



CHAPTER 5

Managing Users and Groups

This chapter describes how to configure and manage users, groups, and host access on the mobility services engine.

This chapter contains the following sections:

- [Managing User Groups, page 5-2](#)
- [Managing Users, page 5-3](#)

Managing User Groups

This section describes how to add, delete, and edit user groups.

User groups allow you to assign different access privileges to users.

**Caution**

Group permissions override individual user permissions. For example, if you give a user full access and add that user to a group with *read only* access, that user will not be able to configure mobility services engine settings.

Adding User Groups

To add a user group to a mobility services engine, follow these steps:

- Step 1** In Cisco WCS, choose **Services > Mobility Services**.
- Step 2** Click the name of the mobility services engine to which you want to add a user group.
- Step 3** Choose **System > Accounts > Groups**.
- Step 4** Select **Add Group** from the Select a command drop-down menu and click **Go**.
- Step 5** Enter the name of the group in the Group Name field.
- Step 6** Select a permission level (read, write, or full) from the Permission drop-down menu.



Note Full Access is required for Cisco WCS to access mobility services engines.

- Step 7** Click **Save**.

Deleting User Groups

To delete user groups from a mobility services engine, follow these steps:

- Step 1** In Cisco WCS, choose **Services > Mobility Services**.
- Step 2** Click the name of the mobility services engine from which you want to delete a user group.
- Step 3** Choose **System > Accounts > Groups**.
- Step 4** Check the check boxes of the groups that you want to delete.
- Step 5** Select **Delete Group** from the Select a command drop-down menu and click **Go**.
- Step 6** Click **OK**.

Changing User Group Permissions

**Caution**

Group permissions override individual user permissions. For example, if you give a user *full* access and add that user to a group with only *read* access, that user will not be able to configure mobility services engine settings.

To change user group permissions, follow these steps:

-
- Step 1** In Cisco WCS, choose **Services > Mobility Services**.
 - Step 2** Click the name of the mobility services engine you want to edit.
 - Step 3** Choose **System > Accounts > Groups**.
 - Step 4** Click the name of the group you want to edit.
 - Step 5** Select a permission level (read, write, full) from the Permission drop-down menu.
 - Step 6** Choose **Save**.
-

Managing Users

This section describes how to add, delete, and edit users for a mobility services engine. It also describes how to view active user sessions.

Adding Users

**Caution**

Group permissions override individual user permissions. For example, if you give a user *full* access and add that user to a group with only *read* access, that user will not be able to configure mobility services engine settings.

To add a users to a mobility services engine, follow these steps:

-
- Step 1** In Cisco WCS, choose **Services > Mobility Services**.
 - Step 2** Click the name of the mobility services engine to which you want to add users.
 - Step 3** Choose **System > Accounts > Users**.
 - Step 4** Select **Add User** from the Select a command drop-down menu and click **Go**.
 - Step 5** Enter the username in the Username field.
 - Step 6** Enter a password in the Password field.
 - Step 7** Enter the name of the group to which the user belongs in the Group Name field.

Step 8 Select a permission level (read, write, full) from the Permission drop-down menu.



Note Full access is required for Cisco WCS to access mobility services engines.

Step 9 Click **Save**.

Deleting Users

To delete a user from a mobility services engine, follow these steps:

- Step 1** In Cisco WCS, choose **Services > Mobility Services**.
 - Step 2** Click the name of the mobility services engine from which you want to delete a user.
 - Step 3** Choose **System > Accounts > Users**.
 - Step 4** Check the check boxes of the users that you want to delete.
 - Step 5** Select **Delete User** from the Select a command drop-down menu and click **Go**.
 - Step 6** Click **OK**.
-

Changing User Properties

To change user properties, follow these steps:

- Step 1** In Cisco WCS, choose **Services > Mobility Services**.
 - Step 2** Click the name of the mobility services engine you want to edit.
 - Step 3** Choose **System > Accounts > Users**.
 - Step 4** Click the name of the group that you want to edit.
 - Step 5** Make the required changes to the Password, Group Name, and Permission fields.
 - Step 6** Click **Save**.
-