



---

## Numerics

802.1X

- authentication types
  - in ACU [5-23 to 5-25](#)
  - in Windows XP [E-3](#)
- defined [5-23, E-2](#)

---

## A

About Aironet Client Utility

- ACU menu option [9-13](#)
- screen [9-13](#)

About icon [9-13](#)

access point

- currently associated to [7-10, 8-11](#)
- in wireless infrastructure [1-10](#)

IP address

- current [7-10, 8-11](#)
- in link test [7-19](#)
- in site survey active mode [F-12](#)
- in site survey passive mode [F-6](#)

MAC address

- current [7-10](#)
- in link test [7-21](#)
- in site survey active mode [F-8](#)
- specifying [5-16](#)

mismatches [7-14](#)

name

- current [7-10, 8-11](#)
- in link test [7-21](#)
- in site survey active mode [F-12](#)
- in site survey passive mode [F-6](#)

problems

- associating to [10-11](#)
- authenticating to [10-11](#)
- role in wireless network [1-8](#)
- security settings [5-29 to 5-32](#)

Access Point Authentication parameter [5-34](#)

access points, reporting those that fail LEAP authentication [5-27, 5-32](#)

Ack packets

- number received [7-16](#)
- number transmitted [7-15](#)

ACM

See Aironet Client Monitor (ACM)

ACU

See Aironet Client Utility (ACU)

ad hoc network

- defined [E-6](#)
- parameters [5-17 to 5-21](#)
- selecting in ACU [5-6](#)
- selecting in Windows XP [E-7](#)
- wireless LAN configuration [1-9](#)

Advanced (Ad Hoc) screen [5-18](#)

Advanced (Infrastructure) screen [5-14](#)

advanced ad hoc parameters

- described [5-2, 5-17](#)
- setting [5-17 to 5-21](#)

advanced infrastructure parameters

- described [5-2, 5-14](#)
- setting [5-14 to 5-17](#)

aged packets [7-14, 7-16](#)

Aironet Client Monitor (ACM)

- About screen [8-5](#)
- accessing help [8-5](#)

- described [1-6](#)
- exiting [8-6](#)
- finding version [8-5](#)
- icon [8-2](#)
- overview [8-2](#)
- pop-up menu [8-5 to 8-11](#)
- selecting the active profile [8-8 to 8-9](#)
- setting preferences [8-6 to 8-7](#)
- specifying pop-up menu options [8-7](#)
- specifying when it runs [8-7](#)
- Tool Tip window [8-3 to 8-4](#)
- using [8-1 to 8-11](#)
- Aironet Client Monitor parameter (Install Wizard) [3-7, 3-17](#)
- Aironet Client Monitor Preferences screen [8-6](#)
- Aironet Client Utility (ACU)
  - About icon [9-13](#)
  - accessing help [9-14](#)
  - described [1-6 to 1-8](#)
  - diagnostic tools
    - overview [7-2](#)
    - setting parameters [7-3 to 7-4](#)
    - using [7-4 to 7-22](#)
  - exiting [9-13](#)
  - feature comparison to Windows XP [3-22 to 3-23](#)
  - finding version [9-13](#)
  - icon
    - adding to desktop [9-14](#)
    - deleting from desktop [9-14](#)
    - parameter to place on desktop [3-7, 3-17](#)
    - using to open ACU [9-12](#)
  - installation program settings, modifying [9-13](#)
  - launching from ACM [8-6](#)
  - opening [9-12](#)
  - overview [1-6 to 1-7](#)
  - Properties screens, overview [5-2](#)
  - screens, buttons described [1-8](#)
  - selecting among several installed client adapters [3-24](#)
- Aironet Client Utility parameter (Install Wizard) [3-6, 3-16](#)
- Aironet Client Utility Preferences screen [4-10, 7-3, 9-11](#)
- Aironet Client Utility screen [1-6 to 1-7](#)
- Allow Association to both WPA and non-WPA authenticators parameter [5-38](#)
- Allow Association to Mixed Cells parameter [5-22](#)
- Allow Fast Roaming (CCKM) parameter [5-38](#)
- Allow Non-Administrator Users to Save Profiles to the Registry parameter [4-11](#)
- Allow Non-Administrator Users to Save Settings to the Registry parameter (Install Wizard) [3-7, 3-17](#)
- Allow Saved LEAP User Name and Password parameter (Install Wizard) [3-9, 3-19](#)
- antenna
  - 2.4-GHz options [C-3](#)
  - described [1-4](#)
  - gains
    - IEEE 802.11a [D-4](#)
    - IEEE 802.11b [D-4 to D-5](#)
  - mode currently being used [7-8](#)
  - placement [F-2](#)
  - specifications [A-6](#)
- Antenna Mode (Receive) parameter
  - ad hoc mode [5-19](#)
  - infrastructure mode [5-15](#)
- Antenna Mode (Transmit) parameter
  - ad hoc mode [5-19](#)
  - infrastructure mode [5-15](#)
- Apply button, function [1-8](#)
- association
  - rejections [7-14](#)
  - time-outs [7-14](#)
- audience of document [xii](#)
- authentication
  - process [5-25, E-4](#)
  - rejections [7-14](#)
  - time-outs [7-14](#)
  - type, status of [7-8](#)
- Automatically Load New Firmware When NDIS Driver Is Updated parameter [9-11](#)

Automatically Prompt for LEAP User Name and Password option [5-37](#)

auto profile selection

including a profile in [4-4 to 4-6](#)

prioritizing profiles [4-6](#)

removing a profile from [4-5](#)

restrictions [4-5](#)

using [4-7, 8-8](#)

Auto Profile Selection Management screen [4-5](#)

Auto Start parameter for ACM (Install Wizard) [3-7, 3-17](#)

## B

beacon packets

number received [7-13](#)

number transmitted [7-15](#)

beacon period, status of [7-10](#)

Beacon Period parameter [5-21](#)

beacons received

current [7-11, 7-22](#)

in site survey active mode [F-11](#)

in site survey passive mode [F-5](#)

boot block firmware, current version of [7-6](#)

broadcast encryption type, status of [7-8](#)

broadcast key rotation

described [5-28](#)

setting on client and access point [5-32](#)

broadcast packets

encryption type used [7-8](#)

number received [7-13](#)

number transmitted [7-15](#)

broadcast SSIDs [5-4, E-6](#)

bytes

number received [7-13](#)

number transmitted [7-15](#)

## C

CAM

See Constantly Awake Mode (CAM)

Canadian compliance statement [C-3 to C-4](#)

Cancel button, function [1-8](#)

Card and Socket Services [2-4](#)

carrier/correlation (Car/Cor) [5-12](#)

caution, defined [xiii](#)

CCKM

See Fast roaming (CCKM)

Certificate Properties screen - Windows 98, 98 SE, NT, and Me [5-45](#)

Change Password screen [6-19](#)

Change PIN screen [6-20](#)

channel

current [7-9](#)

determining if clear [5-12](#)

in site survey active mode [F-12](#)

in site survey passive mode [F-7](#)

Channel parameter [5-10](#)

channels, supported by regulatory domains

IEEE 802.11a [D-2](#)

IEEE 802.11b [D-3](#)

channel set, for which client adapter is configured [7-8](#)

Cisco.com

obtaining documentation [xv](#)

obtaining technical assistance [xvi](#)

Cisco Aironet Wireless LAN Adapter Setup screen (Install Wizard) [3-20](#)

Cisco Aironet Wireless LAN Client Adapter Installation Wizard screen [3-3, 3-13, 9-7](#)

Cisco Centralized Key Management (CCKM), See fast roaming

Cisco Wireless LAN Adapter Troubleshooting screen [10-4, 10-5](#)

CKIP, status of [7-7, 7-8](#)

Clear Channel Assessment parameter [5-12](#)

- client name [7-8](#)
  - Client Name parameter [5-4](#)
  - client utilities
    - See Aironet Client Utility (ACU) and Aironet Client Monitor (ACM)
  - clock, setting to display seconds [1-7](#)
  - collisions, multiple/single [7-16](#)
  - Commands drop-down menu [6-11, 6-12, 9-13](#)
  - Configure LEAP button [5-36](#)
  - configuring client adapter
    - deciding between ACU and Windows XP [3-22 to 3-23](#)
    - in ACU [5-1 to 5-51](#)
    - in Windows XP [E-5 to E-18](#)
  - Connection Status screen (ACM) [8-9](#)
  - Constantly Awake Mode (CAM) [5-5](#)
  - Contents ACU menu option [9-14](#)
  - Continuous Link Test parameter
    - in RF link test [7-19](#)
    - in site survey active mode [F-8](#)
  - conventions of document [xiii to xiv](#)
  - CRC error
    - in packet [7-13](#)
    - in PLCP header [7-13](#)
  - CTS packets
    - number received [7-16](#)
    - number transmitted [7-15](#)
  - Custom Installation screen (Install Wizard) [3-4, 3-14](#)
- 
- D**
- Data Encryption parameter [5-32, 5-35, 5-40](#)
  - data encryption type, status of [7-7](#)
  - data rate
    - for which client adapter is configured [7-9](#)
    - mismatches [7-14](#)
    - specifications [A-4](#)
    - when performing a site survey [F-2](#)
  - Data Rate parameter
    - in RF network [5-8](#)
    - in site survey active mode [F-9](#)
  - Data Retries parameter
    - in RF network [5-13](#)
    - in site survey active mode [F-8](#)
  - dBm
    - signal strength units in site survey [F-3](#)
    - signal strength units on Status and Linktest screens [7-4](#)
  - declarations of conformity
    - European community, Switzerland, Norway, Iceland, and Liechtenstein [C-4 to C-6](#)
    - FCC [C-2 to C-3](#)
    - RF exposure [C-6](#)
  - Defaults button, function [1-8](#)
  - default values, displaying [1-8](#)
  - Delay Between Packets parameter [F-9](#)
  - Destination Is Another Cisco/Aironet Device parameter [F-8](#)
  - Destination MAC Address parameter [F-8](#)
  - diagnosing client adapter operation [10-4 to 10-6](#)
  - dipole antenna [1-4, B-3](#)
  - Disable Firmware Checking parameter (Install Wizard) [3-6, 3-16](#)
  - Display Seconds on Clock parameter [1-7](#)
  - diversity antenna [1-4](#)
  - diversity mode [5-15, 5-19](#)
  - document
    - audience [xii](#)
    - conventions [xiii to xiv](#)
    - organization [xii to xiii](#)
    - purpose [xii](#)
    - software versions covered [xii](#)
  - documentation
    - CD-ROM [xv](#)
    - feedback [xvi](#)
    - obtaining [xv to xvi, xvii to xviii](#)
    - ordering [xvi](#)

domain name

- including in Windows login [5-37](#)
- specifying for saved user name and password [5-37](#)

driver

- current version [7-6](#)
- described [1-5](#)
- finding version [9-7](#)

Drivers parameter (Install Wizard) [3-6, 3-16](#)

duplicate packets, number received [7-13](#)

dynamic WEP keys, overview [5-23 to 5-25, E-2 to E-4](#)

Dynamic WEP option [5-40](#)

---

## E

EAP authentication

- described [E-4](#)
- overview [5-23 to 5-26, 6-2, E-2 to E-4](#)
- using [6-1 to 6-22](#)

EAP-Cisco Wireless

- See LEAP authentication

EAP-SIM authentication

- authenticating if the PIN is stored on the computer [6-22](#)
- authenticating if you are prompted for the PIN [6-21](#)
- described [5-25 to 5-26, E-3, E-4](#)
- disabling [5-51](#)
- enabling
  - in Windows XP [E-16 to E-18](#)
  - through ACU [5-39 to 5-51](#)
- error messages [10-28 to 10-33](#)
- RADIUS servers supported [5-25, E-4](#)
- setting on client and access point [5-31](#)

EAP-SIM parameter (Install Wizard) [3-9, 3-19](#)

EAP-TLS authentication

- authenticating after a reboot/logon [6-16](#)
- authenticating after profile selection/card insertion [6-15](#)
- described [5-24 to 5-26, E-3, E-4](#)
- disabling [5-51](#)

- enabling
  - in Windows XP [E-10 to E-12](#)
  - through ACU [5-39 to 5-47](#)
- RADIUS servers supported [5-24, E-3](#)
- setting on client and access point [5-29, 5-30](#)

EIRP, maximum [1-4, D-4 to D-5](#)

Enable Radio Management Support parameter [5-17](#)

energy detect (ED) [5-12](#)

Enter PIN screen [6-21](#)

error messages [10-13 to 10-33](#)

errors

- MAC CRC [7-13](#)
- overrun [7-13](#)
- PLCP [7-13](#)

---

## F

Fast PSP [5-5](#)

fast roaming

- described [5-26 to 5-27](#)
- enabling [5-38](#)
- setting on client and access point [5-32](#)
- status of [7-8](#)

FCC

- declaration of conformity statement [C-2 to C-3](#)
- safety compliance statement [2-2](#)

firmware

- current version [7-6](#)
- finding version [9-8](#)
- preventing from being installed with driver [9-10 to 9-12](#)
- upgrading [9-8 to 9-10](#)

Firmware parameter (Install Wizard) [3-6, 3-16](#)

forcing client adapter to reassociate [F-13](#)

fragmented packets [5-13](#)

Fragment Threshold parameter [5-13](#)

frequencies [D-2, D-3](#)

frequency

- currently being used [7-9](#)
- in site survey active mode [F-12](#)

in site survey passive mode [F-7](#)  
 setting [5-10](#)

---

## G

Generic Token Card Properties screen - Windows [5-49](#),  
[E-15](#)

---

## H

hardware components of client adapter [1-3 to 1-4](#)

### Help

button, function [1-8](#)  
 drop-down menu [9-14](#)  
 icon [9-14](#)

history of RF performance, displayed [7-4](#)

Host Based EAP (802.1x) option [5-40](#)

Host Based EAP (WPA) option [5-40](#)

### host-based EAP authentication

described [5-24 to 5-26](#)  
 disabling [5-51](#)  
 enabling [5-39 to 5-51](#)  
 requirements [5-39](#)

host devices [2-4](#)

---

## I

I/O range [10-8](#)

Include Windows Logon Domain with User Name  
 parameter [5-37](#)

infrastructure device, defined [1-3](#)

### infrastructure network

parameters [5-14 to 5-17](#)  
 selecting in ACU [5-6](#)  
 wireless LAN configuration [1-10](#)

inserting client adapter [9-2 to 9-4](#)

Installable Drivers screen (Install Wizard) [3-14](#)

installation error messages [10-18 to 10-19](#)

### Installation Path parameter

for ACM (Install Wizard) [3-7, 3-17](#)  
 for ACU (Install Wizard) [3-6, 3-16](#)

### installing client adapter software

on Windows 98, 98 SE, 2000, Me, or XP [3-2 to 3-11](#)  
 on Windows NT [3-12 to 3-22](#)

### Install Wizard file

described [1-5](#)  
 finding version [9-5](#)  
 installing [3-2 to 3-22](#)  
 name [3-2](#)

interference [2-6](#)

interrupt request (IRQ) [10-8](#)

introduction to client adapters [1-2 to 1-3](#)

### IP address

of access point in link test [7-19](#)  
 of access point in site survey active mode [F-12](#)  
 of access point in site survey passive mode [F-6](#)  
 of associated access point [7-10, 8-11](#)  
 of client adapter [7-8, 8-4, 8-11](#)

---

## J

Japan, guidelines for operating client adapters [C-6 to C-7](#)

---

## L

### LEAP authentication

#### authenticating after a reboot/logon

with automatically prompted login [6-7 to 6-8](#)  
 with manually prompted login [6-12 to 6-13](#)  
 with saved username and password [6-14](#)  
 with Windows username and password [6-4 to 6-5](#)

#### authenticating after profile selection/card insertion

with automatically prompted login [6-6](#)  
 with manually prompted login [6-9 to 6-11](#)  
 with saved username and password [6-14](#)  
 with Windows username and password [6-3 to 6-4](#)

- authenticating after your LEAP credentials expire
      - with automatically prompted login [6-9](#)
      - with manually prompted login [6-13](#)
      - with saved username and password [6-15](#)
      - with Windows username and password [6-5](#)
    - described [5-23 to 5-24, 5-25](#)
    - disabling [5-51](#)
    - enabling [5-35 to 5-39](#)
    - error messages [10-20 to 10-23](#)
    - overview [6-2 to 6-3](#)
    - RADIUS servers supported [5-23](#)
    - requirements [5-35](#)
    - setting on client and access point [5-29](#)
    - stages of [6-3](#)
  - LEAP Authentication Status screen
    - displayed [6-2](#)
    - minimizing [6-3](#)
  - LEAP Authentication Timeout Value parameter [5-37](#)
  - LEAP login screen
    - appearing before Windows login screen [10-13](#)
    - displayed [6-6, 6-7, 6-10, 6-13](#)
  - LEAP option [5-35](#)
  - LEAP parameter (Install Wizard) [3-9, 3-19](#)
  - LEAP security module [5-24, 5-36](#)
  - LEAP Settings screen [5-36](#)
  - LEDs
    - described [1-4](#)
    - interpreting [10-2 to 10-3](#)
    - using to verify installation [3-22](#)
  - link quality
    - in link test [7-22](#)
    - in site survey active mode [F-12](#)
    - in site survey passive mode [F-6](#)
    - overall [7-11, 8-4, 8-10](#)
  - link speed
    - currently being used [7-9, 8-4, 8-11](#)
    - in link test [7-21](#)
    - in site survey active mode [F-12](#)
    - in site survey passive mode [F-6](#)
  - Link Status Meter
    - ACU menu option [7-16](#)
    - icon [7-16](#)
    - screen [7-17](#)
    - viewing [7-16 to 7-18](#)
  - Linktest
    - ACU menu option [7-18](#)
    - screen [7-19, 7-20](#)
    - statistics [7-21](#)
  - Link Test icon [7-18](#)
  - LM card
    - antenna [1-4, 5-15, 5-19](#)
    - described [1-2](#)
  - Load Firmware icon [1-5, 9-9](#)
  - Load New Firmware
    - ACU menu option [1-5, 9-9](#)
    - screen [9-9](#)
  - long radio headers, using [5-9](#)
- 
- ## M
- MAC address
    - of access point, specifying [5-16](#)
    - of access point in link test [7-21](#)
    - of access point in site survey active mode [F-8](#)
    - of associated access point [7-10](#)
    - of client adapter [7-8](#)
  - MAC CRC errors [7-13](#)
  - Manual LEAP Login ACU menu option [6-10, 6-12](#)
  - Manually Prompt for LEAP User Name and Password option [5-37](#)
  - Max Power Savings
    - See Max PSP
  - Max PSP [5-5](#)
  - Menu Options (Defaults) parameter for ACM (Install Wizard) [3-8, 3-18](#)
  - message integrity check (MIC)
    - described [5-28, 7-7](#)
    - setting on client and access point [5-32](#)

- statistics [7-14 to 7-15](#)
- status of [7-7](#)
- types of [7-7](#)
- Michael MIC [7-7](#)
- microcellular network [1-10](#)
- Microsoft 802.1X supplicant [5-39](#)
- Microsoft hot fix
  - described [10-13](#)
  - uninstalling [9-16](#)
- Microsoft TCP/IP Properties screen (Install Wizard) [3-21](#)
- mini PCI card
  - antenna [1-4, 5-15, 5-19](#)
  - described [1-2](#)
  - losing association upon resuming from suspend mode [10-12](#)
- MMH MIC [7-7](#)
- multicast packets
  - encryption type used [7-8](#)
  - in site survey active mode [F-9](#)
  - number received [7-13](#)
  - number transmitted [7-15](#)

---

## N

- network
  - configurations [1-8 to 1-10](#)
  - prioritizing connections [10-11 to 10-12](#)
  - problems connecting to [10-11](#)
  - security parameters
    - described [5-2, 5-21](#)
    - setting [5-21 to 5-51](#)
  - type, current [7-10](#)
- Network Authentication parameter [5-32, 5-35, 5-51](#)
- network login screen [6-8](#)
- Network Security screen [5-21](#)
- Network Type parameter [5-6](#)
- noise level
  - current [7-11](#)
  - in link test [7-22](#)

- in site survey active mode [F-11](#)
- in site survey passive mode [F-5](#)
- No Network Connection Unless User Is Logged In parameter [5-37](#)
- note, defined [xiii](#)
- Number of Packets parameter
  - in link test [7-19](#)
  - in site survey active mode [F-8](#)

---

## O

- OK button, function [1-8](#)
- One Time Password screen [6-18](#)
- online help
  - for ACM [8-5](#)
  - for ACU [9-14](#)
  - for troubleshooting utility [10-7](#)
- open authentication [5-34, E-7](#)
- Options drop-down menu [1-7, 4-10, 7-3, 9-10, F-3](#)
- organization of document [xii to xiii](#)
- overrun errors [7-13](#)

---

## P

- package contents [2-3](#)
- packets
  - Ack [7-15](#)
  - aged [7-14, 7-16](#)
  - beacon [5-21, 7-10, 7-13, 7-15](#)
  - broadcast [7-8, 7-13, 7-15](#)
  - CTS [7-15, 7-16](#)
  - duplicate [7-13](#)
  - fragmented [5-13](#)
  - linktest statistics [7-21](#)
  - multicast [7-8, 7-13, 7-15, F-9](#)
  - RTS [5-16, 5-20, 7-15](#)
  - site survey active mode statistics [F-11 to F-13](#)
  - site survey passive mode statistics [F-5 to F-7](#)
  - statistics [7-13 to 7-16](#)

- unicast [7-7, 7-13, 7-15](#)
- with MIC [7-14 to 7-15](#)
- Packet Size parameter [7-19, F-8](#)
- Packet Tx Type parameter [F-9](#)
- PC card
  - antenna [1-4, 5-15, 5-19](#)
  - described [1-2](#)
  - inserting [9-2 to 9-3](#)
  - removing [9-4](#)
- PC-Cardbus card
  - antenna [1-4](#)
  - described [1-2](#)
  - inserting [9-2 to 9-3](#)
  - profiles tied to slot [4-3](#)
  - removing [9-4](#)
- PCI card
  - antenna [1-4, 5-15, 5-19](#)
  - described [1-2](#)
  - inserting [9-3 to 9-4](#)
  - removing [9-5](#)
- PEAP authentication
  - authenticating after profile selection/card insertion/reboot/logon [6-16 to 6-18](#)
  - authenticating after your password expires (Windows NT or 2000 domain databases) [6-19](#)
  - authenticating after your PIN expires (OTP databases) [6-20](#)
  - described [5-24 to 5-26, E-3, E-4](#)
  - disabling [5-51](#)
  - enabling
    - in Windows XP [E-13 to E-15](#)
    - through ACU [5-39 to 5-49](#)
  - error messages [10-23 to 10-28](#)
  - RADIUS servers supported [5-24, E-3](#)
  - setting on client and access point [5-30](#)
- PEAP parameter (Install Wizard) [3-10, 3-19](#)
- PEAP Properties screen - Windows [5-48, E-14](#)
- peer-to-peer network [1-9, 5-6](#)
- percent
  - signal strength units in site survey [F-3](#)
  - signal strength units on Status and Linktest screens [7-4](#)
- Percent Successful histogram, in site survey active mode [F-9, F-13](#)
- Percent Success Threshold parameter [F-9](#)
- physical specifications [A-2](#)
- Place Icon on Desktop parameter (Install Wizard) [3-7, 3-17](#)
- PLCP
  - CRC errors [7-13](#)
  - format errors [7-13](#)
  - length errors [7-13](#)
- power level
  - current [7-9](#)
  - maximum [D-4 to D-5](#)
- power levels, available [7-9](#)
- power save mode, currently being used [7-10](#)
- Power Save Mode parameter [5-5](#)
- power specifications [A-6](#)
- Preferences
  - ACU menu option [1-7, 4-10, 7-3, 9-10, F-3](#)
  - icon [1-7, 4-10, 7-3, 9-10, F-3](#)
- product model numbers [1-3](#)
- profile
  - active [8-3, 8-10](#)
  - current [7-6](#)
  - default [7-6](#)
  - displayed in ACU title bar [1-7](#)
- Profile Manager
  - ACU menu option [4-2](#)
  - icon [4-2](#)
  - screen
    - displayed [4-2](#)
    - parameters missing [4-3, 10-12](#)
- profile manager
  - auto profile selection feature [4-4 to 4-6](#)
  - creating a new profile [4-3](#)
  - deleting a profile [4-8](#)

- editing a profile [4-7](#)
- exporting a profile [4-9](#)
- granting or denying access to non-administrative users [4-10 to 4-11](#)
- importing a profile [4-9](#)
- opening [4-2 to 4-3](#)
- overview [4-2](#)
- parameters missing [4-3, 10-12](#)
- renaming a profile [4-8](#)
- selecting the active profile [4-6 to 4-7](#)
- setting a profile to default values [4-8](#)
- Profiles Submenu (ACM) [8-8](#)
- Program Feature Overrides parameter for ACM (Install Wizard) [3-8, 3-18](#)
- Program Folder parameter
  - for ACM (Install Wizard) [3-7, 3-17](#)
  - for ACU (Install Wizard) [3-6, 3-16](#)
- Protected EAP
  - See PEAP authentication
- purpose of document [xii](#)

---

## R

- radio
  - described [1-3](#)
  - specifications [A-3 to A-6](#)
  - turning on or off [8-7, 9-15 to 9-16](#)
- radio management (RM)
  - described [5-17](#)
  - reports transmitted [7-15](#)
  - requests received [7-13](#)
- RADIUS servers
  - additional information [5-26, E-4](#)
  - defined [5-23, E-2](#)
  - supported [5-23 to 5-25, E-3, E-4](#)
- range [5-8, 5-11](#)
- Reauthenticate
  - ACM menu option [8-8](#)
  - ACU menu option [6-22](#)
- reauthentication process [6-22](#)
- receive statistics [7-13 to 7-15](#)
- regulatory
  - domains [5-10, 7-8](#)
    - IEEE 802.11a [D-2](#)
    - IEEE 802.11b [D-3](#)
  - information [C-2 to C-8](#)
  - specifications [A-7](#)
- related publications [xv](#)
- removing client adapter [9-4 to 9-5](#)
- Reset button [7-13, 7-15](#)
- resource conflicts, resolving
  - in Windows 2000 [10-9 to 10-10](#)
  - in Windows 98, 98 SE, and Me [10-8](#)
  - in Windows NT [10-9](#)
  - in Windows XP [10-10](#)
- Restart Card
  - ACU menu option [9-15](#)
  - button, in site survey [F-13](#)
- restarting client adapter [9-15, F-13](#)
- RF link test
  - prerequisites [7-18](#)
  - running [7-18 to 7-22](#)
  - stopping [7-22](#)
- RF network parameters
  - described [5-2, 5-7](#)
  - setting [5-7 to 5-13](#)
- RF Network screen [5-7](#)
- RF obstructions [2-6, F-3](#)
- RM reports transmitted [7-15](#)
- RM requests received [7-13](#)
- roaming [1-10](#)
- RTS packets
  - advanced ad hoc parameters [5-20](#)
  - advanced infrastructure parameters [5-16](#)
  - number retransmitted [7-16](#)
  - number transmitted [7-15](#)

## RTS Retry Limit parameter

- ad hoc mode [5-20](#)
- infrastructure mode [5-16](#)

## RTS Threshold parameter

- ad hoc mode [5-20](#)
- infrastructure mode [5-16](#)

**S**

## safety

- information [2-2 to 2-3](#)
- specifications [A-7](#)

## saved username and password

- described [5-36](#)
- entering [5-37](#)

Screen Update Timer parameter [7-4](#)seamless roaming [1-10](#)

## security features

- overview [5-22 to 5-28](#)
- synchronizing [5-29 to 5-32](#)

Select A Wireless LAN Adapter Card screen [3-24](#)

## Select Profile

- ACM menu option [8-8 to 8-9](#)
- ACU menu option [4-4](#)
- icon [4-4](#)
- screen [4-4](#)

sensitivity [A-4, F-2](#)serial number of client adapter [7-6](#)server-based authentication, status of [7-7](#)Setup button, in site survey [F-7](#)shared authentication [E-7](#)shared key authentication [5-34](#)

## short radio headers

- status of [7-6](#)
- using [5-9](#)

Show History parameter [7-4](#)

## signal quality

- current [7-11](#)
- in link test [7-21](#)

in site survey active mode [F-11](#)

in site survey passive mode [F-5](#)

on Link Status Meter screen [7-17](#)

## signal strength

as a percentage [7-4, F-3](#)

current [7-10](#)

in dBm [7-4, F-3](#)

in link test [7-21](#)

in site survey active mode [F-11](#)

in site survey passive mode [F-5](#)

on Link Status Meter screen [7-17](#)

Signal Strength Display Units parameter [7-4](#)

## signal to noise ratio

current [7-11](#)

in link test [7-22](#)

in site survey active mode [F-12](#)

in site survey passive mode [F-6](#)

SIM Authentication Properties screen [5-50](#)SIM Authentication Properties screen - Windows XP [E-17](#)

## site requirements

for client devices [2-6](#)

for infrastructure devices [2-5](#)

## Site Survey

Active Mode screen [F-10](#)

Active Mode Setup screen [F-7](#)

ACU menu option [F-3](#)

icon [F-3](#)

Passive Mode screen [F-4](#)

## site survey

active mode

overview [F-2](#)

setting parameters [F-8 to F-9](#)

starting [F-9](#)

statistics [F-11 to F-13](#)

using [F-7 to F-13](#)

exiting [F-7, F-13](#)

guidelines [F-2](#)

- passive mode
  - overview [F-2](#)
  - statistics [F-5 to F-7](#)
  - using [F-3 to F-7](#)
- specifying signal strength units [F-3](#)
- Smart Card or other Certificate Properties screen - Windows [5-46, E-11](#)
- software
  - installing on Windows 98, 98 SE, 2000, Me, or XP [3-2 to 3-11](#)
  - installing on Windows NT [3-12 to 3-22](#)
  - procedures [9-5 to 9-15](#)
  - uninstalling [9-6 to 9-7](#)
  - verifying installation [3-22](#)
- software components
  - custom installation parameters [3-6 to 3-10, 3-16 to 3-19](#)
  - described [1-5 to 1-8](#)
- software required for WPA [2-4, 5-26, 5-39, E-4](#)
- software versions covered in document [xii](#)
- specifications
  - physical [A-2](#)
  - power [A-6](#)
  - radio [A-3 to A-6](#)
  - regulatory compliance [A-7](#)
  - safety [A-7](#)
- Specified Access Point 1- 4 parameters [5-16](#)
- spread spectrum [1-3](#)
- SSID
  - current [7-9, 8-3, 8-11](#)
  - mismatches [7-14](#)
- SSID1 parameter [5-4](#)
- SSID2 parameter [5-4](#)
- SSID3 parameter [5-4](#)
- Start After Install parameter for ACM (Install Wizard) [3-7, 3-17](#)
- Start button
  - function [1-8](#)
  - in RF link test [7-20](#)
  - in site survey [F-9](#)
- Static Password screen [6-17](#)
- static WEP
  - disabling [5-35](#)
  - procedures [5-32 to 5-35](#)
  - with open authentication, setting on client and access point [5-29](#)
  - with shared key authentication, setting on client and access point [5-29](#)
- Static WEP Keys
  - button [5-32, 5-34](#)
  - screen [5-32](#)
- static WEP keys
  - entering [5-32 to 5-34](#)
  - guidelines for entering
    - in ACU [5-33](#)
    - in Windows XP [E-8](#)
  - overview [5-23, E-2](#)
  - overwriting [5-34](#)
  - selecting transmit key [5-34](#)
  - size of [5-33](#)
- Static WEP option [5-32](#)
- Statistics
  - ACU menu option [7-12](#)
  - icon [7-12](#)
  - screen [7-12](#)
- statistics
  - client adapter, viewing [7-12 to 7-16](#)
  - link test [7-21](#)
  - receive [7-13 to 7-15](#)
  - site survey
    - active mode [F-11 to F-13](#)
    - passive mode [F-5 to F-7](#)
  - transmit [7-15 to 7-16](#)
- Status
  - ACU menu option [7-4, 9-7, 9-8](#)
  - icon [7-4, 9-7, 9-8](#)
  - screen [7-5](#)
- status of client adapter
  - in ACM Connection Status screen [8-9 to 8-11](#)
  - in ACM Tool Tip window [8-4](#)

- in ACU status bar [1-7](#)
- in ACU Status screen [7-4 to 7-11](#)
- in link test [7-21](#)
- in Windows XP [E-19](#)

Stop button

- function [1-8](#)
- in site survey active mode [F-13](#)

system parameters

- described [5-2, 5-3](#)
- setting [5-3 to 5-6](#)

System Parameters screen [5-3](#)

system requirements [2-4 to 2-5](#)

---

## T

Taiwan, administrative rules for client adapters [C-7 to C-8](#)

technical assistance

- obtaining [xvi to xviii](#)

Technical Assistance Center, contacting [xvii](#)

Temporal Key Integrity Protocol (TKIP)

- described [5-28](#)
- setting on client and access point [5-32](#)
- status of [7-7, 7-8](#)

temporary username and password

- automatically prompt for [5-37](#)
- described [5-36](#)
- manually prompt for [5-37](#)
- selecting options [5-37](#)
- using Windows credentials [5-37](#)

throughput [5-5, 5-8, 5-9, 5-13](#)

TKIP option, in Windows XP [5-43, E-8](#)

transmit key [5-34](#)

Transmit Power parameter [5-11](#)

transmit statistics [7-15 to 7-16](#)

Troubleshooting ACU menu option [10-4](#)

troubleshooting information, accessing [10-2](#)

troubleshooting utility

- accessing help [10-7](#)
- activating from ACM [8-6](#)

- saving detailed report to text file [10-6 to 10-7](#)
- using [10-4 to 10-7](#)

Turn Radio Off

- ACM menu option [8-8](#)
- ACU menu option [9-16](#)

Turn Radio On

- ACM menu option [8-8](#)
- ACU menu option [9-16](#)

---

## U

unicast packets

- encryption type used [7-7](#)
- in site survey active mode [F-9](#)
- number received [7-13](#)
- number transmitted [7-15](#)

uninstalling client adapter software [9-6 to 9-7](#)

unpacking the client adapter [2-3](#)

Unplug or Eject Hardware icon (Windows) [9-4](#)

upgrading client adapter software

- on Windows 98, 98 SE, 2000, Me, or XP [3-2 to 3-11](#)
- on Windows NT [3-12 to 3-22](#)

upgrading firmware [9-8 to 9-10](#)

up time

- statistic [7-15](#)
- status of [7-10](#)

Use Another Application to Configure My Wireless Settings option [4-7](#)

Use Auto Profile Selection option [4-7, 8-8](#)

Use Other Configuration Application (ACM) [8-8](#)

Use Saved User Name and Password option [5-36](#)

Use Selected Profile option [4-6](#)

Use Short Radio Headers parameter [5-9](#)

Use Temporary User Name and Password option [5-36](#)

Use Windows to configure my wireless network settings parameter - Windows XP [5-42, E-6](#)

Use Windows User Name and Password option [5-37](#)

**W**

Wake Duration parameter [5-20](#)

warning

defined [xiii to xiv](#)

dipole antenna [2-3, B-3](#)

explosive device proximity [2-3, B-2](#)

laptop users [2-3, B-4 to B-5](#)

WEP

designation in product model numbers [1-3](#)

keys

additional security features [5-28](#)

defined [5-22, E-2](#)

size of [5-23, E-2](#)

types of [5-23, E-2](#)

status of [7-7, 7-8](#)

WEP Key Entry Method parameter [5-33](#)

WEP key hashing [5-28](#)

WEP option, in Windows XP [E-8](#)

Wi-Fi Protected Access (WPA)

See WPA

Wi-Fi Protected Access (WPA) parameter [5-35, 5-40](#)

Windows login screen [6-4](#)

Windows Wireless Network Connection icon, shows unavailable connection [10-12](#)

Windows XP

configuring client adapter through [E-5 to E-18](#)

enabling EAP-SIM authentication [E-16 to E-18](#)

enabling EAP-TLS authentication [E-10 to E-12](#)

enabling PEAP authentication [E-13 to E-15](#)

feature comparison to ACU [3-22 to 3-23](#)

inability to use fast user switching [3-9](#)

making a configuration decision [3-22 to 3-23](#)

security features [E-2 to E-4](#)

viewing status of client adapter [E-19](#)

wireless infrastructure [1-10](#)

Wireless Network Connection Properties screen (Authentication Tab) - Windows [5-44](#)

Wireless Network Connection Properties screen (Wireless Networks Tab) - Windows [5-42, E-6](#)

Wireless Network Connection Status screen - Windows XP [E-19](#)

Wireless Network Properties screen (Association Tab) - Windows [5-43](#)

Wireless Network Properties screen (Association Tab) - Windows XP [E-7](#)

Wireless Network Properties screen (Authentication Tab) - Windows XP [E-10, E-13, E-16](#)

workstation

defined [1-3](#)

in wireless infrastructure [1-10](#)

World Mode parameter [5-9](#)

WPA

described [5-26, E-4 to E-5](#)

enabling in Windows XP [E-8](#)

enabling with host-based EAP in ACU [5-40](#)

enabling with host-based EAP on Windows 2000 [5-41](#)

enabling with host-based EAP on Windows XP [5-42 to 5-43](#)

enabling with LEAP through ACU [5-35](#)

mismatches [7-14](#)

requirements [5-35, 5-39](#)

software required [2-4, 5-26, 5-39, E-4](#)

status of authentication [7-8](#)

WPA-None option, in Windows XP [E-8](#)

WPA option, in Windows XP [5-43, E-8](#)

WPA-PSK, described [5-26, E-4](#)

WPA-PSK option, in Windows XP [E-8](#)