



Using IOS Templates

The WLSE allows you to view, create, copy, edit, and delete IOS configuration templates and apply them to large numbers of devices at a time.

For information on non-IOS templates, see [Using Non-IOS Templates](#).

The topics covered are:

- [What is a Configuration Template?](#), page 4-1
- [Copying a Template](#), page 4-2
- [Editing a Template](#), page 4-3
- [Deleting a Template](#), page 4-4
- [Importing a Template](#), page 4-4
- [Exporting a Template](#), page 4-6
- [Template Choices](#), page 4-7

Related Topics

- [Using Non-IOS Templates](#), page 5-1
- [Managing Configuration Jobs](#), page 6-8

What is a Configuration Template?

You can think of a configuration template as a configuration update file for an access point. This file might contain the update for only one parameter or a complete access point configuration.

IOS-based templates are stored as text files containing IOS commands.

You can use the **Configure > Templates** option to:

- Create a configuration template—See [Creating a Template, page 4-2](#).
- Copy an existing template—See [Copying a Template, page 4-2](#).
- Edit an existing template—See [Editing a Template, page 4-3](#).
- Delete a template—See [Deleting a Template, page 4-4](#).
- Import a template—See [Importing a Template, page 4-4](#).
- Export a template—See [Exporting a Template, page 4-6](#).

Creating a Template

Use this option to create a configuration template.

**Note**

Your login determines whether you can use this option.

Procedure

-
- Step 1** Select **Configure > Templates**. The Templates dialog box appears.
 - Step 2** Select **IOS**.
 - Step 3** Enter a unique name. See [Naming Guidelines, page B-1](#) for details.
 - Step 4** Click **Create New**. The window refreshes with the Template Creation menu in the left pane and the Template Name dialog box in the right pane.
 - Step 5** Select the choices in the left pane to create a configuration template. For a description, see [Template Choices, page 4-7](#).
-

Copying a Template

Use this option to copy a configuration template that you can use as a base for another template.



Note Your login determines whether you can use this option.

Procedure

- Step 1** Select **Configure > Templates**. The Templates dialog box appears.
 - Step 2** Select the template you want to copy from the Existing Templates box, then click **Create Copy**. A dialog box appears asking you to enter a name for the copy.
 - Step 3** Enter a unique name. See [Naming Guidelines, page B-1](#) for details.
 - Step 4** Click **OK**. The Templates window refreshes and the new name appears in the Existing Templates list.
 - Step 5** Click **Edit**. See [Editing a Template, page 4-3](#).
-

Editing a Template

Use this option to edit a configuration template.



Note Your login determines whether you can use this option.

Procedure

- Step 1** Select **Configure > Templates**. The Templates dialog box appears.
 - Step 2** Select the template you want to edit from the Existing Templates box, then click **Edit**. The window refreshes with Template Creation menu in the left pane and the Template Name dialog box in the right pane.
 - Step 3** Select the choices in the Template Menu to create a configuration template. For a description, see [Template Choices, page 4-7](#).
-

Deleting a Template

Use this option to delete a configuration template.

**Note**

Your login determines whether you can use this option.

Procedure

-
- Step 1** Select **Configure > Templates**. The Templates dialog box appears.
- Step 2** Select the template you want to delete from the Existing Templates box, then click **Delete**. A window appears asking if you want to delete the template.

**Note**

You cannot delete a template if it used in a scheduled job.

- Step 3** Click **OK** to delete it.
-

Importing a Template

Use this option to import a configuration to the WLSE, either from a file or from a device. You can import files from devices that are not managed by the WLSE.

When you import a configuration from an IOS access point, the imported configuration options are displayed in the Custom Values template screen.

**Note**

Your login determines whether you can use this option.

Procedure

-
- Step 1** Select **Configure > Templates**. The Templates dialog box appears.
- Step 2** Select IOS.

Step 3 Click **Import**. The Import Template window appears and varies depending upon which type you selected.

Step 4 Complete the following:

Field	Description
Template Name	<p>If you are importing from a file, enter a new name for the template or leave the entry blank to use the imported template name.</p> <p>If you are importing from a device, you must enter a template name.</p>
Description	<p>Enter a description for the template.</p> <p>Do not click the Enter key at the end of the description; it will generate an error.</p>
From file	Enter the template filename or browse to find the file, then click Import .
From device (IP Address)	Enter a device name or IP address, then click Import .
Non-IP-Identity	<p>Select this option if you do not want to download identity parameters, such as IP address, from the access point.</p> <p>Some parameters are ignored using this type of import. The downloaded configuration parameters are not a full representation of the access point's configuration but an optimal representation.</p>
Full	<p>Select this option to import a full configuration from the access point.</p> <p>This type of import includes the access point's identity parameters, such as sysname, IP address, etc.</p> <p>When using this option, it is recommended you delete all the custom key values from the imported template before applying the template to any device.</p>

Field	Description
Device Credentials	Select Telnet or SSH.
User Name	If the device is not managed by the WLSE, or if the device is managed but the credentials have not been set, enter the username on the access point.
User Password	If the device is not managed by the WLSE, enter the user password on the access point.

- Step 5** To import another template, click **Back** and go to [Step 3](#).
- Step 6** When you are finished, click **Done**.
- Step 7** View the template you imported by selecting **Configure > Templates** and selecting it in the Existing Templates list.

Exporting a Template

Use this option to export a configuration template to your local drive.



Note

Your login determines whether you can use this option.

Procedure

- Step 1** Select **Configure > Templates**. The Templates dialog box appears.
- Step 2** Select a template name from Existing Templates, then click **Export**. The Export Template window appears.
- Step 3** From the list, select the template you want to export, then click **Export**. You will be prompted for a location to export the .ini file.
- Step 4** Click **Done**.

Template Choices

When you create or edit an IOS configuration template, the following choices appear in the left pane of the Templates window:

1. **Template Name**—See [Naming the Template, page 4-7](#).
2. **Template Categories**



Note Any or all of the template categories can be completed in any order.

- **Basic Settings**—See [Using Basic Settings, page 4-8](#).
 - **Network Interfaces**—See [Setting Up Network Interfaces, page 4-15](#).
 - **Security**—See [Defining Security Settings, page 4-41](#).
 - **Services**—See [Defining Services, page 4-88](#).
 - **Event Log**—See [Configuring the Event Log, page 4-130](#).
 - **Wireless Services**—See [Configuring Wireless Services, page 4-133](#).
 - **Custom Values**—See [Configuring Custom Values, page 4-138](#).
3. **Preview**—See [Previewing the Template, page 4-140](#).
 4. **Save**—See [Saving the Template, page 4-140](#).

Naming the Template

This option enables to you to name the template.

Procedure

Note Clicking **Clear** removes all the entries you have made.

Step 1 Select **Template Name**. The Template Name dialog box appears:

Field	Description
Template Name	Enter a name for the template. See Naming Guidelines, page B-1 .
Description	Enter a description of the purpose of the template. See Naming Guidelines, page B-1 . Do not click the Enter key at the end of the description; it will generate an error.

Step 2 Select a template category. For additional information, see [Template Categories, page 4-7](#).

Using Basic Settings

Use this option if you need to set up an access point quickly with a simple configuration. This will allow you to enter all the access point's essential settings for basic operation.

Procedure

Step 1 Select **Basic Settings**. The Basic Settings dialog box displays in the right pane:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-1 Basic Settings

Field	Description
Configuration Server Protocol	<p>Set this entry to match the network's method of IP address assignment.</p> <p>Select one of the following options:</p> <ul style="list-style-type: none"> • DHCP—Use this setting if your network uses Dynamic Host Configuration Protocol, in which IP addresses are “leased” for predetermined periods of time. • Static IP—Use this setting if your network does has an automatic system for IP address assignment.
Default Gateway	<p>Enter the IP address of your default Internet gateway.</p> <p>The entry 255.255.255.255 indicates no gateway.</p>
SNMP Community	<p>Enter the SNMP community name.</p> <p>Select one of the following: Read-Only, Read-Write</p>
Radio0-802.11B/G	
SSID	<p>Enter any alphanumeric, case-sensitive string, from 1 to 32 characters long.</p> <p>The SSID is a unique identifier that clients use to associate with the radio.</p>

Table 4-1 Basic Settings (continued)

Field	Description
Role in Radio Network	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Access Point Root—Use this setting for a root access point to become a repeater and associate to a nearby root access point when the wired connection is lost. • Repeater Non-Root—Use this setting if the access point is not connected to the wired LAN. Client data is transferred to the access point selected as the repeater parent. • Access Point Root (1310 Bridge)—Use this setting for a 1310 Bridge. Click See detail to see for which versions this setting is valid. • Workgroup Bridge—Use this setting to specify that the device is a workgroup bridge. Access points and bridges normally treat workgroup bridges not as client devices but as infrastructure devices, like access points or bridges. • Bridge Root—Use this setting to designate one device in each group of bridges as the root bridge. A root bridge can only communicate with non-root bridges and other client devices and cannot associate with another root bridge.

Table 4-1 Basic Settings (continued)

Field	Description
	<ul style="list-style-type: none"> • Bridge Non-Root—Use this setting to specify that the bridge operates as a non-root bridge and must associate to a root bridge. • Install Mode—Use this setting to configure a bridge for installation mode. In installation mode, the bridge flashes its LEDs to indicate received signal strength (RSSI, which assists in antenna alignment). Click See detail to see for which versions this setting is valid. • Scanner Access Point—Select to specify that the access point is a Scanning AP, which is used to guard certain air space from any potential intruders that operate on the same frequency band.
Broadcast SSID in Beacon	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Yes—Use this setting to allow devices that do not specify an SSID to associate with the access point. • No—Use this setting require that the SSID used by the client devices must match exactly the access point's SSID.

Table 4-1 Basic Settings (continued)

Field	Description
Optimize Radio Network for	Select one of the following: <ul style="list-style-type: none"> • Throughput—Use this setting to maximize the data volume handled by the access point; however, it might reduce the access point's range. • Range—Use this setting to maximize the access point's range; however, it might reduce throughput. • Default—Use this setting to set the data rates to factory default settings. This option is not supported on the 2.4-GHz, 802.11b radio.
Aironet Extensions	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to enable load balancing, Message Integrity Check (MIC), and WEP key hashing. • Disable—Use this setting to disables load balancing, Message Integrity Check (MIC), and WEP key hashing.
Radio0-802.11A	
SSID	Enter any alphanumeric, case-sensitive string, from 1 to 32 characters long. The SSID is a unique identifier that clients use to associate with the radio.

Table 4-1 Basic Settings (continued)

Field	Description
Role in Radio Network	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Access Point Root—Use this setting for a root access point to become a repeater and associate to a nearby root access point when the wired connection is lost. • Repeater Non-Root—Use this setting if the access point is not connected to the wired LAN. Client data is transferred to the access point selected as the repeater parent. • Bridge Root—Use this setting to designate one device in each group of bridges as the root bridge. A root bridge can only communicate with non-root bridges and other client devices and cannot associate with another root bridge. • Bridge Non-Root—Use this setting to specify that the bridge operates as a non-root bridge and must associate to a root bridge . • Install Mode—Select to configure a bridge for installation mode. In installation mode, the bridge flashes its LEDs to indicate received signal strength (RSSI), which assists in antenna alignment. Click See detail to see for which versions this setting is valid. • Scanner Access Point—Select to specify that the access point is a Scanning AP, which is used to guard certain air space from any potential intruders that operate on the same frequency band.

Table 4-1 Basic Settings (continued)

Field	Description
Broadcast SSID in Beacon	Select one of the following: <ul style="list-style-type: none"> • Yes—Use this setting to allow devices that do not specify an SSID to associate with the access point. • No—Use this setting require that the SSID used by the client devices must match exactly the access point's SSID.
Optimize Radio Network for	Select one of the following: <ul style="list-style-type: none"> • Throughput—Use this setting to maximize the data volume handled by the access point; however, it might reduce the access point's range. • Range—Use this setting to maximize the access point's range; however, it might reduce throughput. • Default—Use this setting to specify the that the access point use settings entered for the Network Interfaces Settings.
Aironet Extensions	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to enable load balancing, Message Integrity Check (MIC), and WEP key hashing. • Disable—Use this setting to disables load balancing, Message Integrity Check (MIC), and WEP key hashing. Click See detail to see for which versions this setting is valid.

Step 2 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).
-

Setting Up Network Interfaces

Use this option to configure the device's network interface settings.

Procedure

Step 1 Select **Network Interfaces**. The menu expands and the Network Interfaces: FastEthernet Settings dialog box displays in the right pane.

Step 2 Select one of the following from the menu:

- FastEthernet—See [Configuring Fast Ethernet Settings, page 4-15](#).
 - Radio-802.11b/g—See [Configuring Radio-802.11b/g Settings, page 4-17](#).
 - Radio-802.11a—See [Configuring Radio-802.11a Settings, page 4-30](#)
-

Configuring Fast Ethernet Settings

Use this option to define the Fast Ethernet port settings.

Procedure

- Step 1** Select **Network Interfaces > FastEthernet**. The Network Interfaces: FastEthernet Settings dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-2 Fast Ethernet Settings

Field	Description
Enable Ethernet	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to enable Ethernet. • Disable—Use this setting to disable Ethernet.
Requested Duplex	Select one of the following: <ul style="list-style-type: none"> • Auto—Use this setting to allow the duplex setting to be automatically negotiated between the access point and the hub, switch, or router to which the access point is connected. • Half—Use this setting to allow operation in half-duplex mode. • Full—Use this setting to allow operation in full-duplex mode.
Requested Speed	Select one of the following: <ul style="list-style-type: none"> • Auto—Use this setting to allow the transmission speed to be automatically negotiated between the access point and the hub, switch, or router to which the access point is connected. • 100Mbps—Use this setting to allow a transmission speed of 100 Mbps. • 10Mbps—Use this setting to allow a transmission speed of 10 Mbps.

- Step 3** Select one of the following:
- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).
-

Configuring Radio-802.11b/g Settings

Use this option to configure the device's 802.11b and 802.11g radio.

Procedure

- Step 1** Select **Network Interfaces > Radio-802.11b**. The Network Interfaces: Radio-802.11b/g dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-3 *Radio-802.11b/g Settings*

Field	Description
Configure Radio	Select the radio interface type: <ul style="list-style-type: none"> • Radio B • Radio G—Click See detail to see for which versions this setting is valid.

Table 4-3 *Radio-802.11b/g Settings (continued)*

Field	Description
Enable Radio	Select one of the following: <ul style="list-style-type: none"><li data-bbox="663 337 1228 456">• Enable—Use this setting to allow the access point to send packets through its 802.11b radio interface and monitor when other devices use the 802.11b radio interface to send packets.<li data-bbox="663 480 1228 565">• Disable—Use this setting to change the administrative state of the radio from up to down.

Table 4-3 Radio-802.11b/g Settings (continued)

Field	Description
Role in Radio Network (Fallback mode upon loss of Ethernet connection)	<p>This setting is used to configure a fallback role for the access point. The access point automatically assumes the fallback role when its Ethernet port is disabled or disconnected from the wired LAN.</p> <p>Select one of the following:</p> <ul style="list-style-type: none"> • Access Point Root (Fallback to Radio Island)—Use this setting to enable wireless clients to continue to associate even when there is no connection to the wired LAN. • Access Point Root (Fallback to Radio Shutdown)—Use this setting to force the clients to associate to another access point, if one is available, when the radio shuts down because the wired connection is lost. • Access Point Root (Fallback to Repeater)—Use this setting for a root access point to become a repeater and associate to a nearby root access point when the wired connection is lost. • Repeater Non-Root—Use this setting if the access point is not connected to the wired LAN. Client data is transferred to the access point selected as the repeater parent. • Scanner Access Point—Select to specify that the access point is a Scanning AP, which is used to guard certain air space from any potential intruders that operate on the same frequency band.

Table 4-3 Radio-802.11b/g Settings (continued)

Field	Description
	<ul style="list-style-type: none"> • Access Point Root (1310 Bridge)—Use this setting to designate the root as a 1310 Bridge. • Access Point Root (Fallback to Radio Shutdown 1310 Bridge)—Use this setting to force the clients to associate to another access point if one is available, when the radio shuts down because the wired connection is lost. • Access Point Root (Fallback to Repeater 1310 Bridge)—Use this setting for a root access point to become a repeater and associate to a nearby root access point when the wired connection is lost. • Workgroup Bridge—Use this setting to specify that the device is a workgroup bridge. Access points and bridges normally treat workgroup bridges not as client devices but as infrastructure devices, like access points or bridges. • Bridge Root—Use this setting to designate one device in each group of bridges as the root bridge. A root bridge can only communicate with non-root bridges and other client devices and cannot associate with another root bridge. • Bridge Non-Root—Use this setting to specify that the bridge operates as a non-root bridge and must associate to a root bridge . • Install Mode—Select to configure a bridge for installation mode. In installation mode, the bridge flashes its LEDs to indicate received signal strength (RSSI), which assists in antenna alignment. <p>Click See detail to see for which versions this setting is valid.</p>

Table 4-3 Radio-802.11b/g Settings (continued)

Field	Description
Data Rates	<ul style="list-style-type: none"> • Click one of the following to automatically set the data transmission rates: <ul style="list-style-type: none"> – Best Range—Use this setting to maximize the access point's range; however, it might reduce throughput. – Best Throughput—Use this setting to maximize the data volume handled by the access point; however, it might reduce the access point's range. <p>Or</p> <ul style="list-style-type: none"> • Select one of the following to manually set the data transmission rates: <ul style="list-style-type: none"> – Require—Use this setting to enable transmission at this rate for all packets, both unicast and multicast. At least one data rate must be set to Require. A client must support a required rate before it can associate. – Enable—Use this setting to enable transmission at this rate for unicast packets only. – Disable—Use this setting to not allow transmission at this rate.

Table 4-3 Radio-802.11b/g Settings (continued)


Field	Description
Transmitter Power (mW)	<p>Select the power level of the radio transmission.</p> <p>Note Government regulations define the highest allowable power level for radio devices. This setting must conform to established standards for the country in which you use the device.</p> <p>To reduce interference, limit the range of your access point, or conserve power, select a lower power setting.</p> <p></p> <p>Caution Do not use the 50mW or 10mW setting for Japanese channels.</p> <p>For a list of maximum power levels allowed in each regulatory domain refer to one of the following:</p> <ul style="list-style-type: none"> • URL: http://www.cisco.com/en/US/products/hw/wireless/ps430/products_command_reference_chapter09186a0080147d8b.html#87443 • Cisco IOS Commands for Access in the <i>Cisco Aironet 1200 Series Access Point Command Reference</i>. <p>Click See detail to see for which versions this setting is valid.</p>
CCK Transmitter Power (mW)	<p>Use this setting on the 2.4-GHz, 802.11g radio to specify Complementary Code Keying (CCK) power levels.</p> <p>CCK modulation is supported by 802.11b and 802.11g devices.</p> <p>Click See detail to see for which versions this setting is valid.</p>

Table 4-3 Radio-802.11b/g Settings (continued)

Field	Description
OFDM Transmitter Power (mW)	<p>Use this setting on the 2.4-GHz, 802.11g radio to specify Orthogonal Frequency Division Multiplexing (OFDM) power levels.</p> <p>OFDM modulation is supported by 802.11g and 802.11a devices.</p> <p>Click See detail to see for which versions this setting is valid.</p>
Limit Client Power (mW)	<p>Use this setting to limit the power level on client devices that associate to the access point. When a client device associates to the access point, the access point sends the maximum power level setting to the client.</p>
Default Radio Channel	<p>From the list, select the radio channel you want for a default.</p> <p>If you select Least Congested Frequency, the access point scans for the radio channel that is least busy and selects that channel for use. The device scans at power-up and when the radio settings are changed.</p>
Least Congested Channel Search	<p>If you want to limit the channels the access point scans when the Default Radio Channel is set for Least Congested Frequency, select one or more channels from the list.</p>

Table 4-3 Radio-802.11b/g Settings (continued)

Field	Description
World Mode Multi-Domain Operation	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Enable—Use this setting to enable the access point to add channel carrier set information to its beacon. Client devices with world-mode enabled receive the carrier set information and adjust their settings automatically. • Disable—Use this setting to not allow the access point to add channel carrier set information to its beacon. • Legacy—Use this setting to enable Cisco legacy world mode. • Dot11d—Use this setting to enable 802.11d world mode. When you use this setting, you must enter an ISO country code (for example, the ISO country code for the United States is US). You can find a list of ISO country codes at the ISO website.
Country Code (use only for Dot11d)	From the list, select the country code, then select either indoor or outdoor.
Radio Preamble	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Short—Use this setting to improves throughput performance; Cisco Aironet’s Wireless LAN Adapter supports short preambles. • Long—Use this setting to ensure compatibility between the access point and all early models of Cisco Aironet Wireless LAN Adapters (PC4800 and PC4800A).

Table 4-3 Radio-802.11b/g Settings (continued)

Field	Description
Receive Antenna	From the list, select one of the following:
Transmit Antenna	<ul style="list-style-type: none"> • Diversity—Use this setting if your access point has two fixed (non-removable) antennas; it tells the access point to use the antenna that receives the best signal. • Left—Use this setting if your access point has removable antennas and you install a high-gain antenna on the access point's left connector. (When you look at the access point's back panel, the left antenna is on the left.) • Right—Use this setting if your access point has removable antennas and you install a high-gain antenna on the access point's right connector. (When you look at the access point's back panel, the right antenna is on the right.)
External Antenna Configuration	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to configure the access point or bridge's antenna gain. • Disable—Use this setting to disable this feature.
Antenna Gain (dB)	Enter the desired antenna gain.
Aironet Extensions	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to enable load balancing, Message Integrity Check (MIC), and WEP key hashing. • Disable—Use this setting to disable load balancing, Message Integrity Check (MIC), and WEP key hashing.

Table 4-3 Radio-802.11b/g Settings (continued)

Field	Description
Ethernet Encapsulation Transform	Select one of the following: <ul style="list-style-type: none"> • RFC1042—Use this setting to ensure interoperability with non-Cisco Aironet wireless equipment. • 802.1H—Use this setting to provide optimum performance for Cisco Aironet wireless products.
Concatenation	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting for packet concatenation on the bridge radio to combine multiple packets into one packet to reduce packet overhead and overall latency, and to increase transmission efficiency. • Disable—Use this setting to disable this feature. Click See detail to see for which versions this setting is valid.
Max Length of Concatenation	Use this setting to specify a maximum size, in bytes, for concatenated packets.
Distance (Km)	Enter value between 0 and 99 that determines the length of the radio link propagation delay. Click See detail to see for which versions this setting is valid.
Reliable Multicast to WGB	Select one of the following: <ul style="list-style-type: none"> • Disable—Use this setting to not allow reliable multicast to workgroup bridges. • Enable—Use this setting to allow reliable multicast to workgroup bridges.

Table 4-3 Radio-802.11b/g Settings (continued)

Field	Description
Public Secure Packet Forwarding	<p>Note Use this setting only if no VLAN is configured. If a VLAN is configured, then enable and disable PSPF by selecting Services > VLAN.</p> <p>Select one of the following:</p> <ul style="list-style-type: none"> • Enable—Use this setting to enable use of the protected port for secure mode configuration. (No exchange of unicast, broadcast, or multicast traffic occurs between protected ports.) • Disable—Use this setting to disable the use of the port fro secure mode configuration.
Short Slot-Time	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Enable—Use this setting to enable short slot time on the 802.11g, 2.4-GHz radio. <p>Short slot time reduces the slot time from 20 microseconds to 9 microseconds, thereby increasing throughput. The access point uses short slot time only when all clients that are associated to the 802.11g radio can support short slot time.</p> <ul style="list-style-type: none"> • Disable—Use this setting to disable this feature. <p>Click See detail to see for which versions this setting is valid.</p>
Beacon Period	<p>Enter the amount of time between beacons in kilomicroseconds. (One kilomicrosecond equals 1,024 microseconds.)</p>

Table 4-3 Radio-802.11b/g Settings (continued)

Field	Description
Data Beacon Rate (DTIM)	<p>Enter the amount of time, always a multiple of the beacon period, to determine how often the beacon contains a delivery traffic indication message (DTIM).</p> <p>The DTIM tells power-save client devices that a packet is waiting for them.</p> <p>If the beacon period is set at 100, its default setting, and the data beacon rate is set at 2, its default setting, then the access point sends a beacon containing a DTIM every 200 kilomicrosecond.</p>
Max. Data Retries	Enter the maximum number of attempts the access point makes to send a packet before giving up and dropping the packet.
RTS Max. Retries	Enter the maximum number of times the access point issues an RTS before stopping the attempt to send the packet through the radio.
Fragmentation Threshold	<p>Enter a setting to determine the size at which packets are fragmented (sent as several pieces instead of as one block).</p> <p>Use a low setting in areas where communication is poor or where there is a great deal of radio interference.</p>
RTS Threshold	<p>Enter a setting to determine the packet size at which the access point issues a request to send (RTS) before sending the packet.</p> <p>A low RTS Threshold setting can be useful in areas where many client devices are associating with the access point, or in areas where the clients are far apart and can detect only the access point and not each other.</p>

Table 4-3 Radio-802.11b/g Settings (continued)

Field	Description
Repeater Parent AP Timeout	Enter a timeout value in seconds that determines how long the repeater attempts to associate to a parent access point before trying the next parent in the list.
Repeater Parent AP MAC1 through MAC 4	Enter the MAC address for the access point to which the repeater should associate. You can enter MAC addresses for up to four parent access points. The repeater attempts to associate to MAC address 1 first; if that access point does not respond, the repeater tries the next access point in its parent list.

- Step 3** Select one of the following:
- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).
-

Configuring Radio-802.11a Settings

Use this option to configure the device's 802.11a radio.

Procedure

- Step 1** Select **Network Interfaces > Radio-802.11a**. The Network Interfaces: Radio-802.11a dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-4 *Radio-802.11a Settings*

Field	Description
Enable Radio	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to allow the access point to send packets through its 802.11a radio interface and monitor when other devices use the 802.11a radio interface to send packets. • Disable—Use this setting to change the administrative state of the radio from up to down.

Table 4-4 Radio-802.11a Settings (continued)

Field	Description
Role in Radio Network (Fallback mode upon loss of Ethernet connection)	<p>This setting is used to configure a fallback role for the access point. The access point automatically assumes the fallback role when its Ethernet port is disabled or disconnected from the wired LAN.</p> <p>Select one of the following:</p> <ul style="list-style-type: none"> • Access Point Root (Fallback to Radio Island)—Use this setting to enable wireless clients to continue to associate even when there is no connection to the wired LAN. • Access Point Root (Fallback to Radio Shutdown)—Use this setting to force the clients to associate to another access point, if one is available, when the radio shuts down because the wired connection is lost. • Access Point Root (Fallback to Repeater)—Use this setting for a root access point to become a repeater and associate to a nearby root access point when the wired connection is lost. • Repeater Non-Root—Use this setting if the access point is not connected to the wired LAN. Client data is transferred to the access point selected as the repeater parent. • Scanner Access Point—Select to specify that the access point is a Scanning AP, which is used to guard certain air space from any potential intruders that operate on the same frequency band.

Table 4-4 *Radio-802.11a Settings (continued)*

Field	Description
	<ul style="list-style-type: none"> <li data-bbox="663 293 1231 444">• Bridge Root—Use this setting to designate one device in each group of bridges as the root bridge. A root bridge can only communicate with non-root bridges and other client devices and cannot associate with another root bridge. <li data-bbox="663 467 1231 553">• Bridge Non-Root—Use this setting to specify that the bridge operates as a non-root bridge and must associate to a root bridge . <li data-bbox="663 576 1231 727">• Install Mode—Select to configure a bridge for installation mode. In installation mode, the bridge flashes its LEDs to indicate received signal strength (RSSI), which assists in antenna alignment. <p data-bbox="700 750 1231 803">Click See detail to see for which versions this setting is valid.</p>

Table 4-4 Radio-802.11a Settings (continued)

Field	Description
Data Rates	<ul style="list-style-type: none"> • Click one of the following to automatically set the data transmission rates: <ul style="list-style-type: none"> – Best Range—Use this setting to maximize the access point's range; however, it might reduce throughput. – Best Throughput—Use this setting to maximize the data volume handled by the access point; however, it might reduce the access point's range. – Default—Use this setting to compromise between range and throughput, providing good range and good throughput. <p>Or</p> <ul style="list-style-type: none"> • Select one of the following to manually set the data transmission rates: <ul style="list-style-type: none"> – Require—Use this setting to enable transmission at this rate for all packets, both unicast and multicast. At least one data rate must be set to Require. A client must support a required rate before it can associate. – Enable—Use this setting to enable transmission at this rate for unicast packets only. – Disable—Use this setting to not allow transmission at this rate.

Table 4-4 Radio-802.11a Settings (continued)

Field	Description
Transmitter Power (mW)	<p>Select the power level of the access point's radio transmission.</p> <p>Note Government regulations define the highest allowable power level for radio devices. This setting must conform to established standards for the country in which you use the device.</p> <p>To reduce interference, limit the range of your access point, or conserve power, select a lower power setting.</p> <p>For a list of maximum power levels allowed in each regulatory domain refer to one of the following:</p> <ul style="list-style-type: none"> • URL: http://www.cisco.com/en/US/products/hw/wireless/ps430/products_command_reference_chapter09186a0080147d8b.html#87443 • Cisco IOS Commands for Access in the <i>Cisco Aironet 1200 Series Access Point Command Reference</i>. <p>Click See detail to see for which versions this setting is valid.</p>
Transmitter Power (dBm)	<p>Select the power level of the bridge's radio transmission:</p> <p>Maximum power is regulated by the regulatory agency in the country of operation and is set during manufacture of the bridge.</p> <p>Click See detail to see for which versions this setting is valid.</p>

Table 4-4 Radio-802.11a Settings (continued)

Field	Description
Limit Client Power (mW)	<p>Use this setting to limit the power level on client devices that associate to the access point. When a client device associates to the access point, the access point sends the maximum power level setting to the client.</p> <p>Click See detail to see for which versions this setting is valid.</p>
Default Radio Channel	<p>From the list, select the radio channel you want for a default.</p> <p>If you select Least Congested Frequency, the access point scans for the radio channel that is least busy and selects that channel for use. The device scans at power-up and when the radio settings are changed.</p>
Least Congested Channel Search	<p>If you want to limit the channels the access point scans when the Default Radio Channel is set for Least Congested Frequency, select one or more channels from the list.</p>
World Mode Multi-Domain Operation	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Disable—Use this setting to not allow the access point to add channel carrier set information to its beacon. • Legacy—Use this setting to enable Cisco legacy world mode. • Dot11d—Use this setting to enable 802.11d world mode. <p>When you use this setting, you must enter an ISO country code (for example, the ISO country code for the United States is US). You can find a list of ISO country codes at the ISO website.</p> <p>Click See detail to see for which versions this setting is valid.</p>

Table 4-4 Radio-802.11a Settings (continued)

Field	Description
Country Code (use only for Dot11d)	From the list, select the country code, then select one either Indoor or Outdoor.
Receive Antenna	From the list, select one of the following:
Transmit Antenna	<ul style="list-style-type: none"> • Diversity—Use this setting if your access point has two fixed (non-removable) antennas; it tells the access point to use the antenna that receives the best signal. • Left—Use this setting if your access point has removable antennas and you install a high-gain antenna on the access point's left connector. (When you look at the access point's back panel, the left antenna is on the left.) • Right—Use this setting if your access point has removable antennas and you install a high-gain antenna on the access point's right connector. (When you look at the access point's back panel, the right antenna is on the right.) <p>Click See detail to see for which versions this setting is valid.</p>
External Antenna Configuration	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Enable—Use this setting to configure the access point or bridge's antenna gain. • Disable—Use this setting to disable this feature.
Antenna Gain (dB)	Enter the desired antenna gain.

Table 4-4 Radio-802.11a Settings (continued)

Field	Description
Aironet Extensions	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to enable load balancing, Message Integrity Check (MIC), and WEP key hashing. • Disable—Use this setting to disable load balancing, Message Integrity Check (MIC), and WEP key hashing. Click See detail to see for which versions this setting is valid.
Ethernet Encapsulation Transform	Select one of the following: <ul style="list-style-type: none"> • RFC1042—Use this setting to ensure interoperability with non-Cisco Aironet wireless equipment. • 802.1H—Use this setting to provide optimum performance for Cisco Aironet wireless products.
Concatenation	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting for packet concatenation on the bridge radio to combine multiple packets into one packet to reduce packet overhead and overall latency, and to increase transmission efficiency. • Disable—Use this setting to disable this feature. Click See detail to see for which versions this setting is valid.
Max Length of Concatenation	Use this setting to specify a maximum size, in bytes, for concatenated packets.
Distance (Km)	Enter value between 0 and 99 that determines the length of the radio link propagation delay. Click See detail to see for which versions this setting is valid.

Table 4-4 Radio-802.11a Settings (continued)

Field	Description
Reliable Multicast to WGB	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Enable—Use this setting to allow reliable multicast to workgroup bridges. • Disable—Use this setting to not allow reliable multicast to workgroup bridges. <p>Click See detail to see for which versions this setting is valid.</p>
Public Secure Packet Forwarding	<p>Note Use this setting only if no VLAN is configured. If a VLAN is configured, then enable and disable PSPF by selecting Services > VLAN.</p> <p>Select one of the following:</p> <ul style="list-style-type: none"> • Enable—Use this setting to enable use of the protected port for secure mode configuration. (No exchange of unicast, broadcast, or multicast traffic occurs between protected ports.) • Disable—Use this setting to disable the use of the port for secure mode configuration. <p>Click See detail to see for which versions this setting is valid.</p>
Max Length of Concatenation	Use this setting to specify a maximum size, in bytes, for concatenated packets.
Beacon Period	Enter the amount of time between beacons in kilomicroseconds. (One kilomicrosecond equals 1,024 microseconds.)

Table 4-4 Radio-802.11a Settings (continued)

Field	Description
Data Beacon Rate (DTIM)	<p>Enter the amount of time, always a multiple of the beacon period, to determine how often the beacon contains a delivery traffic indication message (DTIM).</p> <p>The DTIM tells power-save client devices that a packet is waiting for them.</p> <p>If the beacon period is set to 100, its default setting, and the data beacon rate is set to 2, its default setting, then the access point sends a beacon containing a DTIM every 200 kilomicrosecond.</p> <p>Click See detail to see for which versions this setting is valid.</p>
Max. Data Retries	<p>Enter the maximum number of attempts the access point makes to send a packet before giving up and dropping the packet.</p>
RTS Max. Retries	<p>Enter the maximum number of times the access point issues an RTS before stopping the attempt to send the packet through the radio.</p>
Fragmentation Threshold	<p>Enter a setting to determine the size at which packets are fragmented (sent as several pieces instead of as one block).</p> <p>Use a low setting in areas where communication is poor or where there is a great deal of radio interference.</p> <p>Click See detail to see for which versions this setting is valid.</p>

Table 4-4 Radio-802.11a Settings (continued)

Field	Description
RTS Threshold	<p>Enter a setting to determine the packet size at which the access point issues a request to send (RTS) before sending the packet.</p> <p>A low RTS Threshold setting can be useful in areas where many client devices are associating with the access point, or in areas where the clients are far apart and can detect only the access point and not each other.</p> <p>Click See detail to see for which versions this setting is valid.</p>
Repeater Parent AP Timeout	<p>Enter a timeout value in seconds that determines how long the repeater attempts to associate to a parent access point before trying the next parent in the list.</p> <p>Click See detail to see for which versions this setting is valid.</p>
Repeater Parent AP MAC1 through MAC 4	<p>Enter the MAC address for the access point to which the repeater should associate.</p> <p>You can enter MAC addresses for up to four parent access points. The repeater attempts to associate to MAC address 1 first; if that access point does not respond, the repeater tries the next access point in its parent list.</p>

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Defining Security Settings

Use this option to configure the device's security settings.

Procedure

- Step 1** Select **Security**. The menu expands and the Security: Admin Access dialog box displays in the right pane.
- Step 2** Select one of the following from the menu:
- Admin Access—See [Configuring Admin Access Settings, page 4-41](#).
 - SSID 802.11b/g—See [Configuring SSID 802.11b/g Settings, page 4-43](#).
 - SSID 802.11a—See [Configuring SSID 802.11a Settings, page 4-52](#).
 - WEP 802.11b/g—See [Configuring WEP 802.11b/g Settings, page 4-62](#).
 - WEP 802.11a—See [Configuring WEP 802.11a Settings, page 4-67](#).
 - Server Manager—See [Configuring Server Manager Settings, page 4-72](#).
 - Advanced Security—See [Configuring Advanced Security, page 4-78](#).
 - Local Radius Server—See [Setting Up the Local RADIUS Server, page 4-83](#).
-

Configuring Admin Access Settings

Use this option to add users to the system, remove users from the system, and assign user capabilities.

Procedure

- Step 1** Select **Security > Admin Access**. The Security: Admin Access dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-5 Admin Access Settings

Field	Description
Administrator Authenticated by	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Default Authentication (Global Password)—Use this setting to skip the username and enter only a password. You will need to enter the password in the Default Authentication (Global Password field below). • Local User List Only (Individual Password)—Use this setting to designate the local user list for authentication. You will need to have at least one Read-Write user in the Local User List on the access point or in the Local User List field below. • Authentication Server Only—Use this setting to designate the server for authentication. • Authentication Server if not found in Local List—Use this setting to designate the server for authentication if not in the local list. You will need to have at least one Read-Write user in the Local User List on the access point or in the Local User List field below.
Default Authentication (Global Password)	
Default Authentication Password	Enter the password to be used as the default.
Confirm Authentication Password	Reenter the password.
Local User List (Individual Passwords)	
User List	<p>Lists the existing users.</p> <p>To delete a username from the list, select it, then click Delete.</p>
Username	Enter the username.

Table 4-5 Admin Access Settings (continued)

Field	Description
Password	Enter the password
Confirm Password	Reenter the password
Capability Settings	Select one of the settings, then click Add .
Delete Users	
User ID	Enter the user identification, then click >>.
Users to Delete	Lists the users to be deleted. To remove users from the list, click <<

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring SSID 802.11b/g Settings

Use this option to configure SSID 802.11b and 802.11g settings.

Procedure

Step 1 Select **Security > SSID 802.11b/g**. The Security: SSID Manager 802.11b/g dialog box appears.

Step 2 Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-6 SSID 802.11b/g Settings

Field	Description
SSID List	Lists the currently configured SSIDs. To delete an SSID from the list, select it, then click Delete .
SSID	Enter any alphanumeric, case-sensitive string, from 1 to 32 characters long. The SSID is a unique identifier that clients use to associate with the radio.
VLAN	Enter the identification number of the VLAN.
Network ID	Enter the network identification number.

Table 4-6 SSID 802.11b/g Settings (continued)

Field	Description
Authentication Methods Accepted	
Open Authentication	<p>Select one of the following from the list:</p> <ul style="list-style-type: none"> • MAC Authentication—Use this setting to specify that client devices that associate to the access point with open authentication, use MAC authentication. • EAP—Use this setting to specify that client devices that associate to the access point with open authentication, use EAP authentication. • MAC Authentication and EAP—Use this setting to allow client devices that associate to the access point using 802.11 open authentication to first attempt MAC authentication; if MAC authentication succeeds, the client device joins the network. If MAC authentication fails, the access point waits for the client device to attempt EAP authentication. • MAC Authentication or EAP—Use this setting to allow client devices that associate to the access point using open authentication to first attempt MAC authentication. If MAC authentication succeeds, the client device joins the network; if the client is also using EAP authentication, it attempts to authenticate using EAP. If MAC authentication fails, the access point waits for the client device to attempt EAP authentication.

Table 4-6 SSID 802.11b/g Settings (continued)

Field	Description
Shared Authentication	Select one of the following from the list: <ul style="list-style-type: none"> • MAC Authentication—Use this setting to specify that client devices that associate to the access point with shared authentication, use MAC authentication. • EAP—Use this setting to specify that client devices that associate to the access point with shared authentication, use EAP authentication. • MAC Authentication and EAP—Use this setting to specify that client devices that associate to the access point with shared authentication, use MAC and EAP authentication.
Network EAP	Select the following from the list: MAC Authentication—Use this setting to specify that client devices that associate to the access point with network EAP authentication, use MAC authentication.

Table 4-6 SSID 802.11b/g Settings (continued)

Field	Description
Server Priorities	
EAP Authentication Servers	Select one of the following: <ul style="list-style-type: none"> • Use Defaults—Use this setting to use the defaults.
MAC Authentication Servers	<ul style="list-style-type: none"> • Use Server Group—Use this setting to specify a server group then enter the group name. • Customize—Use this setting to create a new server group. • New Group Name—Enter a name for the new group. • Priority—Enter the server IP address or hostname. <ul style="list-style-type: none"> – Auth Port—Enter the authentication port. – Acct Port—Enter the accounting port. or <ul style="list-style-type: none"> – Select a name from the list.
Authenticated Key Management	From the list, select one of the following: <ul style="list-style-type: none"> • None—Use this setting to indicate you do not want to use authenticated key management. • Mandatory—Use this setting to indicate authenticated key management is mandatory. • Optional—Use this setting to indicate authenticated key management is optional.

Table 4-6 SSID 802.11b/g Settings (continued)

Field	Description
CCKM	<p>Note For 802.11b/g, you can select both CCKM and WPA.</p> <p>Select this option to use Cisco Centralized Key Management (CCKM).</p> <p>Using CCKM, authenticated client devices can roam from one access point to another without any perceptible delay during reassociation. An access point on your network acts as a wireless domain services (WDM) and creates a cache of security credentials for CCKM-enabled client devices on the subnet. The WDM's cache of credentials reduces the time required for reassociation when a CCKM-enabled client device roams to a new access point.</p> <p>Note To enable CCKM for an SSID, you must configure network-EAP authentication.</p>
WPA	<p>Note For 802.11b/g, you can select both CCKM and WPA.</p> <p>Select this option to use Wi-Fi Protected Access (WPA).</p> <p>The WPA key management uses a combination of encryption methods to protect communication between client devices and the access point.</p> <p>If authentication key management is WPA, the client and authentication server authenticate to each other using an EAP authentication method (e.g., EAP-TLS) and generate a Pairwise Master Key.</p> <p>Note To enable WPA for an SSID, you must also enable Open authentication and/or Network EAP.</p>

Table 4-6 SSID 802.11b/g Settings (continued)

Field	Description
WPA Pre-shared Key	<p>Enter a key for the access point to support client devices using WPA key management.</p> <p>For versions earlier than 12.2(11)JA, Enter a WEP key. For 40-bit encryption, enter 10 hexadecimal digits; for 128-bit encryption, enter 26 hexadecimal digits.</p> <p>Select either ASCII or Hexadecimal. If you use hexadecimal, you must enter 64 hexadecimal characters (unencrypted key) to complete the 256-bit key. If you use ASCII, you must enter a minimum of 8 letters, numbers, or symbols, and the access point expands the key for you. Up to 63 ASCII characters are allowed.</p>
EAP Client Username	Enter the username used for EAP authentication when the repeater access point is associating with a parent access point.
Password	Enter the EAP client password.
Association Limit	Enter the maximum number of clients that may associate to a particular SSID. This limit prevents access points from getting overloaded and helps to provide an adequate level of service to associated clients.
Proxy Mobile IP	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Enable—Use this setting to use this server for storing security association (SA) bindings for mobile agents. The access point uses this server to retrieve the SPI and key associated with the IP address of the client to which it is trying to roam. The SPI and key is then sent to the home agent to validate the client before allowing it to roam. • Disable—Use this setting if you do not want the server used for storing SA bindings for mobile agents.

Table 4-6 SSID 802.11b/g Settings (continued)

Field	Description
Accounting	From the list, select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to indicate whether you want this server to record usage data of clients associating with the access point. • Disable—Use this setting to turn off accounting for your wireless network
Accounting Server Priorities	Select one of the following: <ul style="list-style-type: none"> • Use Defaults—Use this setting to select the defaults. • Use Server Group—Use this setting to specify a server group, then enter the name of the group. • Customize—Use this setting to create a new server group, then enter the name of the group. • Priority—Enter the server IP address or hostname. • Auth Port—Enter the authentication port. <ul style="list-style-type: none"> – Acct Port—Enter the accounting port. or <ul style="list-style-type: none"> – Select a name from the list.

Step 3 Click **Save**.

Step 4 Complete the following to set global SSID properties:

Table 4-7 Setting SSID 802.11b/g Global Properties

Field	Description
Set Guest Mode SSID	Enter the your access point's guest-mode SSID. The access point includes the SSID in its beacon and allows associations from client devices that do not specify an SSID.
Set Infrastructure SSID	Enter the SSID that other access points and workgroup bridges use to associate to this access point. If you do not designate an SSID as the infrastructure SSID, infrastructure devices can associate to the access point using any SSID.
Force infrastructure device to associate only to this SSID	Select this option to force infrastructure devices to associate to the access point using the specified SSID.

Step 5 Complete the following to delete an SSID:

Table 4-8 Deleting SSID 802.11b/g

Field	Description
SSID	Enter the SSID you want to delete, then click >>. The SSID is added to the SSID to Delete list.
SSID to Delete	Lists the SSIDs to delete. To remove an SSID from this list, click <<.

Step 6 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring SSID 802.11a Settings

Use this option to configure SSID 802.11a settings.

Procedure

Step 1 Select **Security > SSID 802.11a**. The Security: SSID Manager 802.11a dialog box appears.

Step 2 Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-9 SSID 802.11a Settings

Field	Description
SSID List	Lists the currently configured SSIDs. To delete an SSID from the list, select it, then click Delete .
SSID	Enter any alphanumeric, case-sensitive string, from 1 to 32 characters long. The SSID is a unique identifier that clients use to associate with the radio. Click See detail to see for which versions this setting is valid.
VLAN	Enter the identification number of the VLAN.
Network ID	Enter the network identification number.

Table 4-9 SSID 802.11a Settings (continued)

Field	Description
Authentication Methods Accepted	Click See detail to see for which versions this setting is valid.
Open Authentication	<p>Select one of the following from the list:</p> <ul style="list-style-type: none"> • MAC Authentication—Use this setting to specify that client devices that associate to the access point with open authentication, use MAC authentication. • EAP—Use this setting to specify that client devices that associate to the access point with open authentication, use EAP authentication. • MAC Authentication and EAP—Use this setting to allow client devices that associate to the access point using 802.11 open authentication to first attempt MAC authentication; if MAC authentication succeeds, the client device joins the network. If MAC authentication fails, the access point waits for the client device to attempt EAP authentication. • MAC Authentication or EAP—Use this setting to allow client devices that associate to the access point using open authentication to first attempt MAC authentication. If MAC authentication succeeds, the client device joins the network; if the client is also using EAP authentication, it attempts to authenticate using EAP. If MAC authentication fails, the access point waits for the client device to attempt EAP authentication.

Table 4-9 SSID 802.11a Settings (continued)

Field	Description
Shared Authentication	Select one of the following from the list: <ul style="list-style-type: none"> • MAC Authentication—Use this setting to specify that client devices that associate to the access point with shared authentication, use MAC authentication. • EAP—Use this setting to specify that client devices that associate to the access point with shared authentication, use EAP authentication. • MAC Authentication and EAP—Use this setting to specify that client devices that associate to the access point with shared authentication, use MAC and EAP authentication.
Network EAP	Select the following from the list: MAC Authentication—Use this setting to specify that client devices that associate to the access point with network EAP authentication, use MAC authentication.

Table 4-9 SSID 802.11a Settings (continued)

Field	Description
Server Priorities	
EAP Authentication Servers	Select one of the following:
MAC Authentication Servers Click See detail to see for which versions this setting is valid.	<ul style="list-style-type: none"> • Use Defaults—Use this setting to use the defaults. • Use Server Group—Use this setting to specify a server group then enter the group name. • Customize—Use this setting to create a new server group. • New Group Name—Enter a name for the new group. • Priority—Enter the server IP address or hostname. <ul style="list-style-type: none"> – Auth Port—Enter the authentication port. – Acct Port—Enter the accounting port. <p style="text-align: center;">or</p> <ul style="list-style-type: none"> – Select a name from the list.
Authenticated Key Management	
None	Use this setting to indicate you do not want to use authenticated key management.

Table 4-9 SSID 802.11a Settings (continued)

Field	Description
CCKM	<p data-bbox="659 293 1229 350">1. Select this option to use Cisco Centralized Key Management (CCKM).</p> <p data-bbox="700 370 1229 678">Using CCKM, authenticated client devices can roam from one access point to another without any perceptible delay during reassociation. An access point on your network acts as a wireless domain services (WDM) and creates a cache of security credentials for CCKM-enabled client devices on the subnet. The WDM's cache of credentials reduces the time required for reassociation when a CCKM-enabled client device roams to a new access point.</p> <p data-bbox="659 703 1193 760">Note To enable CCKM for an SSID, you must configure network-EAP authentication.</p> <p data-bbox="659 792 1163 816">2. From the list, select one of the following:</p> <ul data-bbox="666 837 1202 971" style="list-style-type: none"> <li data-bbox="666 837 1202 894">• Mandatory—Use this setting to indicate authenticated key management is mandatory. <li data-bbox="666 915 1202 971">• Optional—Use this setting to indicate authenticated key management is optional.

Table 4-9 SSID 802.11a Settings (continued)

Field	Description
WPA	<p data-bbox="659 293 1229 350">1. Select this option to use Wi-Fi Protected Access (WPA).</p> <p data-bbox="700 370 1229 492">The WPA key management uses a combination of encryption methods to protect communication between client devices and the access point.</p> <p data-bbox="700 511 1229 662">If authentication key management is WPA, the client and authentication server authenticate to each other using an EAP authentication method (e.g., EAP-TLS) and generate a Pairwise Master Key.</p> <p data-bbox="659 682 1229 769">Note To enable WPA for an SSID, you must also enable Open authentication and/or Network EAP.</p> <p data-bbox="659 805 1163 829">2. From the list, select one of the following:</p> <ul data-bbox="666 849 1204 984" style="list-style-type: none"> <li data-bbox="666 849 1204 906">• Mandatory—Use this setting to indicate authenticated key management is mandatory. <li data-bbox="666 925 1204 984">• Optional—Use this setting to indicate authenticated key management is optional.

Table 4-9 SSID 802.11a Settings (continued)

Field	Description
WPA Pre-shared Key	<p>Enter a key for the access point to support client devices using WPA key management.</p> <p>For versions earlier than 12.2(11)JA, Enter a WEP key. For 40-bit encryption, enter 10 hexadecimal digits; for 128-bit encryption, enter 26 hexadecimal digits.</p> <p>Select either ASCII or Hexadecimal. If you use hexadecimal, you must enter 64 hexadecimal characters (unencrypted key) to complete the 256-bit key. If you use ASCII, you must enter a minimum of 8 letters, numbers, or symbols, and the access point expands the key for you. Up to 63 ASCII characters are allowed.</p> <p>Click See detail to see for which versions this setting is valid.</p>
EAP Client Username	Enter the username used for EAP authentication when the repeater access point is associating with a parent access point.
Password	Enter the EAP client password.
Association Limit	Enter the maximum number of clients that may associate to a particular SSID. This limit prevents access points from getting overloaded and helps to provide an adequate level of service to associated clients.

Table 4-9 SSID 802.11a Settings (continued)

Field	Description
Proxy Mobile IP	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Enable—Use this setting to use this server for storing security association (SA) bindings for mobile agents. The access point uses this server to retrieve the SPI and key associated with the IP address of the client to which it is trying to roam. The SPI and key is then sent to the home agent to validate the client before allowing it to roam. • Disable—Use this setting if you do not want the server used for storing SA bindings for mobile agents. <p>Click See detail to see for which versions this setting is valid.</p>
Accounting	<p>From the list, select one of the following:</p> <ul style="list-style-type: none"> • Enable—Use this setting to indicate whether you want this server to record usage data of clients associating with the access point. • Disable—Use this setting to turn off accounting for your wireless network. <p>Click See detail to see for which versions this setting is valid.</p>

Table 4-9 SSID 802.11a Settings (continued)

Field	Description
Accounting Server Priorities	Select one of the following: <ul style="list-style-type: none"> • Use Defaults—Use this setting to select the defaults. • Use Server Group—Use this setting to specify a server group, then enter the name of the group. • Customize—Use this setting to create a new server group, then enter the name of the group. • Priority—Enter the server IP address or hostname. • Auth Port—Enter the authentication port. <ul style="list-style-type: none"> – Acct Port—Enter the accounting port. or <ul style="list-style-type: none"> – Select a name from the list.

Step 3 Click **Save**.

Step 4 Complete the following to set global SSID properties:

Table 4-10 Setting SSID 802.11a Global Properties

Field	Description
Set Guest Mode SSID	Enter the your access point's guest-mode SSID. The access point includes the SSID in its beacon and allows associations from client devices that do not specify an SSID.
Set Infrastructure SSID	Enter the SSID that other access points and workgroup bridges use to associate to this access point. If you do not designate an SSID as the infrastructure SSID, infrastructure devices can associate to the access point using any SSID.
Force infrastructure device to associate only to this SSID	Select this option to force infrastructure devices to associate to the access point using the specified SSID.

Step 5 Complete the following to delete an SSID:

Table 4-11 Deleting SSID 802.11a

Field	Description
SSID	Enter the SSID you want to delete, then click >>. The SSID is added to the SSID to Delete list.
SSID to Delete	Lists the SSIDs to delete. To remove an SSID from this list, click <<.

Step 6 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring WEP 802.11b/g Settings

Use this option to select authentication types for the access point. The WEP keys allow you to encrypt radio signals sent by the device and decrypt radio signals received by the device.

Procedure

- Step 1** Select **Security > WEP 802.11b/g**. The Security: WEP Key Manager 802.11b/g dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-12 WEP 802.11b/g Settings

Field	Description
Set Encryption Mode and Keys for VLAN	Enter the VLAN for which you want to set the encryption mode and keys. If you enter None, properties are applied globally.
VLAN List	Lists the currently configured VLANs. To remove a VLAN from the list, select it, then click Delete .

Table 4-12 WEP 802.11b/g Settings (continued)

Field	Description
Encryption Modes	
None	Select this option if the device communicates only with client devices that are not using WEP.
WEP Encryption	<p>Select this option if you want to use WEP key encryption.</p> <hr/> <p>From the list, select one of the following:</p> <ul style="list-style-type: none"> • Optional—Use this option to allow client devices to communicate with the access point either with or without WEP. • Mandatory—Use this option to require client devices to use WEP when communicating with the access point. Devices not using WEP are not allowed to communicate. <hr/> <p>Select one of the following:</p> <ul style="list-style-type: none"> • Cisco Compliant TKIP Features—Use this option to enable Temporal Key Integrity Protocol (TKIP). When TKIP is enabled, all WEP-enabled client devices associated to the access point must support WEP key hashing, or they will not be able to communicate with the access point. • Enable MIC—Use this setting if you to enable Message Integrity Check (MIC). When you enable MIC, only MIC-capable client devices can communicate with the access point. • Enable Per Packet Keying—Use this option to enable MIC on both the access point and all associated client devices. A few bytes are added to each packet to make the packets tamper-proof.

Table 4-12 WEP 802.11b/g Settings (continued)

Field	Description
Cipher	<p>Select this option to enable Wi-Fi Protected Access (WPA) or Cisco Centralized Key Management (CCKM).</p> <p>Cipher suites are sets of encryption and integrity algorithms designed to protect radio communication on your wireless LAN.</p> <p>From the list, select the one of the cipher suites.</p> <ul style="list-style-type: none"> • WEP 128 bit—Use this option to specify that 128-bit WEP is included in the cipher suite. • WEP 40 bit—Use this option to specify that 40-bit WEP is included in the cipher suite. • TKIP—Temporal key integrity protocol is the most secured cipher suite. • CKIP—Cisco Key Integrity Protocol is Cisco's WEP key permutation technique based on an early algorithm. • CMIC—Cisco Message Integrity Check is Cisco's message integrity check mechanism designed to detect forgeries attracts.
WEP Keys	
Encryption Keys 1 through 4	
Transmit Key	<p>Select to indicate this is the key you want to use to transmit packets. Only one key can be selected at a time.</p>
Encryption Key	<p>Enter the type of encryption key used:</p> <ul style="list-style-type: none"> • For 40-bit WEP keys, enter as 10 hexadecimal digits (0-9, a-f, or A-F). • For 128-bit WEP keys, enter as 26 hexadecimal digits (0-9, a-f, or A-F).

Table 4-12 WEP 802.11b/g Settings (continued)

Field	Description
Key Size	From the list, select one of the following: <ul style="list-style-type: none">• 40 bit• 128 bit
Broadcast Key Rotation Interval	Select one of the following: <ul style="list-style-type: none">• Disable Rotation—Use this setting to disable broadcast key rotation.• Enable Rotation with Interval—Use this setting for the access point to provide a dynamic broadcast WEP key and to change it at the selected interval.

Table 4-12 WEP 802.11b/g Settings (continued)

Field	Description
WPA Group Key Update	<p>Select the appropriate checkbox to determine how frequently the access point changes and distributes the group key to WPA-enabled client devices.</p> <ul style="list-style-type: none"> • Enable Group Key Update on Membership Termination—Select this setting if clients do not roam frequently among access points. The access point generates and distributes a new group key when any authenticated station disassociates from the access point. This option keeps the group key private to only currently active members. However, it may generate some overhead if clients in your network roam frequently. • Enable Group Key Update on Member's Capability Change—Use this setting, when in WPA migration mode, to improve the security of the key management capable clients when there are no legacy clients associated to the access point. The access point generates and distributes a dynamic group key when the last non-key management (static WEP) client disassociates, and it distributes the statically configured WEP key when the first non-key management (static WEP) client authenticates.

Step 3 Click **Save**. The VLAN is added to the list box.

- Step 4** Select one of the following:
- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).
-

Configuring WEP 802.11a Settings

Use this option to select authentication types for the access point. The WEP keys allow you to encrypt radio signals sent by the device and decrypt radio signals received by the device.

Procedure

- Step 1** Select **Security > WEP 802.11a**. The Security: WEP Key Manager 802.11a dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-13 WEP 802.11a Settings

Field	Description
Set Encryption Mode and Keys for VLAN	Enter the VLAN for which you want to set the encryption mode and keys. If you enter None, properties are applied globally.
VLAN List	Lists the currently configured VLANs. To remove a VLAN from the list, select it, then click Delete .

Table 4-13 WEP 802.11a Settings (continued)

Field	Description
Encryption Modes	
None	Select this option if the device communicates only with client devices that are not using WEP.
WEP Encryption	Select this option if you want to use WEP key encryption.
	<p>From the list, select one of the following:</p> <ul style="list-style-type: none"> • Optional—Use this option to allow client devices to communicate with the access point either with or without WEP. • Mandatory—Use this option to require client devices to use WEP when communicating with the access point. Devices not using WEP are not allowed to communicate. <p>Select one of the following:</p> <ul style="list-style-type: none"> • Cisco Compliant TKIP Features—Use this option to enable Temporal Key Integrity Protocol (TKIP). When TKIP is enabled, all WEP-enabled client devices associated to the access point must support WEP key hashing, or they will not be able to communicate with the access point. • Enable MIC—Use this setting if you to enable Message Integrity Check (MIC). When you enable MIC, only MIC-capable client devices can communicate with the access point. • Enable Per Packet Keying—Use this option to enable MIC on both the access point and all associated client devices. A few bytes are added to each packet to make the packets tamper-proof.

Table 4-13 WEP 802.11a Settings (continued)

Field	Description
Cipher	<p>Select this option to enable Wi-Fi Protected Access (WPA) or Cisco Centralized Key Management (CCKM).</p> <p>Cipher suites are sets of encryption and integrity algorithms designed to protect radio communication on your wireless LAN.</p> <p>From the list, select the one of the cipher suites.</p> <ul style="list-style-type: none"> • WEP 128 bit—Use this option to specify that 128-bit WEP is included in the cipher suite. • WEP 40 bit—Use this option to specify that 40-bit WEP is included in the cipher suite. • TKIP—Temporal key integrity protocol is the most secured cipher suite. • CKIP—Cisco Key Integrity Protocol is Cisco's WEP key permutation technique based on an early algorithm. • CMIC—Cisco Message Integrity Check) is Cisco's message integrity check mechanism designed to detect forgeries attracts.

Table 4-13 WEP 802.11a Settings (continued)

Field	Description
WEP Keys	
Encryption Keys 1 through 4	
Transmit Key	Select to indicate this is the key you want to use to transmit packets. Only one key can be selected at a time.
Encryption Key	Enter the type of encryption key used: <ul style="list-style-type: none"> For 40-bit WEP keys, enter as 10 hexadecimal digits (0-9, a-f, or A-F). For 128-bit WEP keys, enter as 26 hexadecimal digits (0-9, a-f, or A-F).
Key Size	From the list, select one of the following: <ul style="list-style-type: none"> 40 bit 128 bit
Broadcast Key Rotation Interval	Select one of the following: <ul style="list-style-type: none"> Disable Rotation—Use this setting to disable broadcast key rotation. Click See detail to see for which versions this setting is valid. Enable Rotation with Interval—Use this setting for the access point to provide a dynamic broadcast WEP key and to change it at the selected interval.

Table 4-13 WEP 802.11a Settings (continued)

Field	Description
WPA Group Key Update	<p>Select the appropriate checkbox to determine how frequently the access point changes and distributes the group key to WPA-enabled client devices.</p> <ul style="list-style-type: none"> • Enable Group Key Update on Membership Termination—Select this setting if clients do not roam frequently among access points. The access point generates and distributes a new group key when any authenticated station disassociates from the access point. This option keeps the group key private to only currently active members. However, it may generate some overhead if clients in your network roam frequently. • Enable Group Key Update on Member's Capability Change—Use this setting, when in WPA migration mode, to improve the security of the key management capable clients when there are no legacy clients associated to the access point. The access point generates and distributes a dynamic group key when the last non-key management (static WEP) client disassociates, and it distributes the statically configured WEP key when the first non-key management (static WEP) client authenticates. <p>Click See detail to see for which versions this setting is valid.</p>

Step 3 Click **Save**. The VLAN is added to the list box.

- Step 4** Select one of the following:
- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring Server Manager Settings

Use this option to enter the authentication settings. The RADIUS server on the your network uses EAP to provide authentication service for wireless client devices.

Procedure

- Step 1** Select **Security > Server Manager**. The Security: Server Manager dialog box appears.
- Step 2** Complete the following to add a server to the list:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-14 Backup Radius Server

Field	Description
Backup Radius Server Click See detail to see for which versions this setting is valid.	Select one of the following: <ul style="list-style-type: none"> • Create—Use this setting to create a backup RADIUS server. • Delete—Use this setting to delete a backup RADIUS server.
Backup Radius Server	Enter the hostname or IP address of the RADIUS server you are either creating or deleting.

Table 4-14 Backup Radius Server (continued)

Field	Description
Shared Secret	Enter the server's shared secret.
Corporate Servers	
Current Server List	Lists the servers that are currently configured. To remove a server from the list, select it, then click Delete .
RADIUS	Select this option if you are configuring settings for RADIUS.
TACACS+	Select this option if you are configuring settings for TACACS+.
Server	Enter the hostname or IP address for the selected server.
Shared Secret	Enter the shared secret used by your server.
Authentication Port	Enter the port number your server uses for authentication. Enter the port number the server uses for authentication.
Accounting Port	Enter the port number your server uses for accounting.

Step 3 Click **Save**. The server appears on the list.

Step 4 To delete a server, select it from the list, then click **Delete**.

Step 5 Complete the following to set default server priorities:

Table 4-15 Default Server Priority Settings

Field	Description
EAP Authentication	<ul style="list-style-type: none"> • Priority—Enter the server IP address or hostname. • Auth Port—Enter the authentication port used by the server. • Acct Port—Enter the accounting port used by the server.
MAC Authentication	
Click See detail to see for which versions this setting is valid.	
Accounting	
Click See detail to see for which versions this setting is valid.	
Admin Authentication (RADIUS)	
Admin Authentication (TACACS+)	
Proxy Mobile IP Authentication	
Click See detail to see for which versions this setting is valid.	

Step 6 Complete the following to set global server properties:

Table 4-16 Global Server Properties

Field	Description
Accounting Update Interval	Enter the interval at which the accounting updates should be performed. The accounting feature tracks the services that users are accessing and the amount of network resources that they are consuming.
TACACS+ Server Timeout	Enter the number of seconds the access point should wait before resending the request.
RADIUS Server Timeout	Enter the number of seconds the access point should wait before resending the request.
RADIUS Server Retransmit Retries	Enter the number of seconds the access point should wait before giving up contacting the server.
Dead Server List	When a server is found to be unresponsive after numerous retransmissions and time-outs, it is assumed to be dead and is put in a dead server list. Select one of the following: <ul style="list-style-type: none"> • Disable—Use this setting to disable the feature. • Enable; Server remains on list for—Use this setting to enable the feature and to set the length of time for which the server is skipped over by transaction requests, up to a maximum of 1440 minutes (24 hours).

Table 4-16 Global Server Properties (continued)

Field	Description
RADIUS Calling/Called Station ID Format	<p>Use this setting to indicate the format of the Called Station ID and Calling Station ID. field in the authentication packets sent to the RADIUS server.</p> <p>Select one of the following:</p> <ul style="list-style-type: none"> • Default—Use this setting to implement the Cisco IOS MAC address format. • IETF—Use this setting to implement the standard recommended by the IETF document. • Unformatted— Use this setting to implement the MAC address format used in non-IOS access points.
RADIUS Attributes	
Remove Existing WISPr Location-ID	Select to remove the existing location identification configured on the access point, which is sent with authentication and account requests, and use the ISO and E.164 country codes, and E.164 area code instead.
ISO Country Code	<p>Enter a unique two-letter code.</p> <p>Information about the ISO 3166 country codes can be found at the following URL: http://www.iso.ch/iso/en/prods-services/iso3166ma/index.html</p>

Table 4-16 Global Server Properties (continued)

Field	Description
E.164 Country Code	Enter a three-digit code for special uses. Information about the ISO 3166 country codes can be found at the following URL: http://www.iso.ch/iso/en/prods-services/iso3166ma/index.html .
E.164 Area Code	Enter a three-digit code based on the International Telecommunication Union (ITU) Telecommunication Standardization Sector (ITU-T) recommendations. Information about ITU-T can be found at the following URL: http://www.itu.int/ITU-T/

Step 7 Complete the following to delete RADIUS servers:

Table 4-17 Deleting Servers and Server Groups

Field	Description
Servers to Delete	Lists the servers to delete. To delete a server from the list, select it, then click Delete .
Delete Server	Enter the server you want to delete, then select either RADIUS or TACACS+.
Authentication Port	Enter the port number your RADIUS/TACACS+ server uses for authentication.
Accounting Port	Enter the port number your RADIUS/TACACS+ server uses for accounting.
From Group	Enter the name of the group from which you want to delete the server.
Delete Server also?	If you want to delete the server from the group and delete the server itself. Click Add Server to Delete List and the server name is added to the Servers to Delete.

Step 8 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring Advanced Security

Use this option to set up the access point to authenticate client devices using a combination of MAC-based and EAP authentication.

When you enable this feature, client devices that associate to the access point using 802.11 open authentication first attempt MAC authentication. If MAC authentication succeeds, the client device joins the network. If the client is also using EAP authentication, it attempts to authenticate using EAP. If MAC authentication fails, the access point waits for the client device to attempt EAP authentication.

Procedure

Step 1 Select **Security > Advanced Security**. The Security: Advanced Security dialog box appears.

Step 2 Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-18 Advanced Security

Field	Description
MAC Address Authentication	Click See detail to see for which versions this setting is valid.
MAC Addresses Authenticated by	Select one of the following: <ul style="list-style-type: none"> • Local List Only—Use this setting if you want the authentication to be stored on the access point, and enter MAC addresses. • Authentication Server Only—Use this setting if you want the authentication to be stored on the server. • Authentication Server if not found in Local List—Use this setting if you want to try MAC authentication list first and then automatically try the Authentication server list.

Table 4-18 Advanced Security (continued)

Field	Description
Local MAC Address List	
Click See detail to see for which versions this setting is valid.	
Local List	The local MAC address list is displayed in this listbox. To delete an entry, select it, then click Delete .
New MAC Address	Enter the MAC address, then click Add .
Radio0-802.11B/G EAP Authentication	
EAP Reauthentication Interval	Select one of the following: <ul style="list-style-type: none"> • Disable Reauthentication—Use this setting to disable reauthentication. • Enable Reauthentication with Interval—Use this setting to enter the interval in seconds that the access point waits before forcing an authenticated client to reauthenticate. • Enable Reauthentication with Interval given by Authentication Server—Use this setting to use the reauthentication period specified by the authentication server.
EAP Client Timeout	Enter the number of seconds the access point should wait for a reply from a client attempting to authenticate before the authentication fails.
TKIP MIC Failure Holdoff Time	Select one of the following: <ul style="list-style-type: none"> • Disable Holdoff—Use this setting to disable the TKIP MIC failure holdoff feature. • Enable Holdoff with Interval—Use this setting to enable the TKIP MIC failure hold time. The number of seconds you enter specifies the amount of time the access point blocks all TKIP clients on the interface.

Table 4-18 Advanced Security (continued)

Field	Description
Radio0-802.11A EAP Authentication	
EAP Reauthentication Interval	Select one of the following: <ul style="list-style-type: none"> • Disable Reauthentication—Use this setting to disable reauthentication. • Enable Reauthentication with Interval—Use this setting to enter the interval in seconds that the access point waits before forcing an authenticated client to reauthenticate. • Enable Reauthentication with Interval given by Authentication Server—Use this setting to use the reauthentication period specified by the authentication server.
EAP Client Timeout	Enter the number of seconds the access point should wait for a reply from a client attempting to authenticate before the authentication fails.
TKIP MIC Failure Holdoff Time	Select one of the following: <ul style="list-style-type: none"> • Disable Holdoff—Use this setting to disable the TKIP MIC failure holdoff feature. • Enable Holdoff with Interval—Use this setting to enable the TKIP MIC failure hold time. The number of seconds you enter specifies the amount of time the access point blocks all TKIP clients on the interface.

Table 4-18 Advanced Security (continued)

Field	Description
Global Client Properties	
Click See detail to see for which versions this setting is valid.	
Client Holdoff Time	Select one of the following: <ul style="list-style-type: none"> • Disable Holdoff--Use this setting to disable the client holdoff feature. • Enable Holdoff with Interval--Use this setting to specify the number of seconds a client device must wait before it can reattempt to authenticate following a failed authentication.
Association Access List	
Click See detail to see for which versions this setting is valid.	
Filter client association with MAC address access list	Select one of the following: <ul style="list-style-type: none"> • Enable— Use this setting to enable a MAC address filter for clients who are trying to associate with the access point. • Disable—Use this setting to prevent clients from associating based on their MAC addresses.
Filter	Enter the MAC address filter or select one from the list.

- Step 3** Complete the following to delete local MAC addresses:
Click **See detail** to see for which versions this setting is valid.

Table 4-19 Deleting Local MAC Addresses

Field	Description
Delete Local MAC Addresses	Click See detail to see for which versions this setting is valid.
MAC Address	Enter the address you want to delete, then click >>. The address is added to the MAC Addresses to Delete list.
MAC Addresses to Delete	Lists the MAC dress to delete. To remove an address from the list, select it, then click <<.

- Step 4** Select one of the following:
- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).

Setting Up the Local RADIUS Server

Use this option to configure local server settings.

Procedure

- Step 1** Select **Security > Local Radius Server**. The Security: Local Radius Server - General Set-Up dialog box appears.

Using this option you can do the following:

- Set up the network access server—See [Setting Up Network Access Servers, page 4-84](#).

- Set up user groups—[Setting Up User Groups, page 4-85](#).
- Set up individual users—[Setting Up Individual Users, page 4-86](#).
- Delete servers, groups, and users—[Deleting Servers, Groups, and Users, page 4-87](#).



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Setting Up Network Access Servers

Click **See detail** to see for which versions this setting is valid.

Procedure

Step 1 Complete the following:

Table 4-20 Local Radius Server - Network Access Server

Field	Description
Current Network Access Servers	Lists the network access servers. To remove a server from the list, select it, then click Delete .
Network Access Server	Enter the IP address of the RADIUS server.
Shared Secret	Enter the shared secret text string used between the access point and the RADIUS server.

Step 2 Click **Save**. The server appears in the Current Network Access Servers list.

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).

- Another template category to configure more options. See [Template Categories, page 4-7](#).

Setting Up User Groups

Procedure

Step 1 Complete the following:

Table 4-21 Local Radius Server - User Groups

Field	Description
Current User Group	Lists the user groups. To remove a group from the list, select it, then click Delete .
Group Name	Enter a name for the a new group.
Session Timeout	Use this setting to specify the maximum number of seconds of service to be provided to the user before the session terminates.
Number of Failed Authentications	Enter the number of times a user assigned to this group can provide an incorrect password; when the user fails this number of authentication attempts, the access point locks out the user. This setting helps prevent or delay password “dictionary” attacks.
Lockout	Select one of the following: <ul style="list-style-type: none"> • Infinite—Use this setting to manually unlock any locked-out users. • Interval—Use this setting to specify the length of time that the access point locks out a user before the user can reattempt authentication.
VLAN ID	Enter the identification number of the VLAN.

Table 4-21 Local Radius Server - User Groups (continued)

Field	Description
SSID	Enter the SSID (any alphanumeric, case-sensitive string, from 1 to 32 characters long), then click Add .
SSID List	Lists all the SSIDs. To delete an SSID from the list, select it, then click Delete .

Step 2 Click **Save**. The Group name is added to the Current User Group List.

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Setting Up Individual Users

Procedure

Step 1 Complete the following:

Table 4-22 Local Radius Server - Individual Users

Field	Description
Current User List	Lists the current usernames. To remove a user from the list, select it, then click Delete .
Username	Enter the username.
Password	Enter the password, then select Text or NT Hash.

Table 4-22 Local Radius Server - Individual Users (continued)

Field	Description
Confirm Password	Reenter the password.
Group Name	From the list, select the group name or None if the user does not belong to any group.

Step 2 Click **Save**. The user name is added to the Current User List.

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Deleting Servers, Groups, and Users

Procedure

Step 1 Complete the following:

Table 4-23 Deleting Servers, Groups, and Users

Field	Description
Server	Enter the server you want to delete, then click Add . The server name is added to the Servers to Delete list.
Servers to Delete	Select the server to delete, then click Delete .
Group	Enter the group you want to delete, then click Add . The group name is added to the Groups to Delete list.
Groups to Delete	Select the group to delete, then click Delete .

Table 4-23 Deleting Servers, Groups, and Users (continued)

Field	Description
User	Enter the user you want to delete, then click Add . The user name is added to the Servers to Delete list.
Users to Delete	Select the user to delete, then click Delete .

Step 2 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Defining Services

Use this option to configure various system features and support services on the device.

Procedure

Step 1 Select **Services**. The menu expands and the Security: Telnet/SSH dialog box displays in the right pane.

Step 2 Select one of the following from the menu:

- Telnet/SSH—See [Configuring Telnet/SSH, page 4-89](#).
- Hot Standby—See [Configuring Hot Standby, page 4-92](#).
- CDP—See [Configuring CDP, page 4-93](#).
- DNS—See [Configuring DNS, page 4-95](#).
- MAC address filters—See [Configuring MAC Address Filters, page 4-97](#).
- IP filters—See [Configuring IP Filters, page 4-100](#).
- Ethertype filters—See [Configuring Ethertype Filters, page 4-105](#).

- HTTP—See [Configuring HTTP](#), page 4-108.
- Proxy Mobile IP—See [Configuring Proxy Mobile IP](#), page 4-109.
- QoS policies—See [Configuring QoS Policies](#), page 4-111.
- QoS radio 802.11x—See [Configuring QoS Radio 802.11b/g](#), page 4-115.
- SNMP—See [Configuring SNMP](#), page 4-119.
- NTP—See [Configuring NTP](#), page 4-122.
- VLAN—See [Configuring VLAN](#), page 4-123.
- ARP Cache—See [Configuring ARP Cache](#), page 4-127.
- STP—See [Configuring STP](#), page 4-128.

Configuring Telnet/SSH

Use this option to configure the access point to work through Telnet or SSH.

Procedure

-
- Step 1** Select **Services > Telnet/SSH**. The Services: Telnet/SSH dialog box appears.

Step 2 Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-24 *Telnet/SSH*

Field	Description
Telnet	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to enable Telnet access to the management system. • Disable—Use this setting to disable Telnet access to the management system.
Terminal Type	Select one of the following: <ul style="list-style-type: none"> • Teletype—Use this setting if your terminal emulator does not support ANSI. • ANSI—Use this setting to offer graphic features such as reverse video buttons and underlined links.
Columns	Enter a number to define the width of the terminal emulator display within the range of 64 characters to 132 characters.
Lines	Enter a number to define the height of the terminal emulator display within the range of 16 characters to 50 characters.

Table 4-24 Telnet/SSH (continued)

Field	Description
Secure Shell Configuration	
Secure Shell	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Enable—Use this setting to enable secure shell. <p>Note You must enter values in the System Name and Domain Name fields to enable SSH. If you do not enter an RSA key size, it will default to 512.</p> <ul style="list-style-type: none"> • Disable—Use this setting to disable secure shell. • Modify—Use this setting to modify secure shell.
System Name	Enter a system name for your access point.
Domain Name	Enter a domain name for your access point.
RSA Key Size	<p>Enter the additional bits used for authentication.</p> <p>Note For SSH, you must enter a key size or it will remain disabled.</p>
Authentication Timeout	Enter the timeout in seconds, not to exceed 120 seconds for the length of time for authentication to take place.
Authentication Retries	Enter the number of authentication retries.

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring Hot Standby

Use this option to configure an access point for hot standby mode. Hot standby mode designates an access point as a backup for another access point.

The standby access point is placed near the access point it monitors, and is configured exactly the same as the monitored access point.

The standby access point associates with the monitored access point as a client and queries the monitored access point regularly through both the Ethernet and the radio ports. If the monitored access point fails to respond, the standby access point comes online and takes the monitored access point's place in the network.

Procedure

Step 1 Select **Services > Hot Standby**. The Services: Hot Standby dialog box appears.

Step 2 Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-25 Hot Standby

Field	Description
Hot Standby Mode	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Enable—Use this setting to enable hot standby mode on the access point. • Disable—Use this setting to disable hot standby mode on the access point. • Modify—Use this setting to modify the hot standby mode. <p>Click See detail to see for which versions this setting is valid.</p>

Table 4-25 Hot Standby (continued)

Field	Description
MAC Address for the Monitored 802.11b/g Radio	Enter the MAC address of the access point to be monitored.
MAC Address for the Monitored 802.11a Radio	
Polling Interval	Enter the number of seconds between queries that the access point sends to the monitored access point's radio and Ethernet ports.
Timeout for Each Polling	Enter the number of seconds the access point waits for a response from the monitored access point before it assumes that the monitored access point has malfunctioned.

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring CDP

Use this option to enable, disable, or adjust the access point's CDP settings.

Procedure

- Step 1** Select **Services > CDP**. The Services: CDP-Cisco Discovery Protocol dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-26 CDP Settings

Field	Description
Cisco Discovery Protocol (CDP)	Select one of the following: <ul style="list-style-type: none"> • Enabled—Use this setting to enable CDP on the access point. • Disabled—Use this setting to disable CDP on the access point.
Packet Hold Time	Enter the number of seconds other CDP-enabled devices should consider the access point's CDP information valid.
Packets Sent Every	Enter the number of seconds between each CDP packet the access point sends. This value should always be less than the packet hold time.
Individual Port Enable	
Ethernet	Select one of the following: <ul style="list-style-type: none"> • Enabled—Use this option to enable CDP on the Ethernet port. • Disabled—Use this option to disable CDP on the Ethernet port.

Table 4-26 CDP Settings (continued)

Field	Description
Radio0-802.11B/G	Select one of the following: <ul style="list-style-type: none"> • Enabled—Use this option to enable CDP on the radio port. • Disabled—Use this option to disable CDP on the radio port.
Radio0-802.11A	Select one of the following: <ul style="list-style-type: none"> • Enabled—Use this option to enable CDP on the radio port. • Disabled—Use this option to disable CDP on the radio port.

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring DNS

Use this option to configure the access point to work with your network's Domain Name System (DNS) server.

Procedure

- Step 1** Select **Services > DNS**. The Services: DNS-Domain Name Service dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-27 DNS Settings

Field	Description
Domain Name System (DNS)	Select one of the following: <ul style="list-style-type: none"> • Enabled—Use this setting if your network uses DNS. • Disabled—Use this setting if you network does not use DNS.
Domain Name (optional)	Enter the domain name.
Name Server IP Addresses	Enter the IP addresses of up to three domain name servers on your network.
Delete Name Servers	
Server	Enter the server you want to delete, then click >>. The server name is added to the Servers to Delete list.
Servers to Delete	Select the server to delete, then click <<.

- Step 3** Select one of the following:
- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).
-

Configuring MAC Address Filters

Use this option to configure MAC address filters.

MAC address filters allow or disallow the forwarding of unicast and multicast packets either sent from or addressed to specific MAC addresses. You can create a filter that passes traffic to all MAC addresses except those you specify, or you can create a filter that blocks traffic to all MAC addresses except those you specify.

Procedure

- Step 1** Select **Services > MAC address filters**. The Services: Filters - MAC Address Filters dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-28 MAC Address Filters

Field	Description
Create and Apply	Select this option to create and apply MAC address filters.
Create Only	Select this option to create MAC address filters, but not apply them.

Table 4-28 MAC Address Filters (continued)

Field	Description
Apply Only	Select this option to apply the MAC address filters.
Filters List	Lists the currently configured filters. To delete a filter from the list, select it, then click Delete Filter .
Filter Index	Enter a number from 700 to 799. The number you assign creates an access control list (ACL) for the filter.
Add MAC Address	Enter the MAC address.
Mask	Enter the subnet mask.
Action	From the list, select one of the following actions: <ul style="list-style-type: none"> • Forward—Use this setting to forward the MAC addresses. • Block—Use this setting to block the MAC addresses.
VLAN ID	Enter the VLAN identification number then click >>. To remove a VLAN ID from the list, select it, then click <<.
Bridge-Group	Enter a valid bridge group number used by the interface for which you want to create or delete filters.
Apply Filter to	
FastEthernet	Select one of the following:
Radio0-802.11B/G	<ul style="list-style-type: none"> • Incoming—Use this option to apply the filter to the incoming packets. • Outgoing—Use this option to apply the filter to the outgoing packets.
Radio0-802.11A	
	Click AddFilter .

Table 4-28 MAC Address Filters (continued)

Field	Description
Default Action	<p>Select one of the following:</p> <ul style="list-style-type: none"> Block All Forward All <p>then click Update.</p> <p>The filter's default action must be the opposite of the action for at least one of the addresses in the filter. For example, if you enter several addresses and you select Block as the action for all of them, you must choose Forward All as the filter's default action.</p>
Filters Classes	<p>Lists MAC addresses.</p> <p>To remove the MAC address from the Filters Classes list, select it, then click Delete.</p>
Delete Filters	
Filters	To delete a filter, select it from the list, then click Delete .
Filter Index	Enter the filter index number.
VLAN ID	<p>Enter the VLAN identification number, then click >> to add it to the list.</p> <p>To delete a VLAN ID from the list, click <<.</p>
Bridge-Group	Enter a valid bridge group number.
Remove Filter from	
FastEthernet	Select one of the following:
Radio0-802.11B/G	<ul style="list-style-type: none"> Incoming—Use this option to remove the filter from the incoming packets.
Radio0-802.11A	<ul style="list-style-type: none"> Outgoing—Use this option to remove the filter from the outgoing packets. <p>Click AddFilter.</p>

- Step 3** Select one of the following:
- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).
-

Configuring IP Filters

Use this option to create IP filters that prevent or allow the use of IP address(es), IP protocols, and TCP/UDP ports through the access point's Ethernet and radio ports.

If you use this template to apply IP filters to access points with version 12.2(8)JA, the configuration commands generated through the template may not display correctly on the access point's UI.

To work around this problem, do the following:

1. Use this template to create the IP filters and select **Create Only**.
2. Click **Preview**.
3. Copy and paste the commands in the Preview window into a custom template (see [Configuring Custom Values, page 4-138](#)).
4. Note the following WLSE-generated commands:

```
permit/deny ip source-ip source-mask dest-ip dest-mask  
permit/deny tcp/udp any any eq port-number
```

5. Change the commands as follows for version 12.2(8)JA in the custom values window:

```
permit/deny tcp/udp any eq port-number any
```

Procedure

Step 1 Select **Services > IP Filters**. The Services: Filters - IP Filters dialog box appears.

Step 2 Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-29 IP Filters

Field	Description
Create and Apply	Select this option to create and apply IP address filters.
Create Only	Select this option to create IP address filters, but not apply them.
Apply Only	Select this option to apply the IP address filters.
Filter Name List	List the currently configured filters. To delete a filter from the list, select it, then click Delete Filter .
Filter Name	Enter a name for the filter.
Default Action	From the list, select one of the following: <ul style="list-style-type: none"> Block All—Use this setting to block all IP addresses. Forward All—Use this setting to forward all IP addresses. then click Update .
IP Address	
Destination Address	Enter the IP address that you want to filter.

Table 4-29 IP Filters (continued)

Field	Description
Mask	<p>Enter the mask for the destination IP address. Enter the mask with periods separating the three groups of four characters (255.255.255.240, for example).</p> <p>If you enter 255.255.255.255 as the mask, the access point accepts any IP address.</p> <p>If you enter 0.0.0.0, the access point looks for an exact match with the IP address you entered.</p> <p>The mask you enter in this field behaves the same way that a mask behaves when you enter it in the CLI.</p>
Source Address	Enter the IP address you want to filter.
Mask	<p>Enter the mask for the source IP address. Enter the mask with periods separating the three groups of four characters (255.255.255.240, for example). The method for entering the mask depends on the release.</p> <p>If you are using version 12.2(8)JA or later entering 255.255.255.255 as the mask causes the access point to accept any IP address.</p> <p>If you enter 0.0.0.0, the access point looks for an exact match with the IP address you entered in the IP Address field.</p>
Action	<p>From the list, select one of the following:</p> <ul style="list-style-type: none"> • Forward —Use this setting to forward the IP address. • Block —Use this setting to block the IP address. <p>Click Add.</p>
IP Protocol	
IP Protocol	<p>Do one of the following:</p> <ul style="list-style-type: none"> • Click the existing protocol list, then select a protocol. • Click Custom, then enter a custom protocol.

Table 4-29 IP Filters (continued)

Field	Description
Action	<p>From the list, select one of the following:</p> <ul style="list-style-type: none"> • Forward —Use this setting to forward the IP protocol. • Block —Use this setting to block the IP protocol. <p>Click Add.</p>
UDP/TCP Port	
TCP Port	<p>Do one of the following:</p> <ul style="list-style-type: none"> • Click the TCP Port list, then select one port from the list. • Click Custom, then enter a custom port.
Action	<p>From the list, select one of the following:</p> <ul style="list-style-type: none"> • Forward —Use this setting to forward the TCP port. • Block —Use this setting to block the IP TCP port. <p>Click Add.</p>
UDP Port	<p>Do one of the following:</p> <ul style="list-style-type: none"> • Click the UDP Port list, then select one port from the list. • Click Custom, then enter a custom port.
Action	<p>From the list, select one of the following:</p> <ul style="list-style-type: none"> • Forward —Use this setting to forward the UDP port. • Block —Use this setting to block the IP UDP port. <p>Click Add.</p>

Table 4-29 IP Filters (continued)

Field	Description
VLAN ID	Enter the VLAN identification number then click >>. To remove a VLAN ID from the list, select it, then click <<.
Apply Filter to	
FastEthernet	Select one of the following:
Radio0-802.11B/G	<ul style="list-style-type: none"> Incoming—Use this option to apply the filter to the incoming packets.
Radio0-802.11A	<ul style="list-style-type: none"> Outgoing—Use this option to apply the filter to the outgoing packets.
Click Apply .	
Filters Classes	Lists the currently configured filters. To delete a filter, select it, then click Delete .
Delete Filters	
Filters	To delete a filter, select it from the list, then click Delete .
Filter Name	Enter the filter name.
VLAN ID	Enter the VLAN identification number, then click >> to add it to the list. To remove a VLAN ID from the list, click <<.
VLAN List	Lists the VLANs.
Remove Filter from	
FastEthernet	Select one of the following:
Radio0-802.11B/G	<ul style="list-style-type: none"> Incoming—Use this option to remove the filter from the incoming packets.
Radio0-802.11A	<ul style="list-style-type: none"> Outgoing—Use this option to remove the filter from the outgoing packets.
Click AddFilter .	

- Step 3** Select one of the following:
- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).
-

Configuring Ethertype Filters

Use this option to configure Ethertype filters to prevent or allow the use of specific L3 protocols through the access point's Ethernet and radio ports.

Procedure

- Step 1** Select **Services > Ethertype Filters**. The Services: Filters - Ethertype Filters dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-30 Ethertype Filters

Field	Description
Create and Apply	Select this option to create and apply Ethertype filters.
Create Only	Select this option to create Ethertype filters, but not apply them.
Apply Only	Select this option to apply the Ethertype filters.
Filters List	Lists the currently configured filters. To remove a filter from the list, select it, then click Delete Filter .

Table 4-30 *Ethertype Filters (continued)*

Field	Description
Filter Index	Enter a number from 200 to 299. The number you assign creates an access control list (ACL) for the filter.
Add EtherType	Enter an Ethertype number.
Mask	Enter the mask for the Ethertype.
Action	From the list, select one of the following: <ul style="list-style-type: none"> • Forward —Use this setting to forward the traffic. • Block —Use this setting to block the traffic.
VLAN ID	Enter the VLAN identification number then click >>. <p>To remove a VLAN ID from the list, select it, then click <<.</p>
Bridge-Group	Enter a valid bridge group number used by the interface for which you want to create or delete filters.
Apply Filter to	
FastEthernet	Select one of the following:
Radio0-802.11B/G	<ul style="list-style-type: none"> • Incoming—Use this option to apply the filter to the incoming packets. • Outgoing—Use this option to apply the filter to the outgoing packets. Click Apply .
Radio0-802.11A	
Default Action	From the list, select one of the following: <ul style="list-style-type: none"> • Block All—Use this setting to block all. • Forward All—Use this setting to forward all. then click Update .
Filters Classes	Lists the currently configured filters. <p>To delete a filter, select it, then click Delete.</p>

Table 4-30 *Ethertype Filters (continued)*

Field	Description
Delete Filters	
Filters	To delete a filter, select it from the list, then click Delete .
Filter Index	Enter the filter index.
VLAN ID	Enter the VLAN identification number, then click >> to add it to the list. To delete a VLAN ID from the list, click <<
Bridge-Group	Enter a valid bridge group number.
Remove Filter from	
FastEthernet	Select one of the following:
Radio0-802.11B/G	<ul style="list-style-type: none"> • Incoming—Use this option to remove the filter from the incoming packets. • Outgoing—Use this option to remove the filter from the outgoing packets.
Radio0-802.11A	
Click AddFilter .	

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring HTTP

Use this option to configure HTTP settings for the access point.

Procedure

Step 1 Select **Services > HTTP**. The Services: HTTP-Web Server dialog box appears.

Step 2 Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-31 HTTP

Field	Description
Allow Web-based Configuration Management	Select one of the following: <ul style="list-style-type: none"> • Enabled—Use this setting to allow web-based browsing to the management system. • Disabled—Use this setting to disallow web-based browsing to the management system.
HTTP Port	Enter the port through which the access point provides web access.
Default Help Root URL	Enter the URL where the device can locate help files.

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring Proxy Mobile IP

Use this option to allow access points to help client devices from other networks remain connected to their home networks. The visiting client devices do not need special software, the access point provides proxy mobile IP services for the client.

Procedure

Step 1 Select **Services > Proxy Mobile IP**. The Services: Proxy Mobile IP dialog box appears.

Step 2 Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-32 Proxy Mobile IP

Field	Description
Proxy Mobile IP	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Enabled—Use this setting to enable the proxy mobile IP feature on the access point. • Disabled—Use this setting to disable the proxy mobile IP features. <p>Click See detail to see for which versions this setting is valid.</p> <p>Select either Radio 802-11b/g or Radio 802.11a</p>
GRE encapsulation in the Registration Request	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Enabled—Use this setting to enable the access point to request the encapsulation type in all mobile node registration requests. • Disabled—Use this setting to disable this feature.

Table 4-32 Proxy Mobile IP (continued)

Field	Description
Reverse Tunnel in the Registration Request	Select one of the following: <ul style="list-style-type: none"> Enabled—Use this setting to enable the access point to request reverse tunnel encapsulation in all mobile mode registration requests. Disabled—Use this setting to disable this feature.
Authoritative Access Points (Hostname or IP Address)	Enter the hostname or IP address of up to three authoritative access points (AAPs) on the wireless network. At least one AAP is required for the proxy mobile IP feature to work.
Current SA Bindings List	Lists the clients that are able to establish contact with a foreign agent in another network segment or network other than the client's home network. To delete an SA binding from the list, select it, then click Delete .
New/Edit SA Binding	
IP Address Range	Enter the range IP addresses within which client devices must reside in order to be valid.
Security Parameter Index	Enter an index for the IP address range. The index is a 32-bit number (8 hexadecimal digits) assigned to the initiator of the security association request by the receiving IPSec endpoint. On receiving a packet, the destination address, protocol, and SPI are used to determine the security association. The security association allows the node to authenticate or decrypt the packet according to the security policy configured for that security association.
Key	<ol style="list-style-type: none"> 1. Enter a key (ASCII or Hexadecimal) used to access a foreign agent. 2. Select ASCII or Hexadecimal to indicate the type of key entered.

- Step 3** Click **Add**. The entry is added to the Current SA Bindings list.
- Step 4** To delete an entry, select it from the Current SA Bindings list, then click **Delete**.
- Step 5** Select one of the following:
- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring QoS Policies

Use this option to configure quality of service policies.

If you know the applications used by wireless client devices, the applications' sensitivity to delay, and the amount of traffic associated with the applications, you can configure QoS to improve performance.

Procedure

- Step 1** Select **Services > QoS Policies**. The Services: QoS Policies dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-33 QoS Policies

Field	Description
Create and Apply	Select this option to create and apply QoS policies.
Create Only	Select this option to create QoS policies., but not apply them.
Apply Only	Select this option to apply the QoS policies.

Table 4-33 QoS Policies (continued)

Field	Description
QoS Element for Wireless Phones	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Enable—Use this setting to specify that wireless phone clients' traffic has a higher priority than the rest of the clients. • Disable—Use this setting to disable this feature. <p>Click See detail to see for which versions this setting is valid.</p>
IGMP Snooping Helper	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Enable—Use this setting to enable Internet Group Membership Protocol (IGMP) snooping. When this feature is enabled, the access point sends a general IGMP query to the network infrastructure on behalf of the client every time the client associates or reassociates to the access point. By doing so, the multicast stream is maintained for the client as it roams. • Disable—Use this setting to disable this feature. <p>Click See detail to see for which versions this setting is valid.</p>
Map Ethernet Packets with CoS 5 to CoS 6 (AVVID Priority Mapping)	<p>Select one of the following:</p> <ul style="list-style-type: none"> • Yes—Use this setting if your network is based on the Cisco AVVID specification. This setting will prioritize voice packets coming with priority 5 (video). • No—Use this setting if your network is not based on the Cisco AVVID specification. <p>Click See detail to see for which versions this setting is valid.</p>
Policy List	<p>Lists the names of the existing policies.</p> <p>To remove a name from the list, select it, then click Delete Policy.</p>

Table 4-33 QoS Policies (continued)

Field	Description
Policy Name	Enter a name for the policy.
Classifications	Lists the classifications assigned to that policy. To delete a classification, select it, then click Delete .
Match Classifications	
Precedence	If the packets that you need to prioritize contain IP precedence information select an IP precedence classification from the list.
Apply Class of Service	From the list, select the class of service that the access point will apply to packets of the type that you selected from the Precedence list, then click Add .
IP DSCP	If the packets that you need to prioritize contain IP DSCP information, select an IP DSCP classification from the list or create a new one.
Apply Class of Service	From the list, select the class of service that the access point will apply to packets of the type that you selected from the IP DSCP list, then click Add .
IP Protocol 119	If you need to prioritize the packets from Spectralink on your wireless LAN, select the class of service the access point will apply to the phone packets, then click Add . Click See detail to see for which versions this setting is valid.
Apply Class of Service	
Filter	If you need to assign a priority to filtered packets, from the list, select the filter to include in the policy or create a new one.
Apply Class of Service	From the list, select the class of service that the access point will apply to packets that match the filter that you selected or entered, then click Add .

Table 4-33 QoS Policies (continued)

Field	Description
Default Classification for Packets on the VLAN	If you want to set a default classification for all packets on a VLAN, select the class of service that the access point will apply to packets on a VLAN, then click Add .
VLAN ID	Enter the VLAN identification number, then click >> to add it to the list.
VLAN ID List	To delete a VLAN ID from the list, click <<.
Apply Policy to	
FastEthernet	Select one of the following:
Radio0-802.11B/G	<ul style="list-style-type: none"> • Incoming—Use this option to apply the filter to the incoming packets. • Outgoing—Use this option to apply the filter to the outgoing packets.
Radio0-802.11A	
Click ApplyPolicy .	
Remove Policy from Interface/VLANs	
Policy List	To delete a policy, select it from the list, then click Delete .
Policy Name	Enter the name of the policy.
VLAN ID	Enter the VLAN identification number, then click >> to add it to the list.
VLAN ID List	To delete a VLAN ID from the list, click <<.
Remove Policy from	
FastEthernet	Select one of the following:
Radio0-802.11B/G	<ul style="list-style-type: none"> • Incoming—Use this option to remove the filter from the incoming packets. • Outgoing—Use this option to remove the filter from the outgoing packets.
Radio0-802.11A	
Click AddPolicy .	

Table 4-33 QoS Policies (continued)

Field	Description
Remove Policy Map and Class Map	
Policy List	Lists the policies. Select the policy to remove, then click Delete .
Policy Name	Enter the policy name, then click Add Policy . The name appears in the Policy List.
Class Name	Enter the class name. Click >> to add it to the Class Name List
Class Name List	Click << to remove the class name from the list.

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring QoS Radio 802.11b/g

Use this option to define traffic class QoS policies. The access point uses the radio traffic class definitions to calculate backoff times for each packet.

Procedure

- Step 1** Select **Services > QoS Radio 802.11b/g**. The Services: QoS Policies - Traffic Class Definition dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-34 QoS Radio 802.11b/g Traffic Class Definition

Field	Description
802.11e 4 Level QoS	Select for version 12.2(13)JA and above.
802.1D 8 Level QoS	Select for versions below 12.2(13)JA.
Background	<ul style="list-style-type: none"> • Min Contention Window—Enter the minimum contention window value. The access point computes Contention Window values. • Max Contention Window—Enter the maximum contention window value. The access point computes Contention Window values. • Fixed Slot Time—Enter a value for a fixed slot time.
Best Effort	
Video	
Voice	
802.1D 8 Level QoS	Select if you are setting 8 QoS levels.
Best Effort	<ul style="list-style-type: none"> • Min Contention Window—Enter the minimum contention window value. The value listed is to the power of 2. The access point computes Contention Window values.
Background	
Spare	<ul style="list-style-type: none"> • Max Contention Window—Enter the maximum contention window value. The value listed is to the power of 2. The access point computes Contention Window values. • Fixed Slot Time—Enter a value for a fixed slot time.
Excellent Effort	
Controlled Load	
Video <100ms Latency	
Voice <100ms Latency	
Network Control	

- Step 3** Select one of the following:
- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).
-

Configuring QoS Radio 802.11a

Use this option to define traffic class QoS policies. The access point uses the radio traffic class definitions to calculate backoff times for each packet.

Procedure

- Step 1** Select **Services > QoS Radio 802.11a**. The Services: QoS Policies - Traffic Class Definition dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-35 QoS Radio 802.11a Traffic Class Definition

Field	Description
802.11e 4 Level Qos	Select for version 12.2(13)JA and later.
802.1D 8 Level Qos	Select for versions earlier than 12.2(13)JA.

Table 4-35 QoS Radio 802.11a Traffic Class Definition (continued)

Field	Description
Background	<ul style="list-style-type: none"> Min Contention Window—Enter the minimum contention window value. The access point computes Contention Window values. Max Contention Window—Enter the maximum contention window value. The access point computes Contention Window values. Fixed Slot Time—Enter a value for a fixed slot time.
Best Effort	
Video	
Voice	
802.1D 8 Level QoS	Select if you are setting 8 QoS levels.
Best Effort	<ul style="list-style-type: none"> Min Contention Window—Enter the minimum contention window value. The value listed is to the power of 2. The access point computes Contention Window values.
Background	
Spare	<ul style="list-style-type: none"> Max Contention Window—Enter the maximum contention window value. The value listed is to the power of 2. The access point computes Contention Window values. Fixed Slot Time—Enter a value for a fixed slot time.
Excellent Effort	
Controlled Load	
Video <100ms Latency	
Voice <100ms Latency	<ul style="list-style-type: none"> Fixed Slot Time—Enter a value for a fixed slot time.
Network Control	

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring SNMP

Use this option to configure settings for notifications to be sent to an SNMP server.

Procedure

Step 1 Select **Services > SNMP**. The Services: SNMP- Simple Network Management Protocol dialog box appears.

Step 2 Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-36 *SNMP*

Field	Description
Simple Network Management Protocol (SNMP)	Select one of the following: <ul style="list-style-type: none"> • Enabled—Use this setting to allow event notifications to be sent to an SNMP server. • Disabled—Use this setting to disallow event notifications to be sent to an SNMP server.
System Name	Enter the name of the access point. The name in this field is reported to your SNMP's management station as the name of the device when you use SNMP to communicate with the access point.
System Location	Enter a description of the access point's physical location, such as the building or room in which it is installed.
System Contact	Enter the name the system administrator responsible for the access point.

Table 4-36 *SNMP (continued)*

Field	Description
SNMP Request Communities	
Current Community Strings	<p>Lists the current community strings.</p> <p>To delete an entry, select it, then click Delete.</p> <p>To edit an entry, select it.</p>
Edit Community Strings	<ul style="list-style-type: none"> • SNMP Community—The SNMP Community value for the selected community string displays. SNMP community strings authenticate access to MIB objects and function as embedded passwords. • Object Identifier —The Object Identifier value for the selected community string displays. Enter a new object identifier for the community string. The object identifier limits the scope of the SNMP MIB object that the user can access through the community string. For for example, if you enter iso as the Object Identifier value for the public string, then only users using the public string can access the OID that is represented by the SNMP variable name iso, including all the variables that come under this variable starting at this point. (This is the MIB family view to which the community has access.) • Select one of the following one of the following: Read-Only or Read-Write.

Table 4-36 SNMP (continued)

Field	Description
SNMP Trap Destination	<ol style="list-style-type: none"> Enter the IP address or the host name of the server running the SNMP Management software. Select one of the following: <ul style="list-style-type: none"> Enable All Trap Notifications—Use this setting to enable all traps. Enable Specific Traps—Use this setting to select one or more of the following trap types: <ul style="list-style-type: none"> 802.11 Event Traps QoS Change Trap Syslog Trap Encryption Key Trap Standby Switchover Trap <p>Click See detail to see for which versions this setting is valid.</p> Rogue AP Trap <p>Click See detail to see for which versions this setting is valid.</p> Click Save.
Delete Communities and SNMP Trap Destinations	
Community	Enter the community to delete, then click >>.
Communities to Delete	Lists the communities to be deleted. To delete a community, select it, then click <<.
SNMP Trap	Enter the IP address or the host name of the server to delete.
Communities	Enter the community associated with the SNMP trap, then click >>.
Destinations to Delete	Lists the SNMP trap destinations to be deleted. To delete a destination, select it, then click <<.

- Step 3** Select one of the following:
- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).
-

Configuring NTP

This option allows you to configure the date and time on using NTP (Network Time Protocol) servers.

Procedure

Step 1 Select **Services > NTP**. The Services: NTP - Network Time Protocol dialog box appears.

Step 2 Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-37 NTP

Field	Description
NTP Server	
Network Time Protocol (NTP)	Select one of the following: <ul style="list-style-type: none"> • Enabled—Use this setting to use of NTP. • Disabled—Use this setting to disallow the use NTP.
Time Server IP Address	Enter the server's IP address.

Table 4-37 NTP (continued)

Field	Description
Time Settings	
GMT Offset	From the list, select one of the options.
Use Daylight Savings Time	Select one of the following: <ul style="list-style-type: none"> • Yes—Use this setting to use daylight savings time. • No—Use this setting if you are not going to use daylight savings time.
Manually Set Date	Use this setting to manually set the date.
Manually Set Time	Use this setting to manually set the time.

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring VLAN

Using this option, you can configure VLANs on the access point.

Procedure

Step 1 Select **Services > VLAN**. The Services: VLAN dialog box appears.

Step 2 Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-38 VLAN

Field	Description
Global VLAN Properties	
Set Native VLAN	From the list, select a VLAN for the default.
Assigned VLANs	
Current VLAN List	Lists the current VLANs. To delete a VLAN from the list, select it, then click Delete .
Create VLAN	
VLAN ID	Enter a VLAN ID.

Table 4-38 VLAN (continued)

Field	Description
Bridge-Group	<p>Enter the bridge group number.</p> <ul style="list-style-type: none"> If the VLAN ID you entered is less than 255, and you do not enter a value in this field, then the same number for the bridge group is automatically assigned. If the VLAN ID you entered is 255 or greater you will need to know what bridge group numbers are unused on the access point and enter one of them. <p>When a VLAN is created directly on the access point, the access point dynamically assigns a bridge group to the VLAN. So, if you create a VLAN ID of 123, then the bridge group is 123.</p> <p>If the VLAN is larger than 255, the access point starts at 255 and decrements the count until it gets to an unused bridge group number. So, if you create a VLAN ID of 500, the access point assigns a bridge group of 255 if that number is unused. If it is used, it will then try 254, and so on until it finds an unused number for the bridge group.</p>
Enable Public Secure Packet Forwarding	<p>Select to enable public secure packet forwarding (PSPF).</p> <p>With PSPF enabled, client devices cannot communicate with other client devices on the wireless network. This feature is useful for public wireless networks like those installed in airports or on college campuses.</p> <p>Click See detail to see for which versions this setting is valid.</p>
Radio0-802.11B/G	Select the appropriate radio.
Radio0-802.11A	For Radio0-802.11A click See detail to see for which versions this setting is valid.
SSID	Enter an SSID, then click Add .

Table 4-38 VLAN (continued)

Field	Description
STP	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to enable Spanning Tree Protocol (bridges only). • Disable—Use this setting to disable the feature. then click Add .
Delete VLANs	
VLANs to Delete	Lists the VLANs to delete. To delete VLAN from the list, select it, then click Delete .
VLAN ID	Enter the identification number of the VLAN you want to add to the VLANs to Delete list.
Radio0-802.11B/G Radio1-802.11A	Select the appropriate radio.
SSID	Enter the SSID, then click Add . The VLAN appears in the VLANs to Delete list.

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring ARP Cache

Address resolution protocol (ARP) is used to find the MAC address that corresponds to a particular IP address. Using this option, the access point remembers the IP addresses of its clients and will not send ARP requests to them.

This feature helps improve performance because it reduces traffic load over the wireless link. If all client IP address are not known, the access point drops the ARP request, and caching is prevented.

Procedure

Step 1 Select **Services > ARP Cache**. The Services: ARP Caching dialog box appears.

Step 2 Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-39 ARP Cache

Field	Description
Client ARP Caching	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to allow ARP caching. • Disable—Use this setting to disable the feature. Click See detail to see for which versions this setting is valid.
Forward ARP Requests To Radio Interfaces When Not All Client IP Addresses Are Known	Select when all client IP address are not known, so that the access point forwards the ARP request to all its clients, and caching is prevented

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).

- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring STP

This option enables to you to TBD.

Procedure

Step 1 Select **Services > STP**. The Spanning Tree Protocol dialog box appears.

Step 2 Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-40 STP

Field	Description
STP Properties	
Click See detail to see for which versions this setting is valid.	
Per VLAN Spanning Tree List	Lists the current STPs. To remove an STP from the list, select it, then click Delete .
VLAN ID	Enter the VLAN identification number.
Bridge Group	Enter the name of the bridge group.
Root Configuration	
Priority	Enter the spanning tree priority (STP) for the bridge. STP uses the bridge priority to select the spanning tree root. The lower the priority, the more likely it is that the bridge will become the spanning tree root.

Table 4-40 STP (continued)

Field	Description
Max Age	Enter the interval that the bridge waits to hear BPDUs from the spanning tree root. If the bridge does not hear bridge protocol data units (BPDUs) from the spanning tree root within this specified interval, it assumes that the network has changed and recomputes the spanning-tree topology.
Hello Time	Enter the interval between hello bridge protocol data units (BPDUs).
Forward Delay	Enter the forward delay interval on the bridge.
Port Configuration	These settings apply to individual ports on the bridge. Use these settings to adjust the status of individual ports i.e. Ethernet or Radio port on the bridge.
Ethernet	Complete the following:
Root Radio for Br1310	<ul style="list-style-type: none"> • Path Cost—Use this setting to specify the relative efficiency of the port's network link. A port with a high path cost is less likely to become a bridge's root port. • Priority—Use this setting to influence whether STP designates a port as a bridge's root port. A port with a low priority setting is more likely to become a bridge's root port.
Root Radio for Br1410	
Spanning Tree without VLAN	
Enable STP for	Select one of the following: <ul style="list-style-type: none"> • Bridge 1410 • Bridge 1310
Disable STP for	Select one of the following: <ul style="list-style-type: none"> • Bridge 1410 • Bridge 1310

- Step 3** Select one of the following:
- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).
-

Configuring the Event Log

This option enables to you to customize the display of access point events.

Procedure

-
- Step 1** Select **Event Log**. The menu expands and the Event Log: Configuration Options dialog box displays in the right pane.
- Step 2** Select one of the following from the menu:
- Configuration Options—See [Setting Configuration Options, page 4-131](#).
 - Notification Options—See [Setting Notification Options, page 4-132](#).
-

Setting Configuration Options

Procedure

- Step 1** Select **Event Log > Configuration Options**. The Event Log: Configuration Options dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-41 Configuration Options

Field	Description
Disposition of Events (by Severity Level)	
Emergency	Check one or more of the following for each of the events: <ul style="list-style-type: none"> • Display on Event Log • Notify via SNMP/Syslog Trap • Record for SNMP/Syslog History Table • Display on Telnet/SSH Monitor
Alert	
Critical	
Error	
Warning	
Notification	
Information	
Debugging	
Time Stamp Format for Future Events	Select one of the following: <ul style="list-style-type: none"> • System Uptime—Use this setting to use the system uptime in the timestamp. • Global Standard Time—Use this setting to use the global standard time in the timestamp. • Local Time—Use this setting to use the local time in the timestamp.
Event Log Size	Enter the maximum size of the event log.

Table 4-41 Configuration Options (continued)

Field	Description
History Table Size	Enter the maximum number of messages in the history table.

- Step 3** Select one of the following:
- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).

Setting Notification Options

Procedure

- Step 1** Select **Event Log > Notification Options**. The Event Log: Notification Options dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-42 Notification Options

Field	Description
Events Generate Syslog Messages	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to allow events to generate syslog messages. • Disable—Use this setting to disable the feature.

Table 4-42 Notification Options (continued)

Field	Description
Syslog Server Hostname or IP Address	Enter the hostname or IP address of the syslog server.
Syslog Facility	From the list, select the syslog facility.
Delete Syslog Server	
Server Hostname or IP Address to remove	Enter the Syslog server hostname or IP address to be deleted.

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring Wireless Services

This option provides context control to the nodes by maintaining a cache of all client contexts within a given subnet.

Procedure

Step 1 Select **Wireless Services**. The menu expands and the Wireless Services: AP dialog box displays in the right pane.

Step 2 Select one of the following from the menu:

- AP Configuration—See [Configuring the AP, page 4-134](#).
- WDS—See [Configuring WDS, page 4-135](#).

Configuring the AP

Use this option to configure the access point to interact with wireless services. Click **See detail** to see for which versions this setting is valid.

Procedure

- Step 1** Select **Wireless Services > AP Configuration**. The Wireless Services: AP dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-43 AP Configuration

Field	Description
Participate in SWAN Infrastructure	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting indicate that the access point is participating in the Cisco Structured Wireless Aware Network (SWAN). • Disable—Use this setting to indicate that the access point is not participating in SWAN. Click See detail to see for which versions this setting is valid.
WDS Discovery	Select one of the following: <ul style="list-style-type: none"> • Auto Discovery—Use this setting to search for any WDS access point. • Specified Discovery—Use this setting to search for a particular WDS access point, then enter the IP address for that access point.
Username	Enter a username.
Password	Enter a password.

Table 4-43 AP Configuration (continued)

Field	Description
Confirm Password	Reenter the password.
L3 Mobility Service via IP/GRE Tunnel	Select one of the following; <ul style="list-style-type: none">• Enable—Use this setting to enable the feature.• Disable—Use this setting to disable the feature. Click See detail to see for which versions this setting is valid.

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring WDS

Use this option to configure wireless domain services and to set its priority.

Procedure

- Step 1** Select **Wireless Services > WDS**. The Wireless Services: WDS - Wireless Domain Services - Settings dialog box appears.
- Step 2** Complete the following:



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.

Table 4-44 WDS Settings

Field	Description
Global Properties	
Click See detail to see for which versions this setting is valid.	
Use this AP as Wireless Domain Services	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to enable the access point to provide Wireless Domain Services. • Disable—Use this setting to disable the access point to provide Wireless Domain Services. • Modify—Use this setting to modify the Wireless Domain Services on the access point.
Wireless Domain Services Priority	Enter a number between 1 and 255 to indicate the priority. The priority is structured so that a WDS will not replace an active WDS with the same priority value, even it has a higher node ID.
WNM IP Address	Enter the access point's IP address.
Use Local MAC List for Client Authentication	Select one of the following: <ul style="list-style-type: none"> • Enable—Use this setting to use the local MAC address list for authentication. • Disable—Use this setting to disable the local MAC address list for authentication.

Table 4-44 WDS Settings (continued)

Field	Description
Server Groups	
Server Group List	Lists the configured servers. To delete a server, select it, then click Delete .
Server Group Name	Enter the name of the server group then complete the following: <ul style="list-style-type: none"> • Priority—Enter the server IP address or hostname. • Auth Port—Enter the authentication port. • Acct Port—Enter the accounting port. or <ul style="list-style-type: none"> • Select a name from the list.
Use Group for	Select one of the following: <ul style="list-style-type: none"> • Infrastructure Authentication—Use this setting to initiate infrastructure authentication by sending a path initialization request message to its WDS, which acts as the IN authenticator. • Client Authentication—Use this setting to provide client authentication services, then under Authentication Settings, select one of the types of client authentication.
SSID	Enter the SSID or leave blank to apply to all SSIDs, then click >> to add to the SSID List. The click Save .
SSID List	Lists the current SSIDs. To remove and SSID from the list, select it, then click <<.
Delete Server Group	
Server Group Name	Enter the server group to delete.

Table 4-44 WDS Settings (continued)

Field	Description
Server Group List to Delete	Lists the server groups to delete. To remove a group from the list, select it, then click <<.
Use Group For	Select one of the following: <ul style="list-style-type: none"> • Infrastructure Authentication—Use this setting to initiate infrastructure authentication by sending a path initialization request message to its WDS, which acts as the IN authenticator. • Client Authentication—Use this setting to provide client authentication services. Select the type of client authentication. Then, click >> to add to the Server Group List to Delete.

Step 3 Click **Save**. The server is added to the Authentication Server List.

Step 4 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
- **Save** to save the template. See [Saving the Template, page 4-140](#).
- Another template category to configure more options. See [Template Categories, page 4-7](#).

Configuring Custom Values

This option enables to you to enter custom values that might not be available in the Template Menu. It also allows you to quickly enter a value, if you know the exact value you want to change, instead of going through the menu.



Note This option should be used only by advanced users.

Templates with custom values are not validated.

Procedure

Step 1 Select **Configure > Templates > Custom Values**. The Custom IOS Values dialog box appears.



Note Clicking **Clear** removes all the current entries in the window and any entries you have made in other Template windows up until that point.



Note If the custom value you enter is the same as an existing one in the Template Menu, the custom value will override the value in the menu.

Step 2 Enter the IOS commands.

Step 3 Select one of the following:

- **Preview** to see your changes before you apply them. See [Previewing the Template, page 4-140](#).
 - **Save** to save the template. See [Saving the Template, page 4-140](#).
 - Another template category to configure more options. See [Template Categories, page 4-7](#).
-

Previewing the Template

Procedure

- Step 1** Click **Preview**. A Command Preview window displays the configuration choices you have made to the template.
- Step 2** Click **Save**. See [Saving the Template, page 4-140](#).
-

Saving the Template

When you save a template, the WLSE first validates the template and displays the valid Device Type, Interface, and the corresponding Device Version(s) for that template.

An access point with an 802.11g radio, supports different commands from a similar access point with an 802.11b radio. The same is true for a 1310 wireless bridge in bridge mode versus a 1310 wireless bridge in access point mode or in a workgroup bridge mode.

If the Interface column displays 802.11g, it means that the template is applicable to an access point with an 802.11g radio. If the Interface column does not display an 802.11g radio, the template is applicable to a an access point with an 802.11b radio.

Similarly, if the Device Type column displays BR1310, it means that the configuration template is applicable to a 1310 wireless bridge which is in bridge mode. If the Device Type column displays an AP1310, it means the template is applicable to a 1310 wireless bridge in access point mode.

Procedure

- Step 1** Click **Save** in the left pane to complete creating a template. The Save dialog box appears in the right pane.
- Step 2** Click **Save** to create the template.

Step 3 Do one of the following:

- Click **Yes** if you want to save the template then schedule a configuration job. The window refreshes to the Job Creation window and a job is automatically created for you using the template name and a random number. See [Selecting Devices, page 6-17](#).
 - Click **No** if you want to save the template only.
 - Click **Cancel** to cancel the operation and then display the previous screen.
-

