

Intersight نم هترادو لقتسم مداخ نيوكت

تايوتحمل

[قمدقمل](#)

[قيساسأل تابلطتمل](#)

[تابلطتمل](#)

[قمدختسمل تانوكمل](#)

[قيساسأ تامولعم](#)

[عارجال](#)

قمدقمل

مداخ هرشنو هؤاشن او UCS مداخ فيرعت فلمب ةبلاطملا ةيفيك دننتسملا اذه حضوي لقتسم.

قيساسأل تابلطتمل

تابلطتمل

قمدختسمل تانوكمل

M5 و M6 و M7 تائفال نم ةلقتسملا مداوخلل عارجال اذهب مايقلال نكمي.

ةصاخ ةيلمعم ةئيب في ةدوجوملا ةزهجال نم دننتسملا اذه في ةدراول تامولعمل عاشن امت تناك اذ. (يضارتفا) حوسمم نيوكتب دننتسملا اذه في قمدختسمل ةزهجال عيمج تادب رمايال لمتمحمل ريثاتلل كمهف نم دكأتف، ليغشتلا ديقتك تبش.

قيساسأ تامولعم

M5 و M6 و M7 تائفال نم ةلقتسملا مداوخلل عارجال اذهب مايقلال نكمي.

عارجال

هب ةبلاطملا نكمي يذلا زاهجال ةصاخلا Cisco IMC بيولا ةحفص ىل لقتنا.

Server Properties

Product Name: UCS C220 M6S
Serial Number: WZP24430N7K
PID: UCSC-C220-M6S
UUID: 3ADAE7CA-DEBC-4118-80E9-F5FCA72545E2
BIOS Version: C220M6.4.2.2d.0.0610220138
Description:
Asset Tag:

Cisco Integrated Management Controller (Cisco IMC) Information

Hostname: C220-WZP24430N7K
IP Address: 10.31.123.34
MAC Address: BC:4A:56:59:3D:FC
Firmware Version: 4.2(2a)
Current Time (UTC): Mon Oct 31 23:36:48 2022
Local Time: Mon Oct 31 23:36:48 2022 UTC +0000 (Local)
Timezone: UTC [Select Timezone](#)

Chassis Status

Power State: ● On
Post Completion Status: ● Not-Completed
Overall Server Status: ✘ Severe Fault
Temperature: ✔ Good
Overall DIMM Status: ✔ Good
Power Supplies: ✔ Good
Fans: ✔ Good
Locator LED: ● Off
Overall Storage Status: ✘ Severe Fault

Server Utilization

Overall Utilization (%): N/A
CPU Utilization (%): N/A
Memory Utilization (%): N/A
IO Utilization (%): N/A

مداخل عقوم

زاهجلا لصوم > Admin ىللى لقتنا ،كلذ دعب

Cisco Integrated Management Controller

Admin / Device Connector

Chassis

Compute

Networking

Storage

Admin

- User Management
- Networking
- Communication Services
- Security Management
- Event Management
- Firmware Management
- Utilities
- Device Connector**

The Device Connector is an embedded management controller that enables the capabilities of Cisco Intersight, a cloud-based management platform. For detailed information about configuring the device connector, please visit [Help Center](#).

Device Connector

Not Claimed

The connection to the Cisco Intersight Portal is successful, but device is still not claimed. To claim the device open Cisco Intersight, create a new account and follow the guidance or go to the Targets page and click Claim a New Device for existing account.

1.0.11-2316

زاهج لاصوم

Intersight زاهج و Intersight ةباحس لى لمدخال لوصو ةيناكم! نم ققحت

تاداهش ل ريدم و لىكول نيوك لىدعتب مق ، تادادعال تحت

Admin / Device Connector

Refresh | Host Power | Launch vKVM | Ping | CIMC Reboot | Locator LED

The Device Connector is an embedded management controller that enables the capabilities of Cisco Intersight, a cloud-based management platform. For detailed information about configuring the device connector, please visit [Help Center](#).

Device Connector

ACCESS MODE: ALLOW CONTROL

Not Claimed

The connection to the Cisco Intersight Portal is successful, but device is still not claimed. To claim the device open Cisco Intersight, create a new account and follow the guidance or go to the Targets page and click Claim a New Device for existing account.

1.0.11-2316

Device ID: WZP24430N7K

Claim Code: 169464073EA4

Settings

- General
- DNS Configuration
- NTP Configuration
- Proxy Configuration**
- Certificate Manager
- Connection

Configure proxy settings

Enable Proxy

Proxy Hostname/IP *
proxy.esl.cisco.com

Authentication

ليكول نيوكت

خسنا ،كلذب مايقلل .زاهجلاب ةبالاطملا كنكمي ، Cisco Intersight ةباوب لاصتالا حاجن درجمب .كب صاخلا Intersight باسح لىل لوخدلا ليحستب مق مثةبالاطملا زمر زاهجلا فرعم نم لك .


Device ID
WZP24430N7K
Claim Code
E87C363F30E0

Not Claimed


The connection to the Cisco Intersight Portal is successful, but device is still not claimed. To claim the device open Cisco Intersight, create a new account and follow the guidance or go to the Targets page and click [Open Intersight](#).

ةبالاطملا زمر زاهجلا فرعم

Admin > Target. لىل لقتنا ، Intersight ةباوب يف

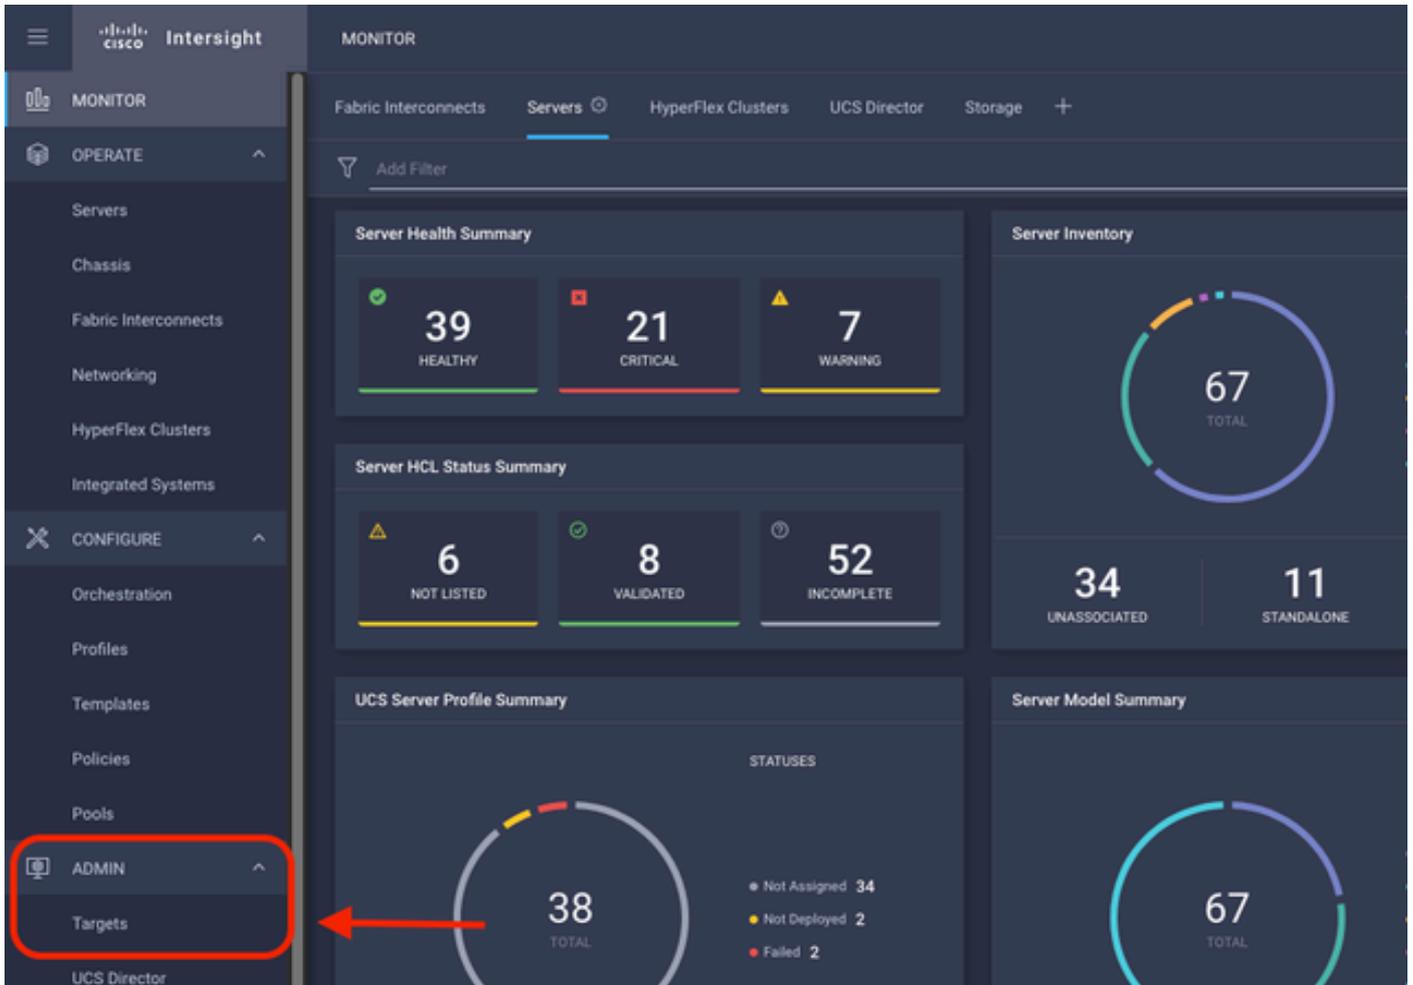


ديج فدهب ةبل لاطملا قوف رقنا.

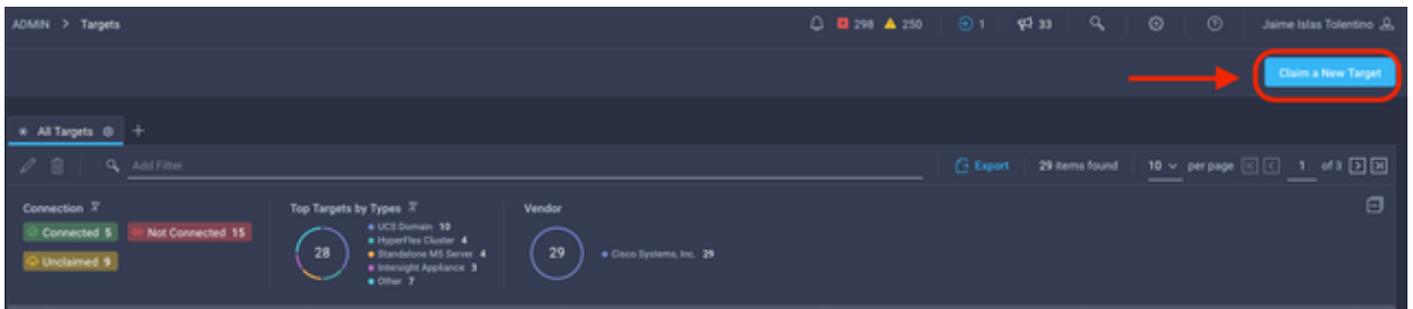

ديج فدهب ةبل لاطملا

ءب قوف رقناو (لق تسم) Cisco UCS مءاخ دءء، ءاب/بءاسء ءءء

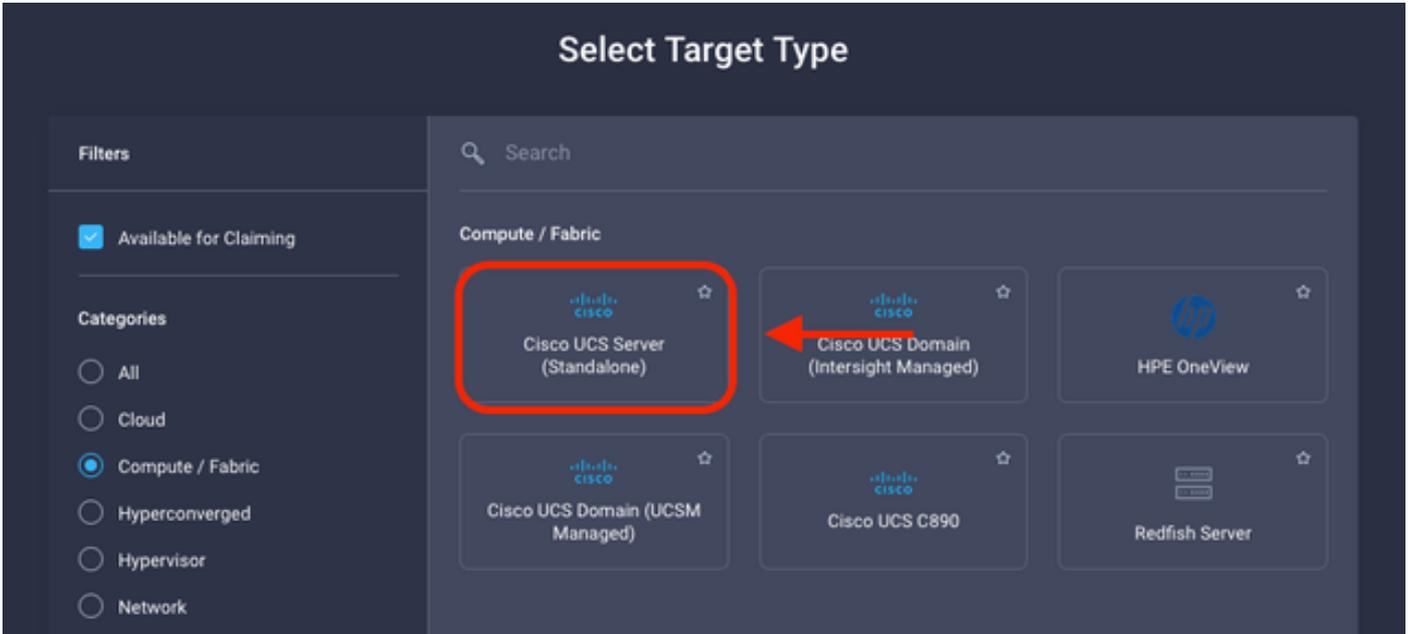


مداخ Cisco UCS

ةبلاطملا زمروراهجالا فرعم نم لك قصلب مق ،ماع ةحفص يف

اذه .اهيلا زاهجالا ةفاضلا ديرت يتلا تاسسؤملا ديدحت كنكمي ،دراوملا ةومجم ديدحتب تمق اذا
ايمازلل سيل


لكل = دراوملا ةومجم ،يضارتفالكش

ةبلاطم قوف رقنا

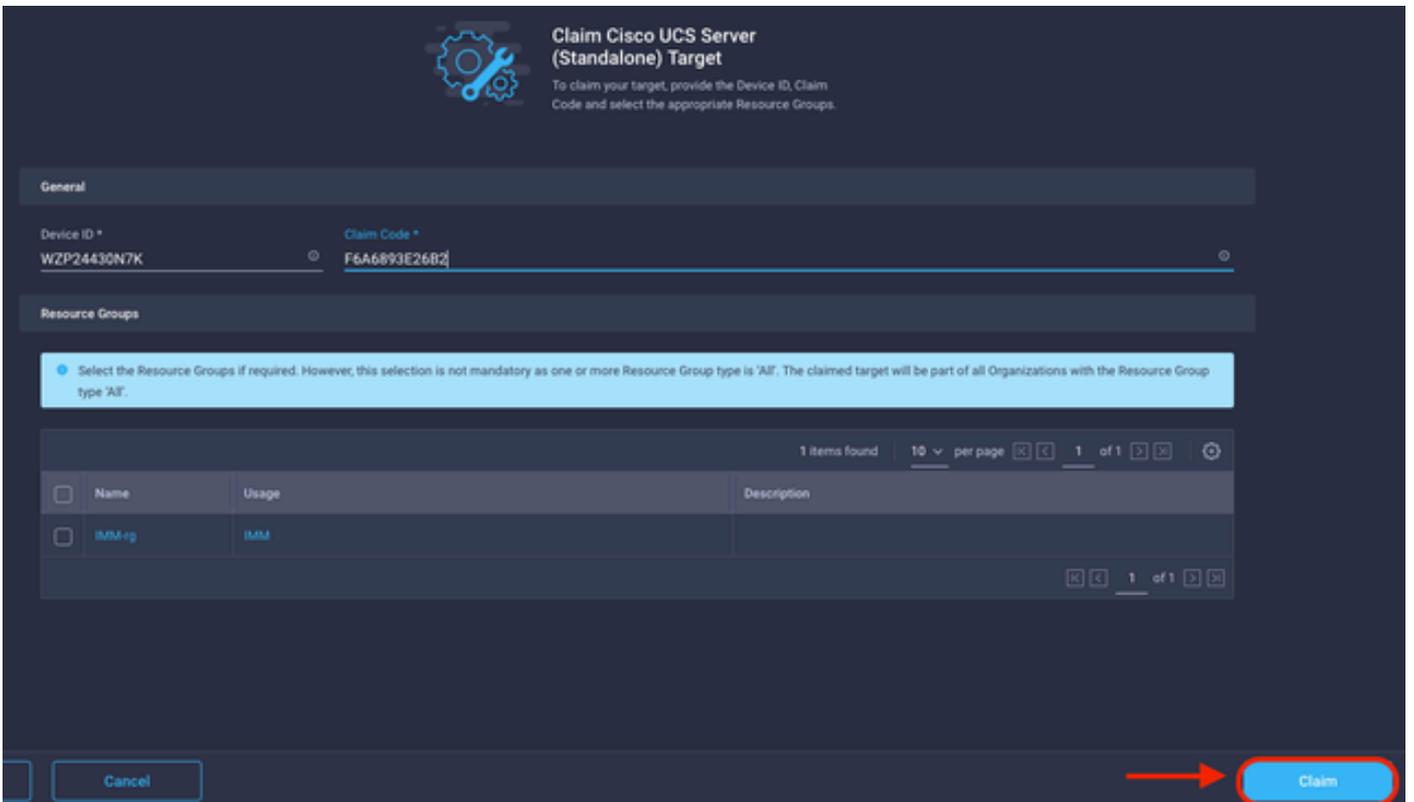

ةماع ةحفص

فاده أال تحت زاهجلا ةيؤر كنكمي ،تحن اذا

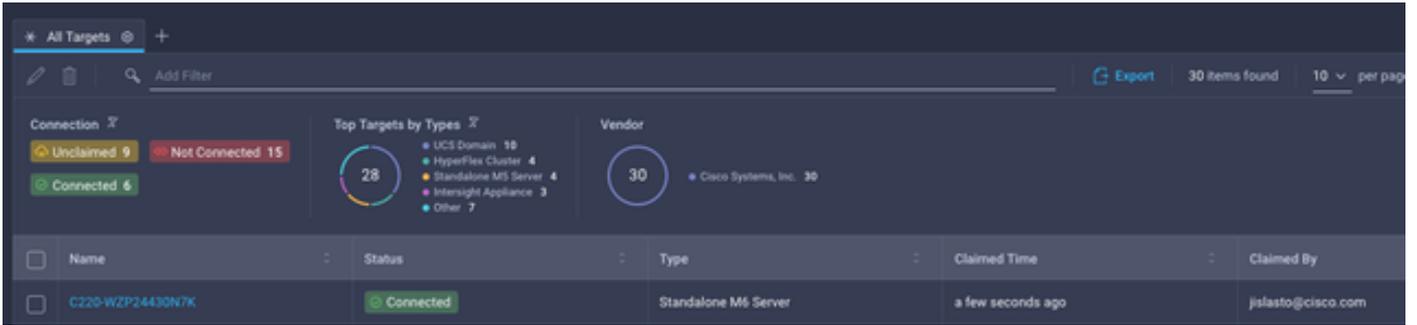


The screenshot shows the 'All Targets' page in Intersight. It includes a search bar, an 'Export' button, and a table of targets. The table has columns for Name, Status, Type, Claimed Time, and Claimed By. One target is listed: C220-WZP24430N7K, which is 'Connected' and is a 'Standalone M6 Server'.

Name	Status	Type	Claimed Time	Claimed By
C220-WZP24430N7K	Connected	Standalone M6 Server	a few seconds ago	jislasto@cisco.com

فاده أال ةفاك


مداخ فيرعت فلم ءاشن كنكمي ، Intersight لىل احيحص لكشب مداخ ل ةفاضل مت نأ دعب نأل UCS.

UCS. مداخ تافيصوت م ت تافيصوت > نيوكت لىل عرقنا

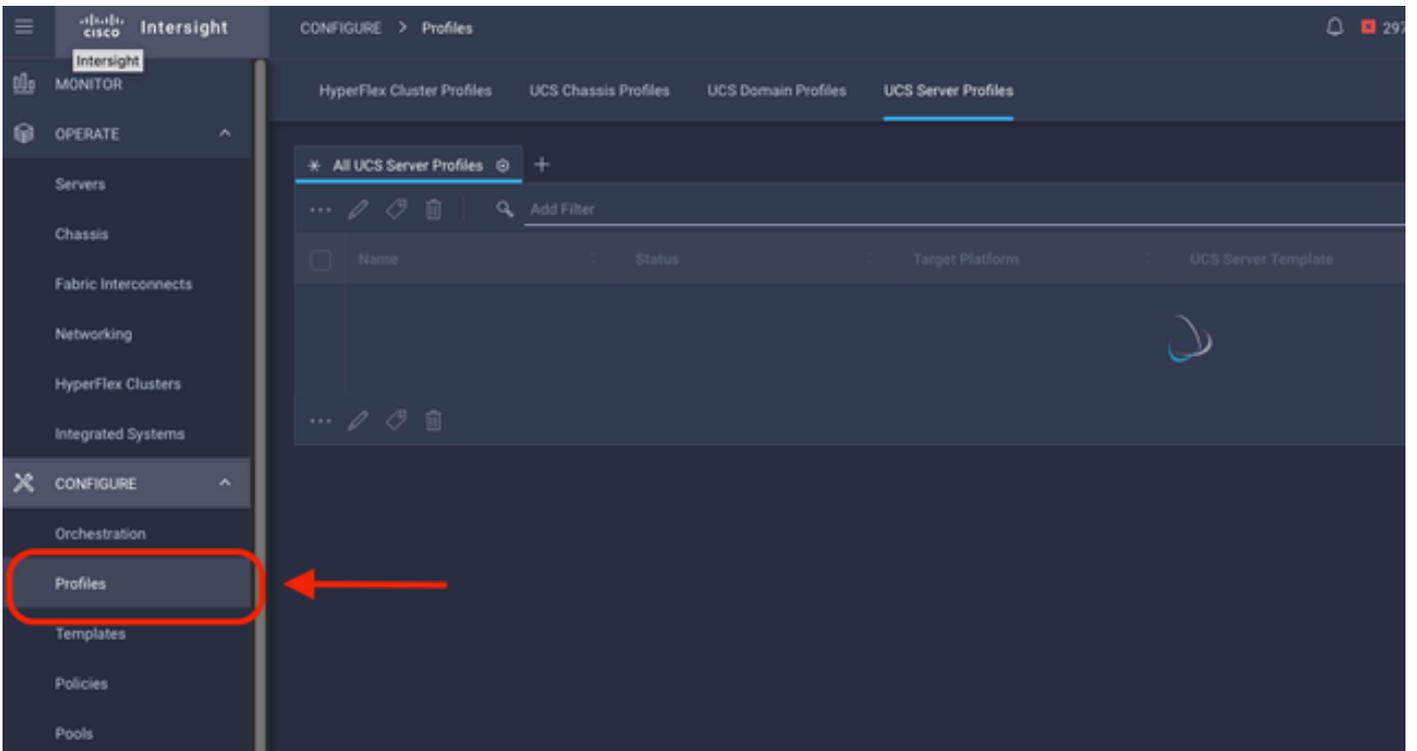

مداخ فيرعت تافللم UCS

UCS. مداخ فيرعت فلم ءاشن لىل عرقنا

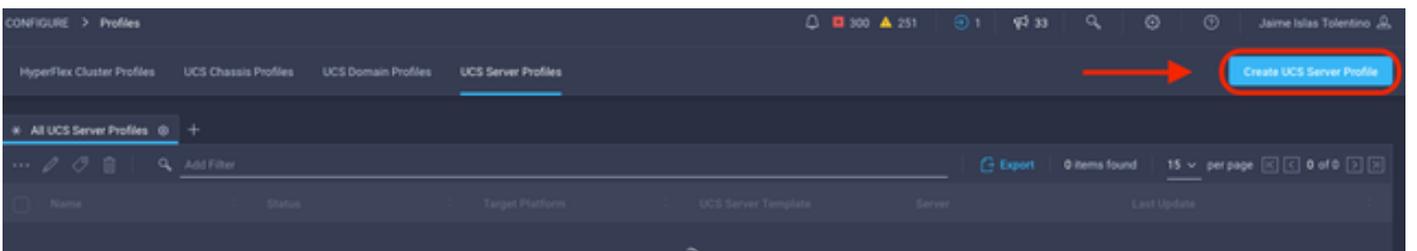

مداخ فيرعت فلم ءاشن لىل عرقنا UCS

Step 2 Server Assignment
Choose to assign a server now, from a resource pool, or later.

Assign Now | Assign Server from a Resource Pool | Assign Later

Click the appropriate button to assign a server now, from a resource pool, or later. If you choose to assign a server now, select the server, click Next, and select and attach policies to the server profile.

Name	User Label	Health	Model	UCS Domain	Serial Number
<input checked="" type="radio"/> C220-WZP24430N7K		Critical	UCSC-C220-M6S		WZP24430N7K
<input type="radio"/> C220-WZP24430N7K		Critical	UCSC-C220-M6S		WZP24430N7K
<input type="radio"/> C240-FCH2303V0B3	description	Healthy	UCSC-C240-M4S2		FCH2303V0B3
<input type="radio"/> C240-WZP23510VY7	Lab-Test-SV-1	Healthy	UCSC-C240-M5SD		WZP23510VY7

Selected 1 of 4 | Show Selected | Unselect All

Next >

مداخل نييعة ةشاش

قوف رقنا .كتابلطتم يلع ءانب مداخل جهن نييعة تب مق ،ةيلاتال سمخال تاوطخال ي ءاهت نالل رشنل او صخلمل

Step 7 Summary
Verify details of the profile and the policies, resolve errors and deploy.

General

Organization	default	Status	Not Deployed
Name	Server_Profile_C-Series	Management IP	10.31.123.34
Assigned Server	C220-WZP24430N7K		
Target Platform	UCS Server (Standalone)		

Description
Server Profile for Standalone Server


Compute Configuration | Management Configuration | Storage Configuration | Network Configuration | Errors/Warnings (0)

BIOS | 27 bios-policy

< Back | Close | Deploy

مداخل تاصل لم رشن

ةلألا نم ققحتف ،أحيص ناك اذإو ،نيوكتلة حص نم ققحتلاب Intersight موقني نأ نكمي

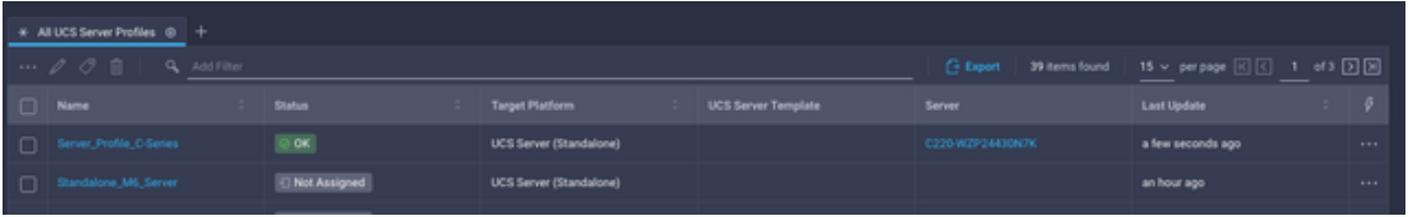

The screenshot shows a table titled "All UCS Server Profiles" with the following columns: Name, Status, Target Platform, UCS Server Template, Server, and Last Update. There are 39 items found, and the current page shows 1 of 3 items. The table contains two rows:

Name	Status	Target Platform	UCS Server Template	Server	Last Update
Server_Profile_C-Series	OK	UCS Server (Standalone)		C220-WZP24430N7K	a few seconds ago
Standalone_M6_Server	Not Assigned	UCS Server (Standalone)			an hour ago

ةيئاهنلأ صيصختلأ تافللم

Intersight نم لقتسملأ UCS مداخل ةرادإ نآلا كنكمي

ةمچرتل هذه ل و ح

ةلأل تاي نقتل ن م ة و مچ م ادخت ساب دن تسم ل ا اذ ه Cisco ت مچرت
م ل ا ل ا ا ن ا ع مچ م ف ن م دخت س م ل م عد و ت م م م دقت ل ة م ش ب ل و
م ك ة ق ي ق د ن و ك ت ن ل ة ل ا ة مچرت ل ض ف ا ن ا ة ظ ح ا ل م م چ ر ي . ة ص ا خ ل م ه ت غ ل ب
Cisco ي ل خ ت . ف ر ت م م مچرت م ا ه م د ق ي ي ت ل ا ة ي ف ا ر ت ح ا ل ا ة مچرت ل ا م ل ا ح ل ا و ه
ل ا ا م ا د ا د ع و چ ر ل ا ب ي ص و ت و ت ا مچرت ل ا ه ذ ه ة ق د ن ع ا ه ت ي ل و ئ س م Cisco
Systems (ر ف و ت م ط ب ا ر ل ا) ي ل ص ا ل ا ي ز ي ل چ ن ا ل ا دن ت س م ل ا