


```
Gateway#show radio
LORA_SN: FOC203310DG
LORA_PN: 95.1602T00
LORA_SKU: 868
LORA_CALC: <135,123,115,107,99,95,91,87,78,70,62,53,45,41,37,33-
133,120,112,104,96,92,88,84,75,67,59,51,43,39,35,31>
CAL_TEMP_CELSIUS: 34
CAL_TEMP_CODE_AD9361: 90
RSSI_OFFSET: -204.07,-203.78
LORA_REVISION_NUM: A0+
RSSI_OFFSET_AUS:
```

```
radio status:
off
```

ويدارل اللى "فاقى" عمال ع عضو مت، ريخأل الرطس اللى فى ىرت امك

يلى ام عبتا، وي دارل لى غشتل

```
Gateway#configure terminal
Gateway(config)#no radio off
Gateway(config)#exit
*Aug 06 03:45:28: Configured from console by console
Gateway#copy running-config start
!
```

```
Copy 333 bytes took 00:00:01 [hh:mm:ss]
```

عمزحل هيجوت عاداً لى غشت اداعاب مق، كلذ دعب

```
Gateway#configure terminal
Gateway(config)#packet-forwarder restart
Restarted packet-forwarder
Gateway(config)#exit
*Aug 06 03:46:07: Configured from console by console
```

مزلح هجوم ادبى نأ نكمي، نأل TRACE.log فى ىرت امك

```
Gateway#show packet-forwarder log name trace 250
...
#####
### restart(1) : 20160806 03:45:43
### pid=2741 szmax=unlimited (config files not yet read)
#####
03:45:43.479 (02741) Traces activated for startup
03:45:43.515 (02741) search '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/bootserver.ini'
03:45:43.515 (02741) no custom configuration file
'/tmp/mdm/pktfwd/firmware/usr/etc/lrr/bootserver.ini'
03:45:43.515 (02741) search '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/_system.sh'
03:45:43.515 (02741) load custom '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/_system.sh'
03:45:43.516 (02741) search '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/_parameters.sh'
03:45:43.516 (02741) load custom '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/_parameters.sh'
03:45:43.516 (02741) search '/tmp/mdm/pktfwd/firmware/lrr/config/defines.ini'
03:45:43.516 (02741) load default '/tmp/mdm/pktfwd/firmware/lrr/config/defines.ini'
03:45:43.516 (02741) search '/tmp/mdm/pktfwd/firmware/lrr/config/defines.ini'
03:45:43.516 (02741) load default '/tmp/mdm/pktfwd/firmware/lrr/config/defines.ini'
03:45:43.516 (02741) search '/tmp/mdm/pktfwd/firmware/lrr/config/lrr.ini'
```

```
03:45:43.516 (02741) load default '/tmp/mdm/pktfwd/firmware/lrr/config/lrr.ini'
03:45:43.519 (02741) search '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/lrr.ini'
03:45:43.519 (02741) load custom '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/lrr.ini'
03:45:43.519 (02741) search '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/gpsman.ini'
03:45:43.519 (02741) no custom configuration file
'/tmp/mdm/pktfwd/firmware/usr/etc/lrr/gpsman.ini'
03:45:43.519 (02741) search '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/custom.ini'
03:45:43.519 (02741) load custom '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/custom.ini'
03:45:43.519 (02741) search '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/_state.ini'
03:45:43.519 (02741) no custom configuration file
'/tmp/mdm/pktfwd/firmware/usr/etc/lrr/_state.ini'
03:45:43.522 (02741) [trace.c:128] TRACE used szmax: 1000000
03:45:43.522 (02741) [./main.c:7781] start lrr.x/main th=b6adc010 pid=2741 sickrestart=0
03:45:43.522 (02741) [./main.c:7782] @(#) Actility lrr 2.4.21 07/09/18 target=ciscoms
host=Ubuntu14-dev
03:45:43.522 (02741) [./main.c:7783] SX1301_AR
03:45:43.522 (02741) [./main.c:7785] HAL 5.1.0
03:45:43.522 (02741) [./main.c:7788] lrrid=68480c3f lrridext=0000 lrridpref=04
03:45:43.522 (02741) [./main.c:979] search '/tmp/mdm/pktfwd/firmware/lrr/config/lowlvlgw.ini'
03:45:43.522 (02741) [./main.c:2020] load default
'/tmp/mdm/pktfwd/firmware/lrr/config/lowlvlgw.ini'
03:45:43.522 (02741) [./main.c:979] search
'/tmp/mdm/pktfwd/firmware/lrr/config/lowlvlgw_ciscoms.ini'
03:45:43.522 (02741) [./main.c:2030] load default
'/tmp/mdm/pktfwd/firmware/lrr/config/lowlvlgw_ciscoms.ini'
03:45:43.523 (02741) [./main.c:979] search
'/tmp/mdm/pktfwd/firmware/lrr/config/lgw8_eu868_2015.ini'
03:45:43.523 (02741) [./main.c:2041] load default
'/tmp/mdm/pktfwd/firmware/lrr/config/lgw8_eu868_2015.ini'
03:45:43.523 (02741) [./main.c:951] search '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/lowlvlgw.ini'
03:45:43.523 (02741) [./main.c:2065] load custom
'/tmp/mdm/pktfwd/firmware/usr/etc/lrr/lowlvlgw.ini'
03:45:43.523 (02741) [./main.c:951] search '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/lgw.ini'
03:45:43.523 (02741) [./main.c:954] no custom configuration file
'/tmp/mdm/pktfwd/firmware/usr/etc/lrr/lgw.ini'
03:45:43.523 (02741) [./main.c:951] search '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/dyncalib.ini'
03:45:43.523 (02741) [./main.c:954] no custom configuration file
'/tmp/mdm/pktfwd/firmware/usr/etc/lrr/dyncalib.ini'
03:45:43.523 (02741) [./main.c:979] search
'/tmp/mdm/pktfwd/firmware/lrr/config/channels_eu868_2015.ini'
03:45:43.523 (02741) [./main.c:2127] load default
'/tmp/mdm/pktfwd/firmware/lrr/config/channels_eu868_2015.ini'
03:45:43.524 (02741) [./main.c:951] search '/tmp/mdm/pktfwd/firmware/usr/etc/lrr/channels.ini'
03:45:43.524 (02741) [./main.c:954] no custom configuration file
'/tmp/mdm/pktfwd/firmware/usr/etc/lrr/channels.ini'
03:45:43.525 (02741) [./main.c:7119] IfaceDaemon disabled
03:45:43.525 (02741) [./main.c:2296] gps thread is started
03:45:43.525 (02741) [./main.c:2354] lgw thread is started
03:45:43.525 (02741) [./shellcmd.c:155] cmd thread is started
03:45:43.525 (02741) [./rttping.c:406] thread itf idx=0 name='eth0' is started
03:45:43.525 (02741) [./main.c:7831] TRACE LEVEL IS SET TO 0
03:45:43.525 (02746) [./rttping.c:342] thread itf idx=0 name='eth0' is looping
03:45:43.526 (02744) [./lgw_gen.c:1820] start lrr.x/lgw th=b62da380 pid=2741 count=1 capture=0
03:45:43.527 (02743) [./gps.c:148] start lrr.x/gps th=b6adb380 pid=2741 count=1
```

ةمچرتل هذه لوج

ةللأل تاي نقتل نم ةومچم مادختساب دن تسمل اذه Cisco تچرت
ملاعلاء انءمچ يف نيمدختسمل معدى وتحم مي دقتل ةيرشبلاو
امك ةقيد نوك تنل ةللأل ةمچرت لصف انءمچال مچرئى. ةصاغل مهتغب
Cisco يلخت. فرتحم مچرت مامدقي يتل ةيفارتحال ةمچرتل عم لالحا وه
ىل اءءاد ةوچرلاب يصوت و تامچرتل هذه ةقد نع اهتيلوئسم Cisco
Systems (رفوتم طبارلا) يلصأل يزي لچنل دن تسمل