

# ليحرتل نمآال ةيماحل رادج ليحرت ةادأ نيوكت ASA

## تايوتحمل

[ةمدقملا](#)

[ةيساسال تابلطتملا](#)

[تابلطتملا](#)

[ةمدختسملا تانوكملا](#)

[ةيساسا تامولعم](#)

[نيوكتلا](#)

[ةكبش ليل يطيختلا مسرلا](#)

[نيوكتلا تاوطخ](#)

[اهحالص او عايطخال فاشكتسا](#)

## ةمدقملا

Cisco Firepower نم (ASA) فيكتلل لباقلا نامال زاغ ليحرت عارج دننتملا اذه فصوي

Cisco نم TAC سدنهم ،اريف ودراكي ره م هاس

## ةيساسال تابلطتملا

### تابلطتملا

نامال ةزهجأو (FTD) ةيماحل ديدهت ةيماحل رادج cisco نم ةفرعم تنأ يقلتني نأ ي صوي cisco  
(ASA) ةلدعمل

### ةمدختسملا تانوكملا

ةيلاتلا ةيماحل تانوكملا او جماربل تارادصا يلا دننتملا اذه في ةدراولا تامولعمل دننست

- 3.0.1 رادصال (FMT) FirePOWER ليحرت ةادب دوزم Windows رتويبمك زاغ
- 9.16.1 رادصال (ASA) فيكتلل لباقلا نامال زاغ
- 7.0.1 رادصال (FMCv) نمال ةيماحل رادج ةرادا زكرم
- Secure Firewall Threat Defense Virtual (FTDv) v7.0.1

ةصاخ ةيلمعم ةئيبي في ةدوجوملا ةزهجال نم دننتملا اذه في ةدراولا تامولعمل عاشنإ مت  
تناك اذا. (يضا رتفا) حوسمم نيوكتب دننتملا اذه في ةمدختسملا ةزهجال عيمج تادب  
رمأ يال لم تحملا ريثاتلل كمهف نم دكأتف ،ليغشتلا ديق ككتكبش

ةيساسا تامولعم

دننتملا اذهل ةصاخلا تابلطتملا نمضتت

- شحأ رادصا وأ 8.4 رادصال (ASA)، Cisco Adaptive Security Appliance


• شذأ رادصا و 6.2.3 رادصا (FMCv) نم آلا ةيامحلا رادج ةرادا زكرم  
ةيلاتلا ةزهجالا ةمئاق ةيامحلا رادج ليحرت ةادا معدت

- Cisco ASA (8.4+)
- ASA نم Cisco (9.2.2+) عم FPS
- صحفلا ةطقن (r75-r77)
- شيتفتلا ةطقن (r80)
- Fortinet (5.0+)
- وتلأ ولاب تاكبش (6.1+)

رادج ليحرت ةاداب ةصاخلا دويقلا و تاداش رالا ةاعارم عاجرلا ، ليحرتلا ةيلمع ةعباتم لباق  
[.ةيامحلا](#)

## نيوكتلا

ةكبش ليل يطيختلا مسرلا

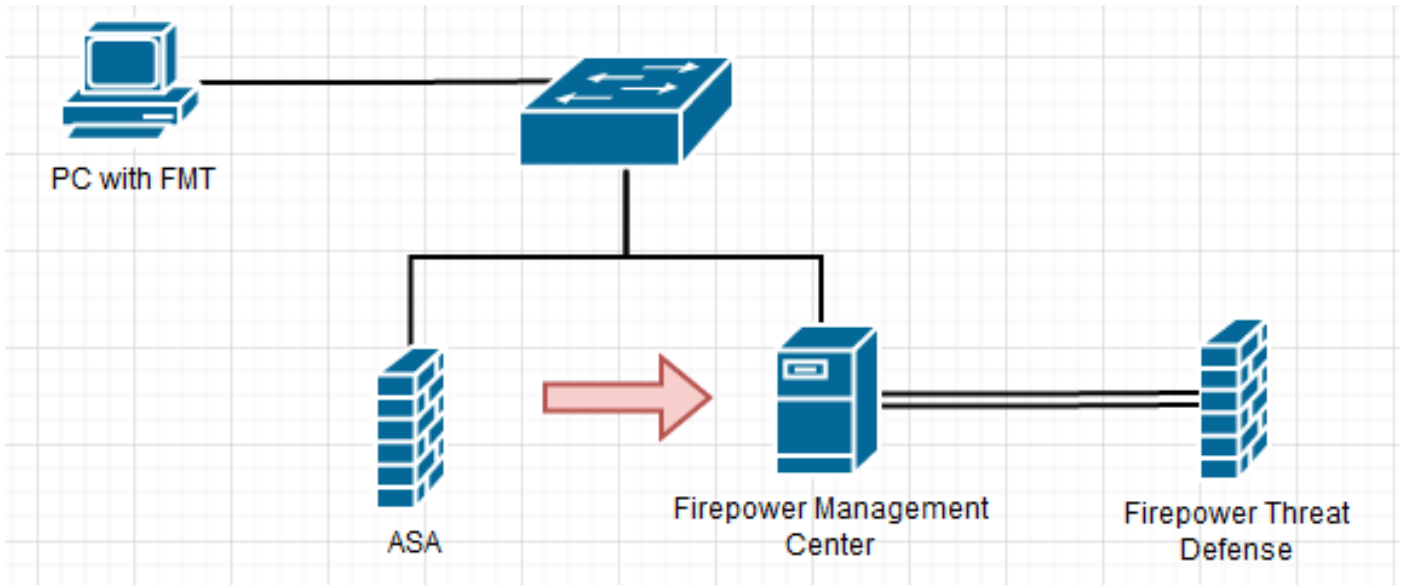

نيوكتلا تاوخط

1. Cisco Software Central نم FirePOWER ليحرتل ةادا شذأ ليزنت:

# Software Download

Downloads Home / Security / Firewalls / Next-Generation Firewalls (NGFW) / Secure Firewall Threat Defense Virtual / Firepower Migration Tool (FMT) - 3.0.1

Search...

Expand All | Collapse All

Latest Release

**3.0.1**

2.5.3

All Release

3

2

## Secure Firewall Threat Defense Virtual

Release 3.0.1

[My Notifications](#)

**Related Links and Documentation**


[Open Source](#)

[Release Notes for 3.0.1](#)

[Install and Upgrade Guides](#)

File Information	Release Date	Size	
The extractor will be used to extract checkpoint device-specific configurations which will be used as an input to Firepower Migration Tool. <a href="#">FMT-CP-Config-Extractor_v3.0.1-7373.exe</a> <a href="#">Advisories</a>	10-Aug-2022	9.83 MB	<a href="#">Download</a> <a href="#">Share</a> <a href="#">Print</a>
Firepower Migration Tool 3.0.1 for Mac <a href="#">Firepower_Migration_Tool_v3.0.1-7373.command</a> <a href="#">Advisories</a>	10-Aug-2022	34.75 MB	<a href="#">Download</a> <a href="#">Share</a> <a href="#">Print</a>
Firepower Migration Tool 3.0.1 for Windows <a href="#">Firepower_Migration_Tool_v3.0.1-7373.exe</a> <a href="#">Advisories</a>	10-Aug-2022	35.42 MB	<a href="#">Download</a> <a href="#">Share</a> <a href="#">Print</a>

## رتوي بمكلا الى اق بس م هلي زنتب تمق يذلا فلملا قوف رقا 2.

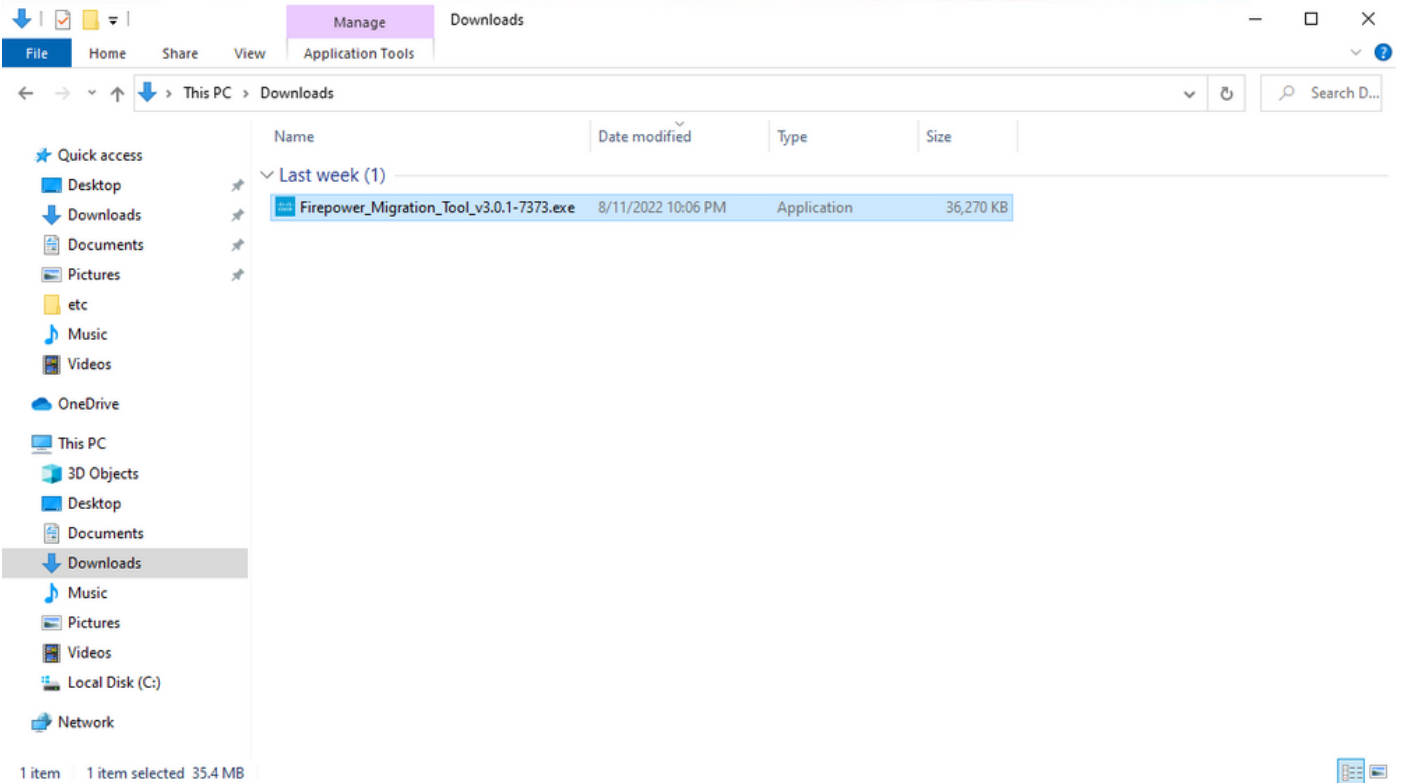


ايئاقلت يوت حمل اءاشن اب مكحتلا ةدحو موقيو وايئاقلت جم انربل احتف متي :ةظحال م  
هيف فلملا ليغشتب موقت يذلا ليلدلا لىع

```

C:\Users\cali\Downloads\Firepower_Migration_Tool_v1.0.1-7171.exe
2022-08-18 21:24:49,752 [INFO] __init__ > "Initializing..."
2022-08-18 21:24:49,767 [INFO] settings > "Settings:[global_suffix]"
2022-08-18 21:24:50,189 [INFO] tool_version > "toolVersion:[0817373]"
2022-08-18 21:24:50,252 [INFO] __init__ > "Initializing..."
2022-08-18 21:24:51,252 [INFO] config > "loading settings"
2022-08-18 21:24:51,268 [INFO] client > "Getting ssl context for auth server"
2022-08-18 21:24:51,299 [INFO] tools > "Not verifying ssl certificates"
2022-08-18 21:24:51,299 [INFO] client > "No discovery url configured, all endpoints needs to be configured manually"

2022-08-18 21:24:51,314 [INFO] settings > "Disabled console quick edit mode"
2022-08-18 21:24:51,314 [DEBUG] common > "session table records count:1"
2022-08-18 21:24:51,314 [INFO] common > "Using port: 8888"
2022-08-18 21:24:51,799 [INFO] run > "***** Starting server at http://localhost:8888 *****"
 * Running on http://localhost:8888/ (Press CTRL+C to quit)
127.0.0.1 - - [18/Aug/2022 21:24:56] "GET / HTTP/1.1" 200 -
127.0.0.1 - - [18/Aug/2022 21:24:56] "GET /styles.a0d79d8031ca159b236f.bundle.css HTTP/1.1" 200 -
127.0.0.1 - - [18/Aug/2022 21:24:56] "GET /inline.318b50c57b4eba3d437b.bundle.js HTTP/1.1" 200 -
127.0.0.1 - - [18/Aug/2022 21:24:56] "GET /cui-font.880241c8aa87aa899c6a.woff2 HTTP/1.1" 200 -
127.0.0.1 - - [18/Aug/2022 21:24:56] "GET /polyfills.76c2f21d4e2a1188f46c.bundle.js HTTP/1.1" 200 -
127.0.0.1 - - [18/Aug/2022 21:24:56] "GET /main.777e77bd49fe82694a1a.bundle.js HTTP/1.1" 200 -
2022-08-18 21:24:57,075127.0.0.1 - - [18/Aug/2022 21:24:57] "GET /assets/cisco.svg HTTP/1.1" 200 -
[INFO] cco_login > "USA check for an user"
2022-08-18 21:24:57,704 [DEBUG] common > "session table records count:1"
127.0.0.1 - - [18/Aug/2022 21:24:57] "GET /api/eula_check HTTP/1.1" 200 -
127.0.0.1 - - [18/Aug/2022 21:24:57] "GET /assets/icons/login.png HTTP/1.1" 200 -
127.0.0.1 - - [18/Aug/2022 21:24:58] "GET /assets/images/1.png HTTP/1.1" 200 -
127.0.0.1 - - [18/Aug/2022 21:24:58] "GET /assets/images/3.png HTTP/1.1" 200 -
127.0.0.1 - - [18/Aug/2022 21:24:58] "GET /assets/images/2.png HTTP/1.1" 200 -
127.0.0.1 - - [18/Aug/2022 21:24:58] "GET /favicon.ico HTTP/1.1" 200 -

```

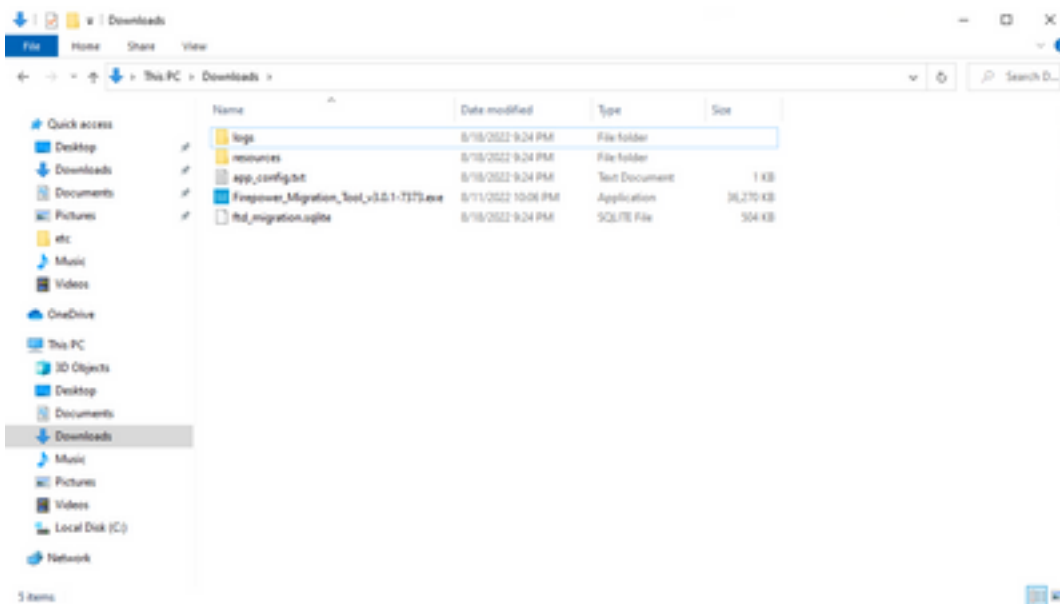

3. صيخرت عي قافات" ضرعي بي و ضرعت سم حت فب موقوي ،جم ان ربالا لي غشت دع ب .  
 دلع رقا .طورش لال او دونبالا لوبقل رايتخالالا عناخ دلع عمالع عض . "يئاهنالا مدختسمل  
 ةعباتم .

END USER LICENSE AGREEMENT

This is an agreement between You and Cisco Systems, Inc. or its affiliates ("Cisco") and governs your Use of Cisco Software. "You" and "Your" means the individual or legal entity licensing the Software under this EULA. "Use" or "Using" means to download, install, activate, access or otherwise use the Software. "Software" means the Cisco computer programs and any Upgrades made available to You by an Approved Source and licensed to You by Cisco. "Documentation" is the Cisco user or technical manuals, training materials, specifications or other documentation applicable to the Software and made available to You by an Approved Source. "Approved Source" means (i) Cisco or (ii) the Cisco authorized reseller, distributor or systems integrator from whom you acquired the Software. "Entitlement" means the license detail, including license metric, duration, and quantity provided in a product ID (PID) published on Cisco's price list, claim certificate or right to use notification. "Upgrades" means all updates, upgrades, bug fixes, error corrections, enhancements and other modifications to the Software and backup copies thereof. This agreement, any supplemental license terms and any specific product terms at [www.cisco.com/go/software/terms](http://www.cisco.com/go/software/terms) (collectively, the "EULA") govern Your Use of the Software.

1. **Acceptance of Terms.** By Using the Software, You agree to be bound by the terms of the EULA. If you are entering into this EULA on behalf of an entity, you represent that you have authority to bind that entity. If you do not have such authority or you do not agree to the terms of the EULA, neither you nor the entity may Use the Software and it may be returned to the Approved Source for a refund within thirty (30) days of the date you acquired the Software or Cisco product. Your right to return and refund applies only if you are the original end user licensee of the Software.

2. **License.** Subject to payment of the applicable fees and compliance with this EULA, Cisco grants You a limited, non-exclusive and non-transferable license to Use object code versions of the Software and the Documentation solely for Your internal operations and in accordance with the Entitlement and the Documentation. Cisco licenses You the right to Use only the Software You acquire from an Approved Source. It is not intended to be a license to Use the Software. You are not licensed to Use the Software.

I have read the content of the EULA and SEULA and agree to terms listed.

Proceed

Migrate policies from Cisco ASA or Cisco ASA with FPS or Check Point or PAN or Fortinet to Cisco FTD




Extract Source Information

Any additional information explaining this



4. عم وأ باسح CCO لآ عم login اام ا عىطتسى تنأ . لىحرتل اءا اى لآ لوخذل لىجستب مق . باسح رىصقت لىلحمل ا : admin/Admin123 .

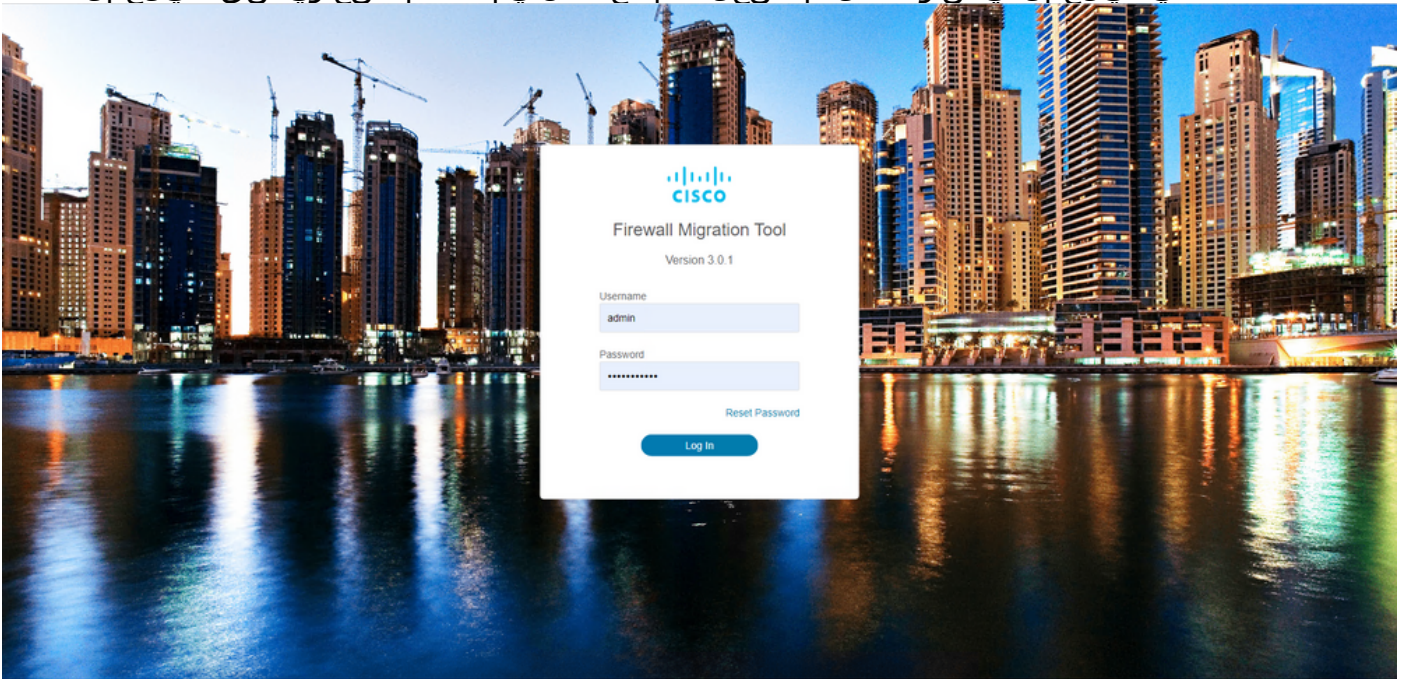

5. رءصمك Cisco ASA (8.4+) مءءس اءه فى . لىحرتل ل رءصم ل اءىءء راءء ءءء رءصمك .

## Select Source Configuration

Source Firewall Vendor

Select Source

- Cisco ASA (8.4+)
- Cisco ASA (9.2.2+) with FPS
- Check Point (75-77)
- Check Point (80)
- Fortinet (5.0+)
- Palo Alto Networks (6.1+)

## Cisco ASA (8.4+) Pre-Migration Instructions

1 This migration may take a while. Do not make any changes to the Firepower Management Center (FMC) when migration is in progress.

## Acronyms used:

FMT: Firewall Migration Tool

FMC: Firepower Management Center

FTD: Firepower Threat Defense

Before you begin your Adaptive Security Appliance (ASA) to Firepower Threat Defense migration, you must have the following items:

- **Stable IP Connection:**  
Ensure that the connection is stable between FMT and FMC.
- **FMC Version:**  
Ensure that the FMC version is 6.2.3 or later. For optimal migration time, improved software quality and stability, use the suggested release for your FTD and FMC. Refer to the gold star on CCO for the suggested release.
- **FMC Account:**  
Create a dedicated user account with administrative privileges for the FMT and use the credentials during migration.
- **FTD (Optional):**  
To migrate the device configurations like interfaces, routes, and so on, add the target device to FMC. Skip this step if you want to migrate only the shared configurations like objects, NAT, ACL, and so on.
- **ASA Configuration Requirements:**  
Export configuration file from ASA to .cfg or .txt format. Connect to live ASA to extract the configuration file for one or more contexts. To migrate following features in ASA:
  1. **Time Based ACLs:** FMC and FTD must be on 6.6 or later versions.
  2. **IP SLA Monitor:** FMC must be on 6.6 or later and FTD must be on 6.2.3 or later.
  3. **Object Group Search:** FMC and FTD must be on 6.6 or later versions.
  4. **ASA5505 Support:** FMC and FTD must be on 6.6 or later versions.
  5. **Remote Deployment:** FMC and FTD must be on 6.7 or later versions. If remote deployment is enabled, Firewall Migration Tool will only migrate ACLs, Network Object and Port Objects. Interface and Route configuration have to be migrated manually on to FMC.
  6. **Site-to-Site VPN Tunnels:** Policy Based (Crypto Map) VPN needs FMC and FTD to be on 6.6 or later. Route Based (VTI) Support, FMC and FTD to be on 6.7 or later. Ensure FTD must be added to FMC before migration. Firewall Migration Tool will migrate VPN tunnels as Point-to-Point network.

6. لي محتال بلطتي. نيوكتلا يل لوصحلل هم ادختسا بولطملا جارختسالا بولسأ ددح. جارختسالا ASA ب لصاتا. ".txt" وأ ".cfg" قي سننتب ASA فلم Running Config لي محت يوديلا. ةي امحل رادج نم ةرشابم تانيوكتلا.

1 Extract ASA Information 2 Select Target 3 Map FTD Interface 4 Map Security Zones & Interface Groups 5 Optimize, Review & Validate 6 Complete Migration

Extract Cisco ASA (8.4+) Information Source: Cisco ASA (8.4+)

Extraction Methods

**Manual Upload**

- File format is '.cfg' or '.txt'.
- For Multi-context upload a show tech. For Single-context upload show running.
- ⚠ Do not upload hand coded configurations.

Upload

**Connect to ASA**

- Enter the management IP address and connect using admin credentials.
- IP format should be: <IP:Port>.

ASA IP Address/Hostname

192.168.1.20

Connect

Context Selection >

Parsed Summary >

Back Next

ASA. لوحملاب ةرشابم لصاتالاب مق، لاثملا لابس يلع: ةظالم

7. تامولعم ةحولك ةي امحل رادج يف هيلع روثعلال مت يذلا نيوكتلا لصخللم ضرع متي. يلاتلا قوف رقنلا عاجرلا.



## Extract Cisco ASA (8.4+) Information

Source: Cisco ASA (8.4+)

Extraction Methods &gt;

ASA IP Address: 192.168.1.20

Context Selection &gt;

Single Context Mode: Download config

Parsed Summary ▾

Collect Hitcounts: No

8 Access Control List Lines	2 Access List Objects (Standard, Extended used in BGP/RAV/PNE/IGRP)	0 Network Objects	0 Port Objects	0 Dynamic-Route Objects (AS-Path, Community-List, Policy-List, Prefix-List, Route-Map)
0 Network Address Translation	1 Logical Interfaces	1 Routes	0 Site-to-Site VPN Tunnels	0 Remote Access VPN (Connection Profiles)

● Pre-migration report will be available after selecting the targets.

Back

Next

8. مكنحت الة دحوب صاخ ال IP ناونع ري فوتب مق . لئحرت الة لىل عه مادختس ال فده ال FMC دح لوخذ ال لئحست دامتع اتانايب كنم بلطي شيح قو ثب نم ةذفان حت في وهو FMC. ب صاخ ال FMC.

## Select Target

Source: Cisco ASA (8.4+)

Firewall Management ▾

 On-Prem/Virtual FMC Cloud-delivered FMC

FMC IP Address/Hostname

192.168.1.18

Connect

1 FTD(s) Found

Proceed

✔ Successfully connected to FMC

Choose FTD &gt;

Select Features &gt;

Rule Conversion/ Process Config &gt;

Back

Next

9. FTD ددح ف ، FTD لىل لئحرت الة ترتخ اذ . هم ادختس اذ يرت يذال فده ال FTD دح (ري راي تخ). Proceed ري شات الة ع برم ةئبع ت كنكمي FTD مادختس اذ يرت ال تنك اذ . هم ادختس اذ يرت يذال without FTD

## Select Target

Source: Cisco ASA (8.4+)

Firewall Management

FMC IP Address/Hostname: 192.168.1.18

Choose FTD

Select FTD Device  Proceed without FTD

FTD (192.168.1.17) - VMWare (Native)

Please ensure that the firewall mode configured on the target FTD device is the same as in the uploaded ASA configuration file. The existing configuration of the FTD device on the FMC is erased when you push the migrated configuration to the FMC.

[Proceed](#)

Select Features

Rule Conversion/ Process Config

[Back](#) [Next](#)

## 10. ةشاشلا تاطول ىل ع تارايلخا ضرع متي ،اهل حرت ديرت يتلا تاني وك تال ددح .

## Select Target

Source: Cisco ASA (8.4+)

Firewall Management

FMC IP Address/Hostname: 192.168.1.18

Choose FTD

Selected FTD: FTD

Select Features

 
<p><b>Device Configuration</b></p> <p><input checked="" type="checkbox"/> Interfaces</p> <p><input checked="" type="checkbox"/> Routes</p> <p><input checked="" type="checkbox"/> Static</p> <p><input type="checkbox"/> BGP</p> <p><input type="checkbox"/> EIGRP</p> <p><input type="checkbox"/> Site-to-Site VPN Tunnels (no data)</p> <p><input type="checkbox"/> Policy Based (Crypto Map)</p> <p><input type="checkbox"/> Route Based (VTI)</p>	<p><b>Shared Configuration</b></p> <p><input checked="" type="checkbox"/> Access Control</p> <p><input checked="" type="checkbox"/> Populate destination security zones</p> <p> Route-lookup logic is limited to Static Routes and Connected Routes. PBR, Dynamic Routes &amp; NAT are not considered.</p> <p><input checked="" type="checkbox"/> Migrate tunnelled rules as Prefilter</p> <p><input type="checkbox"/> NAT (no data)</p> <p><input checked="" type="checkbox"/> Network Objects (no data)</p> <p><input type="checkbox"/> Port Objects (no data)</p> <p><input type="checkbox"/> Access List Objects (Standard, Extended)</p> <p><input type="checkbox"/> Time based Objects (no data)</p> <p><input type="checkbox"/> Remote Access VPN</p> <p> Remote Access VPN migration is supported on FMC/FTD 7.2 and above.</p>	<p><b>Optimization</b></p> <p><input checked="" type="checkbox"/> Migrate Only Referenced Objects</p> <p><input checked="" type="checkbox"/> Object Group Search </p> <p><b>Inline Grouping</b></p> <p><input checked="" type="checkbox"/> CSM/ASDM</p>
---	---	---

[Proceed](#)

[Back](#) [Next](#)

## 11. ASA ىل FTD نم تاني وك تال ليوت ع دب .





Select Target

Source: Cisco ASA (8.4+)

Firewall Management >

FMC IP Address/Hostname: 192.168.1.18

Choose FTD >

Selected FTD: FTD

Select Features >

Rule Conversion/ Process Config >

Start Conversion

Back Next

متيس يتلا تانئالكال صخلم عم تامولعم ةحول ضرعي هنإف ،ليوحتلا يهتني نأ درجم ب 12. Download Report لىل ع ايراي تخإ طغضلا كنكم ي .(قفاوتلا لىل ع رصتقي) اهلي حرت اهلي حرت متيس يتلا تاني وك تلل صخلم مالتسال

Select Target

Source: Cisco ASA (8.4+)

Firewall Management >

FMC IP Address/Hostname: 192.168.1.18

Choose FTD >

Selected FTD: FTD

Select Features >

Rule Conversion/ Process Config >

Start Conversion

0 parsing errors found. Refer to the pre-migration report for more details.

Please download the Pre-Migration report for a detailed summary of the parsed configuration. [Download Report](#)

0 Access Control List Lines	0 Access List Objects (Standard, Extended used in BGP/RAVP/NEIGRP)	1 Network Objects	0 Port Objects	0 Dynamic-Route Objects (AS-Path, Community-List, Policy-List, Prefix-List, Route-Map)
0 Network Address Translation	1 Logical Interfaces	1 Routes	0 Site-to-Site VPN Tunnels	0 Remote Access VPN (Connection Profiles)

Back Next

ةروصللا يف حضورم وه امك ،ليوحتلا لبق ام ريرقت لاثم

**Note:** Review all contents of this pre-migration report carefully. Unsupported rules will not be migrated completely, which can potentially alter your original configuration, restrict some traffic, or permit unwanted traffic. We recommend that you update the related rules and policies in Firepower Management Center to ensure that traffic is appropriately handled by Firepower Threat Defense after the configuration is successfully migrated.

I. Overall Summary:

A summary of the supported ASA configuration elements that can be successfully migrated to Firepower Threat Defense.

Collection Method	Connect ASA
ASA Configuration Name	asalive_ciscoasa_2022-08-19_02-04-31.txt
ASA Firewall Context Mode Detected	single
ASA Version	9.16(1)
ASA Hostname	Not Available
ASA Device Model	ASA; 2048 MB RAM, CPU Xeon 4100 6100 8100 series 2200 Mhz
Hsr Count Feature	No
IP SLA Monitor	0
Total Extended ACEs	0
ACEs Migratable	0
Site to Site VPN Tunnels	0
FMC Type	On-Prem FMC
Logical Interfaces	1
Network Objects and Groups	1

### 13. لځړتلا ؤاډاى لىل فټډ تاهجاو ماډختساب ASA تاهجاو طي طخت.

Map FTD Interface

Source: Cisco ASA (8.4+)  
Target FTD: FTD

ASA Interface Name	FTD Interface Name
Management0/0	GigabitEthernet0/0

### 14. لىل فټډ تاهجاو لىل ؤهجاو لىل تاهجاو مومچو نامال قطانم عاشنا.

## Map Security Zones and Interface Groups

Source: Cisco ASA (8.4+)  
Target FTD: FTD

ASA Logical Interface Name	FTD Interface	FMC Security Zones	FMC Interface Groups
management	GigabitEthernet0/0	Select Security Zone	Select Interface Groups

10 per page 1 to 1 of 1 |&lt; &lt; Page 1 of 1 &gt;&gt;|

Back Next

حضوره وه امك، ةادال ةطساوب ايئاقلت (IG) ةهجاوالت اعومجمو (SZ) نامال قطانم عاشن امتي ةروصلال ي ف:



## Map Security Zones and Interface Groups

 
Source: Cisco ASA (8.4+)  
Target FTD: FTD

ASA Logical Interface Name	FTD Interface	FMC Security Zones	FMC Interface Groups
management	GigabitEthernet0/0	management	management_lg (A)

10 per page 1 to 1 of 1 |&lt; &lt; Page 1 of 1 &gt;&gt;|

Back Next

15. اهنم ققحتلالو ليحرتلال ةادال لىل عاهلحرت دارمل تانيوكتلال ةعجارم. Validate قوف رقناف، اهنيسحتو تانيوكتلال ةعجارم نم لعفلاب تيتهتنا دق تنك اذا.

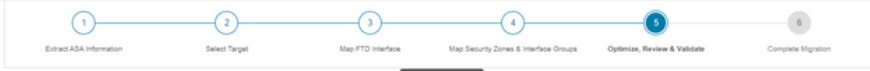

Optimize, Review and Validate Configuration

Source: Cisco ASA (8.4+)  
Target FTD: FTD

Access Control Objects NAT Interfaces Routes Site-to-Site VPN Tunnels Remote Access VPN

Access List Objects Network Objects Port Objects VPN Objects Dynamic-Route Objects

Select all 1 entries Selected: 0 / 1

#	Name	Validation State	Type	Value
1	obj-192.168.1.1	Will be created in FMC	Network Object	192.168.1.1

50 per page 1 to 1 of 1 Page 1 of 1

Note: Populate the areas highlighted in Yellow in EIGRP, Site to Site and Remote Access VPN sections to validate and proceed with migration

Validate

فدهل ازهال اللى اتاني وكنت ال ع ف د ب مق ، ةحصل ال نم ق قحت ال ةل ا ح ا ح ن ةل ا ح ف 16.

**Validation Status**

Successfully Validated


Validation Summary (Pre-push)

0	Not selected for migration	1	Not selected for migration	Not selected for migration
Access Control List Lines	Access List Objects (Standard, Extended used in BGP/RIP/EIGRP)	Network Objects	Port Objects	Dynamic-Route Objects (AS-Path, Community-List, Policy-List, Prefix-List, Route-Map)
Not selected for migration	1	1	Not selected for migration	Not selected for migration
Network Address Transl.	Logical Interfaces	Routes	Site-to-Site VPN Tunnels	Remote Access VPN (Connection Profiles)


Note: The configuration on the target FTD device FTD (192.168.1.17) will be overwritten as part of this migration.

Push Configuration

ةروصل ال ف ح ضر و م و ه ا م ك ، ل ل ح ر ت ل ل ة ا د ا ل ل ا ح ن م ع ف د م ت ي ذ ل ا ن ي و ك ت ل ل ي ل ع ل ا ث م

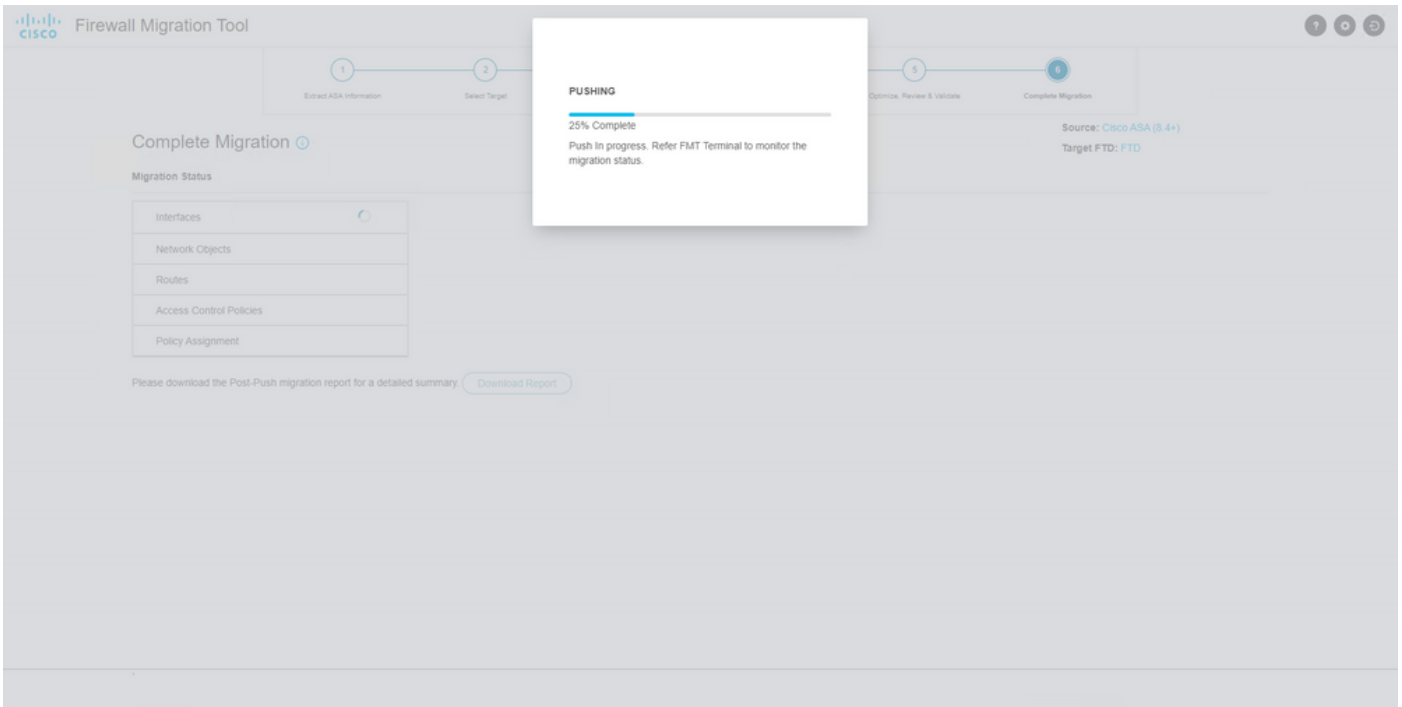

ةوصول ال ي ف حضورم وه امك ،حجانن ال ل ي حرت ال ال ع ل اثم

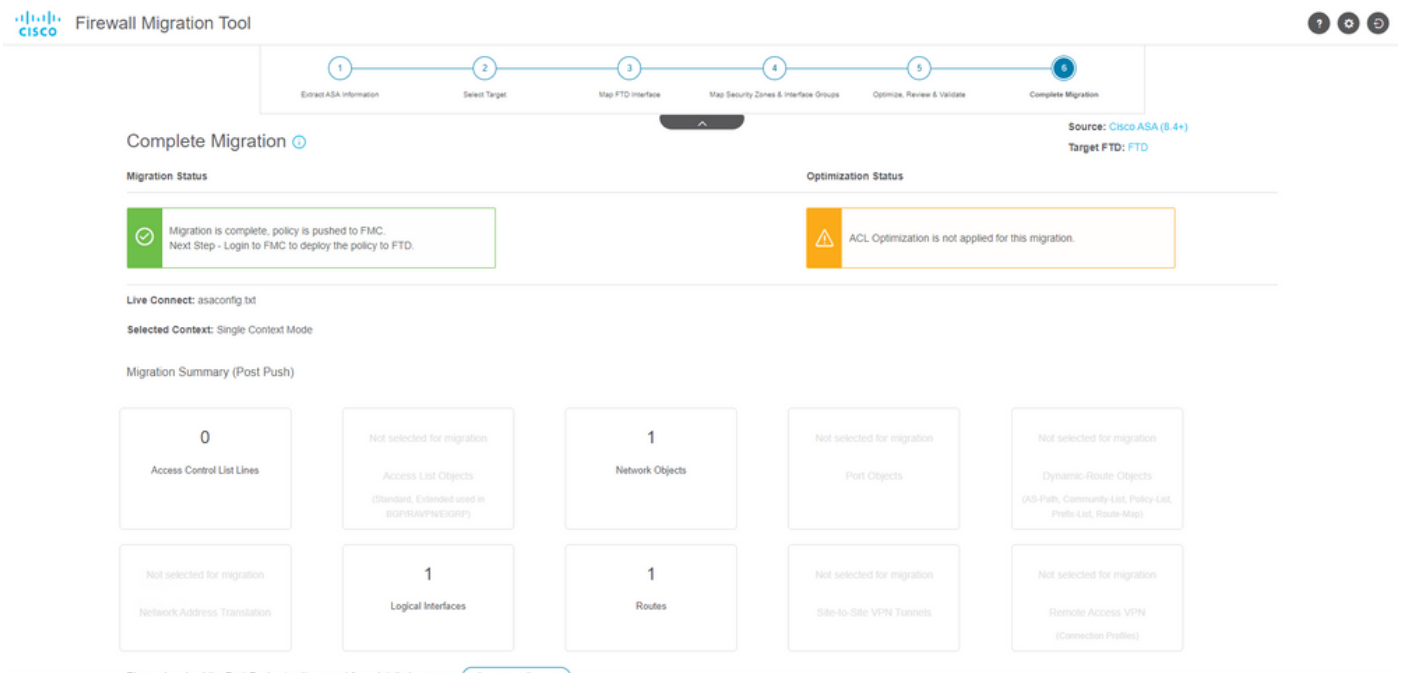

17. نيوكت ال ع فدل رشن ة ي لمع ب ل ط تي ه ن ا ف ، FTD ال ال نيوكت ال ل ي حرت ت دح ا ا ذ ا (ي راي تخ). ة ه ا و ال ال لو خ د ال ل ج س : نيوكت ال رشن ل ج ا ن م ، ة ا م ال ر ا د ج ال ال FMC ن م ر ف و ت م ال ة م ال ع Deploy ال ال ل ق ت ن ا . FMC م ك ح ت ال ة د ح و ب ة ص ا خ ال ال (GUI) ة ي م و س ر ال م د خ ت س م ال ال Deploy ر ق ن ا . ة ا م ال ر ا د ج ال ال نيوكت ال ع فدل رشن ال د ح . ب ي و ب ت

Firepower Management Center  
Deploy / Deployment

Overview Analysis Policies Devices Objects AMP Intelligence

Deploy admin

Search using device name, type, domain, group or status

Device	Inspect Interruption	Type	Group	Last Deploy Time	Preview	Status
FTD		FTD		8/13/2022, 6:01:52 PM		Pending

Device Configurations

- Interface Policy
- Advanced Settings
- Routing Group
  - IPv4 Static Route Policy

How To

## اهحال صاوا ءاطخألا فاشكتسا

اهحال صاوا نيوكتل ءاطخأ فاشكتسال اهم ادختسا كنكمي تامولعم مسقلا اذه رفوي

سلىع Firepower، لىحرت ءادأ فلم عضو هي فمت يذلا لىلدلا يف ءدوچومل تالچسل نم ققحت  
لاثلما لىبس:

Firepower\_Migration\_Tool\_v3.0.1-7373.exe/logs/log\_2022-08-18-21-24-46.log

ةمچرتل هذه لوج

ةللأل تاي نقتل نمة ومة مادختساب دن تسمل اذة Cisco تمةرت  
ملاعلاء انء مء مء نمة دختسمل معد و تمة مء دقتل ةر شبل او  
امك ةق قء نوك ت نل ةللأل ةمچرت لصف أن ةظحال مء ءرء. ةصاأل مء تءل ب  
Cisco ةللخت. فرتمة مچرت مء دقء ةللأل ةل فارتحال ةمچرتل عم لاعل او  
ىل إلمءءاد ءوچرلاب ةصوء و تامةرتل هذه ةقء نء اهءل وئس م Cisco  
Systems (رفوتم طبارل) ةلصلأل ةزىل ءنل اءل دن تسمل