اەمادختساو (Fluidmesh (FM ةشاش تيبثت

تايوتحملا

ەمدقملا

للعادة المالية المالية المتيبثتو Cisco FM مداخ ي المالية المالية المالية المالية المالية المالية المالية المالي

ةيساسأ تامولعم

ةيساسألا تابلطتملا

- ∘ مداخلا:
 - .تافصاوملا هذهب صصخم مداخ ىلإ جاتحت ،قيبطتلل Docker ةيواح ليغشتل

Operating system	Windows 7 or later	Mac OS X 10.9.x or later	Linux (32-bit or 64-bit): • Ubuntu 14.04 or later • Debian 9 or later • OpenSuSE 14.2 or later • Fedora Linux 19 or later
Docker application	Yes	Yes	Yes
Base system	Virtual machine or bare metal	Virtual machine or bare metal	Virtual machine or bare metal
Processor	Intel Core i7 or Xeon (any frequency, mandatory minimum of four cores)	Intel Core i7 or Xeon (any frequency, mandatory minimum of four cores)	Intel Core i7 or Xeon (any frequency, mandatory minimum of four cores)
RAM	16 GB minimum	16 GB minimum	16 GB minimum
Hard disk	100 GB minimum* 1 TB or greater recommended	100 GB minimum* 1 TB or greater recommended	100 GB minimum* 1 TB or greater recommended
High-speed connection to local networks and radio transceiver units	Preferred	Preferred	Preferred
Screen resolution	1024x768 minimum	1024x768 minimum	1024x768 minimum

مداوخلا تافصاومل ىندألاا دحلا

∶ةموعدملا بيولا تاضرعتسم ∞

Mozilla Firefox Google Chrome جمانرب Microsoft Internet Explorer Microsoft Edge يرافس لبأ

∍ جماربلا تاقحلم مزلي ال نيح يف ،ةميدقلا CURWB ةزهجأ ةبقارمل ةيجمرب تافاضإ رفوت مزلي .١٧٧ ةزهجأل تافاضإ ريفوت

∘ مداخلا:

تيبثت دنع Docker ةاكاحملا معدت مداوخلا نأ نم دكأتلا يرورضلا نم ،مداخلا ىلع Docker تيبثت دنع رادصإ ىلع قلطي .(SLAT) يناثلا ىوتسملا نم نيوانعلا ةمجرتو ةيضارتفالا Intel نم SLAT مسا EPT مسا SLAT نم

اەليغشتو Docker ةيواح تيبثت

- لصتم Ubuntu مداخ ىلع تيبثتلا ىلع يساسأ لكشب زكرن ،دنتسملا اذه يف يلوألا دادعإلاا عانثاً تنرتنإلاب.
- ةروص فلم ثدحأ ليزنتب مقو software.cisco.com عقوملا ىلإ لوخدلا ليجستب مق مداخلا ىلع ةشاش.
- <u>قىئاشو</u> ىلإ عوجرلا كنكمي .مداخلل ءاسرالا كرحم تيبثت يف ةيلاتلا ةوطخلا لثمتت امك يه ةيساسألا تاوطخلا نإف ،كلذ عمو ،ليصافتلا نم ديزم ىلع لوصحلل <u>Docker</u> يلي

ا:ةضراعتملا مزحلا لك تيبثت ةلازال رمألا اذه ليغشتب مق

for pkg in docker.io docker-doc docker-compose docker-compose-v2 podman-docker containerd runc; do sudo

• بسانملا Docker عدوتسم دادعإ.

```
> sudo apt-get update
```

- > sudo apt-get install ca-certificates curl
- > sudo install -m 0755 -d /etc/apt/keyrings
- > sudo curl -fsSL https://download.docker.com/linux/ubuntu/gpg -o /etc/apt/keyrings/docker.asc
- > sudo chmod a+r /etc/apt/keyrings/docker.asc

> echo \setminus

```
"deb [arch=$(dpkg --print-architecture) signed-by=/etc/apt/keyrings/docker.asc] https://download.dock
```

```
(. /etc/os-release \&\& echo "$VERSION_CODENAME") stable" | <math display="inline">\setminus
```

sudo tee /etc/apt/sources.list.d/docker.list > /dev/null

> sudo apt-get update

عاسرإلا ةمزح تيبثت

اعاسرالل ةمزح ثدحاً تيبثتل رمألاا اذه ليغشت ءاجرلا:

sudo apt-get install docker-ce docker-ce-cli containerd.io docker-buildx-plugin docker-compose-plugin

Hello-world ةروص ليغشت لالخ نم Docker Engine تيبثت حاجن نم ققحت •

sudo docker run hello-world

sudo docker images

fm-iw-monitor	@fmiwmoni	tor-virtual-mach	nine:~\$ sudo doc	ker images
REPOSITORY	TAG	IMAGE ID	CREATED	SIZE
hello-world	latest	d2c94e258dcb	11 months ago	13.3kB

• لدان بردملا ىلا ةروص بردم cisco FM لا تبلج ،نوكي ءاسرا كرحملا تبثملا نأ ،نآلا رمألا مادختساب:

docker load -i fm-monitor-docker-v1.x.x.tar.

for the most hand	feel	the second states and	
TM-IW-MONITOR(THIWMONITOF-VU	rtual-machine:~\$ sudo docker load -1 '/nome/fm-iw-mon	itor/Downloads/im-monitor-docker-v2.0-rc2.0.tar.gz
8cf5d74bcf68:	Loading layer	[======================================	134.4MB/134.4MB
bce5b7b7ae9a:	Loading layer	[======================================	965.6MB/965.6MB
1d2e5de37b47:	Loading layer	[======================================	3.072kB/3.072kB
72a57e173486:	Loading layer	[======================================	26.11kB/26.11kB
eed00e336fdc:	Loading layer	[======================================	1.633MB/1.633MB
f43525ea70c4:	Loading layer	[======================================	17.67MB/17.67MB
54162be3e4b4:	Loading layer	[======================================	68.47MB/68.47MB
5f70bf18a086:	Loading layer	[======================================	1.024kB/1.024kB
ca58e150d27c:	Loading layer	[======================================	75.03MB/75.03MB
d78879eea568:	Loading layer	[======================================	5.632kB/5.632kB
e3d74964f28f:	Loading layer	[======================================	4.608kB/4.608kB
c6958528657a:	Loading layer	[======================================	5.12kB/5.12kB
145cbf33218d:	Loading layer	[======================================	6.144kB/6.144kB
0786591577bc:	Loading layer	[======================================	4.608kB/4.608kB
69c239009c34:	Loading layer	[======================================	41.47kB/41.47kB
Loaded image:	dockerhub.cisco	<pre>b.com/fm-dev-artifactory-docker/monitor:v2.0-rc2.0</pre>	

• ةظحالم لمعب مق ،اضيأ .ەليمحت مت ەنأ نم دكأتلل ىرخأ ةرم رمألا اذه ليغشتب مق ةروصلا فرعمل:

sudo docker images

fm-iw-monitor@fmiwmonitor-virtual-machine:~\$ sudo docke	r images			
REPOSITORY	TAG	IMAGE ID	CREATED	SIZE
dockerhub.cisco.com/fm-dev-artifactory-docker/monitor	v2.0-rc2.0	3e610b47c38b	5 weeks ago	1.25GB
hello-world	latest	d2c94e258dcb	11 months ago	13.3kB

: ةيلاتان اتاوطخلا ذيفنت قيرط نع ةرم لوأل Docker ةيواح ليغشتب مق

sudo docker run -d --name fm_monitor -p 8080:8080 -p 8443:8443 --restart always X

(Monitor Docker.) ةروصل ةروصلا فرعم ةميق يه X ثيح)

fm-iw-monitor@fmiwmonitor-virtual-machine:-\$ sudo docker run -d --name fm_monitor -p 8080:8080 -p 8443:8443 --restart always 3e610b47c38b
e6431beb6f6df77f288786c119dbd1460e89dbbf587681daba7380990f57327a

بيو مدختسم ةەجاو ىلإ لوصولا

- ىلإ لقتنا .ەراتخت يذلا ضرعتسملا لالخ نم بيولا ةحفص ىلإ لوصولا كنكمي ،اريخأو ذفنم مقر Y لثميو ،مداخلاب صاخلا IP ناونع X لثمي ثيح https://X:Y نم URL ناونع منيوكت مت يذلا فيضملا.
- زاهجل لاصتا نود باسح ءاشنإ ىلإ جاتحتس ،تيبثتلا اهيف متي ةرم لوأ لالخو ،نآلا رورملا ةملكو ينورتكلإلا ديربلا مسا لاخدا لالخ نم FM-Monitor
- ناونع ةحص نم دكأت .FM ةشاش يف Curwb ةزهجأ جاردإ يف ءدبلا كنكمي ،اهلامتكا درجمب مداخلاب صاخلا IP

E FM-IW	-MONIT	OR-BETA								Actions X
Activitie	s	Firefox Web Brows	ser			Mar 27 23:35			۸.	4 0 ()
	Ō	🐸 New Tab	× 🕑 I	Install Docker Engine on 🖙	🕯 Cisco Ultra Reliable V	vire × +			×	ø x
	\leftarrow	\rightarrow G	O 🗛 ht	ttps:// 10.122.136.8 :8443/wiza	rd			☆	♡ ೨	ර ≡
•	÷	MONITOR v2.0-rc2.0	Ch Dashboard	Table View Data Analysis.	Topology Log				© -1	cisco
Â				1. Welcome		2. Report	3. Complete			
?						Server IP *	Pet*			
• ~-				Configure server s	settings	10.122.136.8	8443 🗘			
				Attach device	es					
0				Enter one or more IP addre	.122.136.10 × 10.12	2.136.11 X				
-						ji.g. 192.168.0.1, 192.168.0				
						Associate devices				
1. k										
. T										

👿 (3) IoT Iab RTP U 🗙 👿 (3) RTP - IoT Lab 🗉 🗙 🚢 Cisco URW8	W911 x 🖆 Cisco FM-QUADR: x 🚔 Cisco FM-QUADR: x 🚔 Cisco URWB IW911 x 🚔 Cisco URWB IW911 x 🖶 How	r to delete a vi: x 🟥 Cisco Ultra Reliabi x + 👻
← → C O Not Secure https://10.122.136.8:8443/wizard		* 🖲 D) 🖬 😩 i
🗅 Cisco 👩 V4.9.5.1000 - Rel 😰 CURWB 🗮 Spaces Admin 💕 Cis	co Certified De 🛃 CART - Search/Re 🗅 Birds 🟥 Cisco Catalyst IW Cb JSON Fixer Online W WireGuard - Wikip 🏥 IW910	S7E Heavy D 🧧 IoT Learning Serie 📣 Shift 🛛 »
E MONITOR A V A	Topology Log	© - Il diala cisco
🕞 1. Welco		
	Attach report *	
Devices: 3	Port 8443	0
Q Search T	Attached These devices have been added successfully J/3	
0 selected		
	Status	
0 0		
0 d		
0 0	If you're still having issues please contact support_fm@cisco.com	
3 Records	Close 3	
	Next	

• ىلع ويدارلا ةزەجأ عيمج ةيؤر كنكمي ،FM ةشاش ىلإ ويدارلا ةزەجأ عيمج ةفاضإ درجمب تامولعملا ةحولل ةيسيئرلا ةشاشلا.

MONITOR v2.0-re2.0	Dashboard	°d. Table View	~~ Data Analysis	()) Topology	G. Log							© -1
Real-time	monitoring											
3	Enable network performance chec Settings > Networ	:k in k KPI.	URWB devices online	3	3 1 of 3	1.17 Mbps Throughput TX	580 Kbps Throughput RX	412 Sent Packets/s	206 Received Packets/s	5.52 ms Average latency	0 Edge devices	100 % Average uptime
					-	Last 6 hours trend	Last 6 hours trend	Last 6 hours trend	Last 6 hours trend	Last 6 hours trend		Last 7 days
+ ADI) SECTION											
· ADL	OLOTION											
			You can cr	eate one or n	nore custo	m sections which will	show information only	on those URWB dev	vices you decide to put i	nside them.		

• يف ليصفتلا نم ديزمب ةشاشلا ىلإ اهتفاضإ متت يتلا ةزهجألا عيمج ضرع نكميو لودجلا ضرع ةقيرط.

÷	MONITOR v2.0-rc2.0	Dashboard Table V	بمر New Data Analysis	Topology Log							Ø	-D	ahaha cisco
	Q Search	by Mesh ID, label or IP ad	dress	Filter by status	ritical 🗌 😐 Warnin	eg 🗌 • Disco	nnected						
	All sections	(3) Uncategorized	(3)										
						Uncategorize	ed (3)					^	
	Status	Label	IP Address	Mesh ID	FW version		Role	Frequency	TX Power	Channel width	More		
	• MP	Cisco-137.250.80	10.122.136.10	5.137.250.80	17.13.0.109	R1 R2	Fluidity Infra Fixed Infra	5180 MHz 5745 MHz	17 dBm 20 dBm	20 MHz 20 MHz			
	ME	Cisco-137.250.148	10.122.136.9	5.137.250.148	17.13.0.109	R1 R2	Fluidity Infra Fixed Infra	5180 MHz 5745 MHz	17 dBm 20 dBm	20 MHz 20 MHz			
	• MP	Cisco-246.2.120	10.122.136.11	5.246.2.120 P	17.13.0.109	R1 R2	Fluidity Vehicle Disabled	5180 MHz -	22 dBm -	20 MHz -			
	1 - 3					« « 1	> >>						

• ةزەجألا < تادادعإلا ىلإ لاقتنالاب ةشاشلا نم اەتفاضإ وأ ةزەجألا ەذە ةلازا نكمي ةحفص.

÷	MONITOR v2.0-re2.0	Dashboard	o Table View	بمر Data Analysis	Topology	Log						co
=	Database		«) Device	s: 3							Server IP: 10.122.136.8 Port 8443 0	
*~	Statistics		Q S	earch Table	Add devices							
	Network KPI		0	Nam	0		IP Address	Mesh ID	Model	Role	Status	
			0	Cisc	o-137.250.80		10.122.136.10	5.137.250.80	IW9165DH-B	Fluidity Infra Fixed Infra	•	
0	Account		O	Cisc	0-137.250.148		10.122.136.9	5.137.250.148	IW9165DH-B	Fluidity Infra Fixed Infra	•	
	Log		0	Cisc	0-246.2.120		10.122.136.11	5.246.2.120	IW9167EH-B	Fluidity Vehicle Disabled	•	
8	Devices											
†*	Upgrade											

• ىلإ ادانتسا رغصأ ماسقأ يف يكلساللا لاسرالا ةزهجأ نم ريبك ددع عيمجت نكمي امك تامولعملا ةحولل ةيسيئرلا ةحفصلا نم ةبقارملا ليەستل ةفيظولا/عقوملا.

Select URWB devices Tick the box to add a device to this section. Untick the box to remove the device. Devices already added in other sections are not displayed. Find URWB device Search by Mash ID, label or IP address Show selected devices only Deselect all Scisco-137.250.80 S.137.250.80 10.122.136.10 S.137.250.80 10.122.136.10 S.137.250.148 S.137.250.80 10.122.136.10 Fluidity Infra (R1) Flued Infra (R2) Fluidity Infra (R1) Flued Infra (R2) Fluidity Infra (R1) Flued Infra (R2) 3 selected units Cancel	luidity				Info
Tick the box to add a device to this section. Untick the box to remove the devices already added in other sections are not displayed. Find URWB device Search by Meth ID, label or IP address Show selected devices only Deselect all Cisco-137.250.80 5.137.250.80 5.137.250.80 5.137.250.80 Fluidity Infra (R1) Flued Infra (R2) Fluidity Infra (R1) Flued Infra (R2) Sector 246.2.120 5.246.2.120 10.122.136.11 Vehicle (R1) Disabled (R2) Selected units Cancel Confirm	Select URWB devices				
Eind URWB device Statch by Mesh ID, label or IP address Show selected devices only Deselect all Cisco-137.250.80 S137.250.80 S137.250.148	ck the box to add a device to this section. Un	lick the box to remove the device. Devices al	ready added in other sections are not displayed		
Prind UKWB device Sector by Main L0, abort or P abores Concel Concel Cisco-137.250.80 5.137.250.148 5.137.250.148 5.137.250.148 5.246.2120 5.24			only 🔽 Decelect all		
Cisco-137.250.80 5:137.250.80 5:137.250.148 5:246.2.120 <td>Find URWB device Search by Mesh ID, label or IP as</td> <td>Idress O Show selected devices</td> <td>oniy 🔽 Deselect all</td> <td></td> <td></td>	Find URWB device Search by Mesh ID, label or IP as	Idress O Show selected devices	oniy 🔽 Deselect all		
Cisco-137.250.80 5:137.250.80 5:137.250.148 5:137.250.148 5:137.250.148 5:246.2.120 5:246.2.12					
5.137.250.80 10.122.136.10 Fluidity Infra (R1) Flued Infra (R2) Subtry Infra (R2) Su	Cisco-137.250.80	Cisco-137.250.148	Cisco-246.2.120		
Fluidity infra (R1) Fixed Infra (R2) Fluidity infra (R1) Fixed Infra (R2) Vehicle (R1) Disabled (R2) 3 selected units Cancel Confirm	5.137.250.80 10.122.136.10	5.137.250.148 10.122.136.9	5.246.2.120 10.122.136.11		
3 selected units Cancel Confirm	Fluidity Infra (R1) Fixed Infra (R2)	Fluidity Infra (R1) Fixed Infra (R2)	Vehicle (R1) Disabled (R2)		
3 selected units Cancel Confirm					
				3 selecte	ed units Cancel Confirm

uidity			
	1.57 ms	3	100 %
3 out of 3	Average latency	Edge devices	Average uptime
	Last 6 hours trend		Last 7 days

تانايبلا ةبقارم

• نكميو ةيخيرات تانايب نع ثحبلا وأ يلعفلا تقولا يف لاصتالا ةبقارم نكمي مزلي يذلا ويدارلا روظنم نم ءادألا ةيؤرل .اهحالصإو ءاطخألا فاشكتسأ ضارغأل هليلحت نيعم ويدار ديدحت.



RSSI





صيخرتلا طيشنت

نم طيشنت صيخرت ىلع لوصحلا كيلع بجي ،ةكبشلا ةبقارمل FM ةشاش مادختسإ لبق لاسرإلا زامج ةزمجأ ددع متيبثتب تمق يذلا طيشنتلا صيخرت ىوتسم ددحي .ملاخداو Cisco 5000 ىلإ 5 نم حوارتت نأ نكميو .امتبقارم نكمي يتلا Fluidmesh ةيكلساللا لابقتسالاو .زامج

يحيضوتلا ضرعلا صيخرت ىقبي ،ەطيشنت مت اذإ .يبيرجت صيخرت رايخ رفوتي امك نكمي يتلا ةزەجألا ددع ةدايز FM Monitor صيخرت تايقرت كل حيتت .رەشأ ةثالث ةدمل اطشن لصألا يف صخرملا ددعلا نم ،دحاو صيخرت تحت اەتبقارم.

ةمجرتاا مذه لوح

تمجرت Cisco تايان تايانق تال نم قعومجم مادختساب دنتسمل اذه Cisco تمجرت ملاعل العامي عيمج يف نيم دختسمل لمعد يوتحم ميدقت لقيرشبل و امك ققيقد نوكت نل قيل قمجرت لضفاً نأ قظعالم يجرُي .قصاخل امهتغلب Cisco ياخت .فرتحم مجرتم اممدقي يتل القيفارت عال قمجرت اعم ل احل اوه يل إ أم اد عوجرل اب يصوُتو تامجرت الاذة ققد نع اهتي لوئسم Systems الما يا إ أم الا عنه يل الان الانتيام الال الانتيال الانت الما