



Cisco Meeting Management

Release 3.13

User Guide for Video Operators

May 04, 2026

Contents

Document Revision History	5
1 Introduction	6
2 What is new in Meeting Management 3.13	7
2.1 Changes to this guide since 3.12	7
3 Sign in	8
4 Navigation	10
4.1 Overview page	10
4.2 Top bar	11
4.3 Navigation panel	11
4.4 Spaces	12
4.4.1 Creating spaces	12
4.4.2 Viewing spaces	13
4.4.3 Modify spaces	13
4.4.4 Deleting spaces	14
4.4.5 Join information	14
4.4.6 Edit access role	14
4.5 Blast dial configuration	15
4.5.1 Configurations	15
4.5.2 Adding dial-out contacts	15
4.6 Meetings page	16
4.7 Meeting details – unscheduled meeting	18
4.8 Meeting details – scheduled meeting	19
4.9 Participant details	21
5 Monitor and manage meetings	23
5.1 Find meetings	23
5.2 Edit upcoming meetings	25
5.3 Find participants	25
5.4 Place specific participants in fixed pane and assigning a rotating pane for other participants	26
5.4.1 Points to note	27
5.4.2 Limitations	29

5.4.3 How to set pane placement	30
5.4.4 Applying pane placement models	34
5.5 Move participants to a different meeting	36
5.6 Use the meeting lobby and lock meetings	40
5.6.1 Use the lobby to let invited participants wait for a host	41
5.6.2 Lock meetings	41
5.6.3 Move participants to lobby	42
5.6.4 Admit participants	43
5.6.5 What happens after an Activator leaves?	44
5.7 Add participants	44
5.7.1 Specify DTMF digits when adding a participant	45
5.8 Change display name for a participant	45
5.9 Change layout for all or selected participants in a meeting	46
5.9.1 Assign custom layouts	47
5.9.2 Points to note	48
5.10 See who is speaking or presenting	49
5.11 Restrict participant from sharing content	49
5.12 Mute audio-video transmission to participants	50
5.13 Send message to all participants	51
5.13.0.1 Points to note	51
5.14 Mute or unmute audio for all or selected participants in a meeting	52
5.15 Record meeting	53
5.16 Stream a meeting	53
5.17 Audio/video muted for participants when entering a meeting	54
5.17.1 Audio mute on entry	54
5.17.2 Video mute on entry	54
5.18 Turn audio or video on or off for an individual participant	55
5.19 Change layout for an individual participant	55
5.20 View participant details	56
5.21 Call statistics	58
5.22 Mark participants as important	58
5.23 Taking snapshots of participants in a meeting	59
5.24 Far end camera control	62
5.25 Audio gain adjustment	63
5.26 Meetings with disabled features	64
5.26.1 Dual homed meeting	64

5.26.2 Remote recording	67
6 Meeting event logs	68
6.1 Timestamps for event logs	68
6.2 List of event log messages	70
7 Notifications	79
7.1 View all notifications	80
7.2 List of notifications	80
8 License status	84
Accessibility Notice	86
9 Accessibility support features	87
9.1 Keyboard navigation	87
9.2 Screen reader support	87
Cisco Legal Information	88
Cisco Trademark	89

Document Revision History

Table 1: Document revision history

Date	Description
2026-05-04	Document published

1 Introduction

This guide is for video operators of Cisco Meeting Management, providing instructions on how to monitor and manage meetings.

Cisco Meeting Management is a management tool for Cisco's on-premises video conferencing platform, Cisco Meeting Server. It provides a user-friendly browser interface for you to monitor and manage meetings that are running on the Meeting Server.

2 What is new in Meeting Management 3.13

This is an overview of new features and changes that are relevant for video operators. For an overview of all new features and changes, see the [release notes](#).

2.1 Changes to this guide since 3.12

 
We have updated the following sections:

- [Place participants in specific panes](#): We have made enhancements to provides visibility into the pane placement model name and layout name applied for each participant during a meeting.

3 Sign in

To access Meeting Management:

1. Open a browser and enter the web address for your Meeting Management.




If you don't know the address, ask your Meeting Management administrator.

2. Choose **Account location**.

If you do not know your account location, ask your Meeting Management administrator.

3. Sign in with your company username and password.

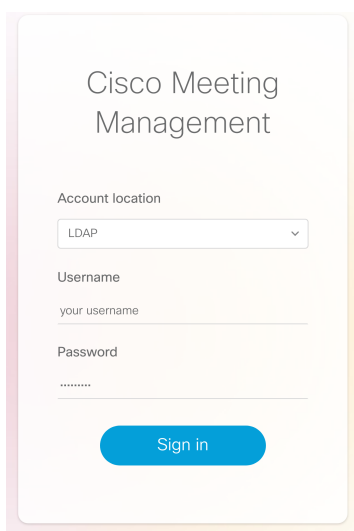
A screenshot of the Cisco Meeting Management sign-in page. The page has a light yellow background. At the top, it says 'Cisco Meeting Management'. Below that is a section titled 'Account location' with a dropdown menu showing 'LDAP'. Underneath is a 'Username' field with the placeholder text 'your username'. Below that is a 'Password' field with a series of dots. At the bottom is a blue 'Sign in' button.

If you have trouble signing in, ask your Meeting Management administrator to check your account details.

Note: You can stay signed in for a maximum of 24 hours, after which you will automatically be signed out. If someone restarts Meeting Management, or if you are inactive for longer than your administrator has allowed, you will be signed out. Depending on your browser, you might also be signed out if you close your browser.

To sign out:

1. Click your name, then **Sign out**.

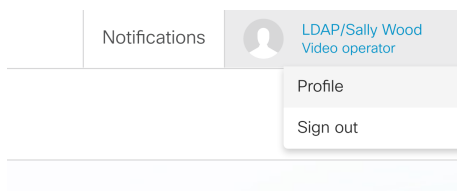

4 Navigation

Here is a quick walk-through of the different views in Meeting Management:

- [Overview page](#)
- [Top bar](#)
- [Navigation panel](#)
- [Meetings page](#)
- [Meeting details for unscheduled meetings](#)
- [Meeting details for scheduled meetings](#)
- [Participant details](#)

4.1 Overview page

The first thing you see when you sign in is the **Overview** page.


If there are any issues with the overall system, [notifications](#) will be displayed here.

Notifications have 3 levels of severity:

- **Error:** Critical issue
- **Warning:** Issue that you must act on to keep Meeting Management running
- **Information:** Useful information or minor issue


If licensing is enabled on the instance of Meeting Management you are signed in to, you will also see [license status](#) for the Cisco Meeting Servers.

If you are using Smart Licensing, then all connected clusters share the licenses in one account, and Meeting Management shows one license status for all clusters.

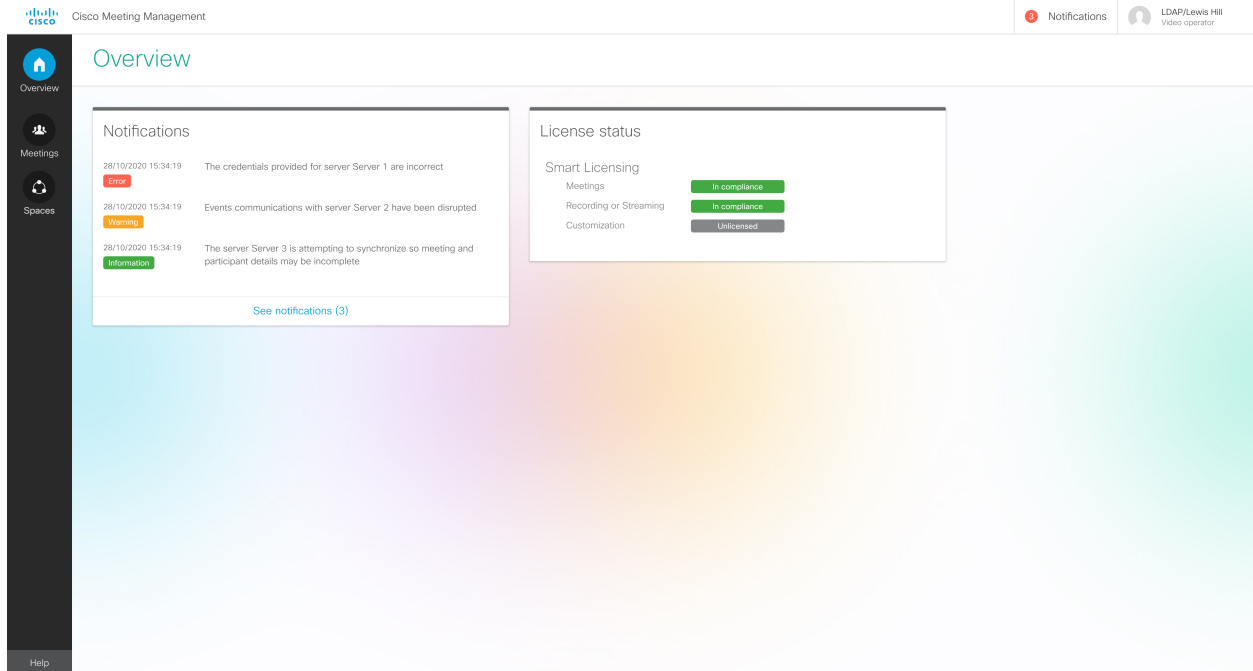

4.2 Top bar


The top bar is visible in all views.

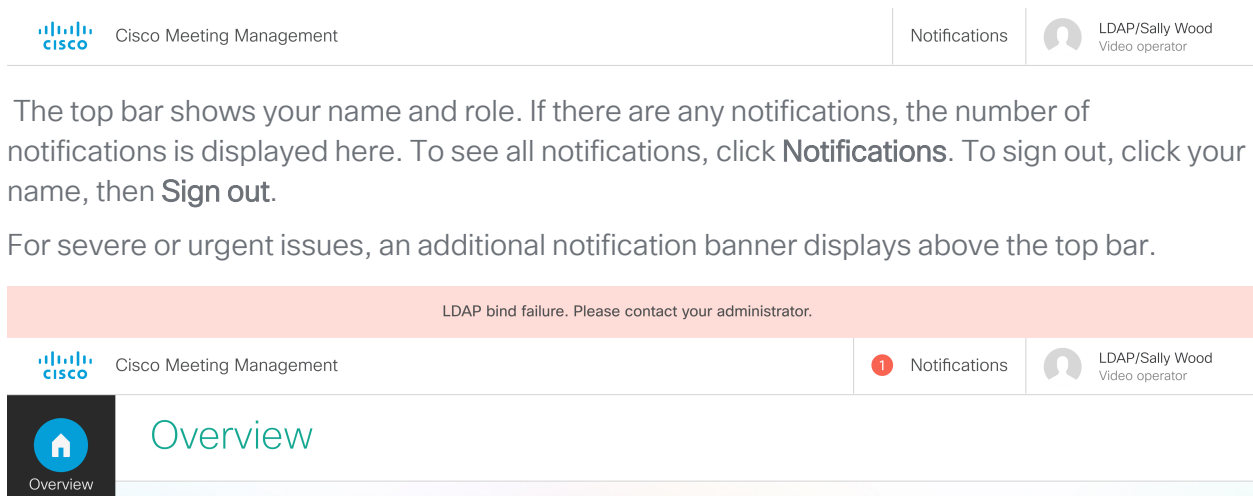

4.3 Navigation panel

The navigation panel to the left is visible in all views and gives you access to the **Overview**, **Spaces** and **Meetings** pages and a link to the Meeting Management help on the Cisco website.

 The number at the bottom is a software version number and is only relevant for your administrator.



4.4 Spaces

You can create and edit spaces using Meeting Management and assign tags to those spaces. These tags can be assigned to video operators, giving them access to specific spaces and the meetings associated with those spaces only.

You can also configure blast dial, to quickly hold a meeting with a group of users. You can add a predetermined list of participants to a space where you configure blast dial. When any participant dials in to the space, all the other participants are dialed out simultaneously.

4.4.1 Creating spaces

Follow these steps to create a space in Meeting Management:

1. On the **Spaces** page, click **Create space** button to launch **Create a Space** pop-up window.
2. Select the Meeting Server cluster from the drop-down menu.
3. Enter a unique name for the space in **Space name**, with a maximum character limit of 200.
4. Select the space tag from the **Space tag** drop-down. The drop-down lists all the tags that are assigned to the video operator.
5. Select appropriate space template from **Templates**. If the templates are not available, it has to be created from the Meeting Server.
6. Click the **Create** button.

Note:

- Spaces created in Meeting Management will not be visible in web app.
- Spaces created in web app will be in view only mode and cannot be edited or deleted in Meeting Management
- After a space is renamed, Meeting Management prevents the creation of a new space using the old name, even though the original space no longer uses the old name.

The created space will be listed in the **Spaces** page. Spaces with ongoing or active meetings will be displayed with  icon. Here, the number on the icon represents the total participants attending the meeting. Hovering over the icon displays a message, in this case, **Active meeting with 4 participants**.

4.4.2 Viewing spaces

You can view the list of all the spaces in your cluster. Use the search bar to filter out the space you are looking for. Clicking on the space name takes you to the **Join Information** page for that space.

The following table explains all the access enabled for tagged and untagged video operators for the spaces created in Meeting Management:

Table 2: Access enabled for tagged and untagged video operators for the spaces created in Meeting Management

Users	Tagged spaces	Untagged spaces
Tagged video operator	Access to view, edit, delete	No access
Untagged video operator	No access	Access to view, edit, delete

4.4.3 Modify spaces

Video operators can edit the space created by them or those they are tagged with; however, administrator can edit spaces created by the video operators.

- Modify the space name using the  edit icon.
- To modify the join information used by the members to access the space:

1. Click  edit icon to launch **Edit access role** pop-up window.
2. Make necessary changes to **Passcode**, **Visibility** and **Video address**.

Note:

- The new passcode entered should be an integer value and must contain a minimum length as defined in the dial-in security profile in space templates.
 - In case the entered video address is already available in Meeting Server, administrator will be prompted to enter a different video address.
-

3. Click **Save**.

4.4.4 Deleting spaces

Video operators can delete only the spaces created by them or those they are tagged to in Meeting Management. Delete icon  available against the space name can be used to delete space.

4.4.5 Join information

The **Join information** tab displays the meeting details: Visibility, Meeting ID, Passcode, and Video address. You can obtain join information as email template and share it with the participants by copying the join information using  icon available against each role.

Note:

- The administrators can view, edit and delete the spaces created by the video operators.
 - Meeting Management will display the join link only if the port is configured in the Meeting Server.
-

4.4.6 Edit access role

You can edit this information and set preferences for visibility of the space by selecting one the following options from the **Visibility** drop down:

- In public directory, visible to all space members and call participants
- All call participants and space members
- All space members
- Space owner only

4.5 Blast dial configuration

Blast dial can only be configured for clusters where Meeting Management is setup to manage meetings on that cluster.

- If the cluster is not managed by Meeting Management, you will see the following message:

*Blast dial cannot be configured on this space because this Meeting Management does not manage meetings on this cluster. To change this, visit **Servers** and edit this cluster.*

Go to **Server settings** and under **Edit Cluster**, check the **Use Meeting Management to manage meetings on this cluster** check box.

- If Blast dial monitoring is turned off, you will see the following message:

*Blast dial cannot be configured on this space because this Meeting Management has blast dial monitoring turned off. To change this, visit **Settings > Blast dial monitoring**.*

Go to **Settings** and under [Blast dial monitoring](#), change the settings.

4.5.1 Configurations

You can set the following configurations in the landing page:

- **On / Off:** You can turn on or turn off the blast dial feature at the **Blast dial configuration** landing page. When you turn it **On**, the other configuration options appear.
- **Retries:** This setting allows you to configure retry attempts if the contact does not connect to the call the first time.
 - **Number of retries:** The maximum number of times the system will attempt to dial out a contact if they fail to connect to the call.
 - **Time after a failed retry:** The minimum time amount of time the system waits before retrying to dial out a contact. The default is 180 seconds.
- **Automatic join for blast dial participants:** You can on or off the audio prompt both at the global level and at the participant level. If the audio prompt is disabled, the audio prompt **Press 1 to enter the meeting or * to hang up** will not be played and the participant need not press the DTMF digits and enter the meeting when they accept the call. Administrators can also disable the audio prompt for specific participants in the meeting using the  icon available for each participant.

Note: Enabling or disabling the audio prompt at global level overrides the setting at the participant level.

4.5.2 Adding dial-out contacts

There are two ways to add participants to the list of blast dial contacts. You can either manually add them one at a time using the **Add contact** button or you can use the CSV option to upload a

CSV file containing details of the contacts, such as name and video address.

Add contact

To add a contact:

1. Click on **Add Contact**. The **Add dial-out contact** window opens.
2. Enter the name and address of the contact
3. Enable or disable the audio prompt option using **Require prompt to connect participant**.
4. Click **Done**. The contact details get added to the list of contacts. You can edit or delete the contacts from the list using the associated buttons.

Upload CSV

To upload a CSV file:

1. Click on the **CSV** drop down to upload a .csv file containing name, address and audio prompt options of contacts.

Tip: You can download a blank CSV template and use that file to add the contacts and corresponding audio prompt options.

2. Upload the CSV file using the **Upload CSV** option.

Note: If you have already added contacts using either of the options, the added contacts will be overwritten and only the newly uploaded CSV contacts will be added.

3. When the file is uploaded, the **Download CSV** option is enabled. In the **CSV** drop down, you can select **Download CSV** to download the existing CSV, edit the content, and upload it again.

Note:

- If the CSV file contains invalid characters, is in the wrong file format, exceeds the maximum file size, or contains more than the allowed number of contacts, an error message with the suggested resolution is displayed. Follow the instructions in the message to correct the errors and upload the file.
 - The audio prompt value provided in the .csv file is case sensitive and will be disabled by default if an invalid value is entered or left blank.
-

4.6 Meetings page

The **Meetings** page displays a list of all active meetings and all upcoming meetings that are scheduled to start within the next 24 hours. The **Ended** filter will let you see meetings that ended within the last 7 days.

Meetings

Q Search in meeting title or owner

Type Scheduled Status [Clear filters](#)

Showing 6 of 6 meetings [Sync scheduled meetings](#)

Meeting title	Owner	Participants	Activity	Start time	End time	Duration
Weekly Team Update	Sandra Ty	5		23/10/2020 21:09		01:01:36
Marketing review		2		23/10/2020 21:38		00:32:43
Weekly team update		3		23/10/2020 21:47		00:23:52
Sales EMEAR		3		23/10/2020 21:56		00:15:01
Q4 review		3		23/10/2020 22:06		00:05:25
Product Roundup	Lewis Hill			24/10/2020 20:00	24/10/2020 20:30	

The table below explains what you see in the columns.

Table 3: Description of the titles you see in the columns

Titles	Description
Meeting title	Name of space where the meeting takes place. If the space has no name, then the meeting will be listed as "Unnamed meeting", and a unique alphanumeric ID will be displayed in brackets.
Owner	If the meeting takes place in a space that has an owner, this field will display the owner's name or unique user ID. If you are using TMS for scheduling meetings, then the meeting owner can be defined in TMS when you book the meeting.
Participants	Number of connected participants in the meeting. From Meeting Management version 2.8, this number no longer includes lobby participants. If any participants are waiting in the lobby, then there will be a participant icon next to the number. You can click it to see how many participants are in the lobby.
Activity	This field indicates if the meeting is currently being streamed or recorded.
Start time	The time when the first participant joined, or when TMS started the meeting. Alternatively, if the start time is grayed out, it is the scheduled start time.
End time	The time the meeting ended, or – if grayed out – the scheduled end time. If you are using TMS to schedule meetings, and a meeting ends before scheduled time, TMS may try to restart the meeting. If this happens, the end time will be different from the time the participants decided to end the meeting.
Duration	Elapsed time for the meeting.

Note:

- If Meeting Management is restarted at a time when a scheduled meeting is active past the scheduled end time, then it will be displayed as an unscheduled meeting.
- If you are using TMS to schedule meetings, and TMS is not connected to Meeting Management, all meetings appear as unscheduled, and the start and end time in Meeting Management may differ from the scheduled time you see in TMS.

See also:

[Find meetings](#)

4.7 Meeting details – unscheduled meeting

When you click on a meeting title on the **Meetings** page, you will see the details for that meeting.

The screenshot shows the Cisco Meeting Management interface for a meeting titled "Weekly Team Update". At the top, there's a header with "Cisco Meeting Management", a "Notifications" button with a red badge showing "2", and a user profile for "LDAP/Sally Wood Video operator". Below the header, the meeting title "Weekly Team Update" is displayed with navigation icons. To the right of the title are buttons for "Event logs", "Lock", and "End meeting".

Below the title, there's a section for meeting details:

- Owner:** Brian Novak
- Start time:** 02/27/2024 17:08
- End time:** 00:38:56
- Duration:** 00:38:56
- Lobby:** Empty

To the right of these details are several icons for actions: "Set layout for all", "Pane placement configuration", "Move to lobby", "Add participants", "Move participants", and "More".

Below the details is a search bar labeled "Search". Underneath the search bar are tabs for "Activity", "Important", "Speaking", "Status", "Connected", "Moved", and "Disconnected". Below these tabs, it says "Showing 3 of 3 participants". To the right are buttons for "Mute all", "Unmute all", and "Clear all importance".

The main part of the interface is a table with the following columns: "Participant name", "Join time", "Leave time", and "Actions". There are three rows of participants:

- Ben Dawkins:** Joined at 02/27/2024 17:19. The "Actions" column shows icons for mute, video, chat, and other controls.
- Brian Novak:** Joined at 02/27/2024 17:08. Similar action icons are shown.
- Patric Morray:** Joined at 02/27/2024 17:15 and left at 02/27/2024 17:16. Similar action icons are shown.

The table below explains what you see in the columns.

Fields	Description
Participant name	Name of the participant. <i>Meeting rooms with video systems can also appear in the list as participants.</i>
Join time	The time when the participant joined the meeting.
Leave time	The time when the participant left the meeting.
Actions	Call controls that let you control audio/video, call, or drop the participant. If supported in the meeting, you can also make the participant important or clear importance.

Note: Some features are disabled if the meeting is dual homed.

4.8 Meeting details – scheduled meeting

The screenshot shows the Cisco Meeting Management interface for a scheduled meeting titled "Weekly Team Update". At the top, there's a header with "Cisco Meeting Management" on the left, a "Notifications" button with a red badge showing "2", and a user profile for "LDAP/Sally Wood Video operator". Below the header, the meeting title "Weekly Team Update" is displayed with navigation icons (back, search, status) and action buttons: "Event logs", "Lock", and "Edit in TMS" (highlighted with a red box). A sidebar on the left lists meeting details: Owner (Brian Novak), Start time (02/27/2024 17:19), End time (02/27/2024 18:11), Duration, Checklist, Scheduled participants (4), and Lobby (Empty). To the right of these details are icons for "Set layout for all", "Pane placement configuration", "Move to lobby", "Add participants", "Move participants", and "More". Below the sidebar is a search bar and a filter section with tabs: "Activity", "Important", "Speaking", "Status", "Connected", "Moved", and "Disconnected". A status bar indicates "Showing 4 of 4 participants" and includes buttons for "Mute all", "Unmute all", and "Clear all importance". The main table lists participants with columns for checkboxes, status, name, join/leave times, and actions. The participants are Ben Dawkins, Brian Novak, Jonathan Mouny, and Patric Morray. The "Edit in TMS" button is highlighted with a red box.

Meeting details page for scheduled meetings has no **End meeting** button. However, it has an **Edit in TMS** button which takes you to the meeting's editing page in TMS.

Note: The **Edit in TMS** button works as a hyperlink. If you right-click the button, you can choose to open in a new tab, copy link to paste in a different browser, etc.

The table below explains the icons that you see on the top of the meetings details page.

Table 4: Description for the icons available on the Meetings page

Fields	Description
Event logs	Event logs give a timeline for what happened in a meeting
Lock	Lock meetings to keep some or all participants out of an active meeting
Edit in TMS	Takes you to the meeting's editing page in TMS.
Set layout for all	Change the video layout for all participants.
Pane placement	Place connected participants in specific panes in an active meeting.
Move to lobby	In a locked meeting, move specific or all participants to lobby. It is enabled only when the meeting is locked.

Fields	Description
Add participants	Add new participants or call back disconnected participants
Move participants	In active meetings, choose one or more participants to move them to a different meeting
More	More options are available for meetings : Audio mute on entry, Video mute on entry, Recording and Streaming • Audio mute on entry – Forces new participants to be muted when they join. • Video mute on entry – Forces new participants to be video muted when they join. • Recording – Start recording a meeting or stop an ongoing recording if a recorder is configured on the Meeting Server • Streaming – Start or stop streaming if streaming is configured on the Meeting Server with a streaming URI set for the meeting
Mute all	Mute audio for all or selected participants in a meeting
Unmute all	Unmute audio for all or selected participants in a meeting
Clear all importance	Clear importance for all participants

You can select the check boxes that are listed against each participant to manually track, who have joined the meeting.

The table below explains the icons that you see against the participants in a meeting.

Table 5: Description of the icons available against individual participants in the participants list

Icons	Description
Mute audio	Mute audio for selected participant in a meeting
Stop video	Stop video for selected participant in a meeting
Make important and pin to top	Participant will be marked as important with a blue star and pinned at the top of the participant list
Send DTMF	Send DTMF key for specific participants.
More	More options are available for meetings : Call, Move to lobby, Snapshot • Call – Redial a participant to the meeting. It is enabled only when the participant gets dropped from the meeting. • Move to lobby – Move specific participant to lobby. It is enabled only when the meeting is locked. • Snapshot – Take snapshot of selected participants in a meeting
Drop	Drop participant from the meeting

Note: The participant names in the checklist for scheduled participants appear as they were scheduled in TMS, and the list is not updated to align with the participant names that are received from the Meeting Server when the meeting is active.

For instance, the same participant can be registered with a different name on TMS than the one registered on the Meeting Server, or participants can choose to join the meeting from a different video endpoint than scheduled.

4.9 Participant details

When you select a participant in the meeting details, a side panel with call information and individual call controls will open. Scroll down to see call statistics.

The screenshot shows the Jitsi Meet interface for a meeting titled "Department Update". The left sidebar contains navigation links: Overview, Meetings, Spaces, Users, Servers, Logs, Licenses, and Help. The main area displays meeting details and a list of participants.

Meeting Details:

- Owner: Brian Novak
- Start time: 23/10/2020 21:41
- End time:
- Duration: 00:34:35
- Lobby: Empty

Participants:

Showing 4 of 4 participants

Participant name	Join time
Allie Dawson	23/10/2
John Hanson	23/10/2
Sally Wood	23/10/2
George Cavendish	23/10/2

Participant Details Panel (George Cavendish):

Join time: 04/06/2026 17:06 CMS: bpsaidpa
 Encryption: None IP address: 10.77.196.79
 Call type: SIP Device name: Oboe Board 55P
 Direction: Outgoing

Pane placement: model1
 Layout: allEqualNinths

Audio Statistics:

	To participant	From participant
Protocol	opus	opus
Channel rate	63 kbps	7 kbps
Current packet loss	0 %	0 %
Jitter	7 ms	2 ms
RTT	3 ms	-

Video Statistics:

	To participant	From participant
Protocol	h264	h264
Resolution	1920x1080	1920x1080
Frame rate	29.9 fps	29.9 fps
Channel rate	1629 kbps	1908 kbps
Current packet loss	0 %	0 %
Jitter	8 ms	4 ms
RTT	7 ms	-

The table below explains what you see in the columns at the top.

Fields	Description
Join time	The time this participant joined the meeting. If the participant has been disconnected and then joined again, then this will be the time for when the participant rejoined.
Encryption	Full: All connections are encrypted. Mixed: Some connections are encrypted. None: No connections are encrypted.
Call type	SIP: The participant is using a video system that uses SIP or TIP protocol. Web app: The participant is using web app. Lync: The participant is using Lync or Skype for Business.
Direction	Direction that the call was made, from the perspective of the Meeting Server
CMS	The Call Bridge that hosts the call for this participant
IP address	Displays the IP address of the participants present in a meeting. The details will be stored even after the participant leaves or ends the meeting. This applies to both SIP and web app participants.
Device type	Displays the device information of the participants present in a meeting. This includes the device type and browser version used for joining the meeting. The browser name and version will be displayed for web app participants, and the device name will be displayed for participants joining from SIP endpoints. If the device name is not configured or not present at SIP endpoints, the SIP URI will be displayed instead of the device name. Note: The device information is not dynamically updated during the call, except for when a participant reconnects after being disconnected. The device details are not updated if there is any change in IP address or device name due to manually changing name or VPN update or browser update during the call.



5 Monitor and manage meetings

As a video operator, you can monitor and manage meetings that run on the Cisco Meeting Server.

5.1 Find meetings

If you are monitoring many meetings, here are a few hints to help you find the relevant meetings:

- **Pin meetings** at the top of the list, from the list view, or from the meeting details of the meeting you want to pin.

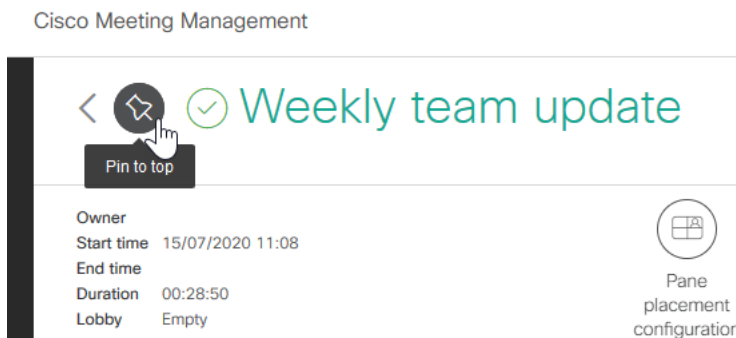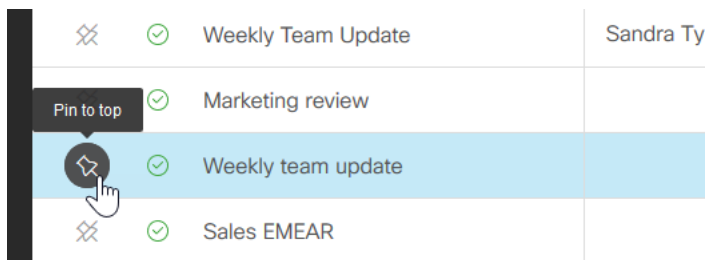

Pinned meetings stay at the top until you unpin them, or until you sign out.

- **Filter** to see scheduled or unscheduled meetings, or filter to see meetings with a specific status.



*By default, the filters for **Active** and **Upcoming** meetings are selected when you enter the **Meetings** page.*

- **Sync scheduled meetings** if you are looking for a meeting that was scheduled less than 5 minutes ago. Meeting Management automatically synchronizes with TMS every 5 minutes, but you can start the synchronization manually if you want to find a specific meeting that has just been scheduled.

Note: You will see a message when the synchronization starts, but Meeting Management does not let you know when it is finished, and it does not highlight which meetings were added to your view in Meeting Management.

- **Sort by column** allows you to sort meetings in ascending or descending order of a selected column.

Showing 6 of 6 meetings [Sync scheduled meetings](#)

Meeting title	Owner	Participants	Activity	Start time	End time	Duration
  Product Roundup	Lewis Hill			16/07/2020 09:00	16/07/2020 09:30	
  Weekly Team Update	Sandra Ty	5		15/07/2020 10:31		01:02:46

- **Sort by multiple columns**, allows you to sort meetings in ascending or descending order of multiple columns.

Sort by one column, then hold shift down to refine the sorting by clicking another column. For example, you can click the **Meeting title** column, then hold shift down and click the **Participants** column. Then all meetings will be sorted alphabetically by meeting title, and meetings with the same title will be sorted by the number of participants in the meeting.

In the screenshot below, you can see that meetings are sorted by meeting title, Z → A, and then further sorted by number of participants, lowest → highest.

Meeting title	Owner	Participants	Activity	Start time	End time	Duration
  Weekly team update		3		23/10/2020 21:47		00:24:02
  Weekly Team Update	Sandra Ty	5		23/10/2020 21:09		01:01:46
  Sales EMEAR		3		23/10/2020 21:56		00:15:11
  Q4 review		3		23/10/2020 22:06		00:05:35
  Product Roundup	Lewis Hill			24/10/2020 20:00	24/10/2020 20:30	
  Marketing review		2		23/10/2020 21:38		00:32:53

The meetings stay sorted as selected until you leave this view. By default, meetings are sorted by start time, ascending, when you enter the **Meetings** page.

- **Search for meetings** with a specific title or owner, participant, or TMS conference ID.

All search results are listed by meeting title. As you start typing, Meeting Management will list meetings that contain items that match the search criteria, but it does not display participant name or TMS conference ID.

You can see the TMS conference ID when you hover over a meeting title. To see the participant you searched for, you must open the meeting details to check.

in

Select...

meeting title or owner
participant name
TMS conference ID

Type

Scheduled

Unscheduled

Status

Active

Ended

Showing 5 of 6 meetings

5.2 Edit upcoming meetings

All upcoming meetings that have been scheduled via TMS are displayed in Meeting Management up to 24 hours before they start. If you need to make changes to the scheduled meeting, click **Edit in TMS** to access the meeting in TMS and edit the details there.

5.3 Find participants

If you are monitoring a large meeting, here are a few hints to how you can find an individual participant:

- **Pin participants**  icon against each participant allows you to pin selected participant at the top of the list.
Pinned participants stay at the top until you unpin them, or until you sign out.
- **Filter** to see participants who are made important, who are speaking, or who have a specific connection status.

Activity

Important

Speaking

 Status

Connected


Moved

Disconnected

[Clear filters](#)

Note: If pane placement is on, then the **Important** filter is replaced with a **Placed in pane** filter.

- **Check the Lobby in the top left corner** if you are looking for a participant who has a guest profile. Guests who have not yet been let into the meeting will appear here.

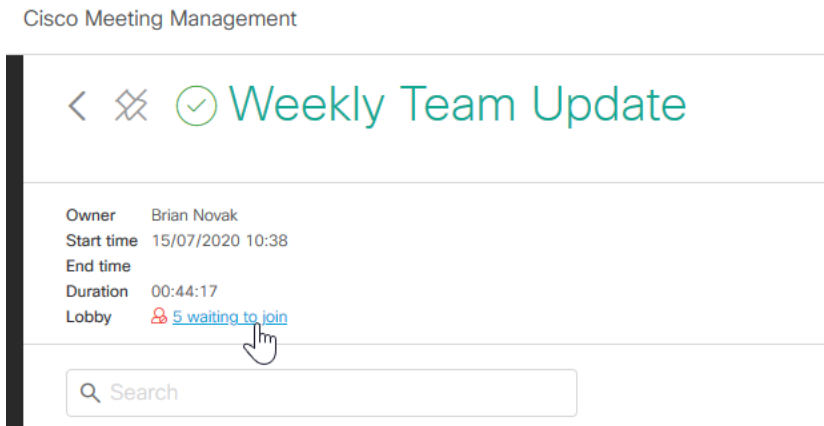

- **Sort by column**, allows you to sort participants in ascending or descending order based on a selected column.
- **Sort by multiple columns**, allows you to sort participants in ascending or descending order based on multiple column.

Sort by one column, then hold shift down to refine the sorting by clicking another column. For example, you can click the **Join time** column, then hold shift down and click the **Participant name** column. Then all participants will be sorted by join time, and all participants who joined at the same time will be sorted alphabetically.

In the screenshot below, you can see that participants are sorted by join time, and then further sorted by name, A → Z.

The participants stay sorted as selected until you leave this view. By default, participants are sorted primarily by connection status (connected participants at the top), secondarily by the time they joined the meeting (participants who joined last at the top).

- **Search** allows you to search for participants in a meeting.

Note: Only participants who have been connected to the meeting are displayed. You will not see space members or invited participants who did not join.

If you are looking for a specific participant but do not know which meeting the person joined, you can search in all meetings listed on the **Meetings** page.

5.4 Place specific participants in fixed pane and assigning a rotating pane for other participants

In an active meeting, you can place participants in specific panes so they are always seen in a specific location of the screen, even when they are not speaking. It enables a particular

participant to view other participants in different order/panes/arrangements. Administrators and video operators can create and apply different pane placement arrangements, called as models, for every participant.

Similar to importance, pane placement is useful if there are people in the meeting who you want to be visible at all times, for example, the hosts or invited speakers. Use importance if you want to change the position of the participants depending upon who is speaking. Use pane placement if you want the participants to be placed in fixed positions on the screen. Pane placements can be applied on custom and standard layouts.

You also have an option to assign a pane that will display all participants in a meeting who are not reserved with a fixed pane in the model. Assigning panes to some participants makes other participants remain out of focus during the meeting. By assigning a pane as roll participants pane in a pane placement layout, each participant with an active video is displayed for a duration of 20 seconds in a rotational sequence, making it easier to manage participant visibility during meetings. However, this duration is not configurable. This applies for both SIP and web app participants.

If all participants in the meeting are SIP participants using single screen endpoints, you can control what the participants can see, and if all panes in the selected layout are either reserved for pane placement or occupied by active participants. For all other scenarios there are [Limitations](#).

5.4.1 Points to note

- Each meeting can have a maximum of three pane placement models defined, which can be modified or deleted at any time while the meeting is active. However, the modified model must be re-applied for the modifications to take effect on the participants' screen.
- When a model is created, only the **Delete** button is enabled.
- The **Save** and **Apply** buttons will be enabled when a model is selected and modified.
- The **Apply** button for a model is enabled only if at least one pane is assigned to a participant.
- Models can be modified and saved multiple times for later review, but changes will take effect only after clicking **Apply**.
- Only one model can be updated at a time. Administrators must save the changes before switching to another model, then return to apply the saved changes when needed.
- The participant's video must be turned on throughout the meeting for the participant to be displayed in a pane.
- The defined pane placement models can be assigned to an individual, multiple participants, or all at once reducing the time taken in assigning the arrangement to each participant.
- The models will be available and can be assigned only until the meeting is active.

- Each participant may only be assigned one model at a time, but the same model can be assigned to multiple participants.
- Pane placement can only be set after the meeting has started, and only active participants can be assigned to fixed panes. If placed participants are disconnected from the meeting, their pane is no longer assigned to them. Such participants will be displayed in the roll participant pane.

This means that the pane that was assigned to them will be displayed as a blank pane for other participants. If you want placed participants to be placed in the same pane after they reconnect, you must assign the model again to these participants.

- Participants newly joining the meeting or who rejoined after getting disconnected from the meeting will get a preset model applied only if you select a model using the **Select a Pane Placement for new participants** drop-down option. This option will be disabled till at least one pane placement model is created. If this drop-down is not set or if **None** option is selected, then the new participants joining the meeting will have a random pane placement model applied.
- When a model is assigned to a single, selected, or all participants, the roll participant pane selected in the model will also be displayed accordingly.
- Models created without selecting any layout or reserved panes cannot be used for pane placement and an error notification will be displayed.
- If a model is applied for a particular participant A in a meeting and later another model is applied for all the participants in this meeting. Then the model applied later will take precedence and override the model which was previously applied for participant A.
- An indicator  will be displayed in the **Status** column of each participant with pane placement model applied. Hovering on this icon will display the name of the pane placement model applied to the participant.
- When pane placement is applied, the **Participant details** side panel includes the information about the pane placement model and layout that is applied for the participant.
- The  indicator tooltip does not appear when new participants join a meeting. In addition, the **Pane placement** and **Layout** fields display **N/A** on the **Participant details** page.
- If Meeting Management is restarted, the  indicator tooltip does not appear for all participants or for individual participants. The **Pane placement** and **Layout** fields display **N/A** on the **Participant details** page.

- The roll participant pane will remain empty:
 - If all the participants, other than the participants shown in the fixed pane(s), have their video turned off.
 - If network connectivity causes video streaming issues for any participant.
 - If a participant turns off the video while being displayed on the roll participant pane.
- When there are multiple Meeting Management setups:
 - Models created in one Meeting Management will not be available on other Meeting Management setups to edit or apply.
 - You can disable pane placement models from any Meeting Management by selecting the **Disable** option available in the **Pane placement for all** drop-down.
 - If there are models created in multiple setups, the last/latest model applied for pane placement from any of the Meeting Management takes precedence.

5.4.2 Limitations

There are some general limitations:

- **Pane placement works only for SIP and web app participants.** You can only assign panes to SIP and web app participants, and only they can see the layout and pane placement you have configured.

Meeting Management cannot control the layouts for Skype for Business, so pane placement will not work for Skype for Business participants.

- If all participants with reserved panes in a model are dropped out of the meeting, then that model cannot be applied to other participants in the meeting.
- Pane Placement per Participant can be applied only to the connected participants in a meeting.
- If the models are deleted during a meeting after pane placement has been applied for all or some of the participants, the pane placement button on the meeting level and per participant level stays enabled. The administrator/video operator must manually disable the pane placement using the **Disable** button.
- If the model applied for the new participants is deleted by the administrator or video operator, it will still be listed in the **Select a Pane placement for new participants** drop-down with a deleted label.
- Participants who have chosen different layout will see the placed participants in other positions on the screen than the ones you defined.
- **Importance is disabled when pane placement is turned on.** When you set pane


placement, Meeting Management clears all importance.

- **Pane placement does not work for gateway calls or dual homed calls.**

5.4.3 How to set pane placement

To place participants in panes:

1. Click the **Pane placement configuration** button.

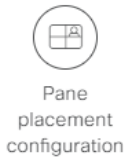

2. For the participants that you are going to place in panes, choose what you want them to see on their screen using the drop-down options available against **Participants looking at their own panes will see** field:

The choices are:

- **Self-view:** *The placed participants will see their own video stream in the pane that is reserved for them.*
The quality of self-view showed within the video layout will not be as good as the locally rendered self-view, as the video stream is transcoded which adds latency.
- **Blank pane:** *The placed participants will see an empty background in the pane that is reserved for them.*
- **Next participant:** *The placed participants will not see themselves, and they cannot see which pane is reserved for them. Instead, their reserved pane will be occupied by the next placed participant, and all the following placed participants will move "up" one pane.*

Note: If participant labels are turned on, then they will appear on the self-view, but not in the blank view. Participant labels can only be turned on or off via the Meeting Server API commands.

3. Click **Apply**

- Click on **Add pane placement model** button in **Pane placement model** section.

Pane placement configuration

Global settings

Participants looking at their own panes will see Self-view

Select a pane placement for new participants Select pane placement model

Pane placement model

You can save max 3 pane placement models

model1 Save Apply Delete

model3 Save Apply Delete

Add pane placement model

Select a layout for pane placement

Add participants to panes

Pane 1 Reserved. Add Participant ×

Pane 2 Reserved. Add Participant ×

Pane 3 Reserved. Add Participant ×

Preview 1 Screen

1 2 3

Close

- Select a layout for pane placement

Select a layout for pane placement


4 Equal

9 Equal


16 Equal

- Add participants to panes by clicking on **Reserved. Add Participant** option.

If needed you can search from the list of active participants using the search bar.

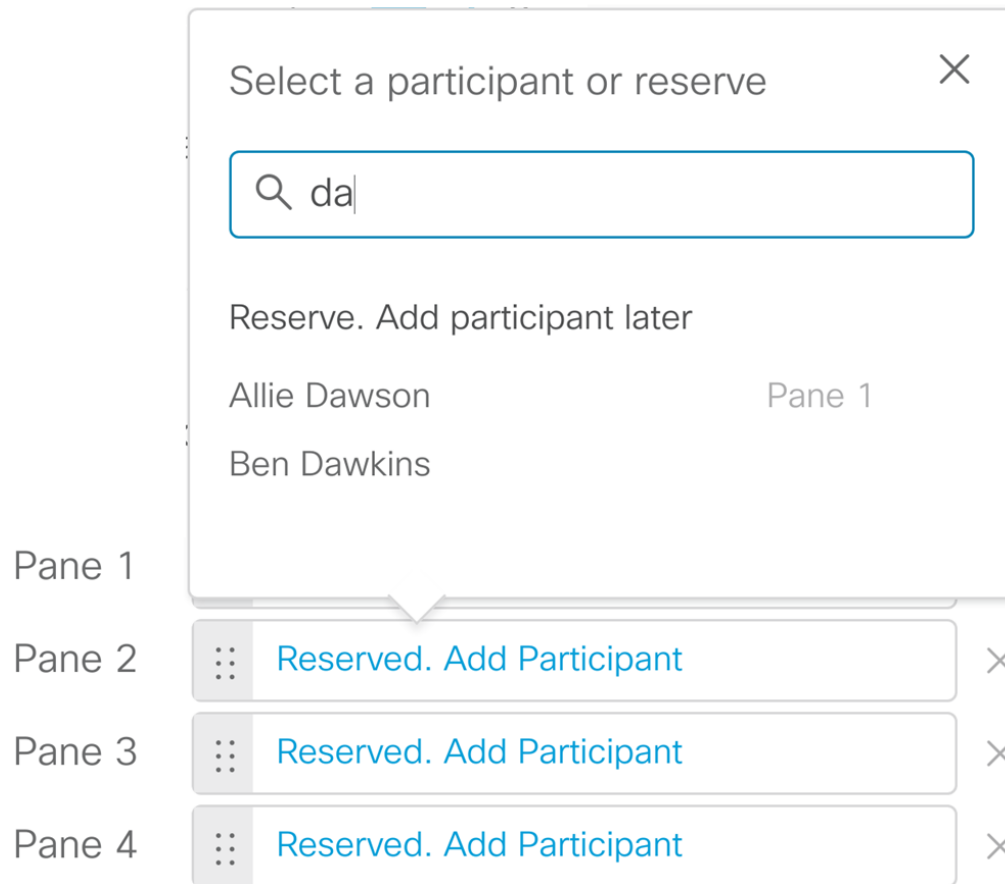

If you have added the participants in the wrong order, you can drag a participant up or down. Use the dotted area to drag-and-drop a pane.

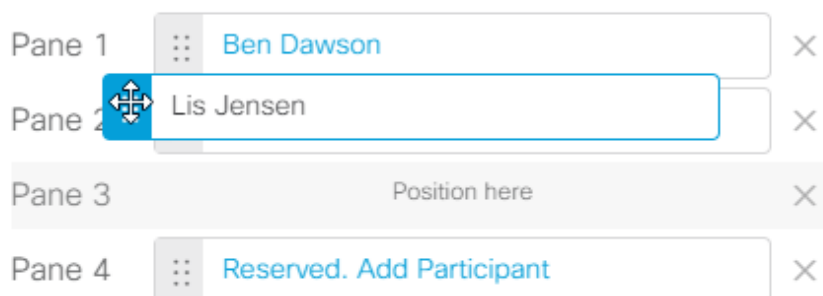

You can reserve more panes by clicking the **Add another pane** button available below the list, and you can remove a reserved pane by clicking the **X** next to the pane. For every reserved pane you remove, an active speaker can be displayed in the layout.

Note: You cannot reserve panes for alternating active speakers. Alternating active speakers will always be placed in panes with higher numbers than those reserved.

For example, you can have specific participants placed in the first two panes and leave the rest available to display active speakers. But you cannot place specific participants in panes 1 and 4 and leave panes 2 and 3 available for active speakers.

Note: When the Active Speaker feature is in use from the Meeting Server, Pane 1 is always reserved for Active Speaker. The pane assignment changes from Pane n to Pane n+1. For more information, see [Cisco Meeting Server Administrator Quick Reference Guide Screen Layouts, Pane Placement, and Customizable Layouts](#).

- 7. While reserving panes, use the **Roll participants** option to reserve a pane for displaying those participants, who are not assigned to any fixed pane in the meeting, for 20 seconds each in a rotational basis.
- 8. Check the preview and optimize for the preferred number of screens.
- 9. *You can see a preview of where each participant would be placed in the chosen layout on 1-screen, 2-screen, or 3-screen endpoints. The previews are correct if all panes are reserved, or if there are at least as many participants in the meeting as there are panes in the selected layout.*
- 10. *In the example below you can see how it looks when 3 panes are reserved, but only two have been assigned to participants. Originally 4 panes were reserved, but we removed one so the bottom right pane can be occupied by the one who last spoke of the participants who have not been placed in panes.*

Pane 1

Allie Dawson

×

Pane 2

Reserved. Add Participant

×

Pane 3

Ben Dawkins

×

Preview

1 Screen

1

2

3

x

11. This is the same example, showing the 2 screen preview. Note that Lis Jensen is now displayed at the top of the right screen instead of the bottom of the left screen. In this view, 5 of the latest active speakers can be displayed.

Pane 1 ⋮ Allie Dawson ×

Pane 2 ⋮ Reserved. Add Participant ×

Pane 3 ⋮ Ben Dawkins ×

Preview 2 Screens ▾

1	2	3	x
x	x	x	x

12. Click **Save** button.
13. Repeat Step 4 to 8 if you want to add more models. A maximum of three models can be added for a meeting.
14. Use the **Select a pane placement for new participants** drop-down and choose a model from the list to be applied for the new participants joining the meeting. This option will be enabled only if at least one pane placement model is created.

Select the **None** option to remove.

15. Click **Close** button.

To make any changes to any model during an ongoing meeting:

1. Select the model to edit.
2. Select the layout and assign panes for the participants. Click **Save**.
3. Click **Apply**, to apply the changes to the meeting.
4. Click **Delete** to delete any model, which will automatically unassign this model from all the participants.

5.4.4 Applying pane placement models

The defined pane placement models can be applied to a single participant, multiple participants selected at once or all the participants in the meeting.

- To apply the defined pane placement models for all or selected participants:

1. Select the **Select** check box or choose the required participants from the list of active participants.

*In case you are choosing some participants from the list of active participants instead of selecting all the **Pane Placement for all** button changes to the **Pane Placement** button.*

2. Click the **Pane Placement for all** button.
3. Choose the required pane placement model from the **Pane Placement for all** pop-over to apply.

*In case there are no models created, the pop-over list displays **No pane placement model is defined**.*

4. The **Pane Placement for all** pop-over also includes the option to disable pane placement model, if there are any models that are already applied. Click **Disable** to disable any pane placement model applied.


An indicator **P** will be displayed in the **Status** column for participants who have pane placement model applied.

- To apply pane placement for a particular participant:

The **More** **⋮** option available against each participant includes a **Pane placement** option that lists the available pane placement models.

1. Click on **More** **⋮** option available against any participant to open **More** drop-down list.
2. Select **Pane placement** from the **More** pop-over options.
3. Choose the required pane placement model for the selected participant from **Pane placement** model name list to apply the selected model.

A maximum of three models will be available in the list.

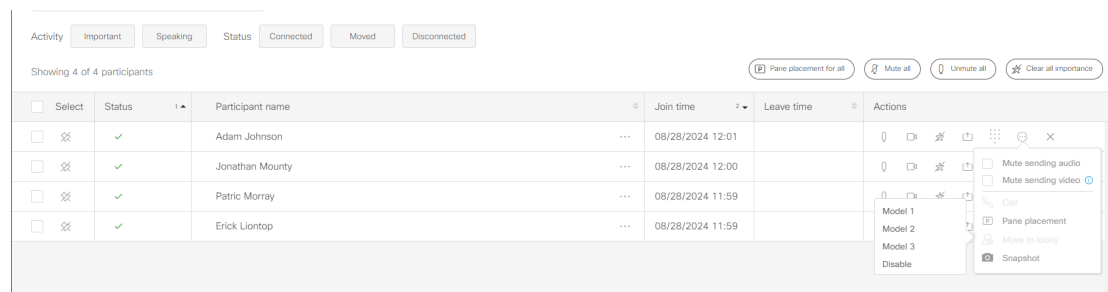

4. Click **Disable** button to disable any pane placement model that is already applied.

An indicator **P** will be displayed in the **Status** column for the participant .

5.5 Move participants to a different meeting

In active meetings, you can choose one or more participants and move them to a different meeting. This is useful if someone has dialed into the wrong meeting, or if someone needs to go straight from one meeting to another. It can also be used for break-out sessions from bigger meetings.

You cannot move all participants. The general restrictions are:

- You cannot move participants who are using a Microsoft client (Lync, Skype for Business).
- You cannot move anyone into a dual homed meeting.
- You can move participants during an ad hoc call held in an ad hoc space. However, moving participants will not be enabled in an ad hoc meeting when integrated with Cisco Unified Communications Manager.

Depending on how your Cisco Meeting Server deployment is set up, there could be more restrictions. If you want to know more, see the guide "Cisco Meeting Server, Administrator Guide to Moving a Participant using the API" which you can find in the list of [Meeting Server Configuration Guides](#).

As an operator, you do not need to know all the details of the limitations. Meeting Management will display a warning if a participant cannot be moved.

However, you do need to know a bit of what happens when you move someone into a new meeting:

- If a participant is presenting when you move them to a new meeting, then it is likely that the presentation is also seen in the new meeting.

- Mute status, selected layout, importance and other settings will be replaced with default settings for the new meeting.

*You can retain some of the participant-level settings applied in the previous meeting, including send audio mute, send video mute, receive audio mute, receive video mute, and content sharing restriction. To retain any or all of these settings, use **Audio, video and content sharing** check-box. The check-box is activated only when at least one participant is selected.*

Note:

- This option is available for both SIP and web app participants.
- Layout and pane placement settings cannot be retained when moving participants to another meeting.
- The settings will be retained even if the participants are moved to the lobby while waiting to enter a locked meeting.
- Dial out participants can also be moved to another meeting via Meeting Management.

-
- If you move someone into a meeting where participants need to be activated and are waiting in the lobby, then Meeting Management turns the moved participant into an activator. This means that the moved participant will enter the meeting immediately, along with any other participants who were waiting in the lobby.
 - If the new meeting is locked, Meeting Management will override the lock, and the moved participant will be taken straight into the meeting. The meeting will stay locked for other participants.

Note: The lock mode affects what happens when you move participants to a locked meeting. If you are using the lock mode that lets you lock out all participants, then moved participants may stay in the lobby of the new meeting.

To move participants:

- 1. Choose the participants you want to move.

☐	☐	☐	Participant name	Join time	Leave time	Actions
☐	☒	☒	James Reeves	23/10/2020 21:51		     
☐	☒	☒	Allie Dawson	23/10/2020 21:46		     
☒	☒	☒	Brian Novak	23/10/2020 21:42		     
☐	☒	☒	Ben Dawkins	23/10/2020 21:42		     
☒	☒	☒	John Smith	23/10/2020 21:42		     

Note: If you want to move participants out of a dual homed meeting, you cannot select participants from the meeting details view. Instead, click the **Move participants** button and select participants in the **Move participants** dialog.

- 2. Click the **Move participants** button.



Move
participants

3. Check that you have selected all the participants you want to move.

*If you forgot to add someone, you can change the filter to **All** and select more participants.*

Move Participants ×

Moving from: Weekly Team Update

Participants Selected All

Deselect all

☒ Brian Novak

☒ John Smith

☒ Audio, video and content sharing

Moving to

→ Marketing review

Start time: 23/10/2020 22:01; Owner: Brian Novak

NPI team meeting

 Moving 2 participants from Weekly Team Update to Marketing review

Cancel

Move

Note:

- If any participants cannot be moved, you will see a warning sign next to the participant's name.
- ☐ Allie Dawson
☒ ⚠ Ben Dawkins
☒ Brian Novak
- Dual homed meetings will not appear in the list, as you cannot move someone into a dual homed meeting.
 - The list in this dialog is updated continuously. If any of the participants are disconnected from the meeting, then they disappear from the list.

4. Choose the meeting you want to move the participants to.
5. Select the **Audio, video and content sharing** check-box to retain settings from previous meeting.
6. Click **Move**.

Some participants cannot be moved using this feature. To move someone manually:

1. Open the participant details to copy the video address or number.
2. **Drop** the participant from the current meeting.
3. Go to the meeting you want to move the participant to.
4. Click **Add participants**, then paste or type the video address or number, and **Add**.

After you have moved participants out of a meeting, they still appear in the participant list with the status **Moved**. Also, you can click **Follow** to see the meeting they were moved to.

☐			Participant name	Join time	Leave time	Actions
☐			James Reeves	23/10/2020 21:51		
☐			Allie Dawson	23/10/2020 21:46		
☐			Ben Dawkins	23/10/2020 21:42		
☐			Brian Novak Follow	23/10/2020 21:42	23/10/2020 22:11	
☐			John Smith Follow	23/10/2020 21:42	23/10/2020 22:11	

5.6 Use the meeting lobby and lock meetings

For some types of meetings it can be useful that some participants cannot enter the meeting until a host is ready. For example, you may want to make sure that you have everything set up

before invited participants join, or you may want to lock the meeting after start so participants who join late cannot enter unnoticed.

5.6.1 Use the lobby to let invited participants wait for a host

If your Meeting Server administrator has set it up, then some of the participants will stay in a meeting lobby if no host is present. This use of the meeting lobby depends on your administrator setting up specific user profiles:

- **Activator:** Participants with Activator profile act as hosts and can start meetings on their own. Also, when they join a meeting, all lobby participants are automatically moved into the meeting.
- **non-Activator:** Participants with non-Activator profile act as a kind of guest who cannot start a meeting on their own. They must wait in the lobby until an Activator joins and starts the meeting.

5.6.2 Lock meetings

You can lock meetings to keep some or all participants out of an active meeting. There are two different lock modes, a "needs activation" lock mode that lets you lock out non-Activators, and an "all" lock mode that lets you lock out all participants. The default lock mode is "all", and your administrator can change it to the "needs activation" mode.

The lock mode can be set on different levels, such as for just one space, but we expect that most administrators will set one lock mode for everything.

Note: Meeting Management does not show which lock mode is in use, so ask your administrator what is configured.

Limitations for the "needs activation" lock mode:

- You cannot lock any dual homed meetings.
- You cannot lock meetings where individual participants are dialing into meetings that are hosted on the AVMCU.
- You cannot lock forwarded calls.
- You cannot lock gateway calls.
- Members of a space can never be locked out of a meeting that is hosted in that space.
- Non-members of a space do not always have non-Activator profiles.
- As an operator, you cannot see if a participant has an Activator or non-Activator profile.
- As an operator, you cannot see which rules has been set for what happens after the last Activator leaves the meeting.

Limitations for the "all" lock mode:

- You cannot lock any dual homed meetings.
- You cannot lock meetings where individual participants are dialing into meetings that are hosted on the AVMCU.
You cannot lock forwarded calls.
- As an operator, you cannot see which rules has been set for what happens after the last Activator leaves the meeting.

To lock a meeting:

1. Click  Lock

This locks out participants with non-Activator profile or all participants, depending on Meeting Server version and configuration.

To unlock a meeting:


1. Click 

This lets all participants enter the meeting if an Activator is present. If there is no Activator in the meeting then non-Activators will still be waiting in the lobby until an Activator joins.

5.6.3 Move participants to lobby

If a meeting is locked, you can move specific or all participants to lobby using **Move to Lobby** option. You can select the participants in the meeting and click **Move to Lobby** option.

You can also move individual participant to lobby using the move to lobby  icon available under **More**  option in the **Actions** tab of the participants list.

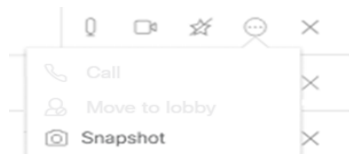

Once the participant is moved to lobby, a notification is displayed indicating the participants' move. To view the list of participants who are moved to lobby, click on the **Lobby** link available in the meeting information.

If the Meeting Server administrator has allowed a participant to directly enter a locked meeting without waiting in the lobby, you cannot move such participants to lobby. Such participants will have  icon placed against their name in the participants list. Hovering on the icon displays a tool tip **This participant can not be moved to lobby**. When you try to move such participants to lobby, an notification **Some of the participants cannot be moved to lobby** is displayed. For such participants the **Move to lobby** icon () available against the participant is disabled.


5.6.4 Admit participants

If a meeting is locked you can choose to manually let lobby participants enter the meeting.

You can use the **Admit all** button to manually let all lobby participants (including non-Activators) into the meeting, even if no Activator is present. You can also admit individual participants from the lobby into an ongoing meeting.

To let lobby participants into a meeting:

1. In the meeting details, click on the number of participants waiting

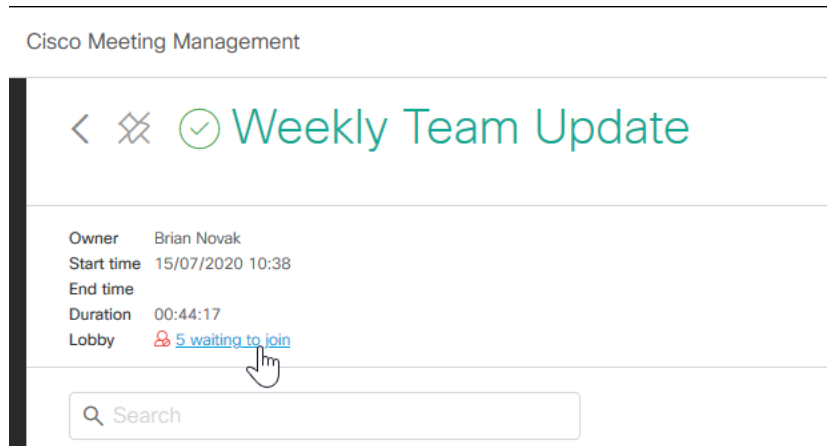

A dialog with a list of lobby participants will open.

2. Optional: Drop any participants you do not want to enter the meeting.

Note: Participants that you drop from the lobby will appear in the general list of disconnected participants, and Meeting Management does not show which participants were disconnected from the lobby and which were dropped from the actual meeting.

Note: If you drop participants who are using the Cisco Meeting Server web app, then you cannot dial them back into the meeting. The web app can be used only for joining meetings, not for receiving calls.

3. Optional: Change display name for participants.
 - a. Click  next to a participant's name.
 - b. Change the name, and **Save**.
4. Admit individual or all participants from the lobby into an ongoing meeting. In the **Lobby** pop-up screen:
 - Admit individual participant: To admit individual participant in the lobby into the meeting, click on the check mark button in **Actions** menu associated with that participant.

- Admit all participants: Click **Admit all** button to let all the participants in the lobby to join the meeting.

If the meeting is unlocked, then all lobby participants are let into the meeting whether or not an Activator is present.

5.6.5 What happens after an Activator leaves?

Meeting Server administrators can configure any of the following settings when the last Activator leaves the meeting:

- deactivate: The non-Activators stay connected, but they are moved back to the lobby.
- disconnect: The non-Activators are disconnected.
- remainActivated: The non-Activators stay in the meeting.

The participant disconnect/deactivate time is set (in seconds) by the Meeting Server administrator. Ask your Cisco Meeting Server administrator if you want to know what the settings are.

5.7 Add participants

You can add new participants or call back disconnected participants.

To add new participants:

1. Click the **Add participants** button.



Add
participants

2. Enter video addresses or numbers for the participants you want to add and the DTMF digits. Entering the DTMF digits here allows the participant to join the meeting directly.

Note: In case the DTMF digits are not provided here, it should be provided by the participant or video operator while joining the meeting.

If your administrator has added TMS phonebooks to Meeting Management, then you can search for contacts instead. Ask your administrator if you are in doubt. The search will work as it does when you search in TMS, but you will see maximum 50 search results.

3. Click **Add**.

Participants who are added with their address or number may appear in the participant list with their address, as Meeting Management may not be able to retrieve information about their display name. However, you can [change their display name](#) when they are connected.

To call back a disconnected participant, use the individual call button for the participant.

Note: If a participant cannot be connected, you may not see any error messages. First you will see a spinner as connection status, and then the status will change to disconnected. Try again. If the participant still cannot be connected, then ask your administrator to check the Meeting Server dial plans.

5.7.1 Specify DTMF digits when adding a participant

To input the DTMF digits:

1. In the meeting details, find the participant's name.
2. In the Actions column, click 
3. Enter the DTMF digits in the pop-up and click **Ok** to join meeting.

5.8 Change display name for a participant

During an active meeting, you can change the display name for any connected participant. The display name you enter will be seen by all participants in the meeting, for as long as the participant is connected.

Note: If renamed participants are disconnected from the meeting, they will have their original display name when they reconnect.


To change the display name for a participant:

1. Open the side panel with participant details.
2. Next to the name, click .
3. Write the new name and **Save**.

Note: The length of the name can be up to 50 Roman characters with no accents, or up to 12 Chinese characters. However, people in the meeting are not likely to ever see more than around 25 Roman characters in the participant list. Also, the label that they see in a participant's pane may be shortened, depending on how much space is available on the screen.

5.9 Change layout for all or selected participants in a meeting

You can change the video layout for all participants or selected participants by clicking on individual participant who are dialing in from a SIP endpoint and web app. You can choose one of the layouts shown here:

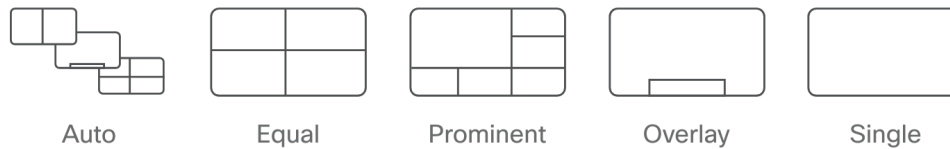

Except for the **Single** layout, these are dynamic layout "families" that change as more participants enter the meeting. For instance, the **Equal** layout is showing panes of equal size, and it expands from a 4 participant view up to a 25 participant view.

For more information about the different layouts, see *Cisco Meeting Server Administrator Quick Reference Guide: Screen Layouts and Pane Placement*.

You can assign a preset layout for the new participants joining an ongoing meeting or those who reconnect after being disconnected from the meeting, providing a seamless experience. Any layout set by a meeting participant using the web app will override the layout that you have set for that participant using Meeting Management.

Only individual participants who have layout permissions can subsequently change their layout.

To change layout:

1. Optional: Select the participants you want to change layout for.
2. Click the **Set layout for all** button above the participant list.



3. Click the **Apply** button to apply the changes made while selecting the layout or use the **Cancel** button to cancel the changes without applying them.

Note: If pane placement is turned on, we recommend that you use the **Pane placement configuration** button to change layouts. This is because pane placement uses specific versions of each layout family that you cannot choose here.

Note: Only a subset of the existing Meeting Server layouts are available in Meeting Management.

You cannot change layouts for Lync/Skype for Business clients or for the web app. Also, some endpoints may have different layouts than the ones available on the Meeting Server, or show different behavior when you try to change the layout. See our knowledge base for an overview:

[How will my endpoint layout controls behave when used with Cisco Meeting Server and managed by Cisco Meeting Management](#)

5.9.1 Assign custom layouts

If you have purchased license for customizable layouts, you can apply a customized screen layout that suits your specific needs for the ongoing meetings and/or the participants in the meeting. These layouts are defined in the Meeting Server and hence Meeting Management does not supports adding, deleting, or editing custom layouts.

To apply customized layout for a meeting:

1. Navigate to the meeting you want to change layout for.
2. Click the **Set layout** button.
3. Use **Select a screen layout for new participants** drop-down to apply standard or custom layout for new participants joining the meeting.
4. Select the **Same as connected participants** check-box if you want the new participants joining the meeting to have the same layout as applied for the connected participants.
5. Select the custom layout to be applied from the available list of customized layout.

6. Click the **Apply** button to apply the changes made while selecting the layout or use the **Cancel** button to cancel the changes without applying them.

To apply customized layout for selected participants:

1. Navigate to the meeting.
2. Select the participants for applying custom layout.
3. Click **Set layout** button above the participant list.
4. Use **Select a screen layout for new participants** drop-down to apply standard or custom layout for new participants joining the meeting.
5. Select the **Same as connected participants** check-box if you want the new participants joining the meeting to have the same layout as applied for the connected participants.
6. Select the custom layout to be applied from the available list of customized layouts.
7. Click the **Apply** button to apply the changes made while selecting the layout or use the **Cancel** button to cancel the changes without applying them.

Meeting Management supports a maximum of 20 custom layouts. Meeting Management displays five custom layouts at a time with a link to view more layouts. Customizable layouts are not supported on triple screen endpoints.

In case there are no custom layouts defined in Meeting Server, Meeting Management will display only the standard layouts.

5.9.2 Points to note

- The layout once selected will be retained till the meeting is in progress unless you modify it.
- If the layout for new participants is not selected or if **None** option, then the standard layout is applied for the new participants joining the meeting, even if a layout is applied for the meeting.
- If pane placement for new participants and layout for new participants, both are applied to a meeting, pane placement for new participants takes precedence, and the new participants joining the meeting will view the layout selected in the pane placement model that is applied for new participants.
- When pane placement is applied in a meeting, participants who have permissions to change layout can still choose a different layout. The layout selected in the applied model will be overridden by the layout chosen by such participants and they will see the placed participants in other positions on their screen than the ones you defined.

- In a cluster setup with multiple Meeting Managements, the layout applied for participants from a specific Meeting Management will be applied to all participants joining the meeting throughout the cluster.

5.10 See who is speaking or presenting

An icon  will indicate if a participant is speaking or sending audible background noise.

In the screenshot below, Sandra Ty is currently audible. Sally Wood has been audible within the last 30 seconds, so the icon is still displayed, but it has turned gray.

☐			Participant name	Join time	Leave time	Actions
☐			 Sandra Ty	23/10/2020 22:11		     
☐			 Sally Wood	23/10/2020 22:11		     

If you filter by **Speaking** participants, you will see all participants who are currently audible, as well as participants who have been audible within the last 30 seconds.

Another icon  will indicate if a participant is presenting.

In the screenshot below, Sandra Ty is presenting and speaking.

☐			Participant name	Join time	Leave time	Actions
☐			  Sandra Ty	23/10/2020 22:11		     
☐			Sally Wood	23/10/2020 22:11		     

5.11 Restrict participant from sharing content

Administrators/video operators can enable or disable content sharing privileges for selected participants during an ongoing meeting. When content sharing is restricted for selected participants, they will not be able to share/present to other participants in the meeting. Any ongoing content sharing will be blocked immediately if the selected participant is presenting. Participants do not have the control to enable their access to content sharing.

 button in the participant-level settings allows content sharing. On clicking this button against any participant, the icon changes to  and stops/restricts the content sharing ability for the selected participant. Once restricted, participant(s) will not be able to share content even if the start sharing button is available on the user interface of the meeting.

This feature:

- is applicable for both SIP and web app participants.
- is applicable for participants joining through audio/video mode and Presentation-only mode.

If the content sharing is disabled when the participant is presenting in an ongoing meeting, then:

- For the presenter:
 - Content sharing is stopped immediately and the presenter will still be able to view the content sharing notification bar and the shared window in picture mode. The presenter can exit the presentation mode using the stop sharing button on the sharing notification bar.
- For other participants:
 - Content sharing will be stopped immediately for both SIP and web app. However, in case of web app, presenting icon  continues to be displayed against the presenter's name in the participant list.

Note:

- If using different end points that offer other sharing options like whiteboard, the content sharing of such options will not be restricted.
 - When the sharing option is disabled, the share button available on the endpoints does not get disabled/hidden, but on clicking, an appropriate error message will be displayed.
-

5.12 Mute audio-video transmission to participants

Administrators/ video operators, in an ongoing meeting, can restrict the meeting audio and video from being transmitted to selected participants. Once enabled, selected meeting participant(s) will not hear audio or view video of other participants in the meeting. Ongoing screen sharing will also be blocked for such participants when video transmission is muted. Meeting participants do not have the control to enable their access to audio/ video.

Enabling the check-boxes **Mute sending audio** and **Mute sending video**, in the participant level **More (...)** option will restrict audio and/or video from being transmitted to the selected participant. These check-boxes will be unchecked by default. The participant will still be able to perform a screen share or send audio/video. To restrict this, administrators/video operators will have to use the **Mute audio** or **Stop video** buttons.

Note:

- This option is available for both SIP and web app participants.
- A web app participant with audio or video blocked by administrator/ video operator will still be able to view **who is speaking**  or **who is presenting** , in the participant list.

5.13 Send message to all participants

You can broadcast on-screen messages to all the participants during an ongoing meeting. Both SIP and web app participants can view the on-screen messages, but they cannot dismiss the message.

You can customize the text, position, and duration of the on-screen message using the  **Message all** button by setting the following three parameters while sending the message:

Table 6: Description of the parameters used for sending messages to all participants

Parameter name	Parameter type	Parameter value	Default	Description
Enter Message	String	Free form text	None	The text box allows to enter the text to be displayed to all participants in the meeting. The message can include a maximum of 200 characters. Example - Weekly Meeting
Position	Drop-down options	Top, Middle, Bottom	Top	Allows to select the position to display the configured message on screen. If no option is selected, then Top will be set as the default position. Example - Top
Set Timer	Number	Time in seconds	0	Allows to enter time/duration in seconds to display the configured message on the participants' screens.

5.13.0.1 Points to note

- You can send any number of messages, but only one message can be displayed at a time. The most recent message takes precedence.
- The message button  (beside the meeting name) indicates that message is sent and is being displayed on the participants' screens. Hovering mouse on the icon displays the most recent message as a tool-tip. The icon is dismissed after the allotted time has elapsed.
- Meeting Management shows appropriate notifications when a message is successfully sent, sending failed, and if the message exceeds the 200-character limit.

To send messages to all participants:

1. Navigate to **Meetings** page.
2. Click on the  **Message all** button available on top of the participants table.

Send message ✕

To: **Everyone**

Position:

Middle

▼

Set timer:

15

seconds

Cancel

Send

3. Enter the message that should be displayed on the participants' screen in **Enter message**. A maximum of 200 characters are allowed in a message.
4. Select **Position** for displaying the message using the drop-down.
5. Provide time in seconds for displaying the message in **Set timer**.

5.14 Mute or unmute audio for all or selected participants in a meeting

 
To mute participants:

1. Optional: Select the participants you want to mute.
2. Click the **Mute all** button to mute all the participants or click **Mute** button available for each participant to mute any particular participant.



To unmute participants:

1. Optional: Select the participants you want to unmute.
2. Click the **Unmute all** button to unmute all the participants or click **Unmute** button available for each participant to unmute any particular participant.



The way the web app and SIP endpoints handle audio and video control varies. See our knowledge base for an overview:

[How will my endpoint mute/unmute controls behave when used with Cisco Meeting Server and managed by Cisco Meeting Management?](#)

5.15 Record meeting

If a Recorder is configured on the Meeting Server, you can start recording a meeting, or you can stop an ongoing recording.

To start or stop a recording:

1. Click **More** button in meeting details.
2. Select Recording
3. The icon changes to Recording once the recording starts. Recording icon is also displayed near the meeting name to inform that the meeting is being recorded.
4. To stop recording click Recording again.

Note: If individual participants have permissions, they can also stop or start recordings.

Typically, your administrator will have informed you if recording is configured for a meeting. If you need to check it yourself, click the **Recording** button and check if you get an error message.

Note: If a space has been configured to record all meetings, you can see the meeting is being recorded, but you cannot stop the recording.

5.16 Stream a meeting

If streaming is configured on the Meeting Server, and a streaming URI is set for the meeting you are managing, you can start or stop streaming.

To start or stop streaming:

1. Click **More** button in meeting details.
2. Select  Streaming
3. The icon changes to  Streaming  once the streaming starts. Streaming icon  is also displayed near the meeting name to inform that the meeting is being streamed.
4. to stop streaming, click  Streaming  again.

Typically, your administrator will have informed you if streaming is configured for a meeting. If you need to check it yourself, click the **Streaming** button and check if you get an error message.

5.17 Audio/video muted for participants when entering a meeting

This feature allows the administrator/video operator to disable or mute the participant's audio/video while joining a meeting, regardless of their audio/video settings. Muted participants will stay muted until they unmute themselves or administrator/video operator unmutes them. This option will only affect new participants; those already present in the meeting will not be affected. To enable audio mute on entry:

5.17.1 Audio mute on entry

1. Click **More** button in meeting details.
2. Select  Audio mute on entry
3. The icon changes to  Audio mute on entry  once activated. Audio mute on entry icon  is also displayed near the meeting name to inform that the participants are being muted on entry.

Different endpoints have different behaviors; see our knowledge base for an overview:

[How will my endpoint mute/unmute controls behave when used with Cisco Meeting Server and managed by Cisco Meeting Management](#)

5.17.2 Video mute on entry

To enable video mute on entry.

1. Click **More** button in meeting details.
2. Select  Video mute on entry

3. The icon changes to  Video mute on entry  once activated.

This option is disabled by default. Once enabled, a video mute on entry icon  is also displayed near the meeting name to inform that the participants are being video muted on entry. The new participants joining this meeting will see the notification **Your video has been disabled**. The participants have the option to stay disabled or enable their video whenever required. When a participant with video enabled attempts to join a locked meeting, the video is disabled as soon as the participant enters and waits in the lobby.

5.18 Turn audio or video on or off for an individual participant

To control audio or video for an individual participant, you can use the call controls in the **Actions** column.

You can also control audio and video from the side panel with participant details.

Also, the way the web app and SIP endpoints handle audio and video control varies. See our knowledge base for an overview:

[How will my endpoint mute/unmute controls behave when used with Cisco Meeting Server and managed by Cisco Meeting Management?](#)

5.19 Change layout for an individual participant

To change the layout for an individual participant:

1. On the **Meetings** page, meeting details view, select the participant.

The side panel with participant details will open.

2. Select the layout you want.

If they have permissions, individual participants can subsequently change their own layout.

You cannot change layouts for Lync/Skype for Business clients or for the web app. Also, some endpoints may have different layouts than the ones available on the Meeting Server, or show different behavior when you try to change the layout. See our knowledge base for an overview:

[How will my endpoint layout controls behave when used with Cisco Meeting Server and managed by Cisco Meeting Management?](#)

5.20 View participant details

The participant details will differ, dependent on the call type:

- SIP: The participant is using a SIP or TIP endpoint.

Overview

Meetings

Spaces

Users

Servers

Logs

Licenses

Department Update

Owner: Brian Novak
Start time: 23/10/2020 21:41
End time: 00:34:35
Duration: 00:34:35
Lobby: Empty

Search

Activity | Important | Speaking | Status | Connected | Moved | Disconnected

Showing 4 of 4 participants

		Participant name	Join time
☐		Allie Dawson	23/10/2
☐		John Hanson	23/10/2
☐		Sally Wood	23/10/2
☐		George Cavendish	23/10/2

George Cavendish

Join time: 04/06/2026 17:06
Encryption: None
Call type: SIP
Direction: Outgoing

CMS: bpaiddpa
IP address: 10.77.196.79
Device name: Oboe Board 55P

Pane placement: model1
Layout: allEqualNinths


Audio	To participant	From participant
Protocol	opus	opus
Channel rate	63 kbps	7 kbps
Current packet loss	0 %	0 %
Jitter	7 ms	2 ms
RTT	3 ms	-

Video	To participant	From participant
Protocol	h264	h264
Resolution	1920x1080	1920x1080
Frame rate	29.9 fps	29.9 fps
Channel rate	1629 kbps	1908 kbps
Current packet loss	0 %	0 %
Jitter	8 ms	4 ms
RTT	7 ms	-

Note: For individual participants, you may see layout options that are not available for the endpoint in use.

- **Lync:** The participant is using Lync or Skype for Business.

 Cisco Meeting Management

Notifications 

< ⚙️ ✓ Department Update

Owner: Brian Novak
Start time: 23/10/2020 21:41
End time: 00:34:12
Lobby: Empty

Search

Activity **Important** Speaking Status **Connected** Moved Disconnected

Showing 4 of 4 participants

☐	1	Participant name	Join time
☐	✓	Allie Dawson	23/10/20
☐	✓	John Hanson	23/10/20
☐	✓	Sally Wood	23/10/20
☐	✓	George Cavendish	23/10/20

Participant details for Allie Dawson:

Join time: 03/21/2025 11:44 CMS: PreAlpha CMS 1000
Encryption: Full IP address: 10.110.168.131
Call type: Lync Device type: Microsoft Edge/134
Direction: Incoming

Pane placement: model1
Layout: allEqualNinths

Audio		To participant	From participant
Protocol	opus	opus	
Channel rate	63 kbps	67 kbps	
Current packet loss	0 %	0 %	
Jitter	0 ms	2 ms	
RTT	0 ms	-	

Video		To participant	From participant
Protocol	h264	h264	
Resolution	1920x1080	1920x1080	
Frame rate	24.1 fps	23.5 fps	
Channel rate	3766 kbps	3435 kbps	
Current packet loss	0 %	0 %	
Jitter	0 ms	8 ms	
RTT	-	0 ms	

Note: Lync calls have no call controls apart from drop call. This is because the Meeting Server cannot control Lync or Skype for Business clients.

- **Web app:** The participant is using the web app.

Cisco Meeting Management

Notifications 

< ⚙️ ✓ Department Update

Owner: Brian Novak
Start time: 23/10/2020 21:41
End time: 00:34:26
Lobby: Empty

Search

Activity **Important** Speaking Status **Connected** Moved Disconnected

Showing 4 of 4 participants

☐	1	Participant name	Join time
☐	✓	Allie Dawson	23/10/20
☐	✓	John Hanson	23/10/20
☐	✓	Sally Wood	23/10/20
☐	✓	George Cavendish	23/10/20

Participant details for Sally Wood:

Join time: 03/21/2025 11:44 CMS: AM-CORE-1
Encryption: Full IP address: 10.110.168.131
Call type: web app Device type: Microsoft Edge/134
Direction: Incoming

Audio		To participant	From participant
Protocol	opus	opus	
Channel rate	63 kbps	67 kbps	
Current packet loss	0 %	0 %	
Jitter	0 ms	2 ms	
RTT	0 ms	-	

Video		To participant	From participant
Protocol	h264	h264	
Resolution	1920x1080	1920x1080	
Frame rate	24.1 fps	23.5 fps	
Channel rate	3766 kbps	3435 kbps	
Current packet loss	0 %	0 %	
Jitter	0 ms	8 ms	
RTT	-	0 ms	

Presentation		To participant	From participant
Protocol	h264	-	
Resolution	1920x1080	-	
Frame rate	23.1 fps	-	

Note: Web app calls have no layout choices. This is because their layouts can only be controlled by the participant within the app.

Note: Participant details will not have the start or stop video button if the participant is an audio-only participant. Also, no video statistics will appear below. It may take up to 15 seconds before you can see if a participant has chosen to join as an audio-only participant.

5.21 Call statistics

For all calls, note that **Direction** for the call is to or from the Meeting Server, and call statistics are from the point of view of the participant.

In the example below, George Cavendish is in a meeting where someone is presenting. You can see that the Meeting Server is transmitting a presentation stream.

Cisco Meeting Management

Notifications LDAP/Sally Wood Video operator

< Department Update

Owner: Brian Novak
Start time: 23/10/2020 21:41
End time: 00:34:45
Lobby: Empty

Search

Activity: **Important** Speaking Status: Connected Moved Disconnected

Showing 4 of 4 participants

☐			Participant name	Join time
☐			Allie Dawson	23/10/20
☐			John Hanson	23/10/20
☐			Sally Wood	23/10/20
☐			George Cavendish	23/10/20

Pane placement: rmodel1
Layout: allEqualNinths

Audio	To participant	From participant
Protocol	opus	opus
Channel rate	63 kbps	67 kbps
Current packet loss	0 %	0 %
Jitter	0 ms	2 ms
RTT	0 ms	-

Video	To participant	From participant
Protocol	h264	h264
Resolution	1920x1080	1920x1080
Frame rate	24.1 fps	23.5 fps
Channel rate	3766 kbps	3435 kbps
Current packet loss	0 %	0 %
Jitter	0 ms	8 ms
RTT	-	0 ms

Presentation	To participant	From participant
Protocol	h264	-
Resolution	1920x1080	-
Frame rate	23.1 fps	-
Channel rate	3181 kbps	-
Current packet loss	0.01 %	-
Jitter	2 ms	-
RTT	-	-

For web app and SIP calls, you can always see call statistics for audio streams.

If someone in the meeting is presenting, statistics for the presentation streams are displayed for all participants, except audio-only participants.

If a participant has joined as an audio-only participant, the video or presentation statistics, and the stop/start video button, will not be displayed.

For participants using dual screen or TIP devices, call statistics are only displayed for one screen.

5.22 Mark participants as important

If you want to make specific people visible in a meeting even when they are not speaking, you can make them important. If several participants are made important, then the ones who last

spoke will take priority.

To mark a participant as important:

1. In the participant list, find the participant's name.

2. In the **Actions** column, click  .

The participant is now marked as important with a blue star, and pinned at the top of the participant list. The participant will stay pinned until you are signed out, or until you manually remove the pin. Clearing importance does not remove the pin.

If you want to clear importance for all participants, click  Clear all importance at the top of participants' list.

If you want to clear importance for just some of the important participants, select the participants first, then click the button.

Note: Meeting Management only supports importance when it is set using Meeting Management or the web app. Other methods (API commands or 3rd party tools) can be used to set importance on the Meeting Server, but importance set by these other methods will not be displayed correctly in Meeting Management. If it happens during a meeting, importance will be displayed with a warning sign and the tool tip **Importance was set using a tool that is not supported with Meeting Management**. You may want to talk to your administrator before you clear the unsupported importance setting.

Note: Importance does not work if pane placement is turned on.

5.23 Taking snapshots of participants in a meeting

Taking snapshots of participants in a meeting aids in monitoring the overall meeting experience or for any diagnostic purpose such as to check the layout being displayed at the participant end or to check the participant video quality. In a managed meeting, Meeting Management allows video operator:

- to take snapshot of the video of the participant(s).
- to take snapshot of the video of all the participants that is displayed on the participant's screen depending on the layout selected.


The captured snapshots are available in 1280*720 (Width * Height) pixel.

To take a snapshot:

1. In the meeting details, find the participant's name.
2. In the **Actions** column, click **More** button  and select  **Snapshot**

Note:

- Taking snapshots of participants in a meeting is not implemented for Permanent License Reservation (PLR) mode.
 - Content sharing will not be captured while taking snapshots. Only participant's video will be captured using snapshot.
-

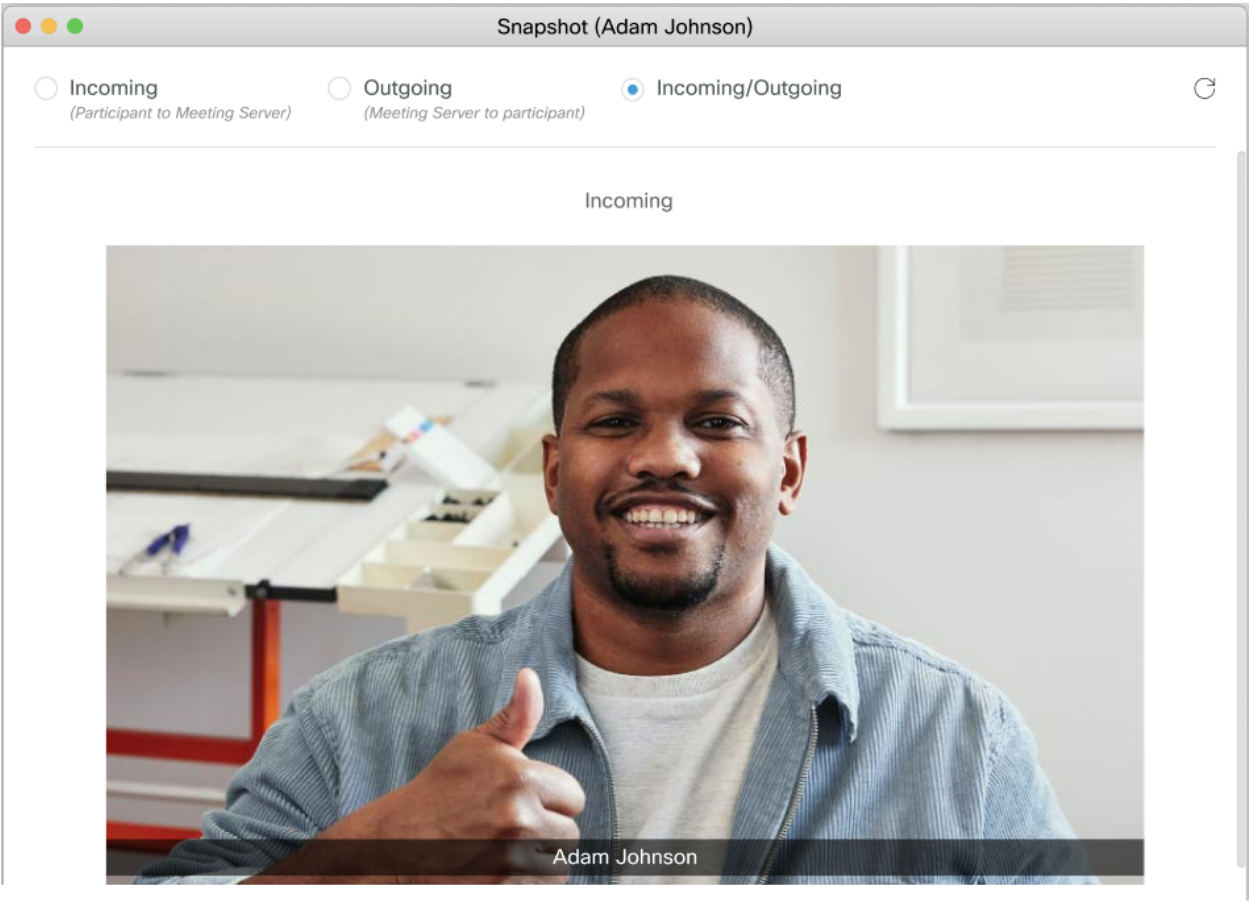

Following options are available for capturing snapshots:

- **Incoming** (from participant to Meeting Server)- By default this option is selected and displays the snapshot of the participant.
- **Outgoing** (from Meeting Server to participant)- It displays the snapshot of video sent from Meeting Server to participant. This can be used to verify the layout displayed on the participant screen.
- **Incoming/Outgoing**- In this case, snapshot will be available for both the directions. Left window will display the incoming snapshot of a selected participant and right window will display the outgoing snapshot of participant screen.
- **Refresh**- Refresh  button allows video operator to take a fresh snapshot of the option that is already selected.

5.24 Far end camera control


You can control far-end cameras of SIP participants in an ongoing meeting. It provides manual control over the participant's camera to move and reposition it around the participant for a greater focus.

This feature will require:

- The participant's camera to have Pan, Tilt, and Zoom (PTZ) capability.
- Snapshot license in Meeting Management.

You can zoom in, zoom out, and position the camera to the left, right, up, and down on the

participant's video using the **View Camera Control** option  within the **More** button.

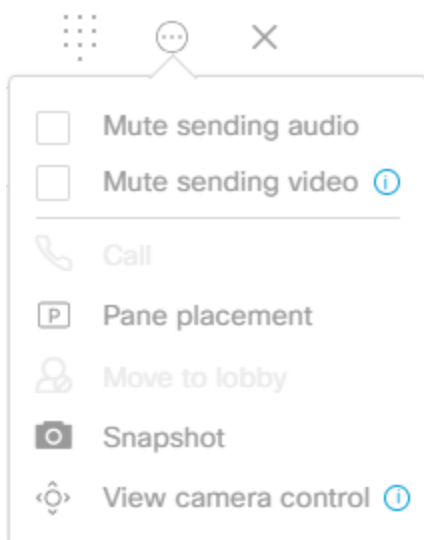

If this option is chosen and the snapshot license is not available in the Meeting Management, an appropriate message is displayed. On selecting this option, the participant's video appears in a pop-up with camera controls (Zoom In, Zoom Out, Positioning – Left, Right, Up, and Down). The <, >, ^, and v buttons are used to modify camera position, while the + and – buttons are used to zoom in and out. The participants will be notified when the camera is controlled through Meeting Management.


5.25 Audio gain adjustment

Meeting Management administrators and video operators can adjust the gain of audio calls during ongoing meetings. This feature is available for both SIP and web app participants, ensuring clear and consistent sound quality throughout the meeting.

A participants' audio can be manually controlled by increasing or decreasing the volume by two or four times the original audio output. The adjustment is based on the adaptive gain value entered, allowing flexible and precise management of meeting audio.

The gain adjustment option  **Gain adjustment** is included within the **More** button available against each participant's name. If this option is chosen, Meeting Management displays icon  on the **Status** section once the gain is adjusted for the participant. The administrator and/or video operator is also notified with an appropriate notification.

Gain can also be adjusted from the Meeting Server. Changes applied from the Meeting Server are automatically updated and displayed in Meeting Management. The last value applied for gain, whether from the Meeting Server or Meeting Management, will take precedence.

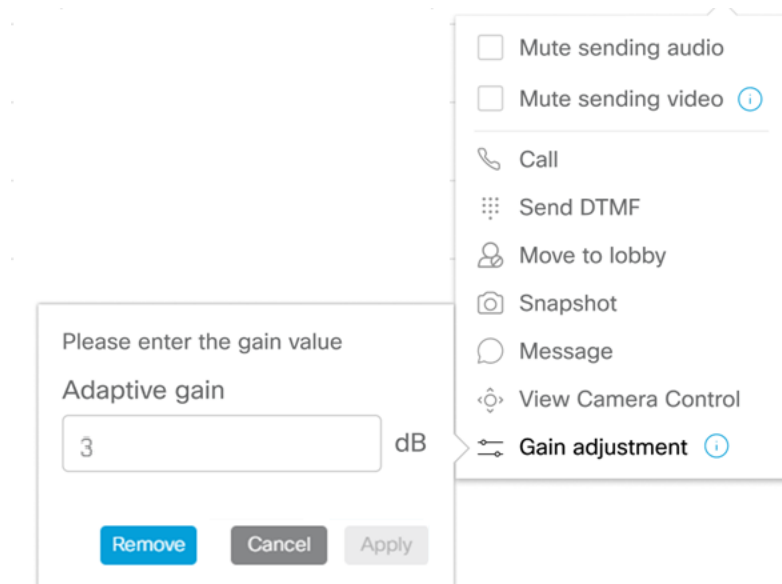

To apply gain adjustment:

1. Select **More** option available for a participant to open further options.
2. Click  **Gain adjustment** option to open a pop-up allowing you to enter a gain value in decibels (dB) in the **Adaptive gain** option. A tooltip explains the acceptable values of adaptive gain. The acceptable options are -6 dB, -3 dB, 0 dB, 3 dB, and 6 dB. Every 3 dB increase represents a doubling of volume, and every 3 dB decrease represents a halving of volume.
3. Click the **Apply** button, which is enabled once any value is entered in the gain field. An error message **Invalid gain value** is displayed if the entered value is not one of the acceptable options.
4. The **Remove** button is enabled once a gain value is applied. Clicking this button resets the gain value to the default value of 0 dB.

5.26 Meetings with disabled features

In some scenarios, certain features cannot work and have been disabled. When this happens, Meeting Management will display one or more labels in the top left corner of the meeting details.

There are two different labels:

- [Dual homed](#)

In dual homed meetings, the participants hosted on the AVMCU are not displayed, and several features are disabled or do not work as they do in other meetings.

- [Remote recording](#)

You will see this label when a Lync or Skype for Business participant is recording the meeting. Remote recording is any recording that is not done via Cisco Meeting Server. You cannot control remote recording.

5.26.1 Dual homed meeting

A dual homed meeting is a meeting where the Meeting Server and Microsoft AVMCU (Audio/Video Multipoint Control Unit) both serve as hosts. All participants using Microsoft clients (Lync, Skype for Business) are hosted on the AVMCU, and all other participants are hosted on the Meeting Server. Meeting Management gets its information from the Meeting Server, and you can only see the participants who are hosted on the Meeting Server.

The label **Dual homed meeting** is displayed so you know at a glance that this is a non-standard meeting where some features are disabled. In dual homed meetings, the only meeting level actions you can perform are **Move participants**, **Set layout for all**, **Clear all importance**, and starting or stopping a **Recording**.

Note: You can move only SIP participants out of a dual homed meeting. You cannot move participants who are hosted on the AVMCU, and you cannot move anyone into a dual homed meeting.



Cisco Meeting Management


Overview


Meetings

< ✕ ✓

Department Update

Dual homed meeting

Owner Brian Novak

Start time 23/10/2020 21:41

End time

Duration 00:33:59

Lobby Empty

Note: If all the participants who are hosted on the Meeting Server leave the meeting, Meeting Management will display the meeting as ended, even if there are still connected participants who are hosted on the AVMCU.

For individual participants, you can perform all actions, except for starting or stopping their video. Importance works, but it can only be set for participants who are hosted on the Meeting Server. Also, importance only affects what other participants on the Meeting Server can see. Participants hosted on the AVMCU will see the audible participants as defined by AVMCU, rather than the participants you have marked as important using Meeting Management.

Table 7: Meeting level controls

Action	Enabled	Notes
Pane placement	No	
Move participants	Yes	This works only for SIP and web app participants hosted on the Meeting Server, and only for moving out of the dual homed meeting.
Add participants	No	
Set layout for all participants	Yes	
Set layout for selected participants	No	
Mute all	No	
Unmute all	No	

Action	Enabled	Notes
Mute selected	No	
Unmute selected	No	
Clear all importance	Yes	
Clear importance for selected participants	No	
Start/stop recording	Yes	
Start/stop streaming	No	
Mute on entry	No	
Event logs	Yes	You can only see event logs for participants and actions hosted on the Meeting Server.
End meeting	No	

Note: For a dual homed meeting, the event logs may show events for additional 'participants' who are not displayed in the participant list. These additional 'participants' represent the connection between the AVMCU and Cisco Meeting Server, and are not shown in Meeting Management interface to avoid confusion with actual participants who can be managed. There is also no additional management functionality for these connections.


Table 8: Controls for individual participants

Action	Enabled	Notes
Mute/unmute	Yes	
Start/stop video	No	
Make important/clear importance	Yes	The importance will only have effect for what participants hosted on the Meeting Server will see.
Call	No	
Drop	Yes	
Change layout	Yes	

5.26.2 Remote recording

When a Lync or Skype for Business participant is recording a meeting, you will see the label **Remote recording**.

Remote recording is any recording that is not handled by the Cisco Meeting Server. A recording indicator will be displayed for all participants if a remote recording is taking place.

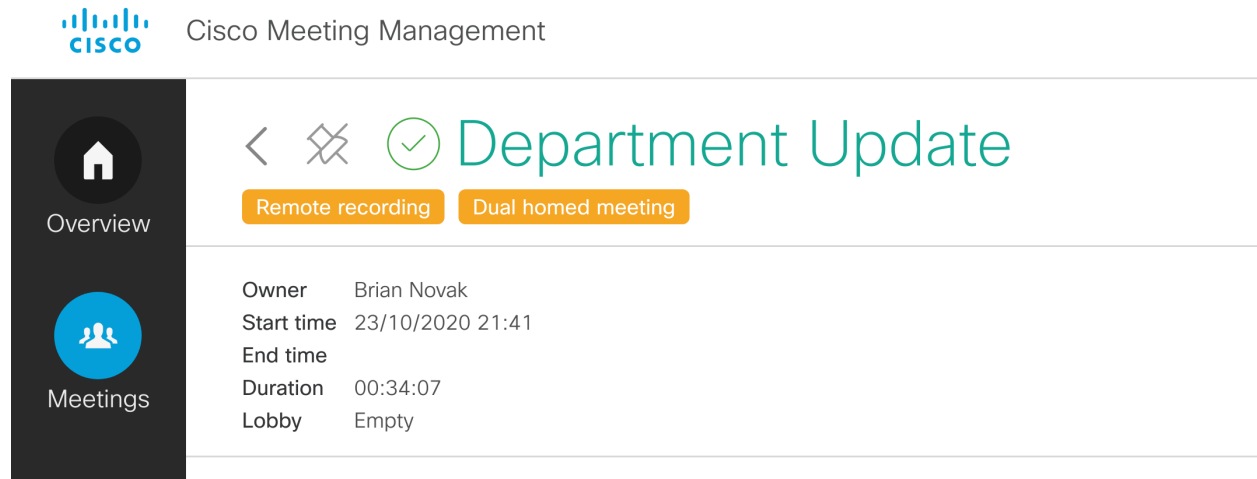

The screenshot shows the Cisco Meeting Management web interface. On the left is a dark sidebar with 'Overview' (home icon) and 'Meetings' (people icon). The main area has a header with navigation icons (back, mute, status) and the meeting title 'Department Update'. Below the title are two orange status buttons: 'Remote recording' and 'Dual homed meeting'. A table below lists meeting details:

Owner	Brian Novak
Start time	23/10/2020 21:41
End time	
Duration	00:34:07
Lobby	Empty

Participants dialing in from a video system will see a different recording indicator for remote recordings than the one they see for recordings handled by the Meeting Server. Web app users see the same recording indicator for all recordings, whether they are remote or via the Meeting Server.

For more information, see the "Recording indicator for dual homed conferences" section of any of the [Cisco Meeting Server Deployment Guides](#).

6 Meeting event logs

The event logs give a timeline for what happened in a meeting, e.g. when the meeting started and ended, when participants joined and left, when recording was started, when layout was changed, when participants were muted/unmuted, etc.

Event logs for an individual meeting are available as long as the meeting is listed on the **Meetings** page. You can view the logs on the screen, or you can download them if you need to access them later.

6.1 Timestamps for event logs

Meeting Management applies timestamps to event logs when it receives information from the Meeting Server. Timestamps are given and stored in UTC, but if you look at the event log within Meeting Management, they are converted into your browser's timezone.

The table below illustrates how time is assigned and displayed in Meeting Management.

View	Timestamps assigned by	Time zone or standard	Time format	Notes
Event logs on screen	Meeting Management	Your browser's time zone	24 hour format	If event logs are re-synchronized with the Meeting Server, new timestamps are given.
Event logs downloaded	Meeting Management	UTC	24 hour format	
Details on Meetings page and meeting details	Meeting Server	Your browser's time zone	24 hour format	If the time for your Meeting Server is not synchronized with the time for your Meeting Management, the timestamps you see here can differ from what you see in the event logs.

To see event logs on screen:

1. Click the **Event logs** button.



2. See the logs.

Logs for Weekly Team Update ×				
Timestamp ▼	User ◀▶	Message ◀▶	Participant ◀▶	Level ◀▶
23/10/2020 21:46:10		Participant joining	Allie Dawson	Information
23/10/2020 21:43:10	swood	Set meeting layout: onePlusN: 3 participants affected		Information
23/10/2020 21:42:10		Participant joining	John Smith	Information
23/10/2020 21:42:10		Participant joining	Ben Dawkins	Information
23/10/2020 21:42:10		Meeting started		Information
23/10/2020 21:42:10		Participant joining	Brian Novak	Information

1 2

Download log

Timestamp: Timestamps seen in the onscreen logs are based on the Meeting Management server's time, converted to your browser's local time zone.

User: Users listed here are video operators or administrators of Meeting Management.

Note: Participants are not registered as users in Meeting Management, even if they are registered users on the Meeting Server.

Message: Messages indicate what has happened.

Participant: A participant name or address is displayed if the event was initiated by a participant, or if a change was made for that individual participant. For instance, both a user and a participant will be displayed if the video operator changes screen layout for an individual participant.

Note: When Meeting Management is restarted, all event logs are lost. Only start times and participant join times will be recreated, and only for active meetings. Note that re-synchronized events get new timestamps, so timestamps are unreliable for meetings that were active during restart.

6.2 List of event log messages

The table below lists event log messages you may see.

Message	User displayed	Participant displayed	Level	Explanation
Add meeting participant: address=<address>	Yes	No	Information	A video operator added a participant with the displayed address. The participant's name cannot be displayed when a video operator calls the participant.
Add meeting participant failed: address=<address>	Yes	No	Warning	A video operator tried to add a participant with the displayed address. The operation failed.
Disconnect participant	Yes	Yes	Information	A video operator disconnected a participant.
Disconnect participant failed	Yes	Yes	Warning	A video operator tried to disconnect a participant. The operation failed.
End meeting	Yes	No	Information	A video operator ended the meeting.
End meeting failed	Yes	No	Warning	A video operator tried to end the meeting. The operation failed.
Meeting ended	No	No	Information	The meeting ended.
Meeting started	No	No	Information	The meeting started. This happens when the first participant joins, or when the meeting is started via a command. For instance, if a meeting is booked via TMS, TMS sends a command to start the meeting.
Participant joining	No	Yes	Information	A participant joined the meeting or reconnected to the meeting.
Participant is disconnected	No	Yes	Information	A participant was disconnected.

Message	User displayed	Participant displayed	Level	Explanation
Participant merged	No	Yes	Information	This happens when a participant is seen twice by Meeting Management because of disconnecting and reconnecting. Meeting Management compares the details and removes duplicates of the same participant.
Participant rejoining	No	Yes	Information	A participant was called back into the meeting by a video operator.
Recording: recorder=<recorder>, path=<path>	No	Yes	Information	Shortly after recording with local Recorder has started, the name and path for the Recorder are displayed in the event log. The Recorder appears as a participant in the event logs.
Recording: recorder=<recorder>	No	Yes	Information	Shortly after recording with a SIP Recorder has started, the name of the Recorder is displayed in the event log. The Recorder appears as a participant in the event logs.
Redial participant	Yes	Yes	Information	A video operator called a disconnected participant back into the meeting.
Redial participant failed	Yes	Yes	Warning	A video operator tried to call a disconnected participant back into a meeting. The operation failed.
Set meeting layout: layout=<layout>	Yes	No	Information	A video operator has changed the layout for all participants to the displayed layout.
Set meeting layout failed: layout=<layout>	Yes	No	Warning	A video operator tried to change the layout for all participants to the displayed layout. The operation failed.
Set meeting record: enabled=true	Yes	No	Information	A video operator has started recording.

Message	User displayed	Participant displayed	Level	Explanation
Set meeting record failed: enabled=true	Yes	No	Warning	The recording feature is available for this meeting. A video operator tried to start recording, but the operation failed.
Set meeting record: enabled=false	Yes	No	Information	A video operator has stopped recording.
Set meeting record failed: enabled=false	Yes	No	Warning	A video operator tried to stop recording, but the operation failed.
Set meeting stream: enabled=True	Yes	No	Information	A video operator started streaming.
Set meeting stream failed: enabled=True	Yes	No	Warning	A video operator tried to start streaming. The operation failed.
Set meeting stream: enabled=False	Yes	No	Information	A video operator stopped streaming.
Set meeting stream failed: enabled=False	Yes	No	Warning	A video operator tried to stop streaming. The operation failed.
Set participant layout: layout=<layout>	Yes	Yes	Information	A video operator has changed the layout for an individual participant into the displayed layout.
Set participant layout failed: layout=<layout>	Yes	Yes	Warning	A video operator tried to change the layout for an individual participant to the displayed layout. The operation failed.
Set participant mute: <stream>=<value>	Yes	Yes	Information	A video operator muted or unmuted a participant, or stopped or started the participant's video. <stream> can be rxAudio or rxVideo <value> can be True (for audio muted or video stopped) or False (for audio unmuted or video started). The value is the state the video operator tried to change to, not the current state.

Message	User displayed	Participant displayed	Level	Explanation
Set participant mute failed: <stream>=<value>	Yes	Yes	Warning	A video operator has tried to mute or unmute a participant, or to stop or start the participant's video. The operation failed. <stream> can be rxAudio or rxVideo <value> can be True (for audio muted or video stopped) or False (for audio unmuted or video started). The value is the state the video operator tried to change to, not the current state.
Streaming: streamer=<streamer>, url=<url>	No	Yes	Information	Shortly after streaming has started, you will see this message to let you know that the Streamer with the listed name is configured to use the listed url.
Set meeting audio mute on entry: enabled=True	Yes	No	Information	A video operator has set all new participants to be muted on entry.
Set meeting audio mute on entry failed: enabled=True	Yes	No	Warning	A video operator has tried to set all new participants to be audio muted on entry, and the operation failed.
Set meeting audio mute on entry: enabled=False	Yes	No	Information	A video operator disabled audio mute on entry.
Set meeting audio mute on entry failed: enabled=False	Yes	No	Warning	A video operator tried to disable audio mute on entry. The operation failed.
Set meeting video mute on entry: enabled=True	Yes	No	Information	A video operator has set all new participants to be video muted on entry.
Set meeting video mute on entry failed: enabled=True	Yes	No	Warning	A video operator has tried to set all new participants to be video muted on entry, and the operation failed.
Set meeting video mute on entry: enabled=False	Yes	No	Information	A video operator disabled video mute on entry.

Message	User displayed	Participant displayed	Level	Explanation
Set meeting video mute on entry failed: enabled=False	Yes	No	Warning	A video operator tried to disable video mute on entry. The operation failed.
Meeting scheduled to start at <scheduled start>	No	No	Information	The meeting was scheduled in TMS to start at the displayed time.
Meeting scheduled to end at <scheduled end>	No	No	Information	The meeting was scheduled in TMS to end at the displayed time.
Meeting has TMS ID <tms conference id>	No	No	Information	The meeting was scheduled in TMS with the displayed TMS conference ID.
Set meeting importance: <unset>	Yes	No	Information	A video operator cleared all importance.
Set meeting importance failed: <unset>	Yes	No	Warning	A video operator was trying to clear all importance, but the operation failed.
Set participant importance: <value>	Yes	Yes	Information	A video operator made a participant important or cleared importance. <value> can be "0" for important or unset for cleared. The value is the state the video operator tried to change to, not the current state.
Set participant importance failed: <value>	Yes	Yes	Warning	A video operator tried to make a participant important or to clear importance, but the operation failed. <value> can be "0" for important or unset for cleared. The value is the state the video operator tried to change to, not the current state.

Message	User displayed	Participant displayed	Level	Explanation
Set meeting importance: <unset>: <num participants> participants affected	Yes	No	Information	A video operator cleared importance for selected participants The "<num participants> participants affected" is a link which you can click to see the names of the participants affected.
Set meeting mute: rxAudio=true: <num participants> participants affected	Yes	No	Information	A video operator muted selected participants. The "<num participants> participants affected" is a link which you can click to see the names of the participants affected.
Set meeting mute: rxAudio=True: <num participants> participants affected	Yes	No	Information	A video operator muted selected participants. The "<num participants> participants affected" is a link which you can click to see the names of the participants affected.
Set meeting mute: rxAudio=False: <num participants> participants affected	Yes	No	Information	A video operator unmuted selected participants. The "<num participants> participants affected" is a link which you can click to see the names of the participants affected.
Set meeting mute failed: rxAudio=True	Yes	No	Warning	A video operator tried to mute selected participants. The operation failed.
Set meeting mute failed: rxAudio=False	Yes	No	Warning	A video operator tried to unmute selected participants. The operation failed.

Message	User displayed	Participant displayed	Level	Explanation
Set meeting layout: <layout>: <num participants> participants affected	Yes	No	Information	A video operator changed the layout for selected participants to the displayed layout. The "<num participants> participants affected" is a link which you can click to see the names of the participants affected.
Participant moving to <meeting name>	No	Yes	Information	A participant is in the process of being moved out of this meeting and into the displayed meeting.
Participant moving from <meeting name>	No	Yes	Information	A participant is in the process of being moved into this meeting from the displayed meeting.
Participant successfully moved from <meeting name>	No	Yes	Information	A participant was moved into this meeting from the displayed meeting.
Participant successfully moved to <meeting name>	No	Yes	Information	A participant was moved out of this meeting and into the displayed meeting.
Participant failed to move from <meeting name>	No	Yes	Warning	The participant could not be moved out of the displayed meeting.
Participant failed to move to <meeting name>	No	Yes	Warning	The participant could not be moved into the displayed meeting.
Requested participants move: destination=<meeting name>: <num participants> participants affected	Yes	No	Information	The selected participants have been moved. The "<num participants> participants affected" is a link which you can click to see the names of the participants affected.

Message	User displayed	Participant displayed	Level	Explanation
Requested participants move failed: destination=<meeting name>: <num panes> panes affected	Yes	No	Warning	The selected participants could not be moved. The "<num participants> participants affected" is a link which you can click to see the names of the participants affected.
Set meeting pane placement: self_pane=<self pane option> layout=<layout>: <num panes> panes affected	Yes	No	Information	Pane placement has been set, using the displayed self pane option and layout. The self pane options are what users who are placed in reserved panes will see. Self pane options are: • self = Self-view • blank = Blank pane • skip = Next participant The "<num panes> panes affected" is a link which you can click to see which panes have been reserved.
Set meeting pane placement failed: self_pane=<self pane option> layout=<layout>: <num panes> panes affected	Yes	No	Warning	A video operator tried to set Pane placement, using the displayed self pane option and layout. The operation failed. The "<num participants> panes affected" is a link which you can click to see the panes that should have been reserved.
Clear meeting pane placement	Yes	No	Information	A video operator turned pane placement off.
Clear meeting pane placement failed	Yes	No	Warning	A video operator tried to turn pane placement off, but the operation failed.

Message	User displayed	Participant displayed	Level	Explanation
Rename participant from <original display name> to <new display name>	Yes	Yes	Information	A video operator has changed a participant's display name. The new name is the one that appears in the participant column for this message as well as any later messages related to this participant.
Rename participant from <original display name> to <new display name> failed	Yes	Yes	Warning	A video operator tried to change a participant's display name. The operation failed, and the original display name will be seen by other participants and displayed in Meeting Management.
Set meeting lock: locked=True	Yes	No	Information	A video operator locked the meeting.
Set meeting lock failed: locked=True	Yes	No	Warning	A video operator tried to lock the meeting, but the operation failed.
Set meeting lock: locked=False	Yes	No	Information	A video operator unlocked the meeting.
Set meeting lock failed: locked=False	Yes	No	Warning	A video operator tried to unlock the meeting, but the operation failed.
Admit all	Yes	No	Information	A video operator admitted all lobby participants to the meeting.
Admit all failed	Yes	No	Warning	A video operator tried to admit all lobby participants to the meeting. The operation failed.

7 Notifications


Meeting Management keeps you up to date on what's going on with the system via notifications. As a video operator, you will get notified about issues that are relevant for you, including some issues that you need to ask your administrator to act on.

Notifications have 3 levels of severity:

- **Error:** Critical issue
- **Warning:** Issue that you or your administrator must act on to keep Meeting Management running
- **Information:** Useful information or minor issue

The image below shows examples of notifications.

Note: The number in the top bar is updated every 30 seconds, so it may temporarily differ from the number seen on the **Overview** page.

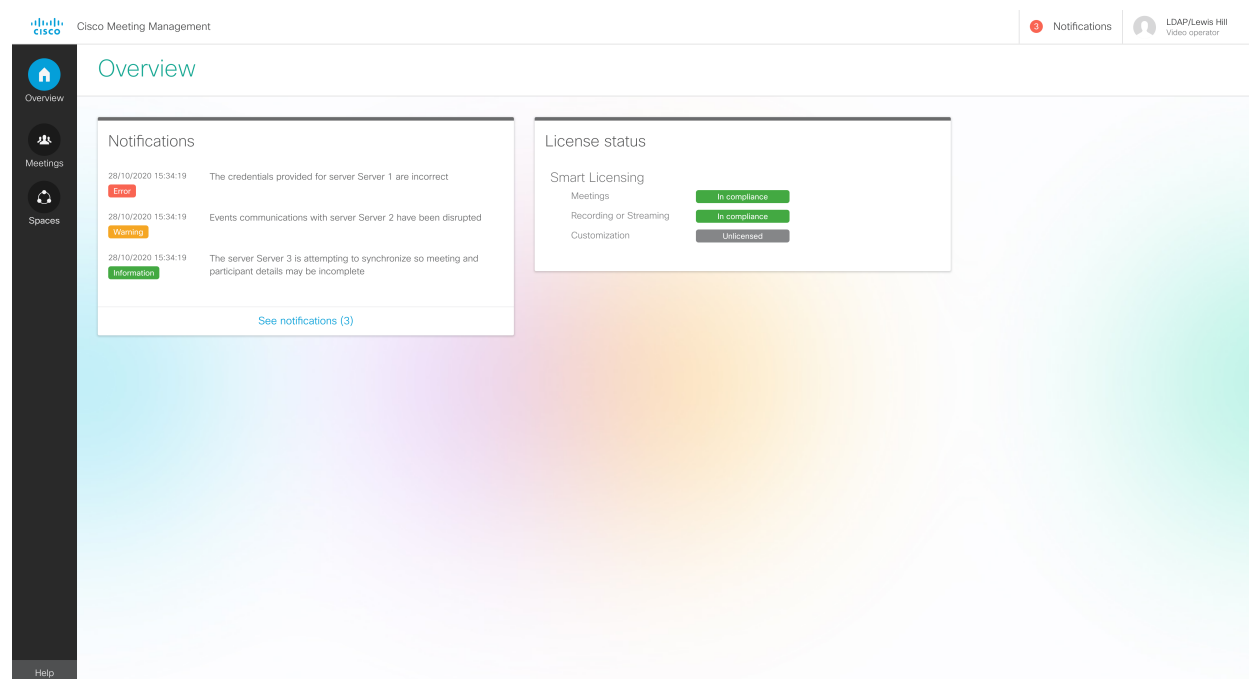

7.1 View all notifications

To see notifications:

1. Go to the **Overview** page.

*The 5 most recent notifications are listed directly on the **Overview** page.*

2. To see all notifications, click **See notifications**.

Alternatively, go to the top bar and click **Notifications**.

7.2 List of notifications

Below you can see a list of notifications that can be displayed to video operators, and what you can do if they occur.

Message	Severity	Explanation	Action
The credentials provided for server <name> are incorrect	Error	Meeting Management cannot receive information from this Call Bridge because it is trying to access it with the wrong username and password.	Ask your administrator to check the configuration.
The server <name> did not allow for this Meeting Management to be added as a CDR receiver	Error	Meeting Management cannot receive meeting information from this Call Bridge.	Ask your administrator to check the configuration.
The server <name> is not responding on address <address>	Error	Meeting Management cannot connect to this Call Bridge on this address.	Ask your administrator to check the configuration.
LDAP bind credentials are invalid	Error	LDAP is the protocol used to check your username and password. You can continue working as usual, but other users may have trouble signing in.	Ask your administrator to edit the LDAP server settings.
CDRs have never been received for server <name>	Warning	Meeting Management is not receiving call detail records from this Call Bridge, so meeting information for calls hosted on this Call Bridge is missing.	Ask your administrator to check the configuration.

Message	Severity	Explanation	Action
The last known CDR index for server <name> differs from the expected index by <count> records	Warning	Some call detail records are missing for calls that are hosted on this Call Bridge. This could be a sign that Meeting Management has lost connection to the Call Bridge.	Ask your administrator to check the status of the Call Bridge.
The CDR receiver address is not specified and cannot be added as a CDR receiver to <name>	Warning	Meeting Management is not set up to receive call detail records from Call Bridges, so you cannot monitor any meetings.	Ask your administrator to check the configuration.
Events communications with server <name> have been disrupted	Warning	The Meeting Server events connection to this Call Bridge has been disrupted.	Meeting Management will try to reconnect. If the warning has not disappeared after a minute, ask your administrator to check the configuration.
The server <name> is currently synchronising so meeting and participant details may be incomplete	Information	Information about calls hosted on this Call Bridge is likely to be incomplete.	No action required. The notification will disappear when the synchronization has been completed.
The license status for cluster <name> could not be updated	Error	Meeting Management is currently not receiving license information from this cluster, and the license status you see on the Overview page may be incorrect.	If the error message does not disappear after 5 minutes, ask your administrator to check the configuration.
The TMS phonebook is not available	Warning	Meeting Management cannot connect to any TMS phonebooks. Either Meeting Management cannot connect to TMS, or no phonebooks have been assigned to this Meeting Management in TMS.	If you have the permissions, go to TMS and check that phonebooks have been assigned to Meeting Management. If not, ask your TMS administrator to check. If phonebooks are assigned, then ask your Meeting Management administrator to check the TMS settings in Meeting Management and the connection to TMS.
The license status for your Smart Account could not be updated	Error	The license status for your connected Meeting Server clusters could not be updated.	If the error message does not disappear after 5 minutes, ask your administrator to check the configuration.

Message	Severity	Explanation	Action
One or more CRLs could not be downloaded. See logs for further information	Warning	You have chosen to let Meeting Management check the certificates against certificate revocation lists (CRLs), and one of the CRLs could not be downloaded.	Ask your administrator to check the system logs.
The number of allocated licenses has not been set for all license types	Error	Your administrator has chosen to use Smart Licensing but has not yet entered all details. Participants may see and hear warnings during meetings.	Ask your administrator to check the licensing settings.
The number of allocated licenses for a license type is higher than the number available in the Virtual Account, or has never been confirmed with Cisco Smart Software Manager	Error	Meeting Management is using Smart Licensing, and some settings have not been entered, or the settings are incorrect. Participants may see and hear warnings during meetings.	Ask your administrator to check the licensing settings.
The licensing features for cluster <name> could not be updated	Error	Meeting Management could not update the licensing information on the cluster, so enforcement may be active.	Ask your administrator to take action.
The licensing features for your Smart Account could not be updated	Error	Meeting Management could not update the licensing information on the connected clusters, so enforcement may be active.	Ask your administrator to take action.
At least one server is running a software version earlier than 3.0, which is not supported by Meeting Management	Error	One or more of the connected Call Bridges are running software that is not supported.	Ask your administrator to take action.

Message	Severity	Explanation	Action
Meeting Management was not restarted correctly	Error	Meeting Management either lost power without being shut down, or crashed.	Ask your administrator to investigate.

8 License status

If licensing is enabled in the instance of Meeting Management that you are signed in to, it keeps you up to date on the licensing status for your Cisco Meeting Server deployment.

Licenses are sorted by functionality:

- **Meetings:** This consists of activation of the Call Bridge and user licenses. If you have the appropriate licenses, then the Call Bridge can be used.
- **Recording or streaming:** These licenses allow recording or streaming.
- **Customization:** This license allows customized layouts.

The license status levels for Meetings and Recording or streaming are:

- **Unlicensed:** You don't have any licenses for recording or streaming.
- **In compliance:** You have used 80% or less of the installed licenses
- **Over 80% threshold:** You are still in compliance with your license agreement, but you have used more than 80% of the installed licenses.
- **Insufficient licenses:** You have used more licenses than available on 1–14 days within the last 90 days.
- **Out of compliance:** You have used more licenses than available on more than 15 days within the last 90 days.

Note: If meetings licenses are out of compliance for more than 90 days, then enforcement will be activated, and meeting participants will see and hear warnings during meetings. Your administrator can see if enforcement is active.

Note: If recording and streaming licenses are out of compliance for more than 90 days, then you cannot record or stream any meetings until you are back in compliance.

The license status levels for customization are:

- **Licensed:** You have a customization license.
- **Unlicensed:** You do not have a customization license.
- **Out of compliance:** You do not have a customization license but you have turned customization on in Meeting Management.

Note: If customization is out of compliance for more than 90 days, then you cannot use any customized layouts until you are back in compliance.

If you want to know more about the license status, see the [User Guide for Administrators](#). If you want to know specific details of which licenses have been purchased and which have been used, ask your Meeting Management administrator.

Accessibility Notice

Cisco is committed to designing and delivering accessible products and technologies.

The Voluntary Product Accessibility Template (VPAT) for Cisco Master Project is available here:

http://www.cisco.com/web/about/responsibility/accessibility/legal_regulatory/vpats.html#telepresence

You can find more information about accessibility here:

www.cisco.com/web/about/responsibility/accessibility/index.html

9 Accessibility support features

9.1 Keyboard navigation

You can use your keyboard to navigate through Meeting Management.

- Use **Tab** to navigate between areas in Meeting Management. You'll know an area is in focus when it's surrounded by an outline. Use **Shift + Tab** to move to the previously focused area.
- Use the **Spacebar** or **Enter** key to select items.
- Use arrow keys to scroll through lists or drop-down menus.
- Use **Esc** to close or dismiss opened screens/menus.

9.2 Screen reader support

You can use the JAWS screen reader version 18 or later.

The screen reader announces focused areas/buttons, relevant information like notifications, warnings, status messages appearing on the screen, and the actions you can perform.

For example: When you focus on **Create Space** button, the screen reader will announce "Create Space" and to enter a space name.

Cisco Legal Information

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

© 2026 Cisco Systems, Inc. All rights reserved.

Cisco Trademark

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL:

www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)