

Cisco TelePresence TRC 6 Quick Reference Guide CE9.0




Place Call From Contact List


1 Use the cursor keys of the remote control and navigate to the green **Call** button. Press **OK** on the remote control.



2 To search for someone in a specific list (Favorites, Directory or Recents), navigate to that headline and press **OK**. Navigate down to locate the entry to be called.

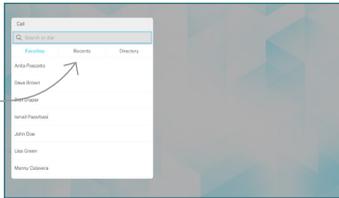


3 At that entry press **OK** on the remote to produce the green **Call** button. Press **OK** again or press the **Call** button on the remote control.

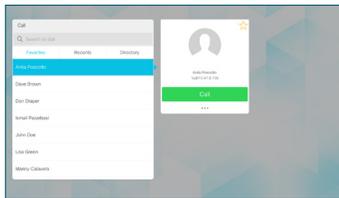

4 The call will now be placed.

To end the call, navigate to the red **End** button and press **OK** or press the red button on the remote.

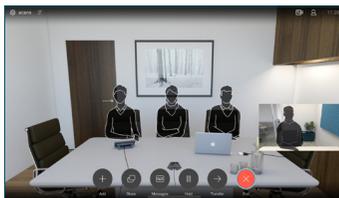


Place Call Using Name, Number or Address


1 Use the cursor keys of the remote control and navigate to the green **Call** button. Press **OK** on the remote control.



2 Navigate to the **Search or Dial** field and press **OK** on the remote control. This will invoke the keyboard.

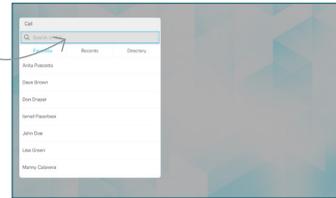


3 To enter numbers use the keys on the remote control. To use the virtual keyboard, navigate down to and about the keyboard and select characters. Press **OK** to select a character.

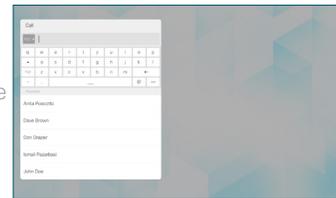


4 Then press the green **Call** button to place the call.

End the call as shown at left.

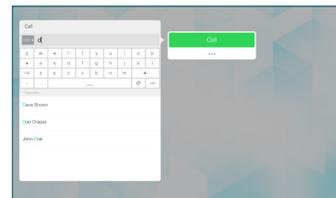


Initiate Video Conference


1 In a call, navigate to **Add** and press **OK** on the remote control. This will put the current call on hold.

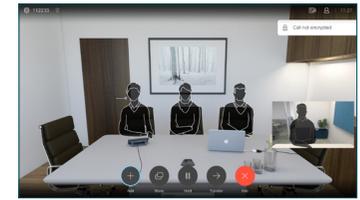

2 Locate or type in the participant to be added in the usual way.

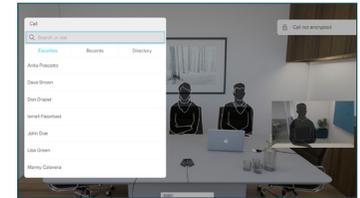


3 This will produce the **Add** button. Navigate to **Add** and press **OK** or press the **Call** button on the remote control.

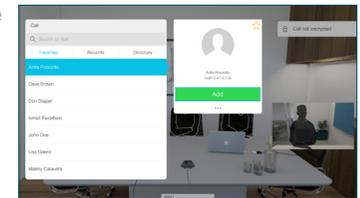

4 This new call will now be added to the existing, creating a conference.

Repeat to add more people.

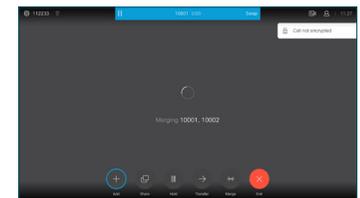

Cisco TelePresence TRC 6 Quick Reference Guide CE9.0



Forwarding Calls, Proximity & Do not Disturb

1 Tap the icon in the upper left corner.



2 Activate/deactivate functions as required using OK. Use Go Back to exit.



Decrease/Increase (volume and values)

Cursor control keys and OK (center)

Microphone Mute/Unmute

Go Back

Place call/Accept incoming call


Reject incoming call/ End call / Cancel / Back to Home screen (outside calls)

Dial someone or input alphanumeric characters




Share Content in a Call

1 Make sure your presentation source is connected and On. You may need to select **Share** and press **OK** on the remote control.

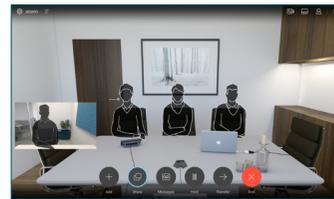

2 Select **Local preview** to inspect the contents without sharing it with the others, before you select **Share in call** to share it with the others.

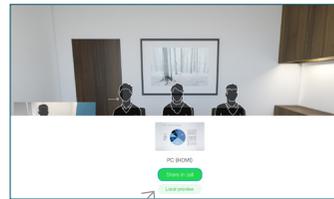

3 The size of the shared image is controlled by means of the **Minimize/Maximize** button. Select this and press **OK** on the remote control, if needed.




4 To stop sharing content, select **Stop sharing** and press **OK** on the remote control.




To share content outside calls, connect the source, make sure it is switched on and navigate to **Share** and press **OK**. You will then be offered to share content.

Transfer an Ongoing Call


1 Navigate to the **Transfer** button and press **OK** on the remote control. This will cause the current call to be put on hold.

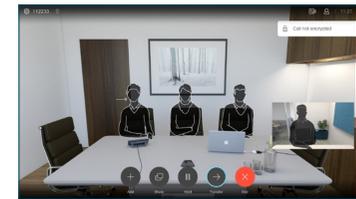

2 Search for whom to call in the usual way.

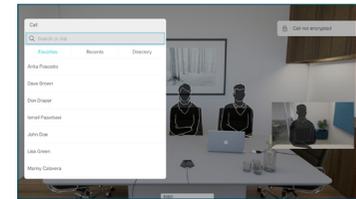

3 Navigate to the green **Call** button and press **OK** or use the green **Call** button on the remote control. Talk to the person to confirm that transfer is **OK**. The person to be transferred is still on hold.

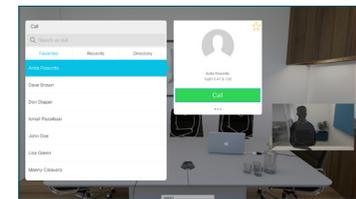

4 Navigate to **Complete Transfer** and press **OK** on the remote control.

