Notice to Installers

The servicing instructions in this notice are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so

Note to System Installer

For this apparatus, the coaxial cable shield/screen shall be grounded as close as practical to the point of entry of the cable into the building. For products sold in the US and Canada, this reminder is provided to call the system installer's attention to Article 820-93 and Article 820-100 of the NEC (or Canadian Electrical Code Part 1), which provides guidelines for proper grounding of the coaxial cable shield.



This symbol is intended to alert you that uninsulated voltage within this product may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of ontact with any inside part of this product.

Ce symbole a pour but d'alerter toute personne qu'un contact avec une pièce interne de ce produit, sous tension et non isolée, pourrait être suffisant pour provoquer un choc électrique. Il est donc dangereux d'être en contact avec toute pièce interne de ce produit.



CAUTION: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personne

TO PREVENT FIRE OR FLECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol is intended to alert you of the presence of important operating and maintenance (servicing instructions in the literature accompanying this produc

Ce symbole a pour but de vous avertir qu'une documentation importante sur le fonctionnement et l'entretien accompagne ce produit.

20080814 Installer820

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings
- 4) Follow all instructions.

with the manufacturer's instructions

- 5) Do not use this apparatus near water. 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers)
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for lacement of the obsolete outlet
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as a power-supply cord or plug is damaged liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped

Power Source Warning

A label on this product indicates the correct power source for this product. Operate this product only from an electrical outlet with the voltage and frequency indicated on the product label. If you are uncertain of the type of power supply to your home or business, consult your service provider or your local power company.

The AC inlet on the unit must remain accessible and operable at all times.

Ground the Product

WARNING: Avoid electric shock and fire hazard! If this product connects to coaxial cable wiring, be sure the cable system is grounded (earthed). Grounding provides some protection against voltage surges and built-up static charges.

WARNING: Avoid electric shock and fire hazard! Do not locate an outside antenna system in the vicinity of overhead power lines or power circuits. Touching power lines or circuits

This product may contain a tuner capable of receiving off-the-air

Protect the Product from Lightning

In addition to disconnecting the AC power from the wall outlet, disconnect

Verify the Power Source from the On/Off Power Light

When the on/off power light is not illuminated, the apparatus may still be connected to the power source. The light may go out when the apparatus is turned off, regardless of whether it is still plugged into an AC power source.

Eliminate AC Power/Mains Overloads

WARNING: Avoid electric shock and fire hazard! Do not verload AC power/mains, outlets, extension cords, or integral enience receptacles. For products that require battery pow or other power sources to operate them, refer to the operating nstructions for those products.

Handling Disposable Batteries

This product may contain disposable batteries. Heed the following warning and follow the Battery Safety and Battery Disposal instructions below.

WARNING: There is danger of explosion if the battery is shandled or incorrectly replaced. Replace only with the same type of battery. Do not disassemble it or attempt to recharge it outside the system. Do not crush, puncture, dispose of in fire. short the external contacts, or expose to water or other liquids. Dispose of the battery in accordance with local regulations and instructions from your service provider.

- $\boldsymbol{\cdot}$ Insert batteries correctly. There may be a risk of explosion if the batteries are incorrectly inserted.
- Do not attempt to recharge 'disposable' or 'non-reusable' batteries.
- Please follow instructions provided for charging 'rechargeable' batteries. Replace batteries with the same or equivalent type that we recommend.
- · Do not expose batteries to excessive heat (such as sunlight or fire).
- Do not expose batteries to temperatures above 100°C (212°F).

Battery Disposal

- · The batteries may contain substances that could be harmful to the
- Recycle or dispose of batteries in accordance with the battery manufacturer's instructions and local/national disposal and recycling regulations.





፟ ፼ ፟ 廢電池請回收

The batteries may contain perchlorate, a known hazardous substance so special handling and disposal of this product might be necessary. For more information about perchlorate and best management practices for perchlorate-containing substance, see www.dtsc.ca.gov/

Provide Ventilation and Select a Location

- Remove all packaging material before applying power to the product
- Do not place this apparatus on a bed, sofa, rug, or similar surface.
- Do not place this apparatus on an unstable surface.
- Do not install this apparatus in an enclosure, such as a bookcase or rack. unless the installation provides proper ventilation.
- Do not place entertainment devices (such as VCRs or DVDs), lamps. books, vases with liquids, or other objects on top of this product.
- . Do not block ventilation openings.

Operating Environment

This product is designed for operation indoors with a temperature range from 32° to 104° F (0° to 40°C). Each product should have adequate spacing on all sides so that the cooling air vents on the chassis are not

Protect from Exposure to Moisture and Foreign

WARNING: Avoid electric shock and fire hazard! Do not expose this product to dripping or splashing liquids, rain, or moisture. Objects filled with liquids, such as vases, should not be placed on this apparatus.

WARNING: Avoid electric shock and fire hazard! Unplug this product before cleaning. Do not use a liquid cleaner or a aerosol cleaner. Do not use a magnetic/static cleaning device (dust over) to clean this product.

WARNING: Avoid electric shock and fire hazard! Never push objects through the openings in this product. Foreign objects can cause electrical shorts that can result in electric shock or fire

Service Warnings

WARNING: Avoid electric shock! Do not open the cover of this product. Opening or removing the cover may expose you to dangerous voltages. If you open the cover, your warranty will be void. This product contains no user-serviceable parts.

Check Product Safety

Upon completion of any service or repairs to this product, the service technician must perform safety checks to determine that this product is in

Protect the Product When Moving It

Always disconnect the power source when moving the apparatus or connecting or disconnecting cables.

20110316_Cable_Safety



Quick Reference Guide

Cisco DTA50 Digital Transport Adapter



Open Source GNU GPL Statement

Cisco DTA50 Digital Transport Adaptor contain(s), in part, certain free/oper source software ("Free Software") under licenses which generally make the source code available for free copy, modification, and redistribution. Examples of such licenses include all the licenses sponsored by the Free Software Foundation (e.g., GNU General Public License (GPL), GNU Lesser eneral Public License (LGPL), Berkeley Software Distribution (BSD), the MIT licenses and different versions of the Mozilla and Apache licenses). To find additional information regarding the Free Software, including a copy of the applicable license and related information, please go to: (i) for North America http://www.cisco.com/web/consumer/support/open_source html, or (ii) for outside North America http://www.cisco.com/web/ consumer/support/open_source.html#~international. Once at the site, earch for the product listing and click on the related items identified. If you have any questions or problems accessing any of the links, please contact spvtg-external-opensource-requests@cisco.com

United States FCC Compliance

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against such interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to
- · Consult the service provider or an experienced radio/television technician for help.

Any changes or modifications not expressly approved by Cisco Systems, Inc., could void the user's authority to operate the equipment

The information shown in the FCC Declaration of Conformity paragraph below is a requirement of the FCC and is intended to supply you with information regarding the FCC approval of this device. *The phone numbers* listed are for FCC-related questions only and not intended for questions regarding the connection or operation for this device. Please contact your service provider for any questions you may have regarding the operation or installation of this device

Declaration of Conformity

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: 1) the device may not cause harmful interference, and 2) the device must accept any interference received. including interference that may cause undesired operation

> Cisco DTA50 Digital Transport Adapter Model: DTA50 Manufactured by: 5030 Sugarloaf Parkway Lawrenceville, Georgia 30044 USA

Canada EMI Regulation

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la class B est conforme à la norme

20081121 FCC Standard

AVC VIDEO LICENSE

With respect to each AVC/H.264 product, we are obligated to provide

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPILANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://WWW.MPEGLA.COM

Accordingly, please be advised that service providers, content providers and broadcasters are required to obtain a separate use license from MPEG LA prior to any use of AVC/H.264 encoders and/or decoders.

Disclaimer

Cisco Systems, Inc. assumes no responsibility for errors or omissions that may appear in this guide. We reserve the right to change this guide at any



5030 Sugarloaf Parkway, Box 465447

678 277-1120

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at

Third party trademarks mentioned are the property of their respective owners.

The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1009R) © 2011, 2012 Cisco and/or its affiliates. All rights reserved.

Part Number 4025708 Rev C

Welcome

The Cisco® DTA50 Digital Transport Adapter (DTA50) changes digital signals into signals you can view on an analog cable-ready TV. With the DTA50, you can continue viewing your favorite cable shows without having to buy a new digital TV. Use the instructions in this guide to install the DTA50.

For more information about this product, visit our website: http://www.cisco.com/web/ consumer/support/index.html

Safety First

Before using this adapter read the IMPORTANT SAFETY INSTRUCTIONS section of

Avoid Screen Burn-In

Images such as letterbox bars or side bars, bright closed-captioning backgrounds, station logos, or any other stationary images may cause the TV screen to age unevenly and cause damage to your TV. Refer to the user guide that came with your TV for more information about screen burn-in.

No picture

Performance Tips

· Verify that the power to your TV is turned on.

If the adapter does not perform as expected, the following tips may help.

- · If the adapter is plugged into a wall switch, verify the switch is in the ON position. (Avoid plugging into an outlet that is controlled by a wall switch.)
- Verify that all cables are properly connected.
- · The current channel may not be available in your service package. Try selecting another channel to see if a picture appears.

No color

- · Verify the current TV program is broadcast in color.
- · Adjust the TV color controls.

No sound

- Verify the volume is turned up.
- · Verify the mute function is not on.

Front Panel



1 Power LED

Illuminates when the adapter is powered on. The LED is green 3. Connect a coaxial cable from the adapter to your TV.

Note: This illustration may vary from the actual product.

Safety and Performance Tip

Keep the top of the adapter free of all objects and electronic devices, including your TV.

Additional Items

In addition to your DTA50, the package you purchased from your service provider contains two additional items: two hook-and-loop mounting squares and an IR Extender.

The mounting squares allow you to attach the DTA50 unit to a television. The IR Extender allows you to place your DTA50 in an unobtrusive location, such as a cabinet, and control your DTA50 with a remote control.

These items are packaged in the carton in which your DTA50 was shipped.


Installing the DTA50

- 1. Unplug all electronic devices before connecting the adapter.
- 2. Connect the adapter to the coaxial cable coming in from the wall.
- 4. Slide the switch to channel 3 or channel 4 based on the channel your service provider
- 5. Plug the DC cord from the external power supply into the adapter.
- 6. Plug the adapter's external power supply and the TV into an AC power source.
- 7. If you purchased an approved IR Extender from your service provider, read and follow the installation instructions for the IR Extender. The IR Extender and its installation instructions should be in the carton in which your DTA50 adapter was shipped.
- 8. Press the POWER key on the remote control

. ------3 CH 4 Cable Input CABLE IN

Note: This illustration may vary from the actual product.

Back Panel

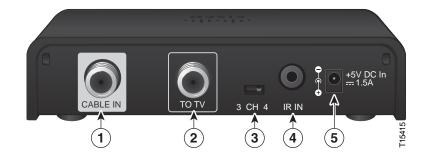

1 Cable In

Connects to a coaxial cable that delivers the signal from your service provider

2 To TV

4 IR In

Connects to a coaxial cable that sends signals to your TV

3 Slide Switch

Can be set to either channel 3 or channel 4

Connects to an approved IR Extender (purchased separately) Please contact your service provider for details

5 DC Power Input Connects to the external power supply for the adapter

Note: This illustration may vary from the actual product.


POWER SUPPLY WARNING: Must use only Power Supply Part Number 4029723 (5V DC input power).

 
WARNING: Electric shock hazard! Unplug all electronic devices before connecting or disconnecting any device cables to the adapter.

Mounting the DTA50 to a TV with Optional Hook-and-Loop **Squares**


1. Remove one of the two optional hook-and-loop mounting squares from the carton in which your DTA50 unit was shipped.

Note: Mounting the DTA50 to your television may be easier if the loop tape remains attached to the hook fastener.

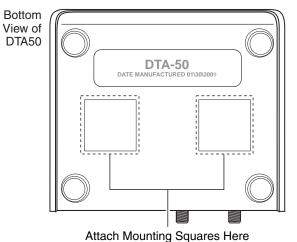




- 2. Peel the paper backing from the loop tape on the mounting square you selected.
- 3. Press and hold the mounting square against the bottom of the DTA50 until the square
- 4. Repeat steps 2 3 for the other mounting square.
- 5. Peel the paper backing from the hook fastener on each of the mounting squares.
- 6. Press and hold the mounting squares to the top or back of your television until the squares form a secure bond.

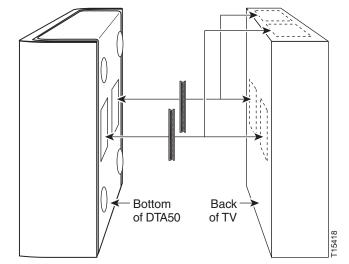

Connecting an Optional IR Extender to the DTA50

The IR Extender, if packaged with your DTA50, allows you to install your DTA50 in an unobtrusive location, such as a cabinet, and control your DTA50 with a remote control.

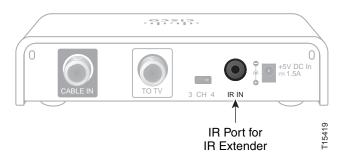

- 1. Plug the connector into the IR port on the back of the DTA50.
- 2. Peel the paper backing from the adhesive pad on the bottom of the receiver. Then, mount the IR Extender receiver in an inconspicuous place, but make certain that nothing blocks the sensor on the front of the receiver. You must be able to point the remote control at this sensor.

To control the DTA50, press the keys on the remote control while aiming the remote control at the sensor on the receiver

Note: If you encounter problems, make sure that all connections are secure and that nothing blocks the path between the receiver and your remote control. For further assistance, contact your service provider.

