


Charge spare battery

You must connect the charger to line power to charge the battery.

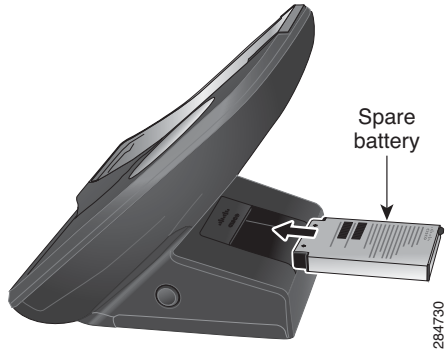

Place the battery into the charger with the metal contacts of the battery facing the charger base.

Additional information

For more information, see the phone user guide.



Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)
© 2012 Cisco Systems, Inc. All rights reserved.
78-20698-01



QUICK START



Cisco UC Phone 7925G Desktop Charger

The Cisco UC Phone 7925G Desktop Charger supports the following models of Cisco UC Phones:

- CP-7925G
- CP-7926G

Overview




LED legend

LED	Color	Flash rate	Meaning
Power/ Bluetooth Status	Unlit	Solid	No power
	Green	Solid	Line power
	Blue	Flashing	Bluetooth connecting or disconnecting
		Solid	Bluetooth connected
Battery	Unlit	Solid	No spare battery installed
	Red	Solid	Spare battery charging
	Green	Solid	Spare battery charged
	Amber-yellow	Solid	Powered by spare battery with adequate charge
Flashing		Battery power is low	
Flashing and dimming		Battery power is depleting	

Pair charger with phone

You must connect the charger to line power before starting this procedure.

1. Insert the phone into the charger and turn on the phone.
2. Press and hold the **Control** button on the side of the charger for 5 seconds. The Power/Bluetooth Status LED flashes and the charger is in pairing mode.
3. Choose  > **Phone Settings** > **Bluetooth**.
4. If first item displays **Bluetooth Disabled**, press **Select**, select **Enable**, and press **Save**.
5. Choose **Device List**.
6. Press **Scan**. A list of devices appears. It may take a few seconds for the scan to complete.
7. To rescan, press **Rescan**.
8. Select **Cisco Dock 7900** and press **Pair**.
9. If prompted, enter **0000** for the passkey, and press **Select** or choose **Options** > **OK**. The pairing completes.
10. Press the **End** button on the phone.

Change charger speaker volume

When the phone is docked, use the **Volume** buttons on the phone to raise or lower the speaker volume.

Mute operation

You can use the **Mute** button on the phone while the phone is docked.

Dock the phone



While the Power/Bluetooth Status LED flashes blue, the phone and charger are connecting. When the Bluetooth connection is made, the Power/Bluetooth Status LED lights solid blue.

If you are on a call when you dock the phone:

- If the Cisco UC Phone 7925G Desktop Charger is powered, there may be a slight delay while the Bluetooth connection completes, and then the call continues using the Cisco UC Phone 7925G Desktop Charger speaker.
- If the Cisco UC Phone 7925G Desktop Charger does not have power (line power or spare battery), the phone cannot connect to the charger using Bluetooth. The call continues, but you need to undock the phone to continue the call.

If the Bluetooth disconnects when the phone is docked, undock and dock the phone again.

When you undock the phone, Bluetooth disconnects and the phone uses the local speaker for audio.