

Cisco Mobility Express Setup

Step 1

Setup

1) Power Mobility Express master Access Point with an available DHCP server.
Connect to Ethernet port marked "PoE" on AP



2) Wait for the LED light to blink GREEN (it may take several minutes)

3a) **From PC browser:** Connect to SSID 'CiscoAirProvision' using the key 'password'

3b) **From smartphone/tablet:** Connect to SSID 'CiscoAirProvision' using the key 'password'

 
Step 2

Configure


4a) Open a web browser and access <http://192.168.1.1>



5) Go through the setup wizard

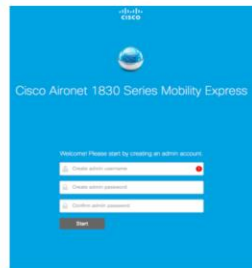

 6) Confirm the settings. Mobility Express Controller will reboot automatically.

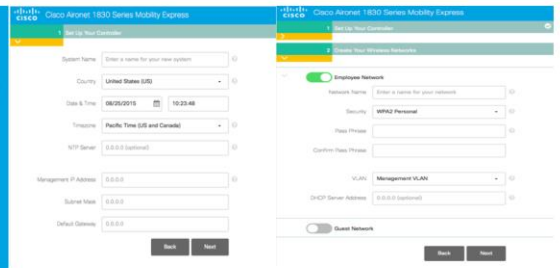

4b) Open Cisco Wireless app and select **Provisioning** tab



Step 3

Operate

8a) Connect wirelessly from a PC browser to monitor and manage your network



7) Keep the Access Point connected to an access switch with a DHCP server available



8b) Use Cisco Wireless app from a smartphone or tablet to monitor your network






Americas Headquarters
Cisco Systems, Inc.
San Jose, CA

Asia Pacific Headquarters
Cisco Systems (USA) Pte. Ltd.
Singapore

Europe Headquarters
Cisco Systems International BV Amsterdam,
The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at www.cisco.com/go/offices.

 Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)