

# Cisco Mobility Express Setup

## Step 1

### Setup

1) Power Mobility Express master Access Point with an available DHCP server.  
**Connect to Ethernet port marked "PoE" on AP**



2) Wait for the LED light to blink GREEN (it may take several minutes)

3a) **From PC browser:** Connect to SSID 'CiscoAirProvision' using the key 'password'

3b) **From smartphone/tablet:** Connect to SSID 'CiscoAirProvision' using the key 'password'

## Step 2

### Configure


4a) Open a web browser and access <http://192.168.1.1>



5) Go through the setup wizard



6) Confirm the settings. Mobility Express Controller will reboot automatically.

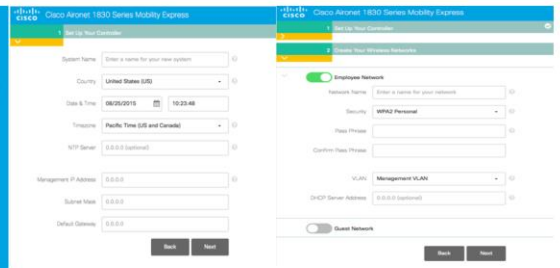

4b) Open Cisco Wireless app and select **Provisioning** tab



## Step 3

### Operate

8a) Connect wirelessly from a PC browser to monitor and manage your network



7) Keep the Access Point connected to an access switch with a DHCP server available



8b) Use Cisco Wireless app from a smartphone or tablet to monitor your network






---

**Americas Headquarters**  
Cisco Systems, Inc.  
San Jose, CA

**Asia Pacific Headquarters**  
Cisco Systems (USA) Pte. Ltd.  
Singapore

**Europe Headquarters**  
Cisco Systems International BV Amsterdam,  
The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).

 Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)