Upgrade eines ASA HA-Paars für FirePOWER-Appliances

Inhalt

Einführung Voraussetzungen Anforderungen Verwendete Komponenten Hintergrundinformationen Konfigurieren Netzwerkdiagramm Aufgabe 1: Laden Sie die ASA-Images von den Cisco Software-Download-Seiten herunter Aufgabe 2: Laden Sie die ASA-Images in den FirePOWER Chassis Manager hoch. Aufgabe 3: Upgrade der ersten ASA-Einheit Aufgabe 4: Upgrade der zweiten ASA-Einheit Überprüfen Fehlerbehebung Zugehörige Informationen

Einführung

Dieses Dokument beschreibt das Upgrade-Verfahren für ein Paar von Adaptive Security Appliances (ASAs) mit hoher Verfügbarkeit, die auf Hardware-Appliances für Firewalls installiert sind.

Voraussetzungen

Anforderungen

Cisco empfiehlt, über Kenntnisse in folgenden Bereichen zu verfügen:

- ASA-Management
- ASA-Failover

Verwendete Komponenten

Die Informationen in diesem Dokument basieren auf den folgenden Software- und Hardwareversionen:

- 2 x FP4150 mit Code 2.0.1-86
- ASA 9.6.2.1 (aktualisiert auf 9.6.2.3)

Die Informationen in diesem Dokument wurden von den Geräten in einer bestimmten Laborumgebung erstellt. Alle in diesem Dokument verwendeten Geräte haben mit einer leeren (Standard-)Konfiguration begonnen. Wenn Ihr Netzwerk in Betrieb ist, stellen Sie sicher, dass Sie die potenziellen Auswirkungen eines Befehls verstehen.

Hintergrundinformationen

Das Upgrade-Verfahren für ein ASA-Modul, das auf FirePOWER-Appliances installiert ist (FPR4100, FPR9300 usw.), wenn HA konfiguriert ist (Aktiv/Standby oder Aktiv/Aktiv), wird im FirePOWER eXtensible Operating System (FXOS) Konfigurationsleitfaden beschrieben. Der relevante Teil ist:

Upda Before	ating the Image Version for a Logical Device								
Download the application image you want to use for the logical device from Cisco.com (see Downloading Images from Cisco.com) and then upload that image to the FXOS chassis (see Uploading an Image to the Firepower Security Appliance).									
lf you are Bundle f	e upgrading both the Platform Bundle image and one or more Application images, you must upgrade the Platform irst.								
Note	You cannot directly upgrade a Firepower Threat Defense logical device. To upgrade a Firepower Threat Defense logical device, you must delete the existing device and then create a new one using the updated image.								
Procedu	ıre								
Step 1	Choose Logical Devices to open the Logical Devices page. The Logical Devices page shows a list of configured logical devices on the chassis. If no logical devices have been configured, a message stating so is shown instead.								
Step 2	Click Update Version for the logical device that you want to update to open the Update Image Version dialog box.								
Step 3 Step 4	For the New Version, choose the software version to which you want to update. Click OK.								

Das Ziel dieses Dokuments besteht darin, einen etwas detaillierteren Überblick über den Upgrade-Prozess in einer HA-Umgebung zu geben.

Hinweis: Im Dokument wird davon ausgegangen, dass die Ziel-ASA-Version mit der vorhandenen FXOS-Version kompatibel ist, sodass in diesem Szenario kein FXOS-Paket-Upgrade erforderlich ist. Überprüfen Sie immer die FXOS-Kompatibilitätsmatrix, um sicherzustellen, dass die Ziel-ASA-Version mit dem FXOS-Image kompatibel ist. Falls nicht, aktualisieren Sie zunächst die FXOS-Images, wie in den FXOS-Versionshinweisen beschrieben.

Konfigurieren

Netzwerkdiagramm

E1/5	E1/6
192.168.0.1/24	E1/8 (fover)
(Active)	1.1.1.1 (Active)
192.168.0.2/24	1.1.1.2 (Standby)
(Standby)	E1/8 (fover)
E1/5	E1/6

ASA1 wie in der FirePOWER Chassis Manager (FCM)-Benutzeroberfläche dargestellt:

c	verview	Interfaces	Logical Devices	Security Engine	Platform Setting	s				System	Tools	Help	adm
										C Refres	h ()	Add	Device
6	ASA4150	i-a	Standalone	Status: ok							(%	/ 5
	Applica	tion	Version		Management IP		Gateway	Management Port	Status				
6	ASA		9.6.2.1		10.0.0.50		10.0.0.1	Ethernet1/7	online	(trabled)	ų re		
	Port	s: ta Interfaces:	Ethernet1/5 Ethern Ethernet1/8	et1/6	Attribute Cluster Manag Manag	ts: r Operational Status ement URL ement IP	not-applicable https://10.0.0.50/ 10.0.0.50						

ASA2:

Over	view Interface	Logical Devices	Security Engine	Platform S	Settings				System	Tools	Help	adm
									C Refres	0	Add 0	Device
A 4	SA4150-4	Standalone	Status: ok							1	Fi 6	/ 5
	Application	Version		Manageme	nt IP	Gateway	Management Port	Status				
	LSA	9.6.2.1		10.0.0.53		10.0.0.1	Ethernet1/7	Online	Enabled 📦 🦻	$\mathbf{i} \rightarrow$		
	Ports:				Attributes:							
	Data Interfaces:	Ethernet1/5 Ethern	set1/6		Cluster Operational Status Management URL	: https://10.0.0.53/						
		Ethernet1/8			Management IP	10.0.0.53						

Aufgabe 1: Laden Sie die ASA-Images von den Cisco Software-Download-Seiten herunter

Navigieren Sie zu **Downloads Home > Products > Security > Firewalls > Next-Generation Firewalls (NGFW),** und wählen Sie die Hardware-Plattform (z. B. 4100, 9000 usw.) aus, wie im Bild gezeigt.



Aufgabe 2: Laden Sie die ASA-Images in den FirePOWER Chassis Manager hoch.

Laden Sie die ASA-Images in das FirePOWER-Chassis. Dies kann über die FirePOWER Chassis Manager (FCM)-Benutzeroberfläche oder die FXOS Command Line Interface (CLI) erfolgen.

Methode 1. Laden Sie die ASA-Images von der FCM-Benutzeroberfläche hoch.

Navigieren Sie zu **System > Updates.** Wählen Sie **Bild hochladen**, geben Sie den Dateinamen an, und wählen Sie **Hochladen**:

				1
			System	Tools Help admin
	Configuration	Licensing 2	Updates	User Management
	C	Refresh 3 U	pload Image	Filter ×
Upload Image		?×	e	
4 Choose File cisco-asa.9.6	6.2.3.SPA.csp	1	5	M 0
5	Upload	Cancel 10	5	

Methode 2. Laden Sie die ASA-Images von der FXOS-CLI hoch.

Sie können das Bild von einem FTP-, SCP-, SFTP- oder TFTP-Server hochladen. So überprüfen Sie die Verbindung zwischen der Chassis-Verwaltungsschnittstelle und dem Remote-Server:

```
FPR4100# connect local-mgmt
FPR4100(local-mgmt)# ping 10.48.40.70
PING 10.48.40.70 (10.48.40.70) from 10.62.148.88 eth0: 56(84) bytes of data.
64 bytes from 10.48.40.70: icmp_seq=1 ttl=61 time=34.4 ms
64 bytes from 10.48.40.70: icmp_seq=2 ttl=61 time=34.3 ms
64 bytes from 10.48.40.70: icmp_seq=3 ttl=61 time=34.3 ms
Um das ASA-Image zu übertragen, navigieren Sie zu diesem Bereich, und führen Sie den Befehl
```

download image aus:

asa.9.6.2.3.SPA.csp Password:

Um den Fortschritt der Bildübertragung zu überwachen, führen Sie den Befehl **show download**task detail aus:

FPR4100 /ssa/app-software # show download-task detail
Downloads for Application Software:
 File Name: cisco-asa.9.6.2.3.SPA.csp
 Protocol: Ftp
 Server: 10.48.40.70
 Port: 0
 Userid: anonymous
 Path:
 Downloaded Image Size (KB): 94214
 Time stamp: 2016-12-08T10:21:56.775
 State: Downloading
 Transfer Rate (KB/s): 450.784698
 Current Task: downloading image cisco-asa.9.6.2.3.SPA.csp from 10.48.40.70(FSM-

```
STAGE:sam:dme:ApplicationDownloaderDownload:Local)
```

Sie können diesen Befehl auch verwenden, um die erfolgreiche Übertragung zu überprüfen:

FPR4100 /ssa/app-software # show download-task Downloads for Application Software: File Name Protocol Server Port Userid State _____ cisco-asa.9.6.2.2.SPA.csp Ftp 10.48.40.70 0 anonymous Downloaded Weitere Informationen: FPR4100 /ssa/app-software # show download-task fsm status expand File Name: cisco-asa.9.6.2.3.SPA.csp FSM Status: Affected Object: sys/app-catalogue/dnld-cisco-asa.9.6.2.3.SPA.csp/fsm Current FSM: Download Status: Success Completion Time: 2016-12-08T10:26:52.142 Progress (%): 100

FSM Stage:

Order	Stage Name	Status	Try
1	DownloadLocal	Success	1
2	DownloadUnpackLocal	Success	1

Das ASA-Image wird im Chassis-Repository angezeigt:

```
FPR4100 /ssa/app-software # exit
FPR4100 /ssa # show app
```

Name	Version	Description	Author	Deploy Type	CSP Type	Is Default App
asa	9.6.2.1	N/A	cisco	Native	Application	No
asa	9.6.2.3	N/A	cisco	Native	Application	No

Aufgabe 3: Upgrade der ersten ASA-Einheit

Aktualisieren Sie zuerst die Standby-ASA-Einheit, wie im Bild gezeigt:



Geben Sie das neue Bild an, und wählen Sie OK , um das Upgrade zu starten:

Opdate image	e version			(f) (f
Application:	asa			
Current Version:	9.6.2.1			
New Version:	9.6.2.3		-	
		(ок	Cancel

Überprüfung

Fortschritt des ASA-Upgrades über die FCM-GUI:

c	verview	Interfaces	Logical Devices	Security Engine	Platform S	Settings				System Te	×
										C Refresh	
6	ASA4150	H4	Standalone	Status: ok							
	Applica	tion	Version		Manageme	nt IP	Gateway	Management Port	Status		
1	ASA		9.6.2.1		10.0.0.53		10.0.0.1	Ethernet1/7	C updating	Called 🕒 🏹	
	Da	s: ta Interfaces:	Ethernet1/5 Ethern Ethernet1/8	et1/6		Attributes: Cluster Operational Status Management URL Management IP	: not-applicable : https://10.0.0.53/ : 10.0.0.53				

Nach 1-2 Minuten wird die FCM-Benutzeroberfläche angezeigt:

c	verview	Interfaces	Logical Devices	Security Engine	Platform 9	Settings				System	Тоо	5
										C Refre	sh	d
6	ASA4150	-4	Standalone	Status: ok								
	Applica	tion	Version		Manageme	ent IP	Gateway	Management Port	Status			
1	ASA		9.6.2.3		10.0.0.53		10.0.0.1	Ethernet1/7	B update-succeeded	Enabled 🜑	Π.	Þ
L	Ports	R.				Attributes:						
L	Dat	ta Interfaces:	Ethernet1/5 Ethern	et1/6		Cluster Operational Status Management URL	https://10.0.0.53/					
L			Ethernet1/8			Management IP	10.0.0.53					
r												

Das ASA-Modul wird neu geladen:

0	verview	Interfaces	Logical Devices	Security Engine	Platform S	ettings			
6	ASA4150	-4	Standalone	Status: ok					
ī	Applica	tion	Version		Managemer	nt IP	Gateway	Management Port	Status
6	ASA		9.6.2.3		10.0.0.53		10.0.0.1	Ethernet1/7	Security module not responding
	Dat	a Interfaces:	Ethernet1/5 Ethern Ethernet1/8	eti/6	,	Attributes: Cluster Operational Status : Management URL : Management IP :	not-applicable https://10.0.0.53/ 10.0.0.53		

Der ASA-Upgrade-Prozess über die FirePOWER Chassis CLI.

Die CLI zeigt, dass das logische Gerät (ASA) neu gestartet wird. Der gesamte Upgrade-Prozess von der Boot-Kommandozeile des Moduls in dieser Ausgabe:

```
asa/sec/stby(config)#
[screen is terminating]
Disconnected from asa console!
Firepower-module1>
INIT: SwitchingStopping OpenBSD Secure Shell server: sshdstopped /usr/sbin/sshd (pid 5738)
.
Stopping Advanced Configuration and Power Interface daemon: stopped /usr/sbin/acpid (pid 5742)
acpid: exiting
acpid.
Stopping system message bus: dbus.
Stopping ntpd: stopped process in pidfile '/var/run/ntp.pid' (pid 6186)
done
Stopping crond: OK
Deconfiguring network interfaces... done.
Sending all processes the TERM signal...
```

```
SIGKILL_ALL will be delayed for 1 + 5 secs
Sending all processes the KILL signal...
Deactivating swap...
Unmounting local filesystems...
Rebooting... [ 1679.605561] Restarting system.
Cisco Systems, Inc.
Configuring and testing memory..
Cisco Systems, Inc.
Configuring and testing memory..
Configuring platform hardware...
Bios Version : FXOSSM1.1.2.1.3.031420161207
Platform ID : FXOSSM1
Processor(s) Intel(R) Xeon(R) CPU E5-2699 v4 @ 2.20GHz
Total Memory = 256 GB Effective Memory = 256 GB
Memory Operating Speed 2400 Mh
Please wait, preparing to boot..
.....
UEFI Interactive Shell v2.0. UEFI v2.40 (American Megatrends, 0x0005000B). Revision 1.02
Mapping table
     fs0: Alias(s):HD17a65535a1:;blk1:
         PciRoot(0x0)/Pci(0x1F,0x2)/Sata(0x0,0xFFFF,0x0)/HD(1,MBR,0x000EC692,0x800,0xEE6800)
    blk0: Alias(s):
         PciRoot(0x0)/Pci(0x1F,0x2)/Sata(0x0,0xFFFF,0x0)
    blk2: Alias(s):
         PciRoot(0x0)/Pci(0x1F,0x2)/Sata(0x0,0xFFFF,0x0)/HD(2,MBR,0x000EC692,0xEE7000,0x3BA000)
    blk3: Alias(s):
PciRoot(0x0)/Pci(0x1F,0x2)/Sata(0x0,0xFFFF,0x0)/HD(3,MBR,0x000EC692,0x12A1000,0x950000)
    blk4: Alias(s):
PciRoot(0x0)/Pci(0x1F,0x2)/Sata(0x0,0xFFFF,0x0)/HD(4,MBR,0x000EC692,0x1BF1000,0x2CD20800)
    blk5: Alias(s):
PciRoot(0x0)/Pci(0x1F,0x2)/Sata(0x0,0xFFFF,0x0)/HD(4,MBR,0x000EC692,0x1BF1000,0x2CD20800)/HD(1,M
BR, 0x0000000, 0x1BF1800, 0x5D22000)
    blk6: Alias(s):
PciRoot(0x0)/Pci(0x1F,0x2)/Sata(0x0,0xFFFF,0x0)/HD(4,MBR,0x000EC692,0x1BF1000,0x2CD20800)/HD(2,M
BR, 0x00000000, 0x7914000, 0x26FFD800)
To launch ROMMON.
CpuFrequency = 2200002 KHz
Cisco FXOSSM1 Blade Rommon 1.2.1.3, Mar 14 2016 12:11:29
Platform: SSPXRU
INFO: enic_identify: Enabling Cruz driver...
INFO: enic_identify: Cruz driver enabled.
INFO: init_spi_interface: HSFS_BERASE_4K.
INFO: enic_init: bar[0].vaddr 0xc6e00000.
INFO: enic_init: bar[2].vaddr 0xc6e10000.
INFO: enic_init: eNic port MTU is 1500.
INFO: enic_init: eNic bsize 1500 ring size 512.
INFO: enic_init: Waiting for Cruz link...
INFO: enic_init: Cruz link detected.
INFO: nb_eth_app_init: MAC address for interface 0: 00 15 a5 01 01 00
INFO: nb_eth_app_init: IP address 127.128.1.254
Start communicating with MIO in blade slot 1...
INFO: Allocated 1000 bytes of memory for cmd at 0x78a7d018.
INFO: Allocated 1000 bytes of memory for status at 0x76d34918.
```

INFO: Allocated 196608 bytes of memory for key file at 0x76d03018. INFO: Status code 1: 'rommon initialize is completed'. INFO: tftp_open: '/rommon/status_1.txt'@127.128.254.1 via 127.128.254.1 INFO: nb_tftp_upload: 31 bytes sent. tftpget 0x78a7d018 1000 INFO: tftp_open: '/rommon/command_1.txt'@127.128.254.1 via 127.128.254.1 Received 154 bytes WARNING: retrieve_mio_cmd_info: Invalid checksum 0x0. tftpget 0x76d03018 196608 INFO: tftp_open: 'rommon/key_1.bin'@127.128.254.1 via 127.128.254.1 Received 131072 bytes INFO: Status code 8: 'rommon succeeds to retrieve key file'. INFO: tftp_open: '/rommon/status_1.txt'@127.128.254.1 via 127.128.254.1 INFO: nb_tftp_upload: 31 bytes sent. INFO: Primary keys in flash are up-to-date. INFO: Backup keys in flash are up-to-date. continue check local image the image file path: installables/chassis/fxos-lfbff-k8.9.6.2.2.SPA the image file name only: fxos-lfbff-k8.9.6.2.2.SPA local_image_file: fs0:fxos-lfbff-k8.9.6.2.2.SPA INFO: File 'fs0:fxos-lfbff-k8.9.6.2.2.SPA' has 104831328 bytes. local_image_file_size 104831328 Found image fs0:fxos-lfbff-k8.9.6.2.2.SPA in local storage, boot local image. set pboot_image fxos-lfbff-k8.9.6.2.2.SPA INFO: File 'fs0:fxos-lfbff-k8.9.6.2.2.SPA' has 104831328 bytes. INFO: 'fs0:fxos-lfbff-k8.9.6.2.2.SPA' has 104831328 bytes INFO: Booting LFBFF image... INFO: Status code 7: 'rommon about to verify image signature from local disk'. INFO: tftp_open: '/rommon/status_1.txt'@127.128.254.1 via 127.128.254.1 INFO: nb_tftp_upload: 31 bytes sent. INIT: version 2.88 booting Starting udev Configuring network interfaces... done. Populating dev cache rw console=ttyS0,38400 loglevel=2 auto kstack=128 reboot=force panic=1 ide generic.probe mask=0x1 ide1=noprobe pci=nocrs processor.max cstate=1 iommu=pt platform=sspxru boot_img=disk0:/fxos-lfbff-k8.9.6.2.2.SPA ciscodmasz=786432 cisconrsvsz=2359296 hugepagesz=1g hugepages=24 ssp_mode=0 No Partitions for HDD2.. Creating partition .. mount: special device /dev/sdb1 does not exist rw console=ttyS0,38400 loglevel=2 auto kstack=128 reboot=force panic=1 ide_generic.probe_mask=0x1 ide1=noprobe pci=nocrs processor.max_cstate=1 iommu=pt platform=sspxru boot_img=disk0:/fxos-lfbff-k8.9.6.2.2.SPA ciscodmasz=786432 cisconrsvsz=2359296 hugepagesz=1g hugepages=24 ssp_mode=0 Create libvirt group Start libvirtd Service * Starting virtualization library daemon: libvirtd no /usr/bin/dnsmasq found; none killed 2016-12-07 12:47:24.090+0000: 4373: info : libvirt version: 1.1.2 2016-12-07 12:47:24.090+0000: 4373: warning : virGetHostname:625 : getadd[ok]failed for 'ciscoasa': Name or service not known Disable the default virtual networks Network default destroyed Done with libvirt initialization rw console=ttyS0,38400 loglevel=2 auto kstack=128 reboot=force panic=1 ide_generic.probe_mask=0x1 ide1=noprobe pci=nocrs processor.max_cstate=1 iommu=pt platform=sspxru boot_img=disk0:/fxos-lfbff-k8.9.6.2.2.SPA ciscodmasz=786432 cisconrsvsz=2359296

hugepagesz=1g hugepages=24 ssp_mode=0

```
rw console=ttyS0,38400 loglevel=2 auto kstack=128 reboot=force panic=1
ide_generic.probe_mask=0x1 ide1=noprobe pci=nocrs processor.max_cstate=1 iommu=pt
platform=sspxru boot_img=disk0:/fxos-lfbff-k8.9.6.2.2.SPA ciscodmasz=786432 cisconrsvsz=2359296
hugepagesz=1g hugepages=24 ssp_mode=0
Turbo Boost is UNSUPPORTED on this platform.
Configuration Xml found is /opt/cisco/csp/applications/configs/cspCfg_cisco-
asa.9.6.2.3 asa 001 JAD201200C64A93395.xml
INIT: Entering runlevel: 3
rw console=ttyS0,38400 loglevel=2 auto kstack=128 reboot=force panic=1
ide_generic.probe_mask=0x1 ide1=noprobe pci=nocrs processor.max_cstate=1 iommu=pt
platform=sspxru boot_img=disk0:/fxos-lfbff-k8.9.6.2.2.SPA ciscodmasz=786432 cisconrsvsz=2359296
hugepagesz=1g hugepages=24 ssp_mode=0
Starting system message bus: dbus.
Starting OpenBSD Secure Shell server: sshd
 generating ssh RSA key...
 generating ssh ECDSA key...
 generating ssh DSA key...
done.
Starting Advanced Configuration and Power Interface daemon: acpid.
acpid: starting up
acpid: 1 rule loaded
acpid: waiting for events: event logging is off
Starting ntpd: done
Starting crond: OK
          Cisco Security Services Platform
                Type ? for list of commands
Firepower-module1>
Firepower-module1>show services status
Services currently running:
Feature | Instance ID | State | Up Since
_____
    001_JAD201200C64A93395 | RUNNING | :00:00:20
asa
Firepower-module1>
```

Das gesamte Verfahren dauert ca. 5 Minuten.

Sie können auch den Befehl **show app-instance** in der Chassis-CLI verwenden, um zu überprüfen, ob die ASA-Anwendung **online** ist:

FPR4100# scope ssa					
FPR4100 /ssa # show a	app-instance	1			
Application Name	Slot ID	Admin State	Operational State	Running Version S	Startup
Version Cluster Oper	State				
asa	1	Enabled	Online	9.6.2.3	9.6.2.3
Not Applicabl					

Die ASA-Module erkennen sich gegenseitig:

Detected an Active mate Beginning configuration replication from mate. End configuration replication from mate.

asa/sec/stby>

Überprüfung

```
FPR4100# connect module 1 console
Telnet escape character is '~'.
Trying 127.5.1.1...
Connected to 127.5.1.1.
Escape character is '~'.
CISCO Serial Over LAN:
Close Network Connection to Exit
Firepower-module1> connect asa
asa> enable
Password:
asa/sec/stby# show failover
Failover On
Failover unit Secondary
Failover LAN Interface: fover Ethernet1/8 (up)
Reconnect timeout 0:00:00
Unit Poll frequency 1 seconds, holdtime 15 seconds
Interface Poll frequency 5 seconds, holdtime 25 seconds
Interface Policy 1
Monitored Interfaces 2 of 1041 maximum
MAC Address Move Notification Interval not set
Version: Ours 9.6(2)3, Mate 9.6(2)1
Serial Number: Ours FLM2006EQFW, Mate FLM2006EN9U
Last Failover at: 12:48:23 UTC Dec 7 2016
        This host: Secondary - Standby Ready
                Active time: 0 (sec)
                slot 0: UCSB-B200-M3-U hw/sw rev (0.0/9.6(2)3) status (Up Sys)
                  Interface INSIDE (192.168.0.2): Normal (Not-Monitored)
                  Interface OUTSIDE (192.168.1.2): Normal (Monitored)
                  Interface management (0.0.0.0): Normal (Waiting)
        Other host: Primary - Active
                Active time: 10320 (sec)
                slot 0: UCSB-B200-M3-U hw/sw rev (0.0/9.6(2)1) status (Up Sys)
                  Interface INSIDE (192.168.0.1): Normal (Not-Monitored)
                  Interface OUTSIDE (192.168.1.1): Normal (Monitored)
                  Interface management (10.0.0.50): Normal (Waiting)
```

• • •

Führen Sie die folgenden Befehle aus, um den ordnungsgemäßen Failover-Betrieb zwischen den ASA-Einheiten zu bestätigen:

- Kontonummer anzeigen
- Auslieferungszählung
- show crypto ipsec sa

Aufgabe 4: Upgrade der zweiten ASA-Einheit

Wechseln Sie die Failover-Peers, und aktualisieren Sie die primäre ASA:

```
asa/sec/stby# failover active
```

Switching to Active asa/sec/act#

Geben Sie das neue Image an, und starten Sie die Aktualisierung:

ov	erview Inte	faces Logical Devices	Security Engine	Platform Settings			System Tools Help
	ASA4150-3	Standalone	Status: ok				C Refresh O Add
	Application	Version		Management IP	Gateway	Management Port	Status
	ASA	9.6.2.1		10.0.0.50	10.0.0.1	Ethernet1/7	🔞 online 💿 🕅 🏞
	Ports: Data Inter	faces: Ethernet1/5 Ethern Ethernet1/8	net1/6	Attributes: Cluster Operational Management URL Management IP	Status : not-applicable : https://10.0.0.50/ : 10.0.0.50		
					Update image version Application: asa Current Version: 9.6.2.1 New Version: 9.6.2.3 2	СК Cancel	

Nach 5 Minuten ist das Upgrade abgeschlossen.

Überprüfen

Überprüfen Sie in der Chassis-CLI, ob die ASA-Anwendung online ist:

FPR4100# scope ssa FPR4100 /ssa # show a Application Name	app-instance Slot ID	Admin State	Operational State	Running Version S	Startup
Version Cluster Oper	State				
asa Not Applicable	Ţ	Enabled	Online	9.6.2.3	9.6.2.3

Überprüfen Sie im ASA-Modul den Failover-Betrieb:

asa/pri/stby# show failover Failover On Failover unit Primary Failover LAN Interface: fover Ethernet1/8 (up) Reconnect timeout 0:00:00 Unit Poll frequency 1 seconds, holdtime 15 seconds Interface Poll frequency 5 seconds, holdtime 25 seconds Interface Policy 1 Monitored Interfaces 2 of 1041 maximum MAC Address Move Notification Interval not set Version: Ours 9.6(2)3, Mate 9.6(2)3 Serial Number: Ours FLM2006EN9U, Mate FLM2006EQFW Last Failover at: 14:35:37 UTC Dec 7 2016 This host: Primary - Standby Ready

```
Active time: 0 (sec)

slot 0: UCSB-B200-M3-U hw/sw rev (0.0/9.6(2)3) status (Up Sys)

Interface INSIDE (192.168.0.2): Normal (Not-Monitored)

Interface OUTSIDE (192.168.1.2): Normal (Waiting)

Other host: Secondary - Active

Active time: 656 (sec)

slot 0: UCSB-B200-M3-U hw/sw rev (0.0/9.6(2)3) status (Up Sys)

Interface INSIDE (192.168.0.1): Failed (Not-Monitored)

Interface OUTSIDE (192.168.1.1): Normal (Waiting)

Interface management (10.0.0.50): Normal (Waiting)

Stateful Failover Logical Update Statistics

Link : fover Ethernet1/8 (up)

Stateful Obj xmit xerr rcv rerr

General 7 0 8 0
```

• • •

Zurücksetzen des Failovers auf primäre/aktive, sekundäre/Standby-Funktionen:

```
asa/pri/stby# failover active
    Switching to Active
asa/pri/act#
```

Fehlerbehebung

Für diese Konfiguration sind derzeit keine spezifischen Informationen zur Fehlerbehebung verfügbar.

Zugehörige Informationen

- FXOS-Konfigurationsleitfaden
- <u>FXOS-ASA-Kompatibilitätsleitfaden</u>
- FXOS-Versionshinweise
- <u>Technischer Support und Dokumentation Cisco Systems</u>