Installation eines Release-Schlüssels der Cisco Expressway-Serie über die Webschnittstelle und das CLI-Konfigurationsbeispiel

Inhalt

Einführung Voraussetzungen Anforderungen Verwendete Komponenten Konfigurieren Installationsbeispiel für den Versionsschlüssel der Webschnittstelle: Installationsbeispiel eines CLI-Freigabeschlüssels: Überprüfen Überprüfung der Installation des Release-Schlüssels für die Webschnittstelle: CLI Interface Verification of Release Key Installation Fehlerbehebung

Einführung

In diesem Dokument wird die Installation eines Release-Schlüssels auf einem Gerät der Cisco Expressway-Serie über die Webschnittstelle und die Befehlszeilenschnittstelle (CLI) beschrieben.

Mitarbeiter: Michael Wall, Cisco TAC Engineer.

Voraussetzungen

Anforderungen

Cisco empfiehlt, über Kenntnisse in folgenden Bereichen zu verfügen:

Schnellinstallationsanlage

Expressway erfolgreich installiert und eine gültige IP-Adresse angewendet, die über die Webschnittstelle oder CLI erreichbar ist.

Sie haben einen für die Expressway Seriennummer gültigen Release Key beantragt und erhalten.

Sie haben Zugriff auf den Expressway sowohl über root (per CLI) als auch über ein Admin-Konto über Webschnittstelle oder CLI.

Sie haben ein Expressway Software Upgrade Image von Cisco.com heruntergeladen.

Hinweis: Installationsanleitungen finden Sie hier:

http://www.cisco.com/c/en/us/support/unified-communications/expressway-series/productsinstallation-guides-list.html

Verwendete Komponenten

Die Informationen in diesem Dokument basieren auf den folgenden Softwareversionen:

Expressway-Versionen x8.7.3 und x8.8.3

Expressway Core x7.X- und x8.X-Versionen

Expressway Edge x7.X- und x8.X-Versionen

PuTTY (Terminal-Emulationssoftware)

—Alternativ können Sie jede Terminal-Emulationssoftware verwenden, die SSH unterstützt, z. B. Secure CRT, TeraTerm usw.

PSCP (PuTTY Secure Copy Protocol-Client)

-Sie können jeden Client verwenden, der SCP unterstützt.

Lizenzierung von E-Mails mit einem Release-Key oder Upgrade-Schlüssel.

Ein Webbrowser. In diesem Beispiel wird Firefox verwendet, Internet Explorer und Chrome sollten genauso gut funktionieren.

Die Informationen in diesem Dokument wurden von den Geräten in einer bestimmten Laborumgebung erstellt. Alle in diesem Dokument verwendeten Geräte haben mit einer leeren (Standard-)Konfiguration begonnen. Wenn Ihr Netzwerk in Betrieb ist, stellen Sie sicher, dass Sie die potenziellen Auswirkungen eines Befehls verstehen.

Konfigurieren

Installationsbeispiel für den Versionsschlüssel der Webschnittstelle:

Sie haben zwei Möglichkeiten:

Option 1: Sie können den Release-Schlüssel festlegen.

Option 2: Sie können den Release-Schlüssel im Rahmen des Upgrade-Prozesses hinzufügen.

Beide Optionen funktionieren, und wir zeigen die **eingestellte** Option zuerst, gefolgt von der **Upgrade-**Option als Nächstes an.

Hinweis: Beide Optionen erfordern einen Expressway-Neustart.

Option 1 zeigt die **eingestellte** Option. Dieses Beispiel für eine Webschnittstelle ergänzt dieses Dokument.

Schritt 1: Nachdem Sie Ihren Expressway installiert haben, lassen Sie Ihre Seriennummer und Ihren Release-Schlüssel mithilfe Ihres PAKs und Ihrer Seriennummer anfordern. Sie erhalten eine Lizenz-E-Mail vom Lizenzierungsteam von Cisco, die möglicherweise einen Release-Schlüssel und Optionsschlüssel enthält.

Hinweis: Die Beispiel-E-Mail ist für ein VCS, dies ist ok, die E-Mail für eine Expressway-Serie sieht identisch aus.

Hinweis: Beispiele für PAK sind nicht Bestandteil dieses Dokuments.

E-MAIL-BEISPIEL

You have received this email because your email address was provided to Cisco Systems during the Serial Number Lookup process for software license activation key/file. Please read this email carefully and forward it with any attachments to the proper system administrator if you are not the correct person.

System Serial Number Hardware Serial Number MAC Address Service Contract SC End Date	: 0B616767 : 0B616767 : 00000000000 : - : -
Software Part Name Tandberg Item No Shipped Version Shipped Version Key Shipped Image URL Upgrade To Upgrade To Key Upgrade To Image URL	: L-VCS-FINDME: L-VCS-FINDME:VCS - Enable User Policy feature 1 116341U00-1-1C328745 - 7 7513492028475672 -
Options Cisco Option Name Tandberg Option Name Option Key	:LIC-VCS-300: :116341X300:VCS - add 300 non-traversal calls :116341X300-1-7D03B558
Options Cisco Option Name Tandberg Option Name Option Key	:LIC-VCS-DEVPROV: :116341P00:VCS - Enable Device Provisioning :116341P00-1-1FEB68A1
Options Cisco Option Name Tandberg Option Name Option Key	:LIC-VCS-GW: :116341G00:VCS - Enable GW feature :116341G00-1-96554215

Schritt 2: Greifen Sie über einen Webbrowser auf die Webschnittstelle des Expressway zu. Melden Sie sich mit einem Administratorkonto an, und Sie werden zum Bildschirm "Expressway Status" weitergeleitet.

Hinweis: Einige Ziffern verschwinden absichtlich im gesamten Dokument.

cisco Cisco E	xpresswo	Note: Login brin	gs us to the status screen	This system has 6 alarms
Status System Co	onfiguration Applications	Users Maintenance		A 7 Help 😔 Logout
Overview				You are here: Status • Overview
🕕 Invalid release key: F	Release key is missing: the system i	s in demonstration mode and has limi	ted functionality; contact your Cisco support representative to	buy your release key.
System information			<u> </u>	
System name	EXP-Core		Note also, our release key is invalid	
Up time	6 days 15 hours 7 n	ninutes 51 seconds	Hote also, our release key is invalid.	
Software version	X8.7.3			
IPv4 address	.117			
Options	1 Rich Media Sessi	ons, Encryption, Interworking, Expres	isway Series.	
Resource usage (last upda	ated: 12:53:04 UTC)			
Pich madia sassion calls	Currentvideo	0		
Rich media session calls	Current audio (SID)	0		
	Current adulo (SIF)	0		
	Peak video	8		
	Since last restart video	8		
	Since last restart video	0		
	GITCH IBSL HESIBIL BUOID (GIP)	0		
Rich media sessions	License usage current	0%		
	License usage peak	0%		
Liser: admin Access: Read-w	rite System host name: VCS-C Syst	tem time: 12:56 LITC		Language: en LIS S/N: IDE16E47 Version: X8.7.3

Schritt 3: Navigieren Sie zum entsprechenden Bildschirm, um den Versionsschlüssel zu installieren. Bewegen Sie den Mauszeiger über die Registerkarte Wartung.

status system co	onfiguration Applications	Users (Maintenance)	Click on Maintenance	👗 🕐 Help 😁 Logout
Overview				You are here: Status > Overview
🕕 Invalid release key: F	telease key is missing: the system is	s in demonstration mode and has lim	ted functionality; contact your Cisco support representativ	e to buy your release key.
System information				
System name	EXP-Core			
Up time	6 days 15 hours 7 m	ninutes 51 seconds		
Software version	×8.7.3			
IPv4 address	117			
Options	1 Rich Media Sessio	ons, Encryption, Interworking, Expre	ssway Series.	
Resource usage (last upda	ited: 12:53:04 UTC)			
Rich media session calls	Current video	0		
	Current audio (SIP)	0		
	Peak video	0		
	Peak audio (SIP)	0		
	Since last restart video	0		
	Since last restart audio (SIP)	0		
Rich media sessions	License usage current	0%		
	License usage peak	0%		

Schritt 4: Wenn das Menü angezeigt wird, klicken Sie auf Optionstasten:

Status System C	onfiguration Applications	Users	Maintenance			🛕 🕜 Help. 😁 Logout
Overview			Upgrade			You are here: Status > Overview
Invalid release key: F	Release key is missing: the system i	s in demonstr	Logging		tionality; contact your Cisco support representative to buy your release key.	
System information			Option keys			
System name	EXP-Core		Tools	۲	Click on Option Keys	
Up time	6 days 15 hours 7 n	ninutes 51 se	Security certificates	۲		
Software version	×8.7.3		Backup and restore			
IPv4 address	.117		Diagnostics	۲		
Options	1 Rich Media Sessi	ons, Encrypti	Maintenance mode		eries.	
Resource usage (last upda	ated: 12:53:04 UTC)		Language			
Rich media session calls	Current video	0	Restart options			
	Current audio (SIP)	0		_	1	
	Peak video	0				
	Peak audio (SIP)	0				
	Since last restart video	0				
	Since last restart audio (SIP)	0				
Dieb medie ereniene	L'anne anne anne a	0.07				
Rich media sessions	License usage current	0%				
	License usage peak	0%				

```
User: admin Access: Read-write System host name: VCS-C System time: 13:12 UTC
```

Language: en_US S/N: 0DE16F47 Version: X8.7.3

Schritt 5: Beachten Sie den Abschnitt **"Release Key**" (**Release-Schlüssel**), und wenn es sich um eine neue Installation handelt, gibt es ein leeres Feld für den Release-Schlüssel. Das **Release Key**-Feld für eine vorhandene Expressway-Installation wird mit dem aktuellen Release Key-Wert vorab ausgefüllt. Sie verwenden die **Upgrade-**Option, um in diesem Fall den Release-Schlüssel festzulegen.

Hinweis: Der Release-Schlüssel ändert sich nicht zwischen Upgrades für Nebenversionen. Der Release-Key ändert sich nur zwischen Hauptversionsaktualisierungen wie x7.x auf x8.x.

Kopieren Sie den Release-Key, und fügen Sie ihn in das Feld Release Key ein:

ahaha	
CISCO	Cisco Expressway

tus System Configuration Applic	cations Users Maintenance			🕹 🕜 <u>Help</u> . 😔 Le
tion keys				You are here: Maintenance > Optic
Invalid release key: Release key is missing: t	the system is in demonstration mode and I	has limited functionality; contact your Cise	co support representative t	o buy your release key.
Key 🔻	Descript	tion	Status	Information
116341E00-1-2B872ED6	Express	vay Series	Active	The 16-character release key for this software. Warning: if this is
ete Select all Unselect all				invalid the system will run with restricted functionality.
stem information				Range: must be exactly 16 characters
rial number	0DE16F47			
tive options	1 Rich Media Sessions,	, Encryption, Interworking, Expressway S	eries.	
ftware option				
td option key		()		
id option key		() Sei ke	ote the Release Key fic ries Device. This field r ay is already installed o Copy your new re	eld is blank if a new Expressway nay be pre-populated if a release r upgrading from a prior version. elease key into this field.
Id option key		C) Se ke	ote the Release Key fir ries Device. This field r ey is already installed o Copy your new re	eld is blank if a new Expressway nay be pre-populated if a release ruggrading from a prior version. elease key into this field.
id option key d option lease key lease key		I N Sei ke	ote the Release Key fir ries Device. This field r ay is already installed o Copy your new re	eld is blank if a new Expressway nay be pre-populated if a release r upgrading from a prior version. elease key into this field.
It option key It option Iease key Iease key release key		I N Se ke	ote the Release Key fir ries Device. This field r ey is already installed o Copy your new re	eld is blank if a new Expressway nay be pre-populated if a release rupgrading from a prior version. elease key into this field.
id option key 3 option slease key lease key release key rent licenses			ote the Release Key fir ries Device. This field r ay is already installed o Copy your new re	eld is blank if a new Expressway nay be pre-populated if a release r upgrading from a prior version. elease key into this field.

Schritt 6: Sie sehen, dass der Freigabetaste in das Feld Release Key (Freigabetaste) eingefügt wurde.

ababa	
CISCO	Cisco Expresswa

CISCO Cisco Expressway-C			This system has 6 alarms
Status System Configuration Applica	tions Users Maintenance		👗 🕐 Help. 😔 Logout
Option keys			You are here: Maintenance + Option keys
Invalid release key: Release key is missing: the	e system is in demonstration mode and has limited functional	lity; contact your Cisco support representative to bu	iy your release key.
Key 🔻	Description	Status	Validity period
116341E00-1-2B872ED6	Expressway Series	Active	Unlimited
Delete Select all Unselect all			
System information]		
Serial number	0DE16F47		
Active options	1 Rich Media Sessions, Encryption, Interwo	rking, Expressway Series.	
Software option]		
Add option key			
Add option		Here I've pasted in the Release Key I received for this Expressway	
Release key			
Release key	7800812430795357		
Set release key			
Current licenses			
Traversal calls	1		
User: admin Access: Read-write System host name: Vo	CS-C System time: 13:28 UTC		Language: en_US S/N: 0DE16F47 Version: X8.7.3

Schritt 7: Klicken Sie auf Schlüssel festlegen:

Status	System	Configuration	Applicatio	ns Users	Maintenance			-	A ? Help	e Logout
Optior	n keys	-						You are here	: Maintenance	Option key
L In	valid release l	key: Release key is	missing: the s	ystem is in demo	nstration mode and has limite	d functionality; contact your Cisco sup	port representative to b	ouy your release key.		
	Key 🔻				Description		Status	Validity period		
	116341E00-1-	2B872ED6			Expressway Serie	S	Active	Unlimited		
Delete	Select all	Unselect all								
System	n information		_							
Serial r	number			ODE	E16F47					
Active	options			1 R	ich Media Sessions, Encrypti	on, Interworking, Expressway Series.				
Softwa	are option									
Add op	tion key									
Add opti	ion									
Releas	e kev									
Release	e key			780	00812430795357					
Set relea	ase key			Click Set	t release key]				
Current	licenses								_	_
Traversa	calls			1						

Schritt 8: Klicken Sie auf den Hyperlink **Neustart** in der oben auf der Seite angezeigten Eingabeaufforderung, um den Expressway neu zu starten:

սիսիս	
CISCO	Cisco Expressway-

CISCO Cisco Expressway-C Status System Configuration Application	ns Users Maintenance		This system has 6 alarms
Option keys	er a <u>restart</u> is required for it to take effect.	Notice how a message comes up say need to restart. Click on the Restar hyperlink and follow the steps from the Once reported the key will be install	ing You are here: <u>Maintenance</u> • Option key t ere.
Invalid release key: Release key is missing: the s	ystem is in demonstration mode and has limited functionality	contact your Cisco support representative to buy y	our release key.
Key 👻	Description	Status	Validity period
116341E00-1-2B872ED6	Expressway Series	Active	Unlimited
Delete Select all Unselect all			
System information			
Serial number	0DE16F47		
Active options	1 Rich Media Sessions, Encryption, Interworkin	g, Expressway Series.	
Software option			
Add option key			
Add option			
Release key			
Release key	7800812430795357		
Set release key			
Current licenses			
Iser: admin Access: Read-write System host name: VCS	C System time: 13:36 LITC		anguage: en LIS S/N: 0DE16E47 Version: X8 7

Option 2: Upgrade-Option zur Installation Ihres Versionskliegels

Schritt 1: Klicken Sie in der Webschnittstelle im Popup-Menü auf Wartung und dann auf Upgrade.

Status System Configuration Applications Users	Maintenance	
Upgrade	Upgrade	You are here: Maintenance • Upgrade
Component 👻	Logging	Release key
B2BUA Presence Relay	Option keys	^ ^
B2BUA Service	Tools >	Click on Maintenance Tab>Upgrade
collectdsupport	Security certificates 🕞	
oaksupport	Backup and restore	
stringencoderssupport	Diagnostics	
System platform	Maintenance mode	7800812430795357
traffic_server	Language	
xcpsupport	Restart options	
WARNING: You should backup the system before upgrading. Sys	tem backup rowse No file selected.	
Upgrade		
ttp:/// 117/upgrade : System host name: VCS-C System time 1	3-48 LITC	Language: en US S/N: 0DE16E47 Version: X8.7.3

Schritt 2: Auf dem Bildschirm "Upgrade" wird der Abschnitt "Upgrade Component" angezeigt.

Hinweis: In diesem Dokument wird davon ausgegangen, dass Sie ein Expressway Software Upgrade Image auf Ihren lokalen Computer heruntergeladen haben.

Klicken Sie auf **Durchsuchen**, um das heruntergeladene Expressway Upgrade-Image zu suchen:

pgrade version	tatus System Configuration Applic	ations Users Maintenance	👗 🕐 Help. 😔 Lo
omponent Version Release key 2BUA Presence Relay 1.0-oak-v8.7.3-rc-2 2BUA Service 1.0-oak-v8.7.3-rc-2 2BUA Service 1.0-oak-v8.7.3-rc-2 2BUA Service 2BUA Service _mgmt 8.6-10.321052 2BUA Service 2BUA Service allectdsupport 5368 2BUA Service 2BUA Service ringencoderssupport 5368 2BUA Service 2BUA Service ringencoderssupport 5368 2BUA Service 2BUA Service ringencoderssupport 5368 2BUA Service 2BUA Service rip-vos 1.0-oak-v8.7.3-rc-2 2BUA Service 2BUA Service rip-vos 1.0-oak-v8.7.3-rc-2 2BUA Service 2BUA Service rip-vos 1.0-oak-v8.7.3-rc-2 2BUA Service 2BUA Service rip-server 5368 2BUA Service 2BUA Service 2BUA Service VARNING: You should backup the system before upgrading. System backur Siect file Ervice No file selected 2EU Service Click Browse to locate your upgrade software on your local machine and then upload. Siect file Siect fi	pgrade		You are here: <u>Maintenance</u> • Up
28UA Presence Relay 1.0-oak-v8.7.3-rc-2 2BUA Service 1.0-oak-v8.7.3-rc-2 2BUA Service 2.00-oak-v8.7.3-rc-2 argmt 2.00-oak-v8.7.3-rc-2 5368 29001 2.00-03-V2 10-oak-v8.7.3-rc-2 5368 1.0-oak-v8.7.3-rc-2 1.0-oak-v8	omponent 💌	Version	Release key
2BUA Service 1.0-oak-v8.7.3-rc-2 mgmt 8.6-1.0.321052 ollectdsupport 5388 aksupport 5388 ystem platform 2.6.7.3 * 7800812430795357 affic_server 5388 p-vos 1.0-oak-v8.7.3-rc-2 psupport 5388 Upgrade component WARNING: You should backup the system before upgrading. Select file Browse No file selected () browse No file select	12BUA Presence Relay	1.0-oak-v8.7.3-rc-2	
mgmt 8.6-1.0.321052 blectdsupport 5368 aksupport 5368 ystem platform X8.7.3 ystem platform 5368 ystem platform 1.0-oak-v6.7.3-rc-2 yspoport 5368	2BUA Service	1.0-oak-v8.7.3-rc-2	
Metddsupport 5388 Aksupport 5388 inigencoderssupport 5388 ystem platform X8.7.3 7800812430795357 5388 p-vos 1.0-oak-v8.7.3-rc-2 psupport 5388	mgmt	8.6-1.0.321052	
ksupport 5388 ingencoderssupport 5368 vstem platform X8.7.3 7800812430795357 fiffic_server 5368 p-vcs 1.0-oak-v8.7.3-rc-2 psupport 5368 Jpgrade component WARNING: You should backup the system before upgrading. System backup select file Irowse No file selected I	llectdsupport	5368	
ingencoderssupport 5388 rstem platform X8.7.3 7800812430795357 fffic_server 5388 p-vcs 1.0-oak-v8.7.3-rc-2 psupport 5388 Jpgrade component WARNING: You should backup the system before upgrading. Select file Browse No file selected i	ksupport	5368	
stem platform X8.7.3 7800812430795357 tffic_server 5368 p-vcs 1.0-oak-v8.7.3-rc-2 psupport 5368 Jpgrade component VARNING: You should backup the system before upgrading. System backup the system before upgrading. System backup ba	ingencoderssupport	5368	
fite_server 5368 b-vcs 1.0-oak-v8.7.3-rc-2 bsupport 5368	stem platform	×8.7.3	7800812430795357
by up or vices 1.0-oak-v8.7.3-rc-2 bisupport 5368	ffic_server	5368	
besport 5368 Upgrade component WARNING: You should backup the system before upgrading. Select file Browse No file selected. () Click Browse to locate your upgrade software on your local machine and then upload.	D-VCS	1.0-oak-v8.7.3-rc-2	
Jpgrade component WARNING: You should backup the system before upgrading. Select file Browse No file selected. pgrade	psupport	5368	
lpgrade	Upgrade component		
	Upgrade component WARNING: You should backup the system before u Select file	pgrading. System backup Browse No file selected.	Click Browse to locate your upgrade software on your local machine and then upload.
	Jpgrade component WARNING: You should backup the system before u Select file	pgrading. System backup Browse No file selected.	Click Browse to locate your upgrade software on your local machine and then upload.
	Jpgrade component WARNING: You should backup the system before u Select file	pgrading. System backup Browse No file selected.	Click Browse to locate your upgrade software on your local machine and then upload.
	Upgrade component WARNING: You should backup the system before u Select file	pgrading. System backup Browse No file selected	Click Browse to locate your upgrade software on your local machine and then upload.
	Upgrade component WARNING: You should backup the system before u Select file	pgrading. System backup Browse No file selected	Click Browse to locate your upgrade software on your local machine and then upload.
	Jpgrade component WARNING: You should backup the system before u Select file	pgrading. System backup Browse No file selected	Click Browse to locate your upgrade software on your local machine and then upload.
	Jpgrade component WARNING: You should backup the system before u Select file	pgrading. System backup Browse No file selected	Click Browse to locate your upgrade software on your local machine and then upload.
	Jpgrade component WARNING: You should backup the system before u Select file	pgrading. System backup Browse No file selected.	Click Browse to locate your upgrade software on your local machine and then upload.

User: admin Access: Read-write System host name: VCS-C System time: 13:53 UTC

Language: en_US S/N: 0DE16F47 Version: X8.7.3

Schritt 3: Geben Sie bei Aufforderung den Wert für den Release Key in das Feld **Release Key** ein. Kopieren Sie die E-Mail, und fügen Sie sie in Ihren Browser ein. Falls es sich um ein geringfügiges Upgrade handelt, z. B. x8.7.3 auf x8.8.3, kopieren Sie die Datei, und fügen Sie sie in den gleichen Bildschirm ein:

	ations Users Maintenance	A 3 Help. 🕑 Logo
pgrade		You are here: Maintenance > Upgra
omponent 👻	Version	Release key
2BUA Presence Relay	1.0-oak-v8.7.3-rc-2	
2BUA Service	1.0-oak-v8.7.3-rc-2	
_mgmt	8.6-1.0.321052	
ollectdsupport	5368	
aksupport	5368	
ingencoderssupport	5368	
stem platform	X8.7.3	7800812430795357
iffic_server	5368	
p-vcs	1.0-oak-v8.7.3-rc-2	†
psupport	5368	
Select file Release key	Browse s42700x8_8_3.tar.gz	release key from your licensing email. Or, it you are just doing a minor upgrade like in this example from 8.7.3 to 8.8.3, you can copy and paste the release key already installed which is circled above in this example.
Jpgrade		

Schritt 4: Klicken Sie auf die Schaltfläche **Upgrade**. Beobachten Sie den folgenden Prozess, und navigieren Sie nicht vom Prozess weg, oder Sie müssen von vorne beginnen. Das Bild wird hochgeladen, dann wird es installiert. Klicken Sie bei Aufforderung auf **Neustart**.

	Users Maintenance	🛓 🕐 Help. 🞯 Los
grade		You are here: Maintenance + Up
mponent 👻	Version	Release key
BUA Presence Relay	1.0-oak-v8.7.3-rc-2	Information
BUA Service	1.0-oak-v8.7.3-rc-2	The 16-character release key for
ngmt	8.6-1.0.321052	the new software version. This is
ectdsupport	5368	not required if you are upgrading to
support	5368	to 1.1.
igencoderssupport	5368	
tem platform	×8.7.3	7800812430795357
ic_server	5368	
-VCS	1.0-oak-v8.7.3-rc-2	
support	5368	
elect file elease key	Browse \$42700x8_8_3.tar.gz () 7800812430795357	Once the release key is pasted, you can click upgrade and then follow the steps from there. Do not leave the screens that follow or you will have to start over. The image will first upload.
grade		then it gets installed and finally you restart the Expressway. Once it is restarted and comes back up, it should be on the new release and the release key can be verified exactly the same as with a fresh install.

Überprüfen Sie, ob die Version ordnungsgemäß installiert wurde, nachdem der Expressway neu gestartet wurde. Verwenden Sie die beiden im Abschnitt **ÜBERPRÜFEN** dieses Dokuments angegebenen Methoden.

Installationsbeispiel eines CLI-Freigabeschlüssels:

Installieren Sie einen Versionsschlüssel über die CLI. Dies ist ein zweiteiliger Prozess, bei dem ein SCP-Client (in diesem Beispiel PSCP über die Eingabeaufforderung (CMD) in Windows und eine Terminal-Emulationssoftware-Anwendung wie PuTTY verwendet werden.

Schritt 1: Kopieren Sie Ihren Release-Schlüssel in eine einfache ASCII-Textdatei. Stellen Sie sicher, dass vor oder nach dem Wert des Freigabeschlüssels keine Leerzeichen vorhanden sind. Kopieren Sie den Freigabeschlüssel in die Text-Editor-Anwendung, speichern Sie die Datei als **release-key.txt**:



Schritt 2: Legen Sie die Datei **release-key.txt** und PSCP.exe im gleichen Verzeichnis auf Ihrem Computer ab. Navigieren Sie zu diesem Verzeichnis, indem Sie in Windows eine Eingabeaufforderung (CMD) verwenden, und kopieren Sie den Freigabetaste in ein temporäres Verzeichnis auf dem Expressway. Verwenden Sie das Stammkonto für die PSCP-Transaktion. Geben Sie bei Aufforderung das Kennwort für das Root-Konto ein. Überprüfen Sie, ob die Übertragung wie angegeben mit 100 % abgeschlossen ist. Hier ein Beispiel:



Schritt 3: Kopieren Sie das Image, auf das Sie aktualisieren möchten, z. B. 8.8.3, das hier verwendet wird. Kopieren Sie dieses Bild mit PSCP. Überprüfen Sie, ob der Status 100% beträgt, was bedeutet, dass das Software-Image das Kopieren auf den Expressway beendet hat und Sie bereit sind, den Expressway neu zu starten.



Schritt 4: Starten Sie den Expressway über eine SSH-Sitzung auf dem Expressway neu. Öffnen Sie PuTTY und geben Sie die IP-Adresse des Expressway ein. Klicken Sie zum Öffnen auf SSH:



Schritt 5: Klicken Sie auf Öffnen, und melden Sie sich bei Aufforderung mit einem Administratorkonto bei Expressway an. Geben Sie bei Aufforderung das Kennwort für das Administratorkonto ein. Stellen Sie sicher, dass Sie den richtigen Befehl haben, um den Expressway neu zu starten. Geben Sie den Befehl gefolgt von einem Leerzeichen und einem Fragezeichen ein, um sicherzustellen, dass Sie den Text korrekt eingegeben haben. Der Expressway bestätigt, dass **xCommand Boot** den Expressway neu startet. Geben Sie den Befehl **xCommand Boot** ein, um den Expressway neu zu starten:



Der Expressway blinkt, dass er neu gestartet wird, und Ihre PuTTY-Sitzung wird geschlossen. Dieses Verhalten ist normal, da die Verbindung beim Neustart des Expressway beendet wird. Der Neustart der Expressway dauert etwa drei bis fünf Minuten. Überprüfen Sie nach Abschluss des Vorgangs den über die Webschnittstelle oder die CLI ordnungsgemäß installierten Release-Key, wie im Abschnitt **VERIFY** dieses Dokuments angegeben.

Überprüfen

Überprüfung der Installation des Release-Schlüssels für die Webschnittstelle:

Sie können den in der Webschnittstelle installierten Release Key auf zwei Arten überprüfen:

Option 1: Sehen Sie sich die **Seite "Optionsschlüssel"** wie oben beschrieben an, und überprüfen Sie das Feld **Versionstaste**.

, , , , , , , , , , , , , , , , , , , ,	Applications	Users Maintenance			? Help 😁 Logoul
ption keys				You are here: M	aintenance • Option ke
Key 🔻		Description	Status	Validity period	
116341E00-1-2B872ED6		Expressway Series	Active	Unlimited	
Delete Select all Unselect all					
System information					
Serial number		0DE16F47			
Active options		0 Rich Media Sessions, Encryption, Interworking, Expre	essway Series.		
Software option					
Add option key		١			
Add option			After restart, I verify the k checking the Release Ke populated.	ey installed by ey field is now	
Release key					
Release key		7800812430795357			
Set release key					
Summer Reserve					
urrent licenses					

Option 2: Überprüfen Sie die Upgrade-Seite wie oben beschrieben:

Upgrade You are here: Maintenance * Upgrad Component * Version B2BUA Presence Relay 1.0-oak-v8.7.3-rc-2 B2BUA Service 1.0-oak-v8.7.3-rc-2 c_mgmt 8.6-10.321052 codectdsupport 5368 stringencoderssupport 5368 system platform X8.7.3 rxp-vcs 1.0-oak-v8.7.3-rc-2 xcp-vcs 1.0-oak-v8.7.3-rc-2 xcp-vcs 1.0-oak-v8.7.3-rc-2 Vpgrade component You can also verify by checking the upgrade option under the release key is now visible	Status System Configuration Applications	Users Maintenance	7 Help. @ Logout
Component Version Release key B2BUA Presence Relay 1.0-oak-v8.7.3-rc-2 B2BUA Service 1.0-oak-v8.7.3-rc-2 c_mgmt 8.6-1.0.321052 collect/support 5368 oaksupport 5368 stringencoderssupport 5368 System platform X8.7.3 traffic_server 5368 xcp-vcs 1.0-oak-v8.7.3-rc-2 ycp-vcs Note the release key is now visible under the release key column of this page. VuARNING: You should backup the system before upgrading. System backup Select file Browse Image: Column of this page.	Upgrade		You are here: Maintenance + Upgrad
B2BUA Presence Relay 10-oak-v8.7.3-rc-2 B2BUA Service 1.0-oak-v8.7.3-rc-2 c_mgnt 8.6-1.0.321052 collectdsupport 5388 oaksuport 5388 oaksuport 5388 stringencoderssupport 5388 System platform X8.7.3 traffic_server 5388 xcpsupport 5388 vcp-vcs 1.0-oak-v8.7.3-rc-2 xcpsupport 5388 Upgrade component Vou can also verify by checking the upgrade option under the release key is now visible under the release key column of this page. VMARNING: You should backup the system before upgrading. System backup Select file Browse No file selected.	Component 💌	Version	Release key
B2BUA Service 1.0-oak-v8.7.3-rc-2 c_mgmt 86-1.0.321052 collect/dsupport 5368 oaksupport 5368 stringencoderssupport 5368 stringencoderssupport 5368 traffic_server 5368 xcp-vcs 1.0-oak-v8.7.3-rc-2 xcpsupport 5388 Upgrade option under the release key is now visible under the release key column of this page. Upgrade component UARNING: You should backup the system before upgrading. System backup Select file Browse No file selected.	B2BUA Presence Relay	1.0-oak-v8.7.3-rc-2	
c_mgmt 8.6-10.321052 collectdsupport 5368 stringencoderssupport 5368 System platform X8.7.3 rrafic_server 5368 xcp-vcs 1.0-oak-v8.7.3-rc-2 xcpsupport 5368 Upgrade component VARNING: You should backup the system before upgrading. System backup Select file Browse No file selected.	B2BUA Service	1.0-oak-v8.7.3-rc-2	
collect/dsupport 5368 oaksupport 5368 stringencoderssupport 5368 System platform X8.7.3 traffic_server 5368 xcp-vcs 1.0-oak-v6.7.3-rc-2 xcpsupport 5368 Vpgrade component You can also verify by checking the upgrade option under the release key is now visible under the release key is now visible under the release key column of this page. VMARNING: You should backup the system before upgrading. Svstem backup Select file Browse No file selected. Upgrade No file selected. Image: Column of this page.	c_mgmt	8.6-1.0.321052	
oaksupport 5368 stringencoderssupport 5368 System platform X8.7.3 traffic_server 5368 xop-vos 1.0-oak-v8.7.3-rc-2 xopsupport 5368 Upgrade component You can also verify by checking the maintenance Tab. Note the release key is now visible under the release key is now visible under the release key column of this page. VMARNING: You should backup the system before upgrading. System backup Select file Browse No file selected. Upgrade Iterational selected.	collectdsupport	5368	
stringenooderssupport 5368 System platform X8.7.3 traffic_server 5368 xcp-vcs 1.0-oak-v8.7.3-rc-2 xcpsupport 5368 Upgrade component Value of the system before upgrading. System backup Select file Browse No file selected.	oaksupport	5368	
System platform X8.7.3 7800812430795357 traffic_server 5368 xcp-vcs 1.0-oak-v8.7.3-rc-2 xcpsupport 5368 Upgrade component You can also verify by checking the upgrade option under the release key is now visible under the release key is now visible under the release key column of this page. WARNING: You should backup the system before upgrading. System backup Select file Browse No file selected. Upgrade Image: No file selected. Image: No file selected.	stringencoderssupport	5368	
traffic_server 5368 xcp-vcs 1.0-oak-v8.7.3-rc-2 xcpsupport 5368 Vou can also verify by checking the upgrade option under the Maintenance Tab. Note the release key is now visible under the release key column of this page. WARNING: You should backup the system before upgrading. System backup Select file Browse No file selected.	System platform	×8.7.3	7800812430795357
xcp-vcs 1.0-oak-v8.7.3-rc-2 xcpsuport 5368 Upgrade component WARNING: You should backup the system before upgrading. Select file Browse No file selected.	traffic_server	5368	
xcpsupport 5368 You can also verify by checking the upgrade option under the Maintenance Tab. Note the release key is now visible under the release key is now visible under the release key column of this page. WARNING: You should backup the system before upgrading. System backup Select file Browse Upgrade	xcp-vcs	1.0-oak-v8.7.3-rc-2	
Upgrade component WARNING: You should backup the system before upgrading. Select file Browse No file selected. Upgrade	xcpsupport	5368	You can also verify by checking the 🤟
Upgrade component Key is now visible under the release key column of this page. WARNING: You should backup the system before upgrading. System backup Select file Browse Upgrade Upgrade			upgrade option under the Maintenance Tab. Note the release
Upgrade component key column of this page. WARNING: You should backup the system before upgrading. System backup Select file Browse Upgrade Upgrade			key is now visible under the release
WARNING: You should backup the system before upgrading. System backup Select file Browse Upgrade Upgrade	Upgrade component		key column of this page.
Select file Browse No file selected.	WARNING: You should back in the system before upgrading	System backup	
Select file Browse No file selected.	The state to a block basing are system before apgrading.		
Upgrade	Select file	Browse No file selected.	
Upgrade			
oparate	Ingrade		
	opgrade		

```
User: admin Access: Read-write System host name: VCS-C System time: 13:46 UTC
```

Language: en_US S/N: 0DE16F47 Version: X8.7.3

CLI Interface Verification of Release Key Installation

Überprüfen Sie, ob der über die CLI-Schnittstelle installierte Release Key über eine SSH-Sitzung mit der CLI installiert ist. Melden Sie sich mit einem Admin-Konto an, wie in diesem Dokument bereits erwähnt. Wenn Sie dort sind, geben Sie den Befehl **xStatus SystemUnit Software aus**. Sie beobachten, dass das Upgrade erfolgreich war und der Release-Schlüssel installiert wurde:



Fehlerbehebung

Bei der Installation eines Release-Schlüssels auf einem Cisco Expressway sollten keine Probleme auftreten. Geben Sie im Feld **Release key** (**Release-Taste**) des Expressway eine Optionstaste ein, oder geben Sie bei einem Upgrade die häufigsten Fehlerursachen ein. Im am Anfang dieses Artikels zitierten E-Mail-Beispiel werden neben dem Freigabeschlüssel Optionsschlüssel angezeigt. Ein Fehler tritt auf, wenn im Feld **Release Key** (**Freigabeschlüssel**) eine Optionstaste eingegeben wird:

atus System Configuration Aj	pplications Users Maintenance	🛓 🧿 <u>Help</u> . 🞯 !
otion keys		You are here: Maintenance > Optio
Saved: The release key has been update	d, however a <u>restart</u> is required for it to take effect.	
Key 🔻	Description	Status Validity period
116341E00-1-2B872ED6	Expressway Series	Active Unlimited
Plete Select all Unselect all		
ystem information		
erial number	0DE16F47	
ctive options	0 Rich Media Sessions, 0 Room Systems Expressway Series.	is, 0 Devitop Systems, Encryption, Interworking, FindMe, Device Provisioning,
oftware option		
dd option key		
d option		Here, I've made a mistake which is one of the most common causes of a release key installation failure. Specifically, I've tried to install an option key as a release key. The Expressway will allow me to make this mistake and will not show the error until have fully restarted/rehooted
elease key		the Expressway. Just as before, I've pasted in the "bad" key in the release key field clicked on "Set release key" and now as before I am
elease key	116341E00-1-2887 (j)	being prompted to restart the Expressway.
t release key		
rrent licenses		
rrent licenses versal calls	0	

Ein Expressway akzeptiert alle Werte im Feld **Release Key** (**Release-Taste**). Starten Sie den Expressway mit einem falschen Wert neu, und Sie erhalten die Fehlermeldung "**Ungültiger Freigabschlüssel**":

սիսիս	
CISCO	Cisco Expressway-C

Status	System	Configuration	Applications	Users	Maintenanc	e					👗 🥐 Help 😁 Logout
Option	keys									You are her	e: Maintenance • Option keys
🕂 Inv	alid release	key : Release key is r	missing: the system	n is in demor	nstration mode ar	nd has limited funct	tionality; contact ;	your C	isco support representati	ve to buy your release key.	
	≺ey v				Descr	iption			Status	Validity period	
	116341E00-1	1-2B872ED6			Expres	ssway Series			Active	Unlimited	
Delete	Select all	Unselect all						Т			
								1			
System	n information	n						-			
Serial r	umber			0DE	E16F47			1			
Active (ontions			1 Ri	ich Media Sessio	ns, 0 Room Syster	ns, 0 Desktop Sy	stem	Encryption, Interworking	, FindMe, Device Provisioning	
100100	Aptions.			Exp	ressway Series.						
College	ra antian										
Sonwa	re option							_			
Add op	tion key						(i)				
							_				
Add opti	on										
								Ugi key	n, now I have a very Ur v as a release key. Not	nhappy Expressway becau te the option key showing a	se I installed an option as the release key now
Releas	e key			_		_		т	with the fix this error. I simply	he big red warning at the to use the procedure in this	p? document to install a
Release	e key			116	341E00-1-2B87				proper REI	LEASE KEY and not an op	tion key.
Set relea	ase key										
							l				
Current	licenses		_	_	_	_	_	-			
Travorcal	calls			1							
Desktop	System Licer	nse		0							
Room Sy	stem License	e		0							

User: admin Access: Read-write System host name: VCS-C System time: 17:49 UTC

Language: en_US S/N: 0DE16F47 Version: X8.8.3

Installieren Sie einen Release-Key wie in diesem Dokument beschrieben, um diese Bedingung zu korrigieren.

Wenden Sie sich an das Cisco TAC, um Unterstützung bei allen anderen Ausfallarten zu erhalten.