

## End-of-Sale and End-of-Life Announcement for the Cisco Transport Manager 4.1, 4.6, 4.7, 5.0(.2), and 7.0

EOL5112

Cisco Systems® announces the end-of-sale and end-of life dates for the Cisco Transport Manager 4.1, 4.6, 4.7, 5.0(.2), and 7.0. The last day to order the Cisco Transport Manager 4.1, 4.6, 4.7, 5.0(.2), and 7.0 is June 1, 2007. Customers with active service contracts will continue to receive support from the Cisco Technical Assistance Center (TAC) as shown in Table 1 of the EoL bulletin. Table 1 describes the end-of-life milestones, definitions, and dates for the Cisco Transport Manager 4.1, 4.6, 4.7, 5.0(.2), and 7.0. Table 2 lists the product part numbers affected by this announcement.

Customers are encouraged to migrate to the latest release of Cisco Transport Manager, which provides enhanced functionality and supports the latest releases of the managed network elements.

**Table 1.** End-of-Life Milestones and Dates for the Cisco Transport Manager 4.1, 4.6, 4.7, 5.0(.2), and 7.0

Milestone	Definition	Date
<b>End-of-Life Announcement Date</b>	The date the document that announces the end of sale and end of life of a product is distributed to the general public.	December 1, 2006
<b>End-of-Sale Date</b>	The last date to order the product through Cisco point-of-sale mechanisms. The product is no longer for sale after this date.	June 1, 2007
<b>Last Ship Date: App. SW</b>	The last-possible ship date that can be requested of Cisco and/or its contract manufacturers. Actual ship date is dependent on lead time.	August 30, 2007
<b>End of SW Maintenance Releases Date: App. SW</b>	The last date that Cisco Engineering may release any final software maintenance releases or bug fixes. After this date, Cisco Engineering will no longer develop, repair, maintain, or test the product software.	May 31, 2008
<b>End of New Service Attachment Date: App. SW</b>	For equipment and software that is not covered by a service-and-support contract, this is the last date to order a new service-and-support contract or add the equipment and/or software to an existing service-and-support contract.	May 31, 2008
<b>End of Service Contract Renewal Date: App. SW</b>	The last date to extend or renew a service contract for the product.	August 27, 2009
<b>Last Date of Support: App. SW</b>	The last date to receive service and support for the product. After this date, all support services for the product are unavailable, and the product becomes obsolete.	May 31, 2010

HW = Hardware OS SW = Operating System Software App. SW = Application Software

**Table 2.** Product Part Numbers Affected by This Announcement

End-of-Sale Product Part Number	Product Description	Replacement Product Part Number	Replacement Product Description
<b>CTM-3.2-4.1-UPG</b>	CTM R4.1(4) Upgrade Kit, R3.2(.x) to R4.1(4)	CTM-3.2-6.0-UPG-K9	Cisco Transport Manager 6.0 UPG for 3.2[.x]or earlier to 6.0
<b>CTM-3.2-4.1-UPG</b>	CTM R4.1(4) Upgrade Kit, R3.2(.x) to R4.1(4)	CTM-3.2-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 3.2[.x]or earlier to 7.2
<b>CTM-3.2-4.6-UPG=</b>	Cisco Transport Manager 4.6 Upgrade Kit for 3.2[.x] to 4.6	CTM-3.2-6.0-UPG-K9	Cisco Transport Manager 6.0 UPG for 3.2[.x]or earlier to 6.0

<b>CTM-3.2-4.6-UPG=</b>	Cisco Transport Manager 4.6 Upgrade Kit for 3.2[.x] to 4.6	CTM-3.2-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 3.2[.x]or earlier to 7.2
<b>CTM-3.2-4.7-UPG</b>	CTM R4.7 Upgrade Kit, R3.2(.x) or earlier to R4.7	CTM-3.2-6.0-UPG-K9	Cisco Transport Manager 6.0 UPG for 3.2[.x]or earlier to 6.0
<b>CTM-3.2-4.7-UPG</b>	CTM R4.7 Upgrade Kit, R3.2(.x) or earlier to R4.7	CTM-3.2-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 3.2[.x]or earlier to 7.2
<b>CTM-3.2-5.0-UPG-K9</b>	CTM R5.0 - Upgrade from 3.2, SW CDs, Docs	CTM-3.2-6.0-UPG-K9	Cisco Transport Manager 6.0 UPG for 3.2[.x]or earlier to 6.0
<b>CTM-3.2-5.0-UPG-K9</b>	CTM R5.0 - Upgrade from 3.2, SW CDs, Docs	CTM-3.2-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 3.2[.x]or earlier to 7.2
<b>CTM-3.2-7.0-UPG-K9</b>	Cisco Transport Manager 7.0 UPG for 3.2[.x]or earlier to 7.0	CTM-3.2-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 3.2[.x]or earlier to 7.2
<b>CTM-4.0-4.1-UPG</b>	CTM R4.1(4) Upgrade Kit, R4.0(.x) or R4.1 to R4.1(4)	CTM-4.0-6.0-UPG-K9	Cisco Transport Manager 6.0 UPG for 4.0[.x] to 6.0
<b>CTM-4.0-4.1-UPG</b>	CTM R4.1(4) Upgrade Kit, R4.0(.x) or R4.1 to R4.1(4)	CTM-4.0-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 4.0[.x] to 7.2
<b>CTM-4.0-4.6-UPG=</b>	Cisco Transport Manager 4.6 Upgrade Kit for 4.0[.x] to 4.6	CTM-4.0-6.0-UPG-K9	Cisco Transport Manager 6.0 UPG for 4.0[.x] to 6.0
<b>CTM-4.0-4.6-UPG=</b>	Cisco Transport Manager 4.6 Upgrade Kit for 4.0[.x] to 4.6	CTM-4.0-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 4.0[.x] to 7.2
<b>CTM-4.0-4.7-UPG</b>	CTM R4.7 Upgrade Kit, R4.0(.x) to R4.7. x=0, 1, 2	CTM-4.0-6.0-UPG-K9	Cisco Transport Manager 6.0 UPG for 4.0[.x] to 6.0
<b>CTM-4.0-4.7-UPG</b>	CTM R4.7 Upgrade Kit, R4.0(.x) to R4.7. x=0, 1, 2	CTM-4.0-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 4.0[.x] to 7.2
<b>CTM-4.0-5.0-UPG-K9</b>	CTM R5.0 - Upgrade from 4.0, SW CDs, Docs	CTM-4.0-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 4.0[.x] to 7.2
<b>CTM-4.0-7.0-UPG-K9</b>	Cisco Transport Manager 7.0 UPG for 4.0[.x] to 7.0	CTM-4.0-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 4.0[.x] to 7.2
<b>CTM-4.1-4.6-UPG=</b>	Cisco Transport Manager 4.6 Upgrade Kit for 4.1[.x] to 4.6	CTM-6.0-UPG-K9	Cisco Transport Manager 6.0 UPG for 4.1[.x] or later to 6.0
<b>CTM-4.1-4.6-UPG=</b>	Cisco Transport Manager 4.6 Upgrade Kit for 4.1[.x] to 4.6	CTM-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 4.1[.x] or later to 7.2
<b>CTM-4.1-CORBA</b>	CTM GateWay/CORBA Northbound Interface R4.1	CTM-6.0-CORBA	Cisco Transport Manager GateWay/CORBA Northbound 6.0
<b>CTM-4.1-CORBA</b>	CTM GateWay/CORBA Northbound Interface R4.1	CTM-7.2-CORBA	Cisco Transport Manager GateWay/CORBA Northbound 7.2
<b>CTM-4.1-CORBA-UPG</b>	CTM GateWay/CORBA NBI Upg., R3.2(.x)/R4.0(.x) to R4.1	CTM-6.0-CORBA-UPG	Cisco Transport Manager GateWay/CORBA Northbound 6.0 UPG
<b>CTM-4.1-CORBA-UPG</b>	CTM GateWay/CORBA NBI Upg., R3.2(.x)/R4.0(.x) to R4.1	CTM-7.2-CORBA-UPG	Cisco Transport Manager GateWay/CORBA Northbound 7.2 UPG
<b>CTM-4.1-HA</b>	CTM R4.1 High Availability Agent R2.0	CTM-6.0-HA	Cisco Transport Manager 6.0 High Availability Agent 2.2
<b>CTM-4.1-HA</b>	CTM R4.1 High Availability Agent R2.0	CTM-7.2-HA	Cisco Transport Manager 7.2 High Availability Agent 2.2
<b>CTM-4.1-HA-UPG</b>	CTM R4.1 High Availability Upg., R3.2(.x)/R4.0(.x) to R4.1	CTM-6.0-HA-UPG	Cisco Transport Manager 6.0 High Availability Agent 2.2 UPG
<b>CTM-4.1-HA-UPG</b>	CTM R4.1 High Availability Upg., R3.2(.x)/R4.0(.x) to R4.1	CTM-7.2-HA-UPG	Cisco Transport Manager 7.2 High Availability Agent 2.2 UPG
<b>CTM-4.1-LE-BDL</b>	CTM R4.1 LE System Bundle	CTM-6.0-LE-BDL-K9	Cisco Transport Manager 6.0 LE System BDL
<b>CTM-4.1-LE-BDL</b>	CTM R4.1 LE System Bundle	CTM-7.2-NE50-K9	Cisco Transport Manager 7.2 Maximum 50 NEs
<b>CTM-4.1-SE-BDL</b>	CTM R4.1 SE System Bundle	CTM-6.0-SE-BDL-K9	Cisco Transport Manager 6.0 SE System BDL
<b>CTM-4.1-SE-BDL</b>	CTM R4.1 SE System Bundle	CTM-7.2-NE10-K9	Cisco Transport Manager 7.2 Maximum 10 Nes

<b>CTM-4.1-SMK</b>	CTM R4.1(4) Software Media Kit	CTM-6.0-K9	Cisco Transport Manager 6.0
<b>CTM-4.1-SMK</b>	CTM R4.1(4) Software Media Kit	CTM-7.2-K9	Cisco Transport Manager 7.2
<b>CTM-4.1-SS-BDL</b>	CTM R4.1 SS System Bundle	CTM-6.0-SS-BDL-K9	Cisco Transport Manager 6.0 SS System BDL
<b>CTM-4.1-SS-BDL</b>	CTM R4.1 SS System Bundle	CTM-7.2-NE200-K9	Cisco Transport Manager 7.2 Maximum 200 NEs
<b>CTM-4.6-CORBA-UPG=</b>	CTM GateWay/CORBA OSS Interface 4.6 Upgrade Kit	CTM-6.0-CORBA-UPG	Cisco Transport Manager GateWay/CORBA Northbound 6.0 UPG
<b>CTM-4.6-CORBA-UPG=</b>	CTM GateWay/CORBA OSS Interface 4.6 Upgrade Kit	CTM-7.2-CORBA-UPG	Cisco Transport Manager GateWay/CORBA Northbound 7.2 UPG
<b>CTM-4.6-CORBA=</b>	Cisco Transport Manager GateWay/CORBA OSS Interface 4.6	CTM-6.0-CORBA	Cisco Transport Manager GateWay/CORBA Northbound 6.0
<b>CTM-4.6-CORBA=</b>	Cisco Transport Manager GateWay/CORBA OSS Interface 4.6	CTM-7.2-CORBA	Cisco Transport Manager GateWay/CORBA Northbound 7.2
<b>CTM-4.6-HA-UPG=</b>	CTM 4.6 High Availability Agent 2.1 Upgrade Kit	CTM-6.0-HA	Cisco Transport Manager 6.0 High Availability Agent 2.2
<b>CTM-4.6-HA-UPG=</b>	CTM 4.6 High Availability Agent 2.1 Upgrade Kit	CTM-7.2-HA	Cisco Transport Manager 7.2 High Availability Agent 2.2
<b>CTM-4.6-HA=</b>	Cisco Transport Manager 4.6 High Availability Agent 2.1	CTM-6.0-HA	Cisco Transport Manager 6.0 High Availability Agent 2.2
<b>CTM-4.6-HA=</b>	Cisco Transport Manager 4.6 High Availability Agent 2.1	CTM-7.2-HA	Cisco Transport Manager 7.2 High Availability Agent 2.2
<b>CTM-4.6-LE-BDL=</b>	Cisco Transport Manager 4.6 LE System Bundle	CTM-6.0-LE-BDL-K9	Cisco Transport Manager 6.0 LE System BDL
<b>CTM-4.6-LE-BDL=</b>	Cisco Transport Manager 4.6 LE System Bundle	CTM-7.2-NE50-K9	Cisco Transport Manager 7.2 Maximum 50 NEs
<b>CTM-4.6-LE-SS-UPG=</b>	Cisco Transport Manager 4.6 Upgrade Kit for LE to SS	CTM-LE-SS-UPG	CTM LE to SS System Bundle License Upgrade
<b>CTM-4.6-SE-BDL=</b>	Cisco Transport Manager 4.6 SE System Bundle	CTM-6.0-UPG-K9	Cisco Transport Manager 6.0 UPG for 4.1[x] or later to 6.0
<b>CTM-4.6-SE-BDL=</b>	Cisco Transport Manager 4.6 SE System Bundle	CTM-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 4.1[x] or later to 7.2
<b>CTM-4.6-SMK=</b>	Cisco Transport Manager 4.6 Software Media Kit	CTM-6.0-K9	Cisco Transport Manager 6.0
<b>CTM-4.6-SMK=</b>	Cisco Transport Manager 4.6 Software Media Kit	CTM-7.2-K9	Cisco Transport Manager 7.2
<b>CTM-4.6-SS-BDL=</b>	Cisco Transport Manager 4.6 SS System Bundle	CTM-6.0-SS-BDL-K9	Cisco Transport Manager 6.0 SS System BDL
<b>CTM-4.6-SS-BDL=</b>	Cisco Transport Manager 4.6 SS System Bundle	CTM-7.2-NE200-K9	Cisco Transport Manager 7.2 Maximum 200 NEs
<b>CTM-4.6-SS-SMK-UP=</b>	Cisco Transport Manager 4.6 Upgrade Kit for SS to SMK	CTM-SS-SMK-UPG	CTM SS System Bundle to SMK License Upgrade
<b>CTM-4.7-CORBA</b>	CTM GateWay/CORBA Northbound Interface R4.7	CTM-6.0-CORBA	Cisco Transport Manager GateWay/CORBA Northbound 6.0
<b>CTM-4.7-CORBA</b>	CTM GateWay/CORBA Northbound Interface R4.7	CTM-7.2-CORBA	Cisco Transport Manager GateWay/CORBA Northbound 7.2
<b>CTM-4.7-CORBA-UPG</b>	CTM GateWay/CORBA NBI Upg., R4.1(.x)/R6.0(.x) to R4.7	CTM-6.0-CORBA-UPG	Cisco Transport Manager GateWay/CORBA Northbound 6.0 UPG
<b>CTM-4.7-CORBA-UPG</b>	CTM GateWay/CORBA NBI Upg., R4.1(.x)/R6.0(.x) to R4.7	CTM-7.2-CORBA-UPG	Cisco Transport Manager GateWay/CORBA Northbound 7.2 UPG
<b>CTM-4.7-HA</b>	CTM R4.7 High Availability Agent R2.0	CTM-6.0-HA	Cisco Transport Manager 6.0 High Availability Agent 2.2

<b>CTM-4.7-HA</b>	CTM R4.7 High Availability Agent R2.0	CTM-7.2-HA	Cisco Transport Manager 7.2 High Availability Agent 2.2
<b>CTM-4.7-HA-UPG</b>	CTM R4.7 High Availability Upg., R4.1(.x)/R4.6(.x) to R4.7	CTM-6.0-HA-UPG	Cisco Transport Manager 6.0 High Availability Agent 2.2 UPG
<b>CTM-4.7-HA-UPG</b>	CTM R4.7 High Availability Upg., R4.1(.x)/R4.6(.x) to R4.7	CTM-7.2-HA-UPG	Cisco Transport Manager 7.2 High Availability Agent 2.2 UPG
<b>CTM-4.7-LE-BDL</b>	CTM R4.7 LE System Bundle	CTM-6.0-SE-BDL-K9	Cisco Transport Manager 6.0 SE System BDL
<b>CTM-4.7-LE-BDL</b>	CTM R4.7 LE System Bundle	CTM-7.2-NE10-K9	Cisco Transport Manager 7.2 Maximum 10 Nes
<b>CTM-4.7-SE-BDL</b>	CTM R4.7 SE System Bundle	CTM-6.0-HA	Cisco Transport Manager 6.0 High Availability Agent 2.2
<b>CTM-4.7-SE-BDL</b>	CTM R4.7 SE System Bundle	CTM-7.2-HA	Cisco Transport Manager 7.2 High Availability Agent 2.2
<b>CTM-4.7-SMK</b>	CTM R4.7 Software Media Kit	CTM-6.0-K9	Cisco Transport Manager 6.0
<b>CTM-4.7-SMK</b>	CTM R4.7 Software Media Kit	CTM-7.2-K9	Cisco Transport Manager 7.2
<b>CTM-4.7-SS-BDL</b>	CTM R4.7 SS System Bundle	CTM-6.0-SS-BDL-K9	Cisco Transport Manager 6.0 SS System BDL
<b>CTM-4.7-SS-BDL</b>	CTM R4.7 SS System Bundle	CTM-7.2-NE200-K9	Cisco Transport Manager 7.2 Maximum 200 NEs
<b>CTM-4.X-4.7-UPG</b>	CTM R4.7 Upgrade Kit, R4.X(.x) to R4.7.	CTM-6.0-UPG-K9	Cisco Transport Manager 6.0 UPG for 4.1[.x] or later to 6.0
<b>CTM-4.X-4.7-UPG</b>	CTM R4.7 Upgrade Kit, R4.X(.x) to R4.7.	CTM-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 4.1[.x] or later to 7.2
<b>CTM-4.X-5.0-UPG-K9</b>	CTM R5.0 - Upgrade from 4.X, SW CDs, Docs	CTM-6.0-UPG-K9	Cisco Transport Manager 6.0 UPG for 4.1[.x] or later to 6.0
<b>CTM-4.X-5.0-UPG-K9</b>	CTM R5.0 - Upgrade from 4.X, SW CDs, Docs	CTM-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 4.1[.x] or later to 7.2
<b>CTM-5.0-CORBA</b>	CTM R5.0 - GateWay/CORBA OSS Interface, RTU, Doc	CTM-6.0-CORBA	Cisco Transport Manager GateWay/CORBA Northbound 6.0
<b>CTM-5.0-CORBA</b>	CTM R5.0 - GateWay/CORBA OSS Interface, RTU, Doc	CTM-7.2-CORBA	Cisco Transport Manager GateWay/CORBA Northbound 7.2
<b>CTM-5.0-CORBA-UPG</b>	CTM R5.0 - GateWay/CORBA OSS Interface Upgrade, RTU, Doc	CTM-6.0-CORBA-UPG	Cisco Transport Manager GateWay/CORBA Northbound 6.0 UPG
<b>CTM-5.0-CORBA-UPG</b>	CTM R5.0 - GateWay/CORBA OSS Interface Upgrade, RTU, Doc	CTM-7.2-CORBA-UPG	Cisco Transport Manager GateWay/CORBA Northbound 7.2 UPG
<b>CTM-5.0-HA</b>	CTM R5.0 - High Availability Agent, RTU, Doc	CTM-6.0-HA	Cisco Transport Manager 6.0 High Availability Agent 2.2
<b>CTM-5.0-HA</b>	CTM R5.0 - High Availability Agent, RTU, Doc	CTM-7.2-HA	Cisco Transport Manager 7.2 High Availability Agent 2.2
<b>CTM-5.0-HA-UPG</b>	CTM R5.0 - High Availability Agent Upgrade, RTU, Doc	CTM-6.0-HA-UPG	Cisco Transport Manager 6.0 High Availability Agent 2.2 UPG
<b>CTM-5.0-HA-UPG</b>	CTM R5.0 - High Availability Agent Upgrade, RTU, Doc	CTM-7.2-HA-UPG	Cisco Transport Manager 7.2 High Availability Agent 2.2 UPG
<b>CTM-5.0-K9</b>	CTM R5.0 - SW CDs, Docs	CTM-6.0-K9	Cisco Transport Manager 6.0
<b>CTM-5.0-K9</b>	CTM R5.0 - SW CDs, Docs	CTM-7.2-K9	Cisco Transport Manager 7.2
<b>CTM-5.0-LE-BDL-K9</b>	CTM R5.0 - LE System BDL, SW CDs, Docs, 30 NE, 5 Client RTU	CTM-6.0-LE-BDL-K9	Cisco Transport Manager 6.0 LE System BDL
<b>CTM-5.0-LE-BDL-K9</b>	CTM R5.0 - LE System BDL, SW CDs, Docs, 30 NE, 5 Client RTU	CTM-7.2-NE50-K9	Cisco Transport Manager 7.2 Maximum 50 NEs
<b>CTM-5.0-SE-BDL-K9</b>	CTM R5.0 - SE System BDL, SW CDs, Docs, 10 NE, 2 Client RTU	CTM-6.0-SE-BDL-K9	Cisco Transport Manager 6.0 SE System BDL
<b>CTM-5.0-SE-BDL-K9</b>	CTM R5.0 - SE System BDL, SW CDs, Docs, 10 NE, 2 Client RTU	CTM-7.2-NE10-K9	Cisco Transport Manager 7.2 Maximum 10 Nes

<b>CTM-5.0-SS-BDL-K9</b>	CTM R5.0 - SS System BDL, SW CDs, Docs, 50 NE, 10 Client RTU	CTM-6.0-SS-BDL-K9	Cisco Transport Manager 6.0 SS System BDL
<b>CTM-5.0-SS-BDL-K9</b>	CTM R5.0 - SS System BDL, SW CDs, Docs, 50 NE, 10 Client RTU	CTM-7.2-NE200-K9	Cisco Transport Manager 7.2 Maximum 200 NEs
<b>CTM-7.0-CORBA</b>	Cisco Transport Manager GateWay/CORBA Northbound 7.0	CTM-7.2-CORBA	Cisco Transport Manager GateWay/CORBA Northbound 7.2
<b>CTM-7.0-CORBA-UPG</b>	Cisco Transport Manager GateWay/CORBA Northbound 7.0 UPG	CTM-7.2-CORBA-UPG	Cisco Transport Manager GateWay/CORBA Northbound 7.2 UPG
<b>CTM-7.0-HA</b>	Cisco Transport Manager 7.0 High Availability Agent 2.2	CTM-7.2-HA	Cisco Transport Manager 7.2 High Availability Agent 2.2
<b>CTM-7.0-HA-UPG</b>	Cisco Transport Manager 7.0 High Availability Agent 2.2 UPG	CTM-7.2-HA-UPG	Cisco Transport Manager 7.2 High Availability Agent 2.2 UPG
<b>CTM-7.0-K9</b>	Cisco Transport Manager 7.0	CTM-7.2-K9	Cisco Transport Manager 7.2
<b>CTM-7.0-NE10-K9</b>	Cisco Transport Manager 7.0 Maximum 10 NEs	CTM-7.2-NE10-K9	Cisco Transport Manager 7.2 Maximum 10 Nes
<b>CTM-7.0-NE200-K9</b>	Cisco Transport Manager 7.0 Maximum 200 NEs	CTM-7.2-NE200-K9	Cisco Transport Manager 7.2 Maximum 200 NEs
<b>CTM-7.0-NE50-K9</b>	Cisco Transport Manager 7.0 Maximum 50 NEs	CTM-7.2-NE50-K9	Cisco Transport Manager 7.2 Maximum 50 NEs
<b>CTM-7.0-UPG-K9</b>	Cisco Transport Manager 7.0 UPG for 4.1[.x] or later to 7.0	CTM-7.2-UPG-K9	Cisco Transport Manager 7.2 UPG for 4.1[.x] or later to 7.2
<b>CTML-15216-010</b>	Cisco Transport Manager RTU License for 15216 - 10 Block	CTML-15216-001	Cisco Transport Manager RTU License for 15216 - 1 RTU
<b>CTML-15302-025</b>	Cisco Transport Manager RTU License for 15302 - 25 Block	CTML-15302-001	Cisco Transport Manager RTU License for 15302 - 1 RTU
<b>CTML-15302-100</b>	Cisco Transport Manager RTU License for 15302 - 100 Block	CTML-15302-001	Cisco Transport Manager RTU License for 15302 - 1 RTU
<b>CTML-15305-100</b>	Cisco Transport Manager RTU License for 15305 - 100 Block	CTML-15305-001	Cisco Transport Manager RTU License for 15305 - 1 RTU
<b>CTML-15327-025</b>	Cisco Transport Manager RTU License for 15327 - 25 Block	CTML-15327-001	Cisco Transport Manager RTU License for 15327 - 1 RTU
<b>CTML-15327-100</b>	Cisco Transport Manager RTU License for 15327 - 100 Block	CTML-15327-001	Cisco Transport Manager RTU License for 15327 - 1 RTU
<b>CTML-15530-010</b>	Cisco Transport Manager RTU License for 15530 - 10 Block	CTML-15530-001	Cisco Transport Manager RTU License for 15530 - 1 RTU
<b>CTML-15540-010</b>	Cisco Transport Manager RTU License for 15540 - 10 Block	CTML-15540-001	Cisco Transport Manager RTU License for 15540 - 1 RTU

## Product Migration Options

The recommended replacement for the Cisco Transport Manager Releases 4.1,4.6,4.7,and 5.0 is the Cisco Transport Manager 6.0. The recommended replacement for the Cisco Transport Manager Release 7.0 is the Cisco Transport Manager Release 7.2 or the current GA release of Cisco Transport Manager. Before upgrading Cisco Transport Manager, always check that the new release supports the release of network elements to be managed. This can be seen in the release notes, available at:

[http://www.cisco.com/en/US/products/sw/opticsw/ps2204/prod\\_release\\_notes\\_list.html](http://www.cisco.com/en/US/products/sw/opticsw/ps2204/prod_release_notes_list.html). Network element right-to-use (RTU) licenses do not need to be upgraded as they are release-independent. RTU licenses that were purchased for Cisco Transport Manager Releases 4.1,4.6,4.7,5.0 and 7.0 are still valid for Cisco Transport Manager Release 6.0 and 7.2. New RTU licenses can be purchased for additional network elements that are added to the network. Some block RTUs are in the end-of-life process; however, single-license RTUs are still available for ordering. Customers who have a current Software Application Support and Upgrades (SASU) contract can use the

Product Upgrade Tool (PUT) to get the software upgrade:

<http://tools.cisco.com/gct/Upgrade/jsp/index.jsp>. If Cisco Transport Manager Release 6.0 or Cisco Transport Manager Release 7.2 does not manage the release of the network elements in the network, your option is to also upgrade the network elements to a version that is supported by Cisco Transport Manager Release 6.0 or 7.2. Please check the release notes to ensure the Cisco Transport Manager release and the network element release match:

[http://www.cisco.com/en/US/products/sw/opticsw/ps2204/prod\\_release\\_notes\\_list.html](http://www.cisco.com/en/US/products/sw/opticsw/ps2204/prod_release_notes_list.html).

Customers can use the Cisco Technology Migration Plan (TMP) to trade in products and receive credit toward the purchase of new Cisco equipment. For more information about Cisco TMP, go to: <http://www.cisco.com/go/tradein/>. The Cisco TMP application requires all users to have a Cisco.com user ID.

Customers may be able to continue to purchase the end-of-sale product through Cisco's Authorized Refurbished Equipment program. Refurbished units of the end-of-sale product are available in limited supply for sale in certain countries on a first-come, first-served basis. For information about the refurbished equipment program, go to:

<http://www.cisco.com/web/ordering/ciscocapital/refurbished/index.html>.

### For More Information

For more information about the Cisco Transport Manager 6.0 and Cisco Transport Manager 7.2, visit <http://www.cisco.com/en/US/products/sw/opticsw/ps2204>, contact your local account representative, or send an e-mail to [ask-ctm@cisco.com](mailto:ask-ctm@cisco.com).

For more information about the Cisco End-of-Life Policy, go to:

[http://www.cisco.com/en/US/products/prod\\_end\\_of\\_life.html](http://www.cisco.com/en/US/products/prod_end_of_life.html).

To subscribe to receive end-of-life/end-of-sale information, go to: <http://www.cisco.com/cgi-bin/Support/FieldNoticeTool/field-notice>.



**Americas Headquarters**  
Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
[www.cisco.com](http://www.cisco.com)  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883

**Asia Pacific Headquarters**  
Cisco Systems, Inc.  
168 Robinson Road  
#28-01 Capital Tower  
Singapore 068912  
[www.cisco.com](http://www.cisco.com)  
Tel: +65 6317 7777  
Fax: +65 6317 7799

**Europe Headquarters**  
Cisco Systems International BV  
Haarlerbergpark  
Haarlerbergweg 13-19  
1101 CH Amsterdam  
The Netherlands  
[www-europe.cisco.com](http://www-europe.cisco.com)  
Tel: +31 0 800 020 0791  
Fax: +31 0 20 357 1100

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).

©2007 Cisco Systems, Inc. All rights reserved. CCVP, the Cisco logo, and the Cisco Square Bridge logo are trademarks of Cisco Systems, Inc. Changing the Way We Work, Live, Play, and Learn is a service mark of Cisco Systems, Inc., and Access Registrar, Aironet, BPX, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, iQuick Study, LightStream, Linksys, MeetingPlace, MGX, Networking Academy, Network Registrar, Packet, PIX, ProConnect, ScriptShare, SMARTnet, StackWise, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0705R)