

How to Download an IOS Configuration File to Cisco Cable Modems Using Cisco's CMTS CLI

[TAC Notice: What's Changing on TAC Web](#)

Contents

[Introduction](#)

[Before You Begin](#)

[Conventions](#)

[Prerequisites](#)

[Components Used](#)

[The Vendor Specific Information \(Option 43\) DHCP Option Configuring all in one config including DHCP Option 43](#)

[First Step - Create the DOCSIS Configuration File with the Correct Option 43 String](#)

[Second Step - Create the DHCP Pool for the DHCP Server Configuration](#)

[Third Step - Configure the CMTS as TFTP Server](#)

[Fourth Step - Configuring the CMTS as ToD Server](#)

[The Configuration of the CMTS](#)

[Verify the Configuration](#)

[Important Note](#)

[Related Information](#)

Help us help you.

Please rate this document.

Excellent

Good

Average

Fair

Poor

This document solved my problem.

Yes

No

Just browsing

Suggestions for improvement:

(256 character limit)

Introduction

Cisco IOS® Software configuration files are text files which contain the configuration to be sent to routers. In the case of Cisco cable modems, the configuration that is sent typically contains access lists, hostnames, SNMP community strings, passwords, or routing configuration that differs from the default bridging configuration. To send a Cisco IOS configuration file it is necessary to embed the file in the Data-over-Cable Service Interface Specifications (DOCSIS) configuration file that the cable modems use in the TFTP portion of their initialization process.

There are two ways to download a Cisco IOS configuration file to Cisco cable modems.

The first one, which is the most common way, is to use a DOCSIS CPE Configurator tool. Please see the [Cisco DOCSIS CPE Configurator](#) ([registered](#) customers only) . The document [Building DOCSIS 1.0 Configuration Files Using Cisco DOCSIS Configurator](#) ([registered](#) customers only) contains a detailed explanation on how to do this.

The second way in which the same task can be accomplished is by using the Command Line Interface (CLI) in Cisco IOS of the Cable Modem Termination System (CMTS).

This document explains in detail the second way to download an IOS configuration file to Cisco Cable Modems without the need of using a DOCSIS Configurator tool. For this we use an enhanced version of the [all-in-one configuration](#) which allows the Cisco CMTS to be configured as DHCP, ToD, and TFTP servers, as well as to configure a DOCSIS configuration file on the CMTS itself.

When we want to send a configuration file to cable modems using the CLI to configure the DOCSIS configuration file, we need to add a DHCP option called DHCP Vendor Specific Information Option, also known as option 43.

The main advantage of configuring cable modems this way is that everything can be done from the Cisco's CMTS, and no other servers (like DHCP, TFTP, or ToD) and software (like DOCSIS CPE Configurator Tool) are required to successfully send a Cisco IOS configurations to Cisco cable modems and get them operational with a customized configuration.

Before You Begin

Conventions

For more information on document conventions, see the [Cisco Technical Tips Conventions](#).

Prerequisites

The reader should have a basic understanding of:

- The DOCSIS protocol
- Cisco IOS command-line interface (CLI) on the uBR series routers
- UNIX
- Dynamic Host Configuration Protocol (DHCP)

Components Used

Please see the section [Configuring all in one config including DHCP Option 43](#) below.

The Vendor Specific Information (Option 43) DHCP Option

Option 43 is a DHCP option used by clients and servers to exchange Vendor Specific Information.

This option is typically formatted in a "Type-Length-Value" style where different pieces of information may be represented by different sub-option types. The meaning of the "Value" field is defined by the end device's manufacturer. Figure 1 gives a graphical representation of Option 43.

Type	Length	Value		Type	Length	Value	
------	--------	-------	--	------	--------	-------	--

 


Figure 1 - The Type-Length-Value structure of the data sent within Option 43.

To download Cisco IOS configuration files to Cisco Cable Modems, we use two sub-options, namely *Vendor ID* and *Vendor Specific Information Option (VSIF)*.

The *Vendor ID* sub-option has type 8. The three-byte Organization Unique Identifier (OUI) for the vendor is usually the first three bytes of the cable modem's MAC address. This value is usually expressed as a hexadecimal number. This field should be 00:00:0C (in Hex) for Cisco Systems equipment. Figure 2 below gives the hexadecimal numbers for Vendor ID sub-option.

Type	Length	Value
08	03	00:00:0C

Figure 2 - Sub-Option *Vendor ID* (In Hexadecimal value)

The second Sub-Option used is the *Vendor Specific Information Field (VSIF)*. This sub-option has type 128 and it contains any arbitrary values that are defined by the manufacturer of the cable modem. The Cisco cable modem uses this field to identify the Cisco IOS configuration file name that should be downloaded (if any) to a router.

Arbitrary Cisco IOS commands can also be specified in this field. This field is usually represented in dotted-decimal. Dotted-decimal notation is the decimal representation of the letters according to ASCII in which each letter has a decimal value. "Dots" are used between the decimal representation to make it easier to understand.

In this document we will show how to download a Cisco IOS configuration file called **ios.cf**. The name of this file gets converted from ASCII to dotted-decimal.

To know what is the translation between ASCII and dotted-decimal, the UNIX command **man ascii** can be used as shown below. This command gives several conversion tables. We need to look for the Decimal - Character table.

```
sj-cse-494% man ascii
Reformatting page.  Wait... done
```

```
ASCII(5)                Headers, Tables, and Macros                ASCII(5)
```

```
NAME
  ASCII - map of ASCII character set
.... (skip the beginning)
```

Decimal - Character

0 NUL	1 SOH	2 STX	3 ETX	4 EOT	5 ENQ	6 ACK	7 BEL
8 BS	9 HT	10 NL	11 VT	12 NP	13 CR	14 SO	15 SI
16 DLE	17 DC1	18 DC2	19 DC3	20 DC4	21 NAK	22 SYN	23 ETB
24 CAN	25 EM	26 SUB	27 ESC	28 FS	29 GS	30 RS	31 US
32 SP	33 !	34 "	35 #	36 \$	37 %	38 &	39 '

40	(41)	42	*	43	+	44	,	45	-	46	.	47	/
48	0	49	1	50	2	51	3	52	4	53	5	54	6	55	7
56	8	57	9	58	:	59	;	60	<	61	=	62	>	63	?
64	@	65	A	66	B	67	C	68	D	69	E	70	F	71	G
72	H	73	I	74	J	75	K	76	L	77	M	78	N	79	O
80	P	81	Q	82	R	83	S	84	T	85	U	86	V	87	W
88	X	89	Y	90	Z	91	[92	\	93]	94	^	95	_
96	`	97	a	98	b	99	c	100	d	101	e	102	f	103	g
104	h	105	i	106	j	107	k	108	l	109	m	110	n	111	o
112	p	113	q	114	r	115	s	116	t	117	u	118	v	119	w
120	x	121	y	122	z	123	{	124		125	}	126	~	127	DEL

Therefore, the dotted-decimal representation of **ios.cf** is **105.111.115.46.99.102** as shown below in Figure 3.

i	o	s	.	c	f
105	111	115	46	99	192

Figure 3 - Dotted-decimal representation of the filename ios.cf.

Since the VSIF is a Type- Length-Value format, the complete dotted-decimal representation of the Cisco IOS configuration file named **ios.cf** is **128.6.105.111.115.46.99.192**. As you can see, **128.6** has been added to the dotted-decimal representation of **ios.cf** shown in Figure 3. Remember that "128" is the type and "6" is the length.

128.6.105.111.115.46.99.192 is the value entered in the VSIF field of the Vendor Info Tab of the DOCSIS CPE Configurator Tool V3.2 as shown in the Figure 4 below.

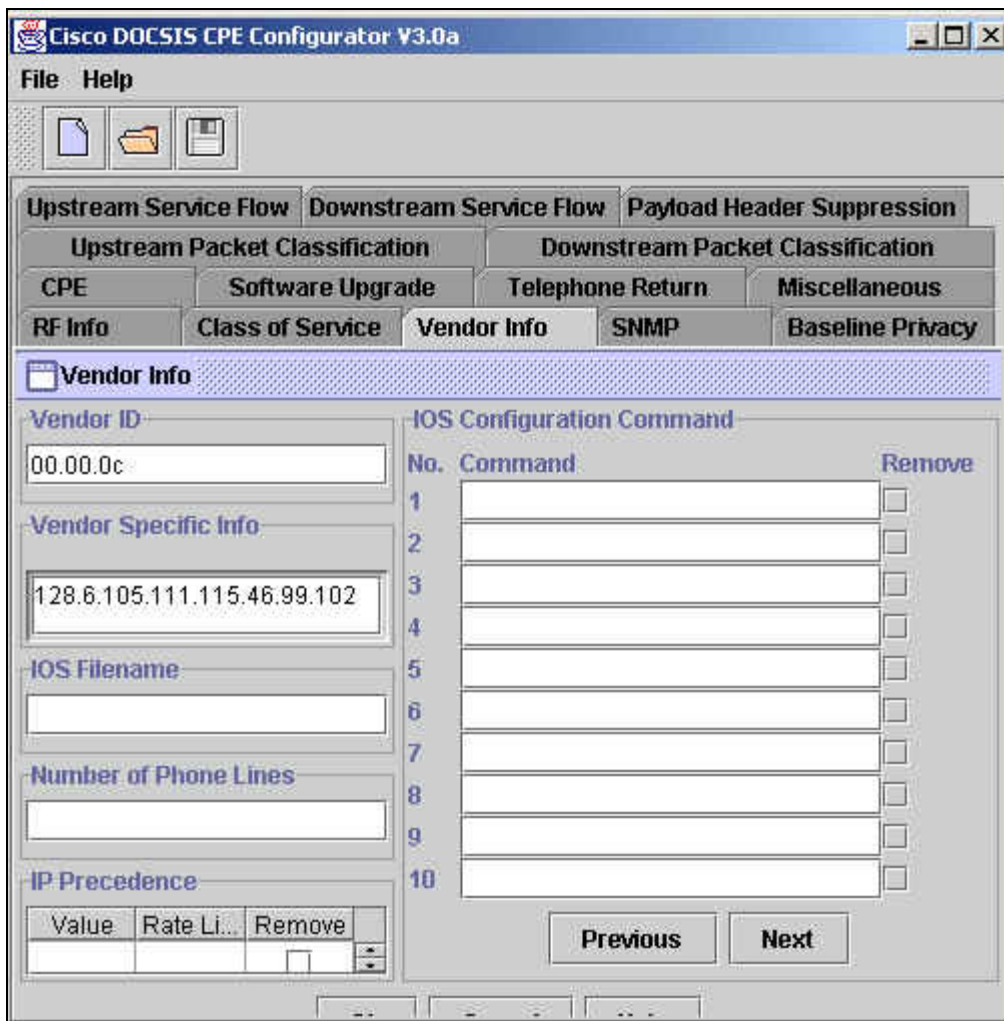


Figure 4 - Vendor Info field from DOCSIS CPE Configurator Tool.

However, when doing this function in Cisco IOS using the DHCP Option 43, the Type-Length-Value (TLV) information **should** be expressed in **Hexadecimal** values. This document focuses on this hexadecimal expression.

To find out the hexadecimal representation of the ASCII characters, we can use the Unix command:

```
echo -n "ios.cf" | od -t x1 | cut -s -d' ' -f2- | tr ' ' ':'
sj-cse-494% echo -n "ios.cf" | OD -t x1 | cut -s -d' ' -f2- | tr ' ' ':'
69:6f:73:2e:63:66
```

Or, you can also used the previous UNIX command **man ASCII** and find the "Hexadecimal - Character" table.

```
sj-cse-494% man ASCII
Reformatting page.  Wait... done

ASCII(5)                Headers, Tables, and Macros                ASCII(5)

NAME
```

ASCII - map of ASCII character set
 (skip the beginning)

Hexadecimal - Character

00	NUL	01	SOH	02	STX	03	ETX	04	EOT	05	ENQ	06	ACK	07	BEL
08	BS	09	HT	0A	NL	0B	VT	0C	NP	0D	CR	0E	SO	0F	SI
10	DLE	11	DC1	12	DC2	13	DC3	14	DC4	15	NAK	16	SYN	17	ETB
18	CAN	19	EM	1A	SUB	1B	ESC	1C	FS	1D	GS	1E	RS	1F	US
20	SP	21	!	22	"	23	#	24	\$	25	%	26	&	27	'
28	(29)	2A	*	2B	+	2C	,	2D	-	2E	.	2F	/
30	0	31	1	32	2	33	3	34	4	35	5	36	6	37	7
38	8	39	9	3A	:	3B	;	3C	<	3D	=	3E	>	3F	?
40	@	41	A	42	B	43	C	44	D	45	E	46	F	47	G
48	H	49	I	4A	J	4B	K	4C	L	4D	M	4E	N	4F	O
50	P	51	Q	52	R	53	S	54	T	55	U	56	V	57	W
58	X	59	Y	5A	Z	5B	[5C	\	5D]	5E	^	5F	_
60	`	61	a	62	b	63	c	64	d	65	e	66	f	67	g
68	h	69	i	6A	j	6B	k	6C	l	6D	m	6E	n	6F	o
70	p	71	q	72	r	73	s	74	t	75	u	76	v	77	w
78	x	79	y	7A	z	7B	{	7C		7D	}	7E	~	7F	DEL

Figure 5 below summarizes the dotted-decimal as well as hexadecimal representation of the Vendor Specific Information Field (VSIF).

	Type	Length	Value
Dotted-decimal	128	6	105.111.115.46.99.102
Hexadecimal	80	06	69:6F:73:2E:63:66

Figure 5 - Sub-Option VSIF in dotted-decimal and hexadecimal.

Configuring all in one config including DHCP Option 43

This configuration was developed and tested using the software and hardware versions below.

- Cisco uBR10012 running 12.2(2)XF
- Cisco CVA120 running 12.2(2)XA

The information presented in this document was created from devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If you are working in a live network, ensure that you understand the potential impact of any Cisco IOS command before using it.

First Step - Create the DOCSIS Configuration File with the Correct Option 43 String

The first step in configuring Option 43 is to know the necessary hexadecimal value of the Vendor ID and the necessary hexadecimal value of the VSIF sub-options of DHCP Option 43.

The table below summarizes these values that were discussed in detail in the Vendor Specific

Information section.

	Vendor ID sub-option			VSIF sub-option		
TLV	Type	Length	Value	Type	Length	Value
Hexadecimal	08	03	00:00:0C	80	06	69:6F:73:2E:63:66
Meaning	Vendor ID Type	Vendor ID Length	Cisco's ID	VSIF Type	VSIF Length	(filename) ios.cf

Figure 6

Once we know which value we will enter, we need to use the CLI of the Cisco's CMTS to generate all the properties needed for the DOCSIS Configuration file, including the DHCP option 43.

To create the DOCSIS Configuration file we need to enter the global command **cable config-file** *DOCSIS-file-name*. The following output shows the creation of the DOCSIS Configuration file named *platinum.cm*. All the settings of *platinum.cm* are explained below.

Note:

!--- Comments are in blue.

cable config-file platinum.cm

!--- Name of the DOCSIS config file is platinum.cm

service-class 1 priority 2

!--- The Upstream Channel priority is 2

service-class 1 max-upstream 128

!--- The Maximum upstream value is 128Kbps

service-class 1 guaranteed-upstream 10

!--- The Guaranteed Upstream is 10 Kbps

service-class 1 max-downstream 10000

!--- The Maximum Downstream is 10Mbps

service-class 1 max-burst 1600

!--- The Maximum Upstream Transmit burst is 1600 bytes

cpe max 10

!--- The Maximum number of CPE's is 10

timestamp

!--- Enable timestamp generation

```
option 43 hex 08:03:00:00:0C:80:06:69:6F:73:2E:63:66
```

```
!--- Using option 43 to send the IOS Configuration file named "ios.cf"  
!--- to cable modems.
```



Caution: The **cable config-file** command was introduced in Cisco IOS version 12.1(2)EC1 for uBR7200 and uBR7100, and on Cisco IOS version 12.2(1)XF1 for the uBR10K.

Note: Be certain that you have correctly entered the TLV data when using the hex option. Incorrectly entered data could cause CMs to reset, go offline, or hang, requiring a power cycle before being able to continue.

Second Step - Create the DHCP Pool for the DHCP Server Configuration

Once we have created the DOCSIS configuration file *platinum.cm*, we need to configure the CMTS to be the DHCP server, and configure the options needed for the DHCP functionality. Please see [The Cisco IOS Dynamic Host Configuration Protocol \(DHCP\) service on a CMTS](#), which explains the meaning of each of the command that we are using for the creation of the dhcp pool. Here we will just summarize the configuration and give a brief description.

The configuration of the DHCP pool is:

```
ip dhcp pool surf  
  
!--- name of the dhcp pool. This scope is for the cable modems attached  
!--- to interface cable 5/0/0  
  
network 10.1.4.0 255.255.255.0  
  
!--- pool of addresses for scope from interface c5/0/0  
  
bootfile platinum.cm  
  
!--- DOCSIS config file name associated with this pool  
  
next-server 10.1.4.1  
  
!--- IP address of TFTP server which sends bootfile  
  
default-router 10.1.4.1  
  
!--- default gateway for cable modems, necessary to get DOCSIS files  
  
option 7 ip 10.1.4.1  
  
!--- Log Server DHCP option  
  
option 4 ip 10.1.4.1  
  
!--- ToD server IP address  
  
option 2 hex ffff.8f80  
  
!--- Time offset for ToD, in seconds, HEX, from GMT, -28,000 = PST = ffff.8f80
```



```
lease 7 0 10
```

```
!--- lease 7 days 0 hours 10 minutes
```

```
!
```

Third Step - Configure the CMTS as TFTP Server

The third step is to configure the CMTS to be a TFTP server. To do this you will need to:

1. Use the command **tftp-server**
2. Tell the TFTP server where the file ios.cf is located

You can achieve this with the command **tftp-server disk0:ios.cf alias ios.cf** . Notice that this command puts the file ios.cf in disk0.

```
tftp-server server
```

```
!--- enable the cmts to act as a tftp server
```

```
tftp-server disk0:ios.cf alias ios.cf
```

```
!--- get the IOS config file called ios.cf that is pre-downloaded to disk0
```

```
!--- this IOS config file was built with a text editor and tftp to disk0
```

To put the ios.cf file in your flash or disk0 (for uBR10012) you have to tftp the file that has been created using a text file editor. To do this first make sure you can ping the tftp server where the Cisco IOS configuration is located.

Next, the global command **copy tftp <device>** should be entered to place the file inside the CMTS. Usually the flash is used for uBR7200 or uBR7100 or uBR10K, however, this example shows how to use disk0 for uBR10012.

```
schooner#copy tftp disk0
```

```
Address or name of remote host []? 172.16.30.2
```

```
Source filename []? ios.cf
```

```
Destination filename [ios.cf]?
```

```
Accessing tftp://172.16.30.2/ios.cf...
```

```
Loading ios.cf from 172.16.30.2 (via FastEthernet0/0/0): !
```

```
[OK - 173/4096 bytes]
```

```
173 bytes copied in 0.152 secs
```

To make sure that the IOS configuration file is stored on the CMTS run the command **dir**.

```
schooner#dir
```

```
Directory of disk0:/
```

```
 3  -rw-    11606084   Sep 17 2001 13:31:38  ubr10k-k8p6-mz.122-2.XF.bin
2839 -rw-         173   Oct 01 2001 23:29:44  ios.cf
47890432 bytes total (36274176 bytes free)
```

To view what commands are configured in the ios.cf file the command `more <filename>` can be used in the CMTS as follows:

```
schooner#more ios.cf
hostname SUCCEED
service linenumber
enable password cisco
interface ethernet 0
load 30
no shut
interface cable 0
load 30
no shut
line vty 0 4
password cisco
end
```

Fourth Step - Configuring the CMTS as ToD Server

To configure ToD on a Cisco's CMTS only two global commands are needed **service udp-small-servers max-servers no-limit** and **cable time-server**. The configuration looks like:

```
service udp-small-servers max-servers no-limit
!--- supports a large number of modems / hosts attaching quickly

cable timeserver
!--- permits cable modems to obtain Time of Day (ToD) from uBR10012
```

The Configuration of the CMTS

The complete configuration of the uBR10012 is found below. All the commands in bold are the relevant commands to the purpose of this document.

```
Schooner#show run
Building configuration...

Current configuration : 3522 bytes
!
version 12.2
no parser cache
no service single-slot-reload-enable
no service pad
service timestamps debug uptime
service timestamps log uptime
no service password-encryption
service udp-small-servers max-servers no-limit
!
hostname schooner
!
logging rate-limit console all 10 except critical
enable secret 5 $1$cM7F$ryXH7z/Ly6QCnD2LQ.gZs/
!
```

```
no cable qos permission create
no cable qos permission update
cable qos permission modems
cable timeserver
!
cable config-file platinum.cm
  service-class 1 priority 2
  service-class 1 max-upstream 128
  service-class 1 guaranteed-upstream 10
  service-class 1 max-downstream 10000
  service-class 1 max-burst 1600
  cpe max 10
  timestamp
  option 43 hex 08:03:00:00:0C:80:06:69:6F:73:2E:63:66
!
redundancy
  main-cpu
    auto-sync standard
  facility-alarm intake-temperature major 49
  facility-alarm intake-temperature minor 40
  facility-alarm core-temperature major 53
  facility-alarm core-temperature minor 45
  card 1/0 loc12pos-1
  card 1/1 2cable-tccplus
  card 2/0 1gigethernet-1
  card 5/0 2cable-mc28
  card 7/0 2cable-mc28
  ip subnet-zero
  no ip domain-lookup
!
ip dhcp pool surf
  network 10.1.4.0 255.255.255.0
  bootfile platinum.cm
  next-server 10.1.4.1
  default-router 10.1.4.1
  option 7 ip 10.1.4.1
  option 4 ip 10.1.4.1
  option 2 hex ffff.8f80
  lease 7 0 10
!
interface FastEthernet0/0/0
  ip address 172.16.30.50 255.255.255.192
!
interface POS1/0/0
  no ip address
  crc 32
  pos report all
  POs flag j0 1
!
interface GigabitEthernet2/0/0
  no ip address
  negotiation auto
!
interface Cable5/0/0
  ip address 10.1.4.1 255.255.255.0
  cable downstream annex B
  cable downstream modulation 64qam
  cable downstream interleave-depth 32
  cable upstream 0 frequency 40000000
  cable upstream 0 power-level 0
```

```

no cable upstream 0 shutdown
cable upstream 1 shutdown
cable upstream 2 shutdown
cable upstream 3 shutdown
!
ip classless
ip route 0.0.0.0 0.0.0.0 172.16.30.1
no ip http server
!
no cdp run
snmp-server community public RO
snmp-server community private RW
snmp-server trap-source Cable5/0/0
snmp-server packetsize 2048
snmp-server enable traps cable
snmp-server host 172.16.30.8 public cable snmp
snmp-server manager
tftp-server server
tftp-server ios.cf alias ios.cf
!
alias exec scm show cable modem
!
line con 0
line aux 0
line vty 0 4
!
end

schooner#

```

Other CMTS vendors may not have the ability to set up all these pieces using only their CMTS commands whereas it can be accomplished completely in Cisco IOS.

To make the cable modems take the commands specified in the Cisco IOS configuration file called ios.cf, it is necessary to reboot the cable modems in question. This can be done from the from the CMTS's CLI by using the command **clear cable modem <ip address/MAC address> reset**.

```
Schooner#clear cable modem 10.1.4.4 reset
```



Caution: If you have a large network and want to send a different configuration file to all the cable modems in your plant, it is recommended to do so in phases. This will minimize the impact of thousands of cable modems attempting to step on each other while trying to get online at the same time.

Verify the Configuration

To verify the configuration, clear the cable modem with the **clear cable modem** command. When the cable modem comes back online, telnet to it look at the configuration.

```

Schooner#show cable modem
MAC Address      IP Address      I/F      MAC      Prim RxPwr  Timing Num  BPI
                  IP Address      I/F      State    Sid  (db)  Offset CPEs  Enb
0004.27ca.0e9b  10.1.4.6        C5/0/0/U0  online   1   *0.00  2820  0   no
0090.9600.703d  10.1.4.2        C5/0/0/U0  online   2   -0.75  2816  0   no
0003.e38f.f9b5  10.1.4.3        C5/0/0/U0  online   3   *0.00  2822  0   no
0001.64ff.e4b5  10.1.4.4        C5/0/0/U0  online   4   *0.00  2812  0   no

```

```
!--- CVA120
```

```
0020.4086.2704 10.1.4.5      C5/0/0/U0 online      5  -0.50  2808  0  no
0020.4086.3324 10.1.4.7      C5/0/0/U0 online      6  -0.50  2808  0  no
0020.4079.feb4 10.1.4.8      C5/0/0/U0 online      7   0.00  2805  0  no
0020.4085.d06a 10.1.4.9      C5/0/0/U0 online      8  -0.50  2807  0  no
```

Notice in this example that the ios.cf file commands the cable modems to have a hostname of SUCCEED, and indeed this is the filename that is seen when we telnet into the cable modem.

```
Schooner#telnet 10.1.4.4
Trying 10.1.4.4 ... Open
```

```
SUCCEED line 1
```

```
User Access Verification
```

```
Password:
SUCCEED>en
Password:
SUCCEED#
```

To verify that the Cisco IOS configuration file was downloaded successfully to the cable modem use the command show version. The output below shows the information regarding the ios.cf file in bold.

```
SUCCEED#show version
Cisco Internetwork Operating System Software
IOS (tm) 120 Software (CVA120-K8V4Y5-M), Version 12.2(2)XA, EARLY DEPLOYMENT RE
TAC:Home:SW:IOS:Specials for info
Copyright (c) 1986-2001 by cisco Systems, Inc.
Compiled Wed 27-Jun-01 02:02 by hwcheng
Image text-base: 0x800100A0, data-base: 0x80782844
ROM: System Bootstrap, Version 12.0(20001010:025045) [spaulsen-blue-3105 3108],
ROM: 120 Software (CVA120-K8V4Y5-M), Version 12.2(2)XA, EARLY DEPLOYMENT RELEAS

SUCCEED uptime is 3 days, 3 hours, 21 minutes
System returned to ROM by reload at 05:52:09 - Sat Jan 1 2000
System restarted at 05:58:30 - Sat Oct 6 2001
System image file is "flash:cva120-k8v4y5-mz.122-2.XA.bin"
Host configuration file is "tftp://10.1.4.1/ios.cf"

cisco CVA122 CM (MPC850) processor (revision 3.r) with 32256K/1024K bytes of me
Processor board ID SAD043708GK
Bridging software.
1 Ethernet/IEEE 802.3 interface(s)
1 Cable Modem network interface(s)
1 Universal Serial Bus (USB) interface(s)
8192K bytes of processor board System flash (Read/Write)
7296K bytes of processor board Boot flash (Read/Write)

Configuration register is 0x2
```

The configuration of the CVA120 is shown below. Notice that the commands in bold correspond to the lines in the ios.cf file.

```
SUCCEED#show run
Building configuration...

Current configuration : 1429 bytes
!
! Last configuration change at 11:22:22 - Tue Oct 9 2001
!
version 12.1
no service single-slot-reload-enable
no service pad
service timestamps debug uptime
service timestamps log uptime
no service password-encryption
service linenumber
service internal
!
hostname SUCCEED
!
no logging buffered
no logging buffered
logging rate-limit console 10 except errors
enable password cisco
!
clock timezone - -8
ip subnet-zero
no ip routing
no ip finger
!
interface Ethernet0
ip address 10.1.4.11 255.255.255.0
no ip route-cache
no ip mroute-cache
load-interval 30
bridge-group 59
bridge-group 59 spanning-disabled
!
interface cable-modem0
ip address docsis
no ip route-cache
no ip mroute-cache
load-interval 30
cable-modem boot admin 2
cable-modem boot oper 5
cable-modem downstream mode annex-b
cable-modem Mac-timer t2 40000
bridge-group 59
bridge-group 59 spanning-disabled
!
interface USB0
ip address 10.1.4.11 255.255.255.0
no ip route-cache
no ip mroute-cache
arp timeout 0
bridge-group 59
bridge-group 59 spanning-disabled
!
ip classless
no ip http server
no ip http cable-monitor
!
```

```

snmp-server packetsize 4096
snmp-server chassis-id
snmp-server manager
!
voice-port 0
  input gain -2
!
voice-port 1
  input gain -2
!
mgcp modem passthrough voaal2 mode
no mgcp timer receive-rtcp
!
mgcp profile default
!
line con 0
  transport input none
line vty 0 4
  password cisco
  login
!
end

```

Important Note

It appears that the option command for cable config-file is broken because one may expect the commands below to give valid configuration.

```

option 43 instance 8 hex 00:00:0c
option 43 instance 128 ASCII ios.cf

```

While these commands are accepted, it does not generate correct Cisco IOS config file. This is NOT a bug! The problem here is how the term "instance" was interpreted as a "sub-option," which it was never supposed to be.

The implementation of "instance" only permits the *repetition* of the same option multiple times, as when you have multiple instances of option 43 for various vendors! Here is an example:

```

option 43 instance 1 hex 08:03:00:00:0C:80:07:69:6F:73:2E:63:66:67
!--- Config file cisco CM
option 43 instance 2 hex 08:03:11:22:33:80:07:69:6F:73:2E:63:66:67
!--- Some option for other CM

```

Notice that 11:22:33 is a random Vendor ID from a fictitious company. Any match with a real vendor ID is a pure coincidence.

Since the term "instance" is expected to reflect TLV sub-option fields, and you indeed have TLV sub-option fields, you will have to enter the entire string in Hexadecimal.

Related Information

- [cable config-file option](#)
 - [Configuring DHCP, ToD, TFTP services on Cisco's CMTS: All-In-One Configuration](#)
 - [Technical Support - Cisco Systems](#)
-

Home	How to Buy	Login	Profile	Feedback	Site Map	Help
----------------------	----------------------------	-----------------------	-------------------------	--------------------------	--------------------------	----------------------

[Contacts & Feedback](#) | [Help](#) | [Site Map](#)

© 2009 - 2010 Cisco Systems, Inc. All rights reserved. [Terms & Conditions](#) | [Privacy Statement](#) | [Cookie Policy](#) | [Trademarks of Cisco Systems, Inc.](#)