

How to Factory Reset Speaker Track on MX series

Contents

[Introduction](#)

[Background Information](#)

[Procedure](#)

Introduction

This article describes how to factory reset the speaker tracker on the MX700/MX800 camera and the entire speaker track on the MX Series.

Contributed by Angel Miralrio Lazaro, Cisco TAC Engineer.

Background Information

This procedure can also be applied to a MX series with a single camera using Steps 1 through 4.

This is the front view of the MX Series.



Procedure

Step 1. Remove the top cover



Step 2. Remove the left, right and center speakers next to the cameras.



Step 3. To reset the cameras singly, go to the right side of each camera, you'll see a fan in each device.



Step 4. In the bottom of the control panel, next to the screw, you will see a pinhole. Press the pinhole with a pen for about 15 seconds until the Light Emitting Diode (LED) of the camera blinks red.







Step 5. To reset the speaker track itself, on the left control panel next to the camera.



Step 6. You will find the pinhole on the left bottom, next to the screw, press the pinhole for about 15 seconds, and the speaker tracker will be reset.

