

TelePresence FAQ: How do I check the audio levels received by the TelePresence Server?



Document ID: 118354

Contributed by Cisco TAC Engineers.

Sep 05, 2014

Contents

Introduction

How do I check the audio levels received by the TelePresence Server?

Introduction

This document describes how to check the audio levels received by a Cisco TelePresence Server from a particular endpoint.

How do I check the audio levels received by the TelePresence Server?

Complete these steps in order to check the audio levels received by a TelePresence Server from a particular endpoint:

1. Choose *Conferences*.
2. Select the conference that the endpoint is in.
3. Click the endpoint for which you want to view the audio level.
4. Click *Statistics*.

The Receive energy in the Audio section shows the received audio level.