Upgrade from Snort 2 to Snort 3 via FMC

Contents

Introduction
<u>Prerequisites</u>
Requirements
Components Used
Background Information
<u>Configure</u>
Upgrade the Snort Version
Method 1
Method 2
Upgrade of Intrusion Rules
<u>Verify</u>
Troubleshooting
Related Information

Introduction

This document describes how to upgrade from Snort 2 and Snort 3 version in Firepower Manager Center (FMC).

Prerequisites

Requirements

Cisco recommends that you have knowledge of these topics:

- Firepower Threat Defense
- Firepower Management Center
- Snort

Components Used

The information in this document is based on these software and hardware versions:

- FMC 7.0
- FTD 7.0

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, ensure that you understand the potential impact of any command.

Background Information

The Snort 3 feature was added in the 6.7 release for Firepower Device Manager (FDM) and Cisco Defense

Orchestrator (CDO); in the 7.0 release for the Firepower Management Center (FMC).

Snort 3.0 was designed to address these challenges:

- 1. Reduce memory and CPU usage.
- 2. Improve HTTP inspection efficacy.
- 3. Faster configuration loading and Snort restart.
- 4. Better programmability for faster feature addition.

Configure

Upgrade the Snort Version

Method 1

1. Log into Firepower Management Center.

رالدرالد CISCO
Firepower
Center
Username
Password
Log In

2. On the **Device** tab navigate to **Devices > Device Manager**.

Firepower Management Center Overview / Dashboards / Dashboard	Overview	Analysis	Policies	Devices	Objects	Integration
Summary Dashboard (setter destinant) Provides a summary of activity on the appliance Network × Threats Intrusion Events S	itatus Ge	olocation	QoS t	Device Device NAT	Management Upgrade	QoS Platform Settings FlexConfig Certificates
 Unique Applications over Time 		-	- ×	Site To Remote Dynami Trouble:	Site Access c Access Policy shooting	

3. Select the device that you want to change the Snort version.

View By: Group	•				
All (2) • Error (0) • Wa	arning (0) Offline (0)	Normal (2) D	eployment Pending (1) • Up	grade (0)	
Collapse All					
Name			Model	Version	Chassis
🗌 🤝 HA (1)					
HA-CALO-LAB High Availability					
192.168.1.14(Primate 192.168.1.14 - Rout	ry, Active) ed		FTDv for VMware	7.0.5	N/A
192.168.1.15(Secon 192.168.1.15 - Rout	dary, Standby) ed		FTDv for VMware	7.0.5	N/A

4. Click the **Device** tab and click the **Upgrade** button on the Inspection Engine Section.

HA-CALO-LAB Cisco Firepower Threat Defense for VMware					
Summary High Availability Device Rout	ing Interfaces Inline Sets D	HCP			
				192.168.1	•
General	/±7	System	0 G	Inspection Engine	
Name:	192.168.1.14	Model:	Cisco Firepower Threat Defense for VMware	Inspection Engine:	Snort 2
Transfer Packets:	Ves	Serial.	9AEMADW99J4	NEW Upgrade to our new and improved Snort 3	
Mode:	Routed	Time.	2024-04-11 15:47:36	Snort 3 is the latest version of the most powerful, industry-s	itandard inspection
Compliance Mode:	None	Time Zone:	UTC (UTC+0.00)	improvements to performance and security efficacy, there is	a lot to be excited
TLS Crypto Acceleration:	Disabled	Version:	7.0.5	about Learn more	
		Time Zone setting for Time based Rules:	UTC (UTC+0.00)	Switching snort versions requires a deployment to complia Because Snort must be stopped so that the new version can be momentary traffic loss.	ete the process. I be started, there will
				Note: If the device uses an intrusion Policy that has custom t will not be able to migrate those rules.	Intrusion Rule, Snort 3
				Uppede	

5. Confirm your selection.



Method 2

1. Log into Firepower Management Center.

رالدرالد CISCO
Firepower
Center
Username
Password
Log In

2. On the **Device** tab navigate to **Devices > Device Manager**.

Firepower Management Center Overview / Dashboards / Dashboard	Overview	Analysis	Policies	Devices	Objects	Integration
Summary Dashboard (setter destinant) Provides a summary of activity on the appliance Network × Threats Intrusion Events S	itatus Ge	olocation	QoS t	Device Device NAT	Management Upgrade	QoS Platform Settings FlexConfig Certificates
 Unique Applications over Time 		-	- ×	Site To Remote Dynami Trouble:	Site Access c Access Policy shooting	

3. Select the device that you want to change the Snort version.

View By: All (2)	Group • Error (0) • Warning (0)	• Offline (0)	Normal (2)	Deployment Pending (1)	 Upgrade (0) 	
Collapse All						
Nar	ne			Model	Version	Chassis
• •	IA (1)					
• •	HA-CALO-LAB High Availability					
	192.168.1.14(Primary, Active) 192.168.1.14 - Routed			FTDv for VMware	7.0.5	N/A
	 192.168.1.15(Secondary, Stand 192.168.1.15 - Routed 	by)		FTDv for VMware	7.0.5	N/A

4. Click on the **Select Action** button and select **Upgrade to Snort 3**.



Upgrade of Intrusion Rules

Additionally, you need to convert your Snort 2 rules into Snort 3 rules.

1. Select from the menu **Objects > Intrusion Rules**.

Overview	Analysis	Policies	Devices	Objects	AMP	Intelligence
lescription, or l	Base Policy			Object M Intrusion	lanagemen Rules	t

2.Select from the menu **Snort 2 All Rules tab > Group Rules By > Local Rules**.



3. Click Snort 3 All Rules tab and make sure that All Rules is selected.

Snort 2 All Rules	Snort 3 All Rules
< Intrusion Policy	
67 items	Q Search Rule Group
All Rules	

4.On the Task drop down menu, select Convert and import.



5. Click **OK** on the warning message.



Verify

The Inspection Engine section shows that the current version of Snort is Snort 3.

Inspection Engine Snort 3 Inspection Engine: Revert to Snort 2

The rule conversion was successful once you see this message:



Finally, you must find on the **Local Rules** group the **All Snort 2 Converted Global** section, which contains all your Snort 2 to Snort 3 converted rules.



Troubleshooting

In case the migration fails or crashes, rollback to Snort 2 and try again.

Related Information

- How to Migrate from Snort 2 to Snort 3
- <u>Cisco Secure Snort 3 Device Upgrade (External YouTube Video)</u>