

View Dashboard on RV220W and RV120W

Objective


Viewing the Dashboard on the device provides a fast way for a user to look at all of the essential system related information. This document describes how to view the page and also what information can be found there.

Applicable Devices

- RV220W
- RV120W

Instructions


Step 1. Log into the device to view the **Getting Started** page.

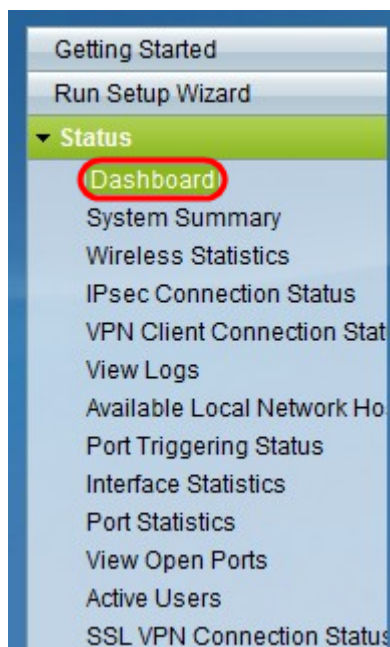

Step 2. Choose **Status > Dashboard** on the left side of the screen.

Dashboard

Please note that this automatically refreshes every 10 seconds. Here is a list of information that can be found on this page.

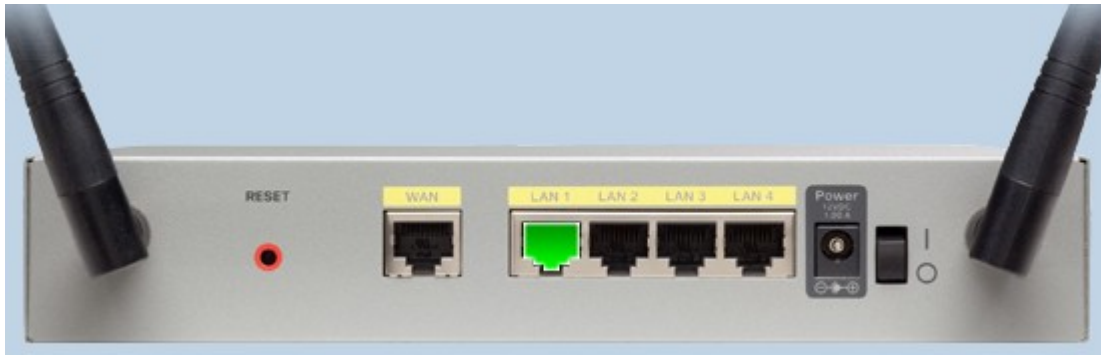

- You can choose to show the panel view or hide it.
- Device Information — Host Name, Firmware Version, Serial Number and Users.
- Resource Utilization — CPU, Memory, Current Time and System Up Time.
- Syslog Summary — Emergency, Alert, Critical, Error and Warning. A user can also look at the details of the Syslog Summary here and Manage Logging.
- ProtectLink License Information — Displays whether the Cisco ProtectLink Web is activated or not.
- LAN (Local Network) Interface — MAC Address, IPv4 Address and DHCP Server.
- WAN (Internet) Information — IP Address and State.
- Wireless Networks — Displays the wireless networks, shows whether they are activated or disabled and how many users are on each one.
- VPN — Site-to-Site Tunnels, PPTP users, QuickVPN Users and SSL Users.