

Setup New Username and Password on the RV016 VPN Router

Objectives


This document explains how to setup a new username and password on the RV016 router. This action increases the security of the router.

Applicable Devices

- RV016

Setup a New Username and Password

Step 1. At the RV016 10/100 16-Port VPN Router choose **Setup > Password**.

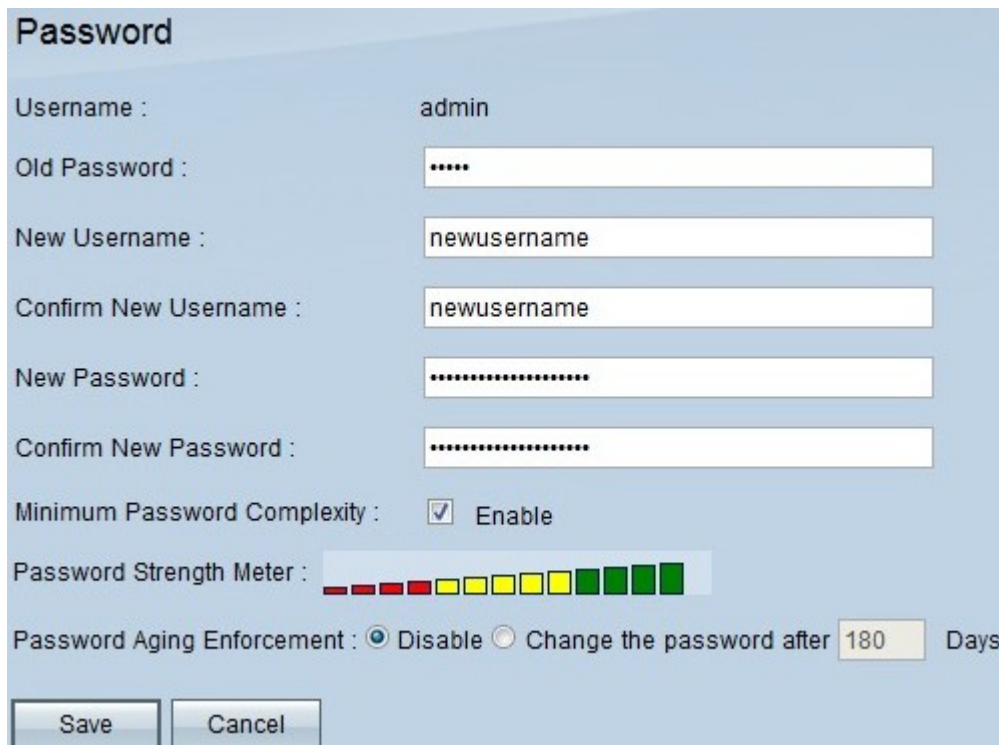

The screenshot shows the 'Password' configuration page on the RV016 router. The page has a light blue background and contains the following fields and options:

- Username :** admin
- Old Password :** A text box containing five asterisks (*****).
- New Username :** newusername
- Confirm New Username :** newusername
- New Password :** A text box containing ten asterisks (*****).
- Confirm New Password :** A text box containing ten asterisks (*****).
- Minimum Password Complexity :** ☒ Enable
- Password Strength Meter :** A visual meter consisting of 10 colored blocks (red, yellow, green) indicating password strength.
- Password Aging Enforcement :** ☒ Disable ☐ Change the password after 180 Days
- Buttons:** Save and Cancel

Step 2. Enter the existing password, that you used to initially access the device, into the Old Password field.

Step 3. Enter your desired username into both the New Username and Confirm New Username fields.

Password

Username : admin

Old Password :


New Username : newusername

Confirm New Username : newusername

New Password :

Confirm New Password :

Minimum Password Complexity : ☒ Enable

Password Strength Meter : 

Password Aging Enforcement : ☒ Disable ☐ Change the password after 180 Days

Save

Cancel

Step 4. Enter your desired password into both the New Password and Confirm New Password fields.

Password

Username : admin

Old Password :


New Username : newusername

Confirm New Username : newusername

New Password :

Confirm New Password :

Minimum Password Complexity : ☒ Enable

Password Strength Meter : 

Password Aging Enforcement : ☒ Disable ☐ Change the password after 180 Days

Step 5. Check the **Maximum Password Complexity** checkbox to require the password to be full strength.

Password

Username : admin

Old Password :


New Username : newusername

Confirm New Username : newusername

New Password :

Confirm New Password :

Minimum Password Complexity : ☒ Enable

Password Strength Meter : 

Password Aging Enforcement : ☒ Disable ☐ Change the password after 180 Days

Step 6. Click the **Change the password after _____ Days** to ensure that the password is changed within the specified number of days. The default value is 180.

Step 7. Click **Save**.