

Setup New Username and Password on the RV016 VPN Router

Objectives

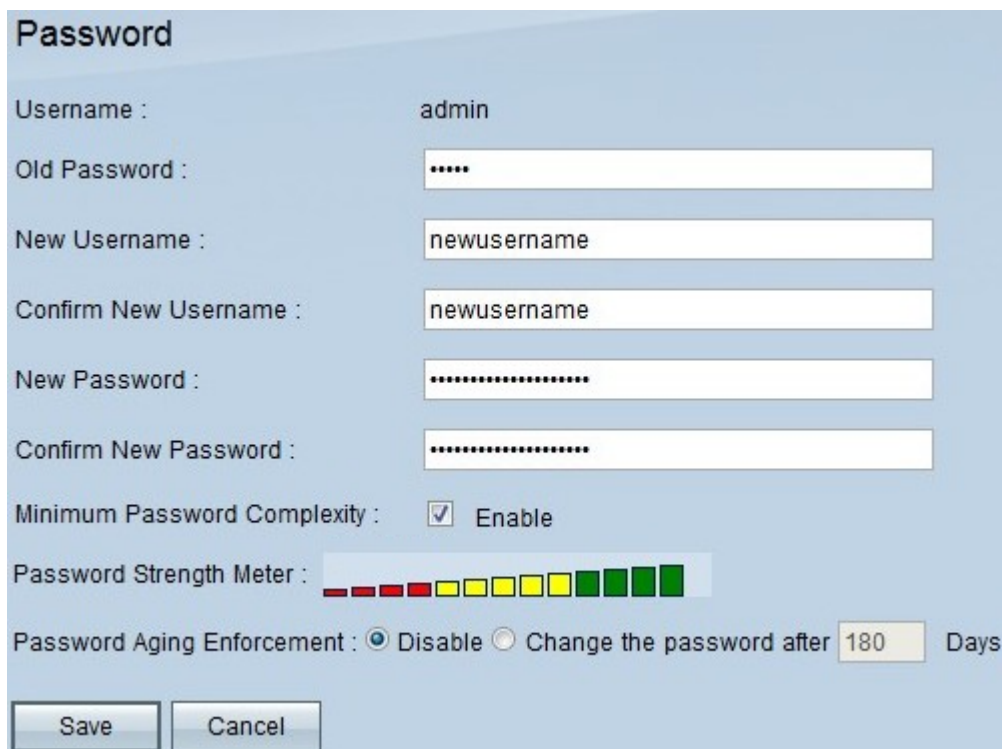
This document explains how to setup a new username and password on the RV016 router. This action increases the security of the router.

Applicable Devices

- RV016

Setup a New Username and Password

Step 1. At the RV016 10/100 16-Port VPN Router choose **Setup > Password**.



The screenshot shows the 'Password' configuration page on the RV016 router. The page has a light blue background and contains the following fields and options:

- Username :** admin
- Old Password :** A text input field containing five asterisks (*****).
- New Username :** newusername
- Confirm New Username :** newusername
- New Password :** A text input field containing ten asterisks (*****).
- Confirm New Password :** A text input field containing ten asterisks (*****).
- Minimum Password Complexity :** Enable
- Password Strength Meter :** A progress bar with 10 segments. The first two segments are red, the next four are yellow, and the last four are green.
- Password Aging Enforcement :** Disable Change the password after Days
- Buttons:** Save and Cancel

Step 2. Enter the existing password, that you used to initially access the device, into the Old Password field.

Step 3. Enter your desired username into both the New Username and Confirm New Username fields.

Password

Username : admin

Old Password :


New Username : newusername

Confirm New Username : newusername

New Password :

Confirm New Password :

Minimum Password Complexity : Enable

Password Strength Meter : 

Password Aging Enforcement : Disable Change the password after Days

Step 4. Enter your desired password into both the New Password and Confirm New Password fields.

Password

Username : admin

Old Password :

 
New Username : newusername

Confirm New Username : newusername

New Password :

Confirm New Password :

Minimum Password Complexity : Enable

Password Strength Meter : 

Password Aging Enforcement : Disable Change the password after Days

Step 5. Check the **Maximum Password Complexity** checkbox to require the password to be full strength.

Password

Username : admin

Old Password :

 
New Username : newusername

Confirm New Username : newusername

New Password :

Confirm New Password :

Minimum Password Complexity : Enable

Password Strength Meter : 

Password Aging Enforcement : Disable Change the password after Days

Step 6. Click the **Change the password after** _____ **Days** to ensure that the password is changed within the specified number of days. The default value is 180.

Step 7. Click **Save**.