

Routing Configuration on the CVR100W VPN Router

Objective

Routing facilitates efficient movement of data throughout a network. Routing includes static, dynamic, and Inter-VLAN routing. Static routes are manually configured pathways created to enable a packet to reach a specific host or network. Dynamic routing allows a router to automatically adjust to physical changes in the network which enables the router to calculate the most efficient route for the network data packets to travel. Inter-VLAN routing enables the router to move tagged VLAN traffic through different subnets.

This article explains how to configure routing on the CVR100W VPN Router.

Applicable Device

- CVR100W VPN Router

Software Version

- 1.0.1.19

Routing Configuration

Step 1. Log in to the web configuration utility and choose **Networking > Routing**. The *Routing* page opens:

Routing

Operating Mode
 Operating Mode: Gateway Router

Dynamic Routing
 RIP: Enable
 RIP Send Packet Version: RIPv1 RIPv2
 RIP Recv Packet Version: RIPv1 RIPv2

Static Routing
 Route Entries: 1 ()
 Enter Route Name:
 Destination LAN IP: 0 . 0 . 0 . 0 (Hint: 192.168.2.100)
 Subnet Mask: 0 . 0 . 0 . 0 (Hint: 255.255.255.0)
 Gateway: 0 . 0 . 0 . 0 (Hint: 192.168.1.100)
 Interface: LAN WAN

Inter-VLAN Routing
 Inter-VLAN Routing: Enable

Routing Table

Operating Mode

Operating Mode
 Operating Mode: Gateway Router

Step 1. In the Operating Mode field, click the desired radio button for the operating mode of the router.

- **Gateway** — Choose this radio button if the router is to host the network connection to the internet. This is the default setting.
- **Router** — Choose this radio button if the router is part of a network with other routers, and another router in the network is the gateway to the Internet. Another router in the network must function as the gateway if internet connectivity is to be available in Router mode. Disable the firewall of this router since firewall protection is provided by the gateway router.

Note: If Gateway mode is selected, the Dynamic Routing fields are dimmed. Skip to [Static Routing](#).

Dynamic Routing

Dynamic Routing

RIP: Enable

RIP Send Packet Version: RIPv1 RIPv2

RIP Recv Packet Version: RIPv1 RIPv2

Step 1. In the Routing Information Protocol (RIP) field, check the **Enable** check box to allow the CVR100W to exchange routing information automatically with other routers, and to dynamically adjust the CVR100W routing tables as changes occur on the network.

Step 2. In the RIP Send Packet Version field click the radio button for the desired RIP protocol used to transmit network data. This option is based on what the other routers on the network support.

- RIPv1 — RIPv1 is a class-based routing version. It does not include subnet information and does not support variable length subnet masks (VLSM). RIPv1 lacks support for router authentication which makes it vulnerable to attacks.
- RIPv2 — RIPv2 carries subnet information; networks that have variable length subnets work with this version of RIP. This form of RIP supports multicast and password authentication security.

Step 3. In the RIP Recv Packet Version field click the radio button for the desired RIP protocol used to receive network data. Refer to step 2 for the differences between RIPv1 and RIPv2. This option is based on what the other routers on the network support.

Note: The RIP version chosen in Step 2 and Step 3 depends on the RIP version supported by other routers on the network.

Static Routing

Static Routing

Route Entries

Enter Route Name

Destination LAN IP . . . (Hint: 192.168.2.100)

Subnet Mask . . . (Hint: 255.255.255.0)

Gateway . . . (Hint: 192.168.1.100)

Interface LAN WAN

Step 1. From the Route Entries drop-down list, choose the routing table entry number. Static routes in the drop-down list that are not yet configured have nothing between the parentheses.

Step 2. In the Enter Route Name field, enter the name of the static route.

Step 3. In the Destination LAN IP field, enter the destination address of the static route.

Step 4. In the Subnet Mask field, enter the subnet mask of the destination address.

Step 5. In the Gateway field, enter the gateway of the static route. A gateway is a node on a network that connects two networks together.


Step 6. In the Interface field, click the desired radio button.

- LAN — Click this radio button if the static route applies to the LAN interface.
- WAN — Click this radio button if the static route applies to the WAN interface.

Step 7. (Optional) To edit a static route entry, choose the routing table number from the Route Entries drop-down list and edit the desired fields.

Step 8. (Optional) To delete a static route entry, choose the routing table number from the Route Entries drop-down list and click **Delete This Entry**.



Inter-VLAN Routing

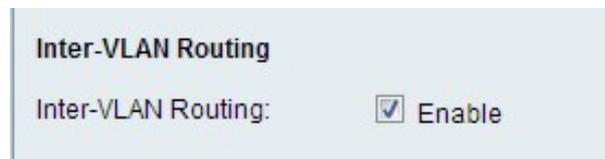

Step 1. In the Inter-VLAN Routing field, check the **Enable** check box to allow the device to route tagged VLAN traffic to different subnets.

Note: To configure VLANs, refer to the article, *VLAN Membership on the CVR100W VPN Router*.

Routing Table

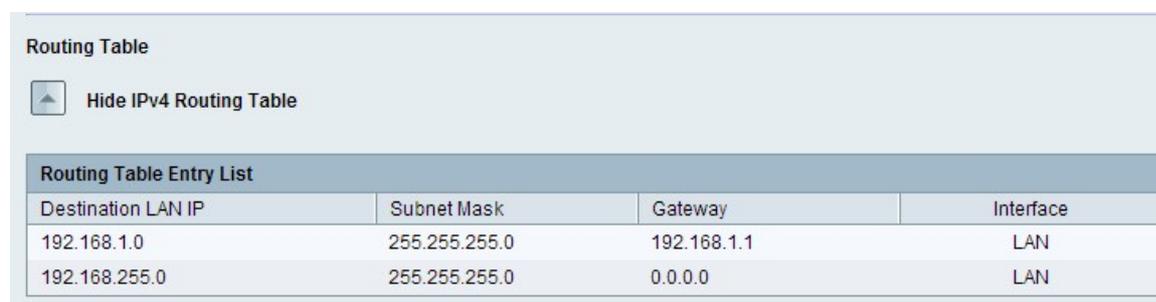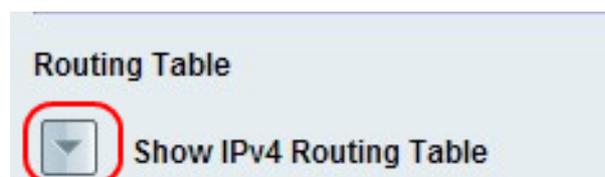

Routing Table

Hide IPv4 Routing Table

Routing Table Entry List			
Destination LAN IP	Subnet Mask	Gateway	Interface
192.168.1.0	255.255.255.0	192.168.1.1	LAN
192.168.255.0	255.255.255.0	0.0.0.0	LAN

Step 1. To view the Routing table, click **Show IPv4 Routing Table**. This displays the static and dynamic routes created.

Step 2. Click **Save** to save the routing configuration.