

Bandwidth Management on the RV130 and RV130W

Objective

Bandwidth is the amount of data that can be transferred across a network over a given unit of time. Bandwidth Management is a Quality of Service (QoS) feature that prioritizes network services and modifies rate controls. The Bandwidth Management settings allow you to control traffic, communications, and the rate of data transfers on a network link to enhance network performance.

The objective of this document is to show you how to configure Bandwidth Management settings on the RV130 and RV130W.

Applicable Devices

- RV130
- RV130W

Bandwidth Management

Step 1. Log in to the web configuration utility and choose **QoS > Bandwidth Management**. The *Bandwidth Management* page opens:

Bandwidth Management

Setup

Bandwidth Management: Enable

Bandwidth


The Maximum Bandwidth provided by ISP

Bandwidth Table		
Interface	Upstream (Kbit/Sec)	Downstream (Kbit/Sec)
Ethernet	10240	40960
3G		

Bandwidth Priority Table									
<input type="checkbox"/> Enable	Direction	Category	Services	VLAN/SSID	IP Address	Subnet Mask	Priority	Remarking	DSCP
<input type="checkbox"/> No data to display									

Step 2. In the *Bandwidth Management* field under the *Setup* section, check the **Enable**

check box to allow the device to manage the bandwidth of traffic flowing from the LAN to the WAN.

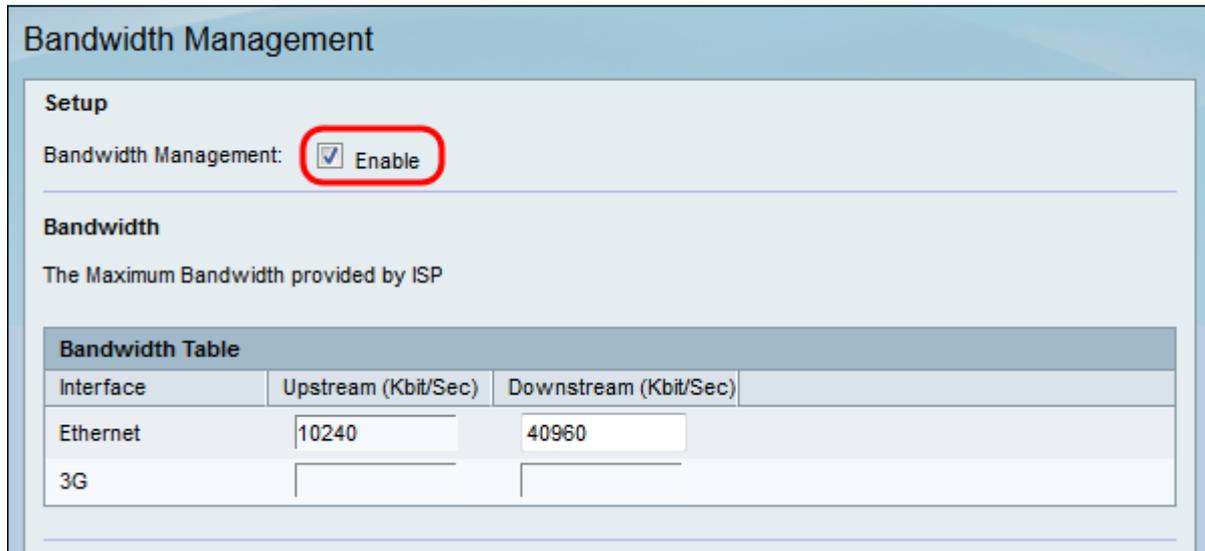


The screenshot shows the 'Bandwidth Management' configuration page. Under the 'Setup' section, the 'Bandwidth Management' checkbox is checked and highlighted with a red circle. Below this, the 'Bandwidth' section contains a table titled 'Bandwidth Table' with columns for 'Interface', 'Upstream (Kbit/Sec)', and 'Downstream (Kbit/Sec)'. The 'Ethernet' row has values of 10240 and 40960, while the '3G' row is empty.

Interface	Upstream (Kbit/Sec)	Downstream (Kbit/Sec)
Ethernet	10240	40960
3G		

Note: The Bandwidth Table shows available WAN interfaces for which you can modify the rate that the device sends and receives data.

Step 3. In the *Upstream (Kbit/Sec)* column, enter the rate at which the router sends data for each of the available interfaces listed.

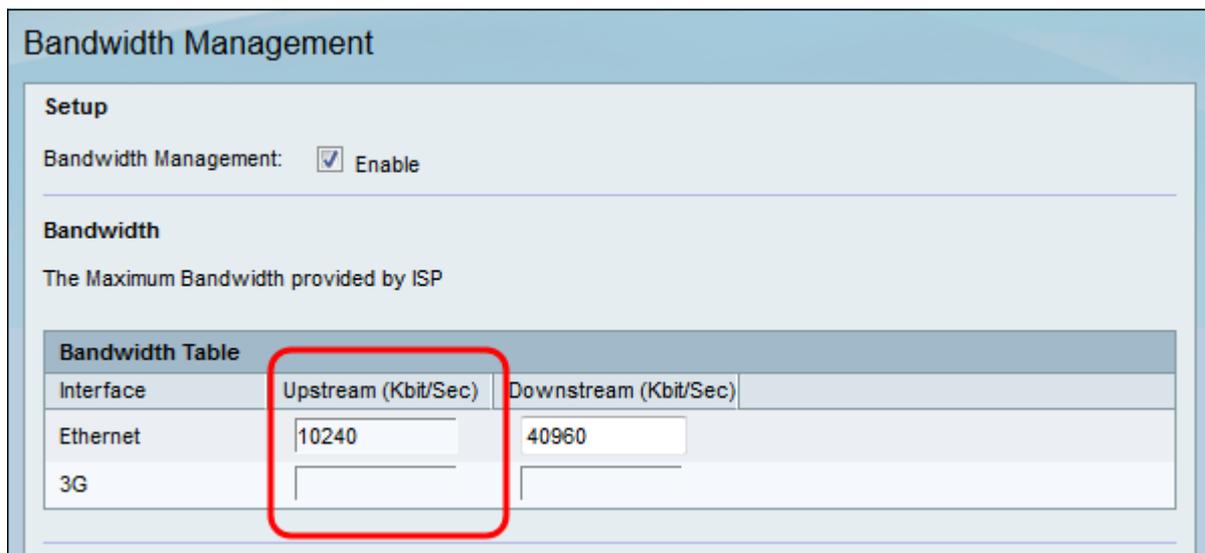

This screenshot is identical to the previous one, but a red box highlights the 'Upstream (Kbit/Sec)' column of the 'Bandwidth Table'.

Interface	Upstream (Kbit/Sec)	Downstream (Kbit/Sec)
Ethernet	10240	40960
3G		

Step 4. In the *Downstream (Kbit/Sec)* column, enter the rate at which the router receives data for each of the available interfaces listed.

Bandwidth Management

Setup

Bandwidth Management: Enable

Bandwidth

The Maximum Bandwidth provided by ISP

Bandwidth Table		
Interface	Upstream (Kbit/Sec)	Downstream (Kbit/Sec)
Ethernet	10240	40960
3G		

Step 5. Click **Save** to save changes.

Add a Service Priority

The *Bandwidth Priority* Table is used to assign specific priorities to services to manage their bandwidth usage.

Step 1. Click **Add Row** to add a new service priority in the *Bandwidth Priority* Table.

Bandwidth Table										
Interface	Upstream (Kbit/Sec)	Downstream (Kbit/Sec)								
Ethernet	10240	40960								
3G										

Bandwidth Priority Table										
<input type="checkbox"/>	Enable	Direction	Category	Services	VLAN/SSID	IP Address	Subnet Mask	Priority	Remarking	DSCP
<input type="checkbox"/>	No data to display									
Add Row		Edit	Delete	Service Management						

Save Cancel

Step 2. Check the **Enable** check box to enable bandwidth management for the service.

Bandwidth Table										
Interface	Upstream (Kbit/Sec)	Downstream (Kbit/Sec)								
Ethernet	10240	40960								
3G										

You must save before you can edit or delete.

Bandwidth Priority Table										
<input type="checkbox"/>	Enable	Direction	Category	Services	VLAN/SSID	IP Address	Subnet Mask	Priority	Remarking	DSCP
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Outbound	Service	All Traffic [All]	vlan1			Low	<input type="checkbox"/>	
Add Row		Edit	Delete	Service Management						

Save Cancel

Step 3. From the *Direction* drop-down list, choose whether the service sends data outbound or receives data inbound.

Bandwidth Table	
Interface	Upstream (Kbit/Sec)
Ethernet	10240
3G	

You must save before you can edit or delete.

Bandwidth Priority Table			
<input type="checkbox"/>	Enable	Direction	Category
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Outbound	Service

Add Row Edit Service Management

Save Cancel

Step 4. From the *Category* drop-down list, choose what you would like to set the bandwidth priority for.

Bandwidth Table		
Interface	Upstream (Kbit/Sec)	Downstream (Kbit/Sec)
Ethernet	10240	40960
3G		

You must save before you can edit or delete.

<input type="checkbox"/>	Enable	Direction	Category	Services	VLAN/SSID
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Outbound	Service	All Traffic [All]	vlan1

Add Row Edit Service Management

Save Cancel

The available options are defined as follows:

- **Service** — Used to set bandwidth priority for a specific type of traffic (i.e. HTTP, DNS, FTP).
- **VLAN/SSID** — Used to set bandwidth priority for all traffic on a specific VLAN/SSID. This option is only available if you select **Outbound** for *Direction* in Step 3. Skip to Step 6 if you choose this option.
- **Source IP** — Used to set bandwidth priority for all traffic on a specific Source IP address. This option is only available if you select **Inbound** for *Direction* in Step 3. Skip to Step 7 if you choose this option.
- **Destination IP** — Used to set bandwidth priority for all traffic on a specific Destination IP address. This option is only available if you select **Outbound** for *Direction* in Step 3. Skip to Step 7 if you choose this option.

Step 5. If you selected **Service** in Step 4, choose a service to prioritize from the *Services* drop-down list. When you are finished, skip to Step 8.

You must save before you can edit or delete.

Bandwidth Priority Table				
<input type="checkbox"/>	Enable	Direction	Category	Services
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Outbound	Service	All Traffic [All]

Step 6. If you choose **VLAN/SSID** in Step 4, choose the VLAN or SSID you would like to set the priority of from the *VLAN/SSID* drop-down list and skip to Step 8. Otherwise, skip this step.

Bandwidth Table		
Interface	Upstream (Kbit/Sec)	Downstream (Kbit/Sec)
Ethernet	10240	40960
3G		

You must save before you can edit or delete.

Bandwidth Priority Table					
<input type="checkbox"/>	Enable	Direction	Category	Services	VLAN/SSID
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Outbound	VLAN/SSID	All Traffic [All]	vlan1

Step 7. If you choose **Source IP** or **Destination IP** in Step 4, enter the IP address and Subnet Mask of the address you would like to set the priority of into the *IP Address* and *Subnet Mask* fields respectively. Otherwise, skip this step.

Bandwidth Table			
Interface	Upstream (Kbit/Sec)	Downstream (Kbit/Sec)	
Ethernet	10240	40960	
3G			

You must save before you can edit or delete.

Bandwidth Priority Table							
<input type="checkbox"/>	Enable	Direction	Category	Services	VLAN/SSID	IP Address	Subnet Mask
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Outbound	Destination IP	All Traffic [All]	vlan1	192.0.2.0	255.255.255.0

Add Row Edit Delete Service Management

Save Cancel

Step 8. From the *Priority* drop-down list, choose the level of bandwidth priority you would like to allocate to the specific service or IP. Higher priority will allot more bandwidth to the service or address.

Bandwidth Table			
Interface	Upstream (Kbit/Sec)	Downstream (Kbit/Sec)	
Ethernet	10240	40960	
3G			

You must save before you can edit or delete.

Bandwidth Priority Table								
<input type="checkbox"/>	Enable	Direction	Category	Services	VLAN/SSID	IP Address	Subnet Mask	Priority
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Outbound	Destination IP	All Traffic [All]	vlan1	192.0.2.0	255.255.255.0	Low

Add Row Edit Delete Service Management

Save Cancel

Step 9. If you chose **Outbound** in Step 3, check the check box in the *Remarking* field to enable remarking on Differentiated Services Code Point (DSCP). Otherwise skip to step 11. Enabling remarking puts priority on network traffic across the LAN based on the DSCP queue mapping of the device. For more information, refer to [DSCP Settings on RV130 and RV130W](#).

Bandwidth Table			
Interface	Upstream (Kbit/Sec)	Downstream (Kbit/Sec)	
Ethernet	10240	40960	
3G			

You must save before you can edit or delete.

Bandwidth Priority Table										
<input type="checkbox"/>	Enable	Direction	Category	Services	VLAN/SSID	IP Address	Subnet Mask	Priority	Remarking	DSCP
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Outbound	Destination IP	All Traffic [All]	vlan1	192.0.2.0	255.255.255.0	Low	<input checked="" type="checkbox"/>	

Add Row Edit Delete Service Management

Save Cancel

Step 10. If you chose to enable **Remarking** in Step 9, enter the remarking value for the packets in the *DSCP* field. Otherwise, skip this step.

Bandwidth Table			
Interface	Upstream (Kbit/Sec)	Downstream (Kbit/Sec)	
Ethernet	10240	40960	
3G			

You must save before you can edit or delete.

Bandwidth Priority Table										
<input type="checkbox"/>	Enable	Direction	Category	Services	VLAN/SSID	IP Address	Subnet Mask	Priority	Remarking	DSCP
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Outbound	Destination IP	All Traffic [All]	vlan1	192.0.2.0	255.255.255.0	Low	<input checked="" type="checkbox"/>	

Add Row Edit Delete Service Management

Save Cancel

Step 11. Click **Save** to save your changes.