

Configure Time-Based PoE on the Cisco Business 220 Series Switches

Objective

This article aims to show how to configure time-based Power over Ethernet (PoE) settings on your Cisco Business 220 switch to enable PoE at a specified time and to monitor the current power usage and maximum power limit per port.

Introduction

Power over Ethernet (PoE) allows the device to supply power to the connected devices through the same Ethernet cable that transmits data. This eliminates the need for a separate power cord to power on the devices such as the IP Phones and Access Points. The Time Range feature on the Cisco Business 220 Series Smart Switches allows you to specify the exact time as to when PoE will be enabled to the ports on the switch.


Applicable Devices | Software Version

- CBS220 series ([Data Sheet](#)) | 2.0.0.17

Configure Time-Based PoE

Step 1

Log in to the switch web-based utility and choose **Port Management > PoE > PoE Port Settings**.

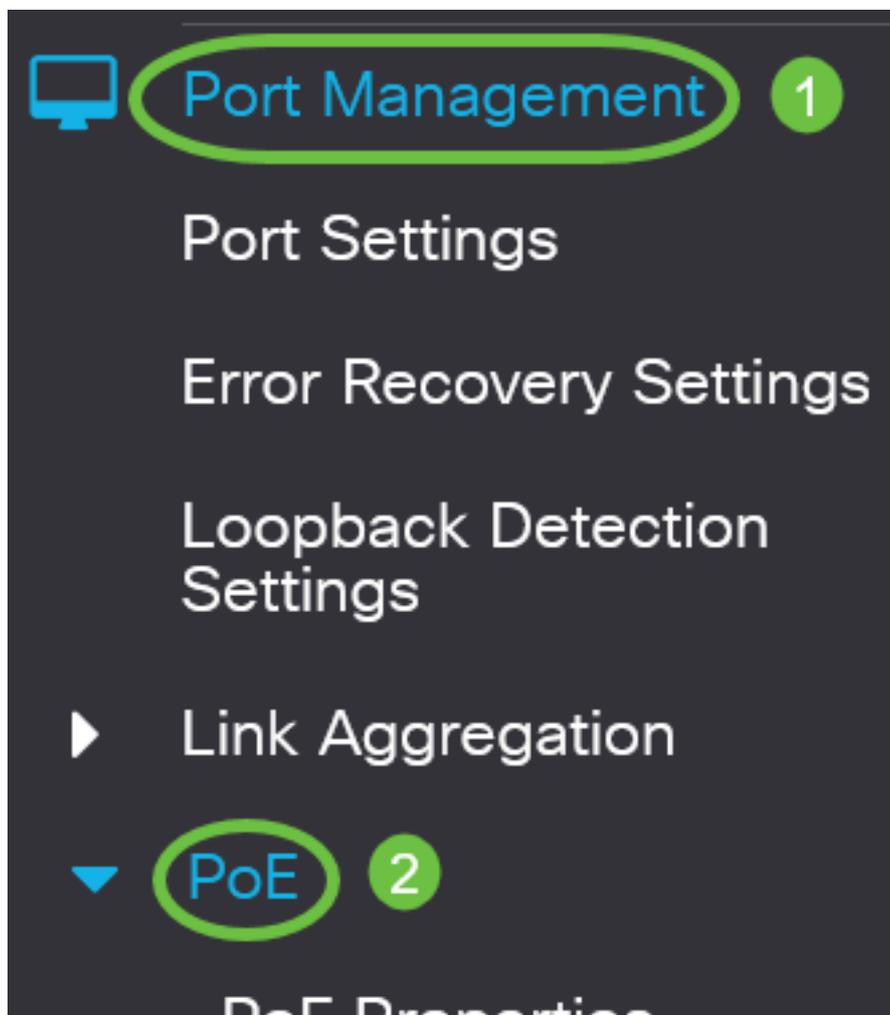

Step 2

Under the PoE Port Setting Table, click on the radio button of the port that you want to configure then click on **Edit**.

PoE Port Settings



	Entry No.	Port	PoE Administrative Status
<input type="radio"/>	1	GE1	Enable
<input checked="" type="radio"/>	2	GE2	Enable
<input type="radio"/>	3	GE3	Enable

In this example, Port GE2 is chosen.

Step 3

The Edit PoE Settings window will then appear. From the Interface drop-down list, make sure the specified port is the one you chose in Step 2. Otherwise, click the drop-down arrow and choose the right port.

Edit PoE Settings

Interface:

Port

GE2



PoE Administrative Status:

Enable

In this example, Port GE2 is chosen.

Step 4

Check the **Enable** check box for the PoE Administrative Status to enable PoE on the specified port. This box is checked by default.

Edit PoE Settings

Interface:

Port

GE2



PoE Administrative Status:

Enable

Step 5

Check the **Enable** check box for the Time Range. This would allow you to apply your pre-configured time settings for the PoE to be enabled on the specified port.

If you have not pre-configured the Time Range, the check box will be grayed out. You will be able to Enable it after configuring or editing a Time Range by following the steps below.

Interface:

Port

GE2



PoE Administrative Status:

Enable

Time Range:

Enable

Step 6

Click on the **Edit** link to go to the Time Range page and to specify the settings for the Time Range.

Time Range Name:



If there is already a pre-defined name that you want to use, click on the drop-down arrow and choose the name then skip to [Step 14](#).

You will then be directed to the Time Range page.


Time Range

Step 7

Under the Time Range Table, click the **Add** button.

Time Range

Time Range Table

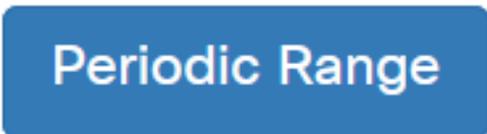

Time Range Name Absolute Starting Time

The Add Time Range window will appear.

Step 8

Enter a name in the *Time Range Name* field. This will help you easily identify the Time Range you have set.

In this example, PortOn is used.

Add Time Range

 Time Range Name: (6/32 characters used)

Step 9

Click on a radio button for the Absolute Starting Time. The options are:

- Immediate - This option will apply the time range set right away.
- Date - This option allows you to set a specific time for the time range to start by choosing the year, month, and day as well as the exact hour and minute.

⚙ Time Range Name: (6/32 characters used)

Absolute Starting Time: Immediate
 Date Time H-

Absolute Ending Time: Infinite
 Date Time H-

In this example, Date is chosen and the year, month, day, and time are specified.

Step 10

Click on a radio button for the Absolute Ending Time. The options are:

- Infinite - This option will set the time range to apply at all times and to never end.
- Date - This option allows you to set a specific time for the time range to end by choosing the year, month, and day as well as the exact hour and minute.

⚙ Time Range Name: (6/32 characters used)

Absolute Starting Time: Immediate
 Date Time H-

Absolute Ending Time: Infinite
 Date Time H-

In this example, Infinite is chosen. This is the default setting.

Step 11

Click **Apply**.

Add Time Range

 


⚙ Time Range Name: (6/32 characters used)

Absolute Starting Time: Immediate
 Date Time H-


Step 12

To save the configuration permanently, go to the Copy/Save Configuration page or click the Save icon at the upper portion of the page.



Step 13

Go back to **Port Management > PoE > PoE Port Settings**.

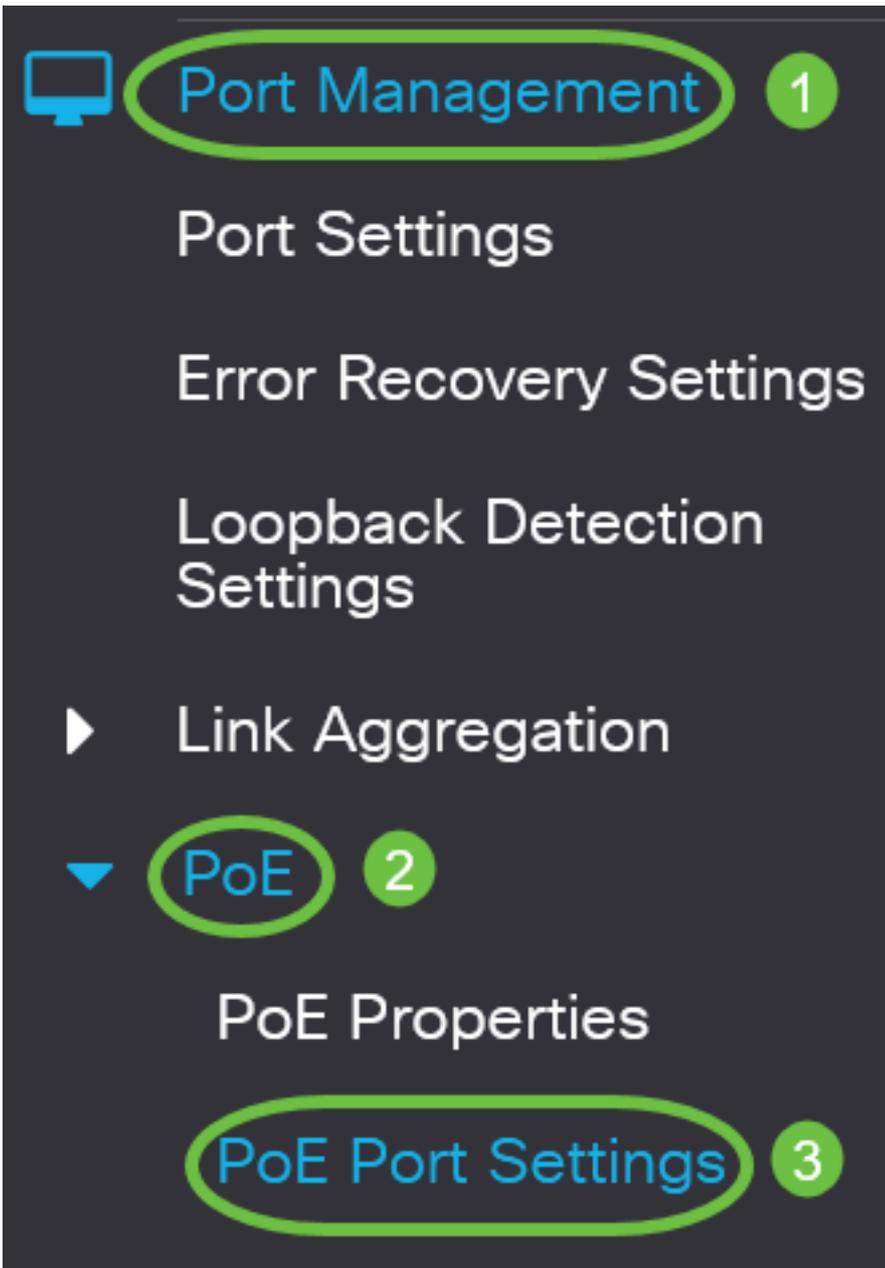

Step 14

Click on the port that you have chosen previously and click the **Edit** button to return to the Edit PoE Settings window.

PoE Port Settings

Step 15

Click on a radio button to choose the Power Priority Level. The options are:

- Critical - This option allows the port to receive power at all times. If there is not enough power to provide to all of the ports, the ports that are set to this priority level are prioritized.
- High - This option allows the port to receive power only if all Critical-priority ports are receiving power.
- Low - This option allows the port to receive power only if all Critical-priority and High-priority ports are receiving power. If there is not enough power for all ports, the power to ports that are set to this priority level may be cut off.

Power Priority Level:

- Critical
- High
- Low

In this example, High is chosen.

Step 16

Enter a value in the *Administrative Power Allocation* field in order to set the maximum power limit to the port.

The Administrative Power Allocation can only be configured if the PoE Power Mode is set to Port Limit in the PoE Properties window.

 Administrative Power Allocation: (Range: 0 - 30000, Default:

In this example, 30000 is used. This is the default value.

The following counters will be displayed:


- Max Power Allocation - Displays the maximum amount of power in milliwatts assigned to the device connected to the selected port.
- Power Consumption - Displays the amount of power in milliwatts assigned to the powered device connected to the selected port.
- Class - Displays the class information of the device connected if the power mode is Class Limit.
- Overload Counter - Displays the total number of power overload occurrences.
- Short Counter - Displays the total number of power shortage occurrences.
- Denied Counter - Displays the number of times that the powered device was denied power.
- Absent Counter - Displays the number of times that the power was stopped to the powered device because the powered device was no longer detected.

- Invalid Signature Counter - Displays the times that an invalid signature was received. Signatures are the means by which the powered device identifies itself to the Power Sourcing Equipment (PSE). Signatures are generated during powered device detection, classification, or maintenance.

Max Power Allocation:	30000 mW
Power Consumption:	7900 mW
Class:	4
Overload Counter:	0
Short Counter:	0
Denied Counter:	0
Absent Counter:	0
Invalid Signature Counter:	0

Step 17

Click **Apply**.

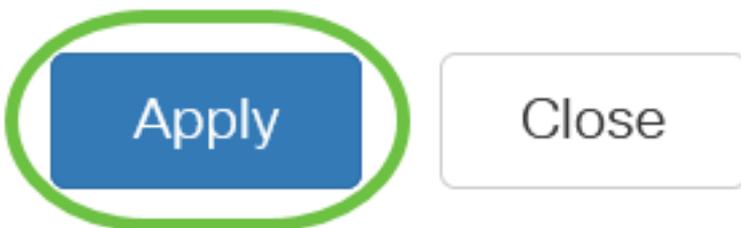

Step 18

To save the configuration permanently, go to the Copy/Save Configuration page or click the Save icon at the upper portion of the page.

Conclusion

You have now successfully configured the Time-Based PoE on your Cisco Business 220 Series Switch.

For more configurations, refer to the [Cisco Business 220 Series Switches Administration Guide](#).