

# Configure Dynamic Host Configuration Protocol (DHCP) Snooping and Relay Settings on your Switch

## Objective

Dynamic Host Configuration Protocol (DHCP) is a service that runs at the application layer of the Transmission Control Protocol/Internet Protocol (TCP/IP) stack to dynamically assign IP addresses to DHCP clients, and to allocate TCP/IP configuration information to DHCP clients. DHCP snooping is a security feature which acts as a firewall between untrusted hosts and trusted DHCP servers.

Snooping prevents false DHCP responses and monitor clients. They can prevent man-in-the-middle attacks and authenticate host devices. The DHCP snooping binding database is also used by IP source guard and Address Resolution Protocol (ARP) inspection. In Layer 3 switches, DHCP relay and snooping can be enabled on any interface with an IP address and on Virtual Local Area Networks (VLANs) with or without an IP address.

This article provides instructions on how to configure DHCP Properties on a switch which also facilitates the configuration of the DHCP Snooping and DHCP Relay.

## Applicable Devices

- Sx350 Series
- SG350X Series
- Sx550X Series


## Software Version

- 2.2.5.68


## Configure DHCP Snooping and Relay Settings on a Switch

### Enable DHCP Snooping and Relay Settings

Step 1. Log in to the web-based utility of your switch then choose **Advanced** in the Display Mode drop-down list.

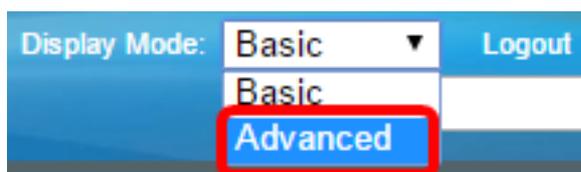


Step 2. Choose **IP Configuration > IPv4 Management and Interfaces > DHCP Snooping/Relay > Properties**.

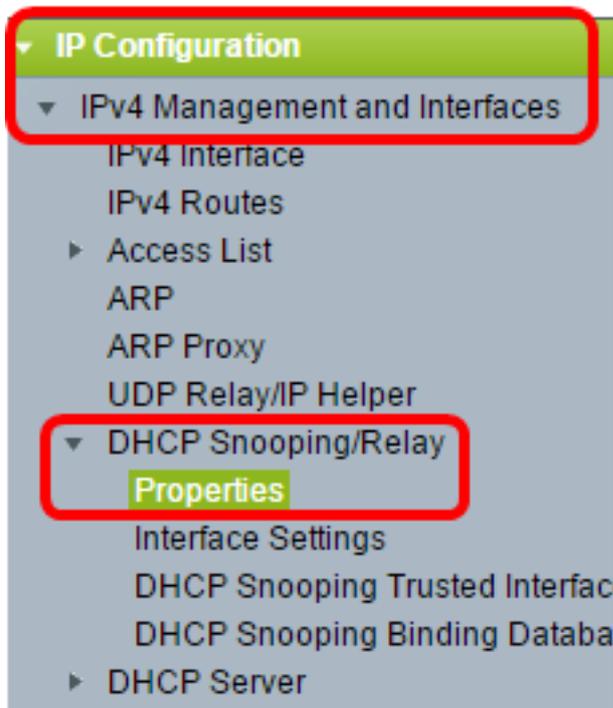

**Note:** Menu options may vary depending on the device model. In this example, SG350X-48MP is used.

Step 3. (Optional) Check **Enable** Option 82 check box to insert Option 82 information into packets. This feature is disabled by default.

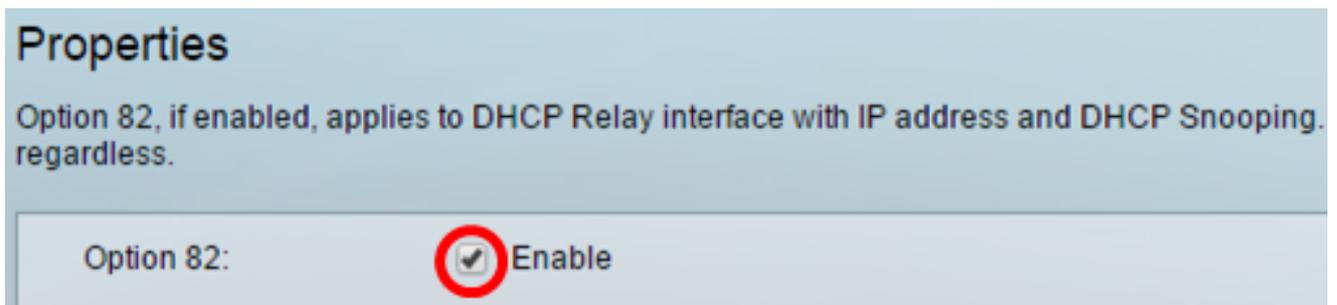

**Note:** DHCP messages are broadcast messages which cannot cross from one network to another. DHCP relay forwards the broadcast messages to a different network. It also adds option 82 to provide additional information on the client to the routing network. Option 82 is not needed when DHCP relay is enabled. However, if you use an external agent to do DHCP relay, option 82 needs to be enabled (Transparent DHCP relay). Option 82 helps the router to choose the client from the network pool.

Step 4. (Optional) Check the **Enable** DHCP Relay check box to enable DHCP relay feature. This feature is disabled by default.



Step 5. In the DHCP Snooping area, check the **Enable** DHCP Snooping Status check box to enable DHCP Snooping. This feature is disabled by default.

**DHCP Snooping**

DHCP Snooping Status:  Enable

Option 82 Pass Through:  Enable

Verify MAC Address:  Enable

Backup Database:  Enable

Step 6. (Optional) Check the **Enable** Option 82 Pass Through check box to enable packets from an untrusted source which have option 82 information. The packets from trusted interfaces are always forwarded. This option can only be configured if DHCP Snooping is enabled.

**DHCP Snooping**

DHCP Snooping Status:  Enable

Option 82 Pass Through:  Enable

Step 7. (Optional) Make sure the **Enable** Verify MAC Address check box is enabled to force the device to verify whether the source Media Access Control (MAC) address of the Layer 2 header matches the client hardware address or not. This option is enabled by default.

**DHCP Snooping**

DHCP Snooping Status:  Enable

Option 82 Pass Through:  Enable

Verify MAC Address:  Enable

Backup Database:  Enable

Step 8. (Optional) Check the **Enable** Backup Database check box to back up the DHCP Snooping Binding database on the flash memory of the device. This option can only be configured if DHCP Snooping is enabled.

**DHCP Snooping**

DHCP Snooping Status:  Enable

Option 82 Pass Through:  Enable


Verify MAC Address:  Enable

Backup Database:  Enable

Step 9. Click **Apply** to apply the settings to the running configuration file.

Option 82:	<input checked="" type="checkbox"/>	Enable
<hr/>		
DHCP Relay:	<input checked="" type="checkbox"/>	Enable
<hr/>		
<b>DHCP Snooping</b>		
DHCP Snooping Status:	<input checked="" type="checkbox"/>	Enable
Option 82 Pass Through:	<input checked="" type="checkbox"/>	Enable
Verify MAC Address:	<input checked="" type="checkbox"/>	Enable
Backup Database:	<input type="checkbox"/>	Enable
<hr/>		
<input type="button" value="Apply"/>	<input type="button" value="Cancel"/>	

Step 10. (Optional) Click **Save** to save settings to the startup configuration file.

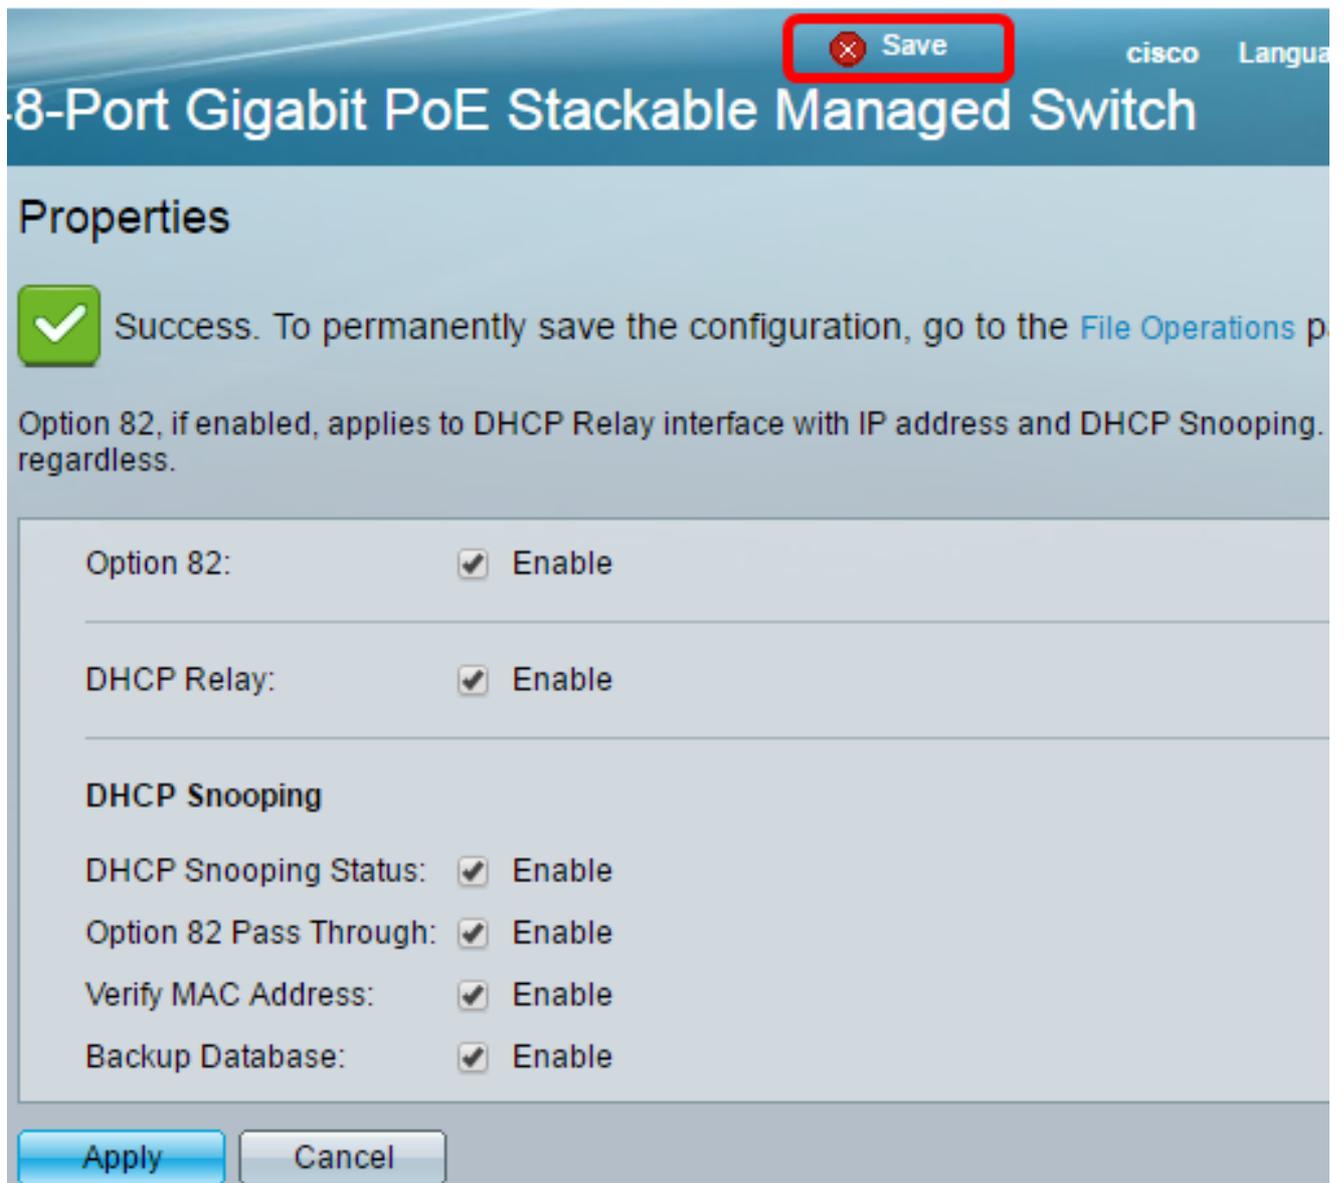


You should now have enabled the DHCP Snooping and Relay settings on the switch.

## Add a DHCP Server to the DHCP Relay Table

The DHCP server assigns and maintains an IP addresses database. Typically, the DHCP server is a router.

Step 1. In the DHCP Relay Server Table, click **Add** to define a DHCP server.

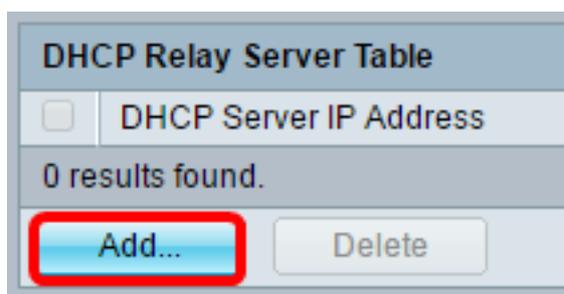

Step 2. The IP version is displayed in the IP Version area automatically. Enter the IP address of the DHCP server in the *DHCP Server IP Address* field.

IP Version: Version 4

 DHCP Server IP Address:

**Note:** In this example, 192.168.1.1 is used.

Step 3. Click **Apply** then click **Close**. The settings are written to the running configuration file.

Step 4. (Optional) Click **Save** to save settings to the startup configuration file.

cisco

## Gigabit PoE Stackable Managed Switch

### Properties

Option 82, if enabled, applies to DHCP Relay interface with IP address and address regardless.

Option 82:  Enable

DHCP Relay:  Enable

#### DHCP Snooping

DHCP Snooping Status:  Enable

Option 82 Pass Through:  Enable

Verify MAC Address:  Enable

Backup Database:  Enable

#### DHCP Relay Server Table

<input type="checkbox"/>	DHCP Server IP Address
<input type="checkbox"/>	192.168.1.1


You should now have successfully added a DHCP Server to the DHCP Relay Server Table.

## Delete a DHCP Server from the DHCP Relay Table

Step 1. In the DHCP Relay Server Table, check the box next to the DHCP server IP address you would like to delete.



Step 2. Click the **Delete** button to delete the server.

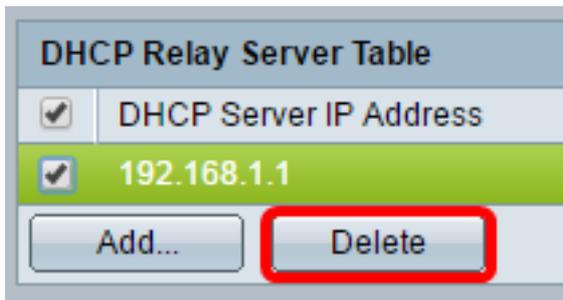

Step 3. (Optional) Click **Save** to save settings to the startup configuration file.

Save cisco Language

# 48-Port Gigabit PoE Stackable Managed Switch

## Properties

 Success. To permanently save the configuration, go to the [File Operations](#) p

Option 82, if enabled, applies to DHCP Relay interface with IP address and DHCP Snooping, regardless.

Option 82:	<input checked="" type="checkbox"/> Enable
DHCP Relay:	<input checked="" type="checkbox"/> Enable

### DHCP Snooping

DHCP Snooping Status:	<input checked="" type="checkbox"/> Enable
Option 82 Pass Through:	<input checked="" type="checkbox"/> Enable
Verify MAC Address:	<input checked="" type="checkbox"/> Enable
Backup Database:	<input checked="" type="checkbox"/> Enable

Apply Cancel

### DHCP Relay Server Table

<input type="checkbox"/>	DHCP Server IP Address
--------------------------	------------------------

0 results found.

Add... Delete

The DHCP server should now have been deleted from your switch.

You should now have configured the DHCP Snooping and Relay settings on your switch.