

# Telnetting to Cisco 300 Series Managed Switches

## Objective

Telnet is disabled by default. It must be enabled by using the web-based switch configuration utility or the console interface and a serial cable connection. The objective of this document is to enable users to connect using telnet.

## Applicable Devices

- SF 300-08
- SF 302-08
- SF 302-08MP
- SF 302-08P
- SF 300-24
- SF 300-24P
- SF 300-48
- SF 300-48P
- SG 300-10
- SG 300-10MP
- SG 300-10P
- SG 300-20
- SG 300-28
- SG 300-28P
- SG 300-52

## Connecting using telnet (Windows)

1. Select **Start > Run**.
2. Enter **CMD** in the Open field and press **Enter**.
3. Type **telnet**, a space, and the switch IP address. For example: `c:>telnet 192.168.1.114`
4. Press Enter. The Login displays. Press Ctrl-R to refresh the Menu CLI Login or to jump to the Menu CLI Login from any other window.
5. Enter **cisco** (default) as the User Name.
6. Enter the password **cisco** (default).
7. Press **Enter**.