

Configuration of Call Forward on the PAP2T and SPA3102 Phone Adapters

Objective

The objective of this document is to provide call forwarding settings on the PAP2T and SPA3102 phone adapters. Call forwarding is used to redirect the calls if not answered, based upon the specifications provided by the hosts.

Applicable Devices

- PAP2T Phone Adapter
- SPA3102

Configuration of Call Forward Settings

Step 1. In the web configuration utility, choose **Voice > User > Call Forward Settings**.



The screenshot shows the Linksys Phone Adapter Configuration web interface. The top navigation bar includes 'Router' and 'Voice'. Under 'Voice', there are tabs for 'Info', 'System', 'User 1', and 'PSTN User'. The 'User 1' tab is selected. Below the navigation, there are links for 'Admin Login', 'basic', and 'advanced'. The main content area is titled 'Call Forward Settings' and contains four input fields:

Cfwd All Dest:	111-111-1111	Cfwd Busy Dest:	222-222-1111
Cfwd No Ans Dest:	222-222-2222	Cfwd No Ans Delay:	20

Step 2. In the Cfwd All Dest field, enter the telephone number for the call forward destination of all the hosts.

Step 3. In the Cfwd Busy Dest field, enter the telephone number for the call to be forwarded to if the line is busy.

Step 4. In the Cfwd No Ans Dest field, enter the telephone number for the call to forwarded to if the call is not answered.

Step 5. In the Cfwd No Ans Delay field, enter in seconds the amount of time before the Cfwd No Ans Dest is triggered.

Step 6. Click **Save Settings** to save the settings or click **Cancel Settings** to discard the settings.