

Speed Dial Settings on SPA8000 Analog Telephone Adapter

Objective

SPA8000 phone adapters have the capability for 8 speed dial numbers. Speed dial numbers are useful when users frequently call certain numbers. Speed dialing allows a user to use only one number to dial the frequent numbers instead of dialing the full phone number. This article explains how to configure speed dial settings on a SPA8000.

Applicable Device

- SPA8000

Software Version

- 6.1.12

Speed Dial Settings

Step 1. Log in to the web configuration utility as an administrator and choose **Advanced > Voice > L1-L8**. The *Line* page opens:

Note: Make sure you choose the desired line to configure in the last path of Step 1. Lines 1 to 8 are available on the device.

Network		Voice	
Info System SIP Provisioning Regional L1 L2 L3 L4 L5 L6 L7 L8 T1 T2 T3 T4		Trunk Status User Login basic advanced	
Line Enable:	<input type="checkbox"/> yes	Trunk Group:	<input type="checkbox"/> none
Streaming Audio Server (SAS)			
SAS Enable:	<input type="checkbox"/> no	SAS DLG Refresh Intvl:	<input type="text" value="30"/>
SAS Inbound RTP Sink:	<input type="text"/>		
NAT Settings			
NAT Mapping Enable:	<input type="checkbox"/> no	NAT Keep Alive Enable:	<input type="checkbox"/> no
NAT Keep Alive Msg:	<input type="text" value="\$NOTIFY"/>	NAT Keep Alive Dest:	<input type="text" value="\$PROXY"/>
Network Settings			
SIP ToS/DiffServ Value:	<input type="text" value="0x68"/>	SIP CoS Value:	<input type="text" value="3"/> [0-7]
RTP ToS/DiffServ Value:	<input type="text" value="0xb8"/>	RTP CoS Value:	<input type="text" value="6"/> [0-7]
Network Jitter Level:	<input type="checkbox"/> high	Jitter Buffer Adjustment:	<input type="checkbox"/> up and down
SIP Settings			
SIP Transport:	<input type="checkbox"/> UDP	SIP Port:	<input type="text" value="5060"/>
SIP 100REL Enable:	<input type="checkbox"/> no	EXT SIP Port:	<input type="text"/>
Auth Resync-Reboot:	<input type="checkbox"/> yes	SIP Proxy-Require:	<input type="text"/>
SIP Remote-Party-ID:	<input type="checkbox"/> yes	SIP GUID:	<input type="checkbox"/> no
SIP Debug Option:	<input type="text" value="none"/>	RTP Log Intvl:	<input type="text" value="0"/>
Restrict Source IP:	<input type="checkbox"/> no	Referor Bye Delay:	<input type="text" value="4"/>
Refer Target Bye Delay:	<input type="text" value="0"/>	Referee Bye Delay:	<input type="text" value="0"/>
	<input type="checkbox"/> no	Sticky 183:	<input type="checkbox"/> no
Speed Dial Settings			
Speed Dial 2:	<input type="text" value="111-111-2222"/>	Speed Dial 3:	<input type="text" value="222-111-1111"/>
Speed Dial 4:	<input type="text" value="122-222-1111"/>	Speed Dial 5:	<input type="text" value="121-121-1212"/>
Speed Dial 6:	<input type="text" value="222-111-2222"/>	Speed Dial 7:	<input type="text" value="212-212-2121"/>
Speed Dial 8:	<input type="text" value="111-222-1111"/>	Speed Dial 9:	<input type="text" value="111-121-1111"/>

Step 2. Enter the desired phone numbers in the Speed Dial (2 to 9) fields under the Speed Dial Settings area. The default setting is blank. User can use these single digit speed dial numbers to dial out to whatever number you enter in the respective Speed Dial (2 to 9) fields.

Note: If a URL is entered in replace of phone numbers for step 2, the URL accesses a dial group to the specific speed dial.

Note: Speed Dial 1 is not available in the page. There are 8 memory slots allocated for SPA8000.

Step 3. Click **Submit All Changes** in order to save the configuration.