

# Cisco Unified Communications Manager Express: SIP Implementation Guide

Document ID: 99946

## Contents

### Introduction

#### Prerequisites

- Requirements
- Components Used
- Conventions

#### Configure

- Network Diagram
- System Configurations
- Configure Basic Telephony Features

#### Verify

#### Troubleshoot

- SIP IP Phone does not get dial tone
- IP Phone Cannot Upgrade to the Latest Firmware
- Unable to Provision Phone

#### Related Information

## Introduction

This document provides step-by-step instructions for setting up a standalone Cisco Unified Communications Manager Express (CME) that uses SIP phones. The document outlines a Cisco Unified Communications Manager Express system with four SIP phones, with configurations for setting up the Cisco Unified Communications Manager Express system and SIP phones.

**Note:** Though the document covers configuration steps to allow Cisco Unified Communications Manager Express to interoperate with Cisco Unity Express, the Cisco Unity Express configuration is outside of the scope of this paper. Refer to Cisco CallManager Express/Cisco Unity Express Configuration Example for more information on Cisco Unified Communications Manager Express and Cisco Unity Express configurations.

## Prerequisites

### Requirements

There are no specific requirements for this document.

### Components Used

The information in this document is based on these hardware versions:

- Cisco 2801 that runs Cisco Unified Communications Manager Express 4.2 with Cisco IOS® Software Release 12.4(11)XW2
- 9-port double-wide 10/100BASE-T Ethernet switch HWIC
- Cisco 7970 SIP Phones
- Cisco 3911 SIP Phone

The information in this document is based on these firmware versions:

- 7970 IP Phone (SIP) SIP70.8-2-1S
- 3911 IP Phone (SIP) SIP3951.8-0-2-9

Refer to Cisco Unified CME and Cisco IOS Software Version Compatibility Matrix in order to determine the appropriate SIP firmware to use for each Cisco Unified Communications Manager Express version. Since Cisco Unified Communications Manager Express 4.2 is used, refer to the Cisco Unified Communications Manager Express 4.2 Specifications link.

The SIP phoneloads can be downloaded from these locations:

- Software Download–Cisco IP Phone Firmware (registered customers only) For 7970 phone Download SIP phone load cmterm-7970\_7971-sip.8-2-1.zip file and unzip the file into your TFTP folder.
- Software Download–Cisco Unified SIP Phone 3911/51 Firmware (registered customers only) For 3911 phone Download the cmterm-3951-sip.8-0-2.zip file and unzip the file into your TFTP folder.

**Note:** 3911 and 3951 phones use the same firmware, so you need not be concerned that the filename reflects a 3951 phone.

After you have unzipped both the ZIP files in your TFTP folder, copy all the firmware files onto the Cisco Unified Communications Manager Express flash with your TFTP server. Make sure you copy all these files onto flash.

```
SIP3951.8-0-2-9.loads  
SIP3951.8-0-2-9.zz  
DSP3951.0-0-0-1.zz  
BOOT3951.0-0-0-9.zz  
SIP70.8-2-1S.loads  
term70.default.loads  
term71.default.loads  
apps70.8-0-2-55.sbn  
cnu70.8-2-0-55.sbn  
cvm70.sip.8-2-0-55.sbn  
dsp70.8-2-0-55.sbn  
jar70.sip.8-0-2-25.sbn
```

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

## Conventions

Refer to the Cisco Technical Tips Conventions for more information on document conventions.

## Configure

In this section, you are presented with the information to configure the features described in this document.

These tables outline the addressing schemes that are used in this setup.

Purpose	VLAN	Network	Interface	Interface Address
---------	------	---------	-----------	-------------------

Voice	192	192.168.10.0/24	VLAN 192	192.168.10.1/24
Data	100	10.10.10.0/24	VLAN 100	10.10.10.1/24


Protocol	Phone Type	Extension Number	Phone Number External Mask
SIP	7970	101	4085251001
SIP	7970	102	4085251002
SIP	3911	103	4085251003
SIP	3911	104	4085251004

<b>Voicemail Pilot Number</b>	100	<b>AA Pilot</b>	110
<b>MWI On</b>	800	<b>MWI Off</b>	801

**Note:** Use the in order to obtain more information on the commands used in this section.

## Network Diagram

This document uses this network setup:

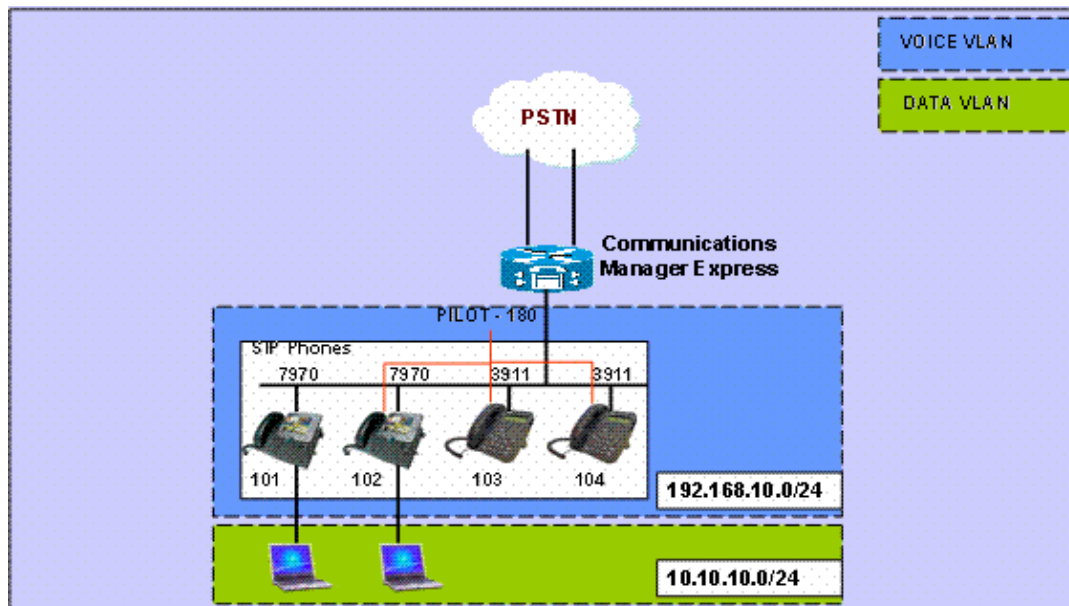

## System Configurations

This document uses these configurations:

### Configure DHCP

It is necessary to configure two separate DHCP pools; IP Phones use the Voice DHCP pool and PCs use the Data DHCP pool. IP Phones need to use DHCP option 150 in order to provide the IP address of the TFTP Server.

If there are any devices in either pool with static IP addresses, make sure these addresses are excluded from the DHCP pool in order to avoid addressing conflicts. You can use the **show ip dhcp binding** command in order to verify which addresses the IP Phones and PCs receive from the router.

```
DHCP Configuration  
  
ip dhcp excluded-address 10.10.10.1 10.10.10.10  
ip dhcp excluded-address 192.168.10.1 192.168.10.10  
!  
ip dhcp pool data  
  network 10.10.10.0 255.255.255.0  
  default-router 10.10.10.1  
!  
ip dhcp pool voice  
  network 192.168.10.0 255.255.255.0  
  option 150 ip 192.168.10.1  
  default-router 192.168.10.1
```

## Configure FastEthernet Interface and Switchports

In this section, you configure the VLAN interfaces for both the Data and Voice VLAN and assign switchports into their respective VLANs.

**Note:** Prior to the configuration of VLANs, be sure to add the previous VLANs to the VLAN database with these commands:

```
FastEthernet Interface and Switchport Configuration  
  
CME-SIP#vlan database  
% Warning: It is recommended to configure VLAN from config mode,  
as VLAN database mode is being deprecated. Please consult user  
documentation for configuring VTP/VLAN in config mode.  
  
CME-SIP(vlan)#vlan 100  
VLAN 100 modified:  
CME-SIP(vlan)#vlan 192  
VLAN 192 modified:  
CME-SIP(vlan)#exit  
APPLY completed.  
Exiting...  
CME-SIP#
```

Configure the switchports to be connected to both the Voice and Data VLANs. IP Phones are automatically assigned into the Voice VLAN and PCs connected to either the switchport directly or connected to the switchport on the IP Phone that is assigned to the Data VLAN.

```
DHCP Configuration  
  
interface FastEthernet0/3/0  
  description 7970 Phone  
  switchport trunk native vlan 100  
  switchport mode trunk  
  switchport voice vlan 192  
  spanning-tree portfast  
!  
interface FastEthernet0/3/1  
  description 7970 Phone  
  switchport trunk native vlan 100  
  switchport mode trunk  
  switchport voice vlan 192  
  spanning-tree portfast
```

```

!
interface FastEthernet0/3/2
description 3911 Phone
switchport trunk native vlan 100
switchport mode trunk
switchport voice vlan 192
spanning-tree portfast
!
interface FastEthernet0/3/3
description 3911 Phone
switchport trunk native vlan 100
switchport mode trunk
switchport voice vlan 192
spanning-tree portfast
! !
interface Vlan100
description Data VLAN
ip address 10.10.10.1 255.255.255.0
!
interface Vlan192
description Voice VLAN
ip address 192.168.10.1 255.255.255.0

```

## Configure TFTP

This configuration allows Cisco Unified Communications Manager Express to serve the IP Phones their firmware.

**Note:** This configuration is mandatory.

### TFTP Configuration

```

tftp-server flash:SIP3951.8-0-2-9.loads
tftp-server flash:SIP3951.8-0-2-9.zz
tftp-server flash:DSP3951.0-0-0-1.zz
tftp-server flash:BOOT3951.0-0-0-9.zz
tftp-server flash:SIP70.8-2-1S.loads
tftp-server flash:term70.default.loads
tftp-server flash:term71.default.loads
tftp-server flash:apps70.8-0-2-55.sbn
tftp-server flash:cnu70.8-2-0-55.sbn
tftp-server flash:cvm70.sip.8-2-0-55.sbn
tftp-server flash:dsp70.8-2-0-55.sbn
tftp-server flash:jar70.sip.8-0-2-25.sbn

```

## Configure Basic Telephony Features

### Configure Voice Service parameters

Configure system to allow calls from SIP to SIP endpoints and enable SIP registrar.

**Note:** This configuration is mandatory.

### Voice Service Parameters Configuration

```

voice service voip
allow-connections sip to sip

!--- Enable SIP to SIP calls.

sip

```

```
registrar server expires max 1200 min 300
```

```
!--- Enable Cisco IOS SIP registrar.
```

## Configure Voice Register Global Parameters

In this section, you configure voice register global parameters.

**Note:** Voice Register global configurations for SIP are similar to telephony–service configuration parameters for SCCP phones.

**Note:** This configuration is mandatory.

### Voice Register Global Parameters Configuration

```
voice register global
mode cme

!--- Set Cisco IOS SIP registrar to CME mode.

source-address 192.168.10.1 port 5060

!--- Set the source address for phone registration.

max-dn 20

!--- Set max extensions.

max-pool 10

!--- Set max phones.

load 7970 SIP7 SIP70.8-2-1S

!--- Specify phone loads for each phone type.

load 3911 SIP3951.8-0-2-9

!--- Specify phone loads for each phone type.

authenticate register

!--- Set authentication for phone registration.

authenticate realm cisco.com
tftp-path flash:

!--- Specify path for tftp files.


create profile

!--- Create configuration files for all phones.

dialplan-pattern 1 4085251... extension-length 3

!--- Configure dial-plan pattern for the system.
```

Here is a link to a video on the Cisco Support Community [🔗](#) which explains the procedure to register an IP Phone with Cisco Unified Communications Manager Express (CME) using SIP Protocol:

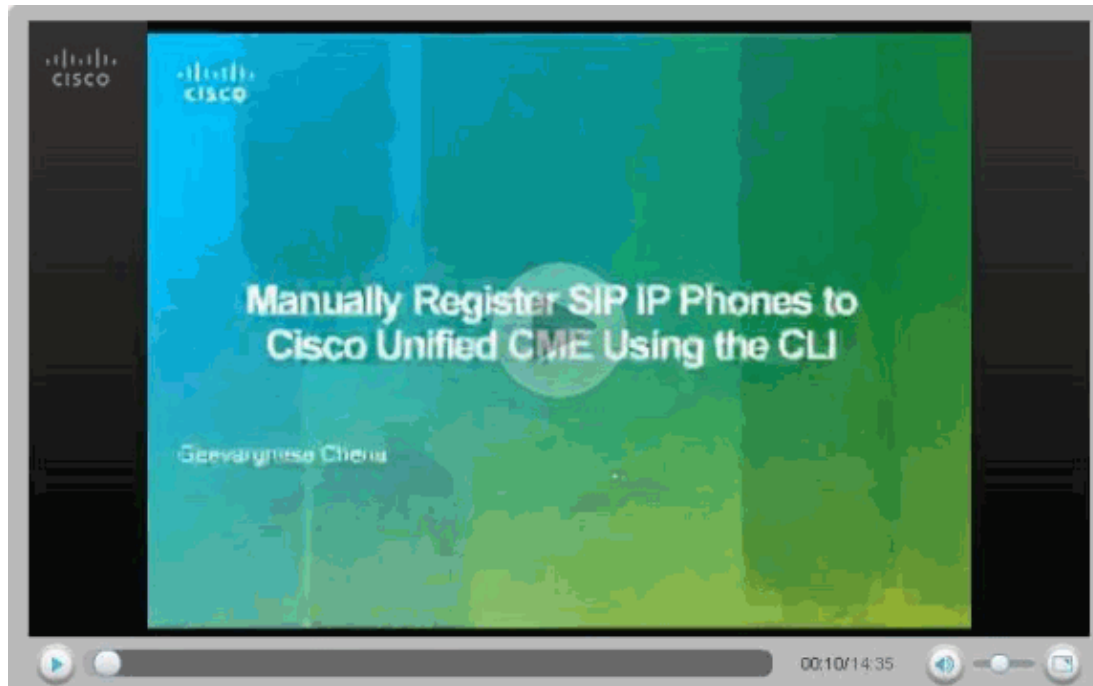

### Configure connection to Cisco Unity Express

Configure necessary dial-peers and MWI ephone-dns to interoperate with Cisco Unity Express. In order for Cisco Unified Communications Manager Express to interoperate with Cisco Unity Express, it is necessary to configure SIP Cisco Unified Communications Manager Express as a back to back user agent (B2BUA), which means that all the signaling and RTP stream goes through the Cisco Unified Communications Manager Express. This configuration is required in order to enable connectivity to Cisco Unity Express.

#### Cisco Unity Express Connection Configuration

```
dial-peer voice 2 voip
  destination-pattern 1.0

!--- Specify destination-pattern to reach CUE VM and AA.

  session target ipv4:10.1.10.1

!--- Configure IP address to reach Cisco Unity Express.

  session protocol sipv2
  dtmf-relay sip-notify

!--- Configure DTMF method to communicate with Cisco Unity Express.

  b2bua

!--- Enable B2BUA for Cisco Unified Communications Manager Express
!--- for calls to Cisco Unity Express.

  codec g711ulaw
  no vad
```

Configure Cisco Unity Express MWI support for outcall in order to enable MWI for SIP phones.

#### Cisco Unity Express MWI Configuration

```
ephone-dn 11
number 800
mwi on
!
ephone-dn 12
number 801
mwi off
```

## Configure Extension and Parameters

Configure voice register dn in order to create extension numbers for ephones. In the previous network topology, there are four extensions, which need to be created as given here.

**Note:** This configuration is mandatory.

### Extension Configuration

```
voice register dn 1
name Phone1

!--- Set display name.

label 4085251001

!--- Set display label.

number 101

!--- Set extension number.

call-forward b2bua noan 100 timeout 20

!--- Configure call forward noan to voicemail pilot.

call-forward b2bua busy 100 timeout 20

!--- Configure call forward busy to voicemail pilot.

allow watch

!--- Allow this number to be watched (presence).

!
voice register dn 2
name Phone2
label 4085251002
number 102
call-forward b2bua noan 100 timeout 20

!--- Configure call forward noan to voicemail pilot.

call-forward b2bua busy 100 timeout 20

!--- Configure call forward busy to voicemail pilot.

allow watch
!
voice register dn 3
name Phone3
label 4085251003
number 103
call-forward b2bua noan 100 timeout 20

!--- Configure call forward noan to voicemail pilot.
```



```

call-forward b2bua busy 100 timeout 20

!--- Configure call forward busy to voicemail pilot.

allow watch
!
voice register dn 4
name Phone4
label 4085251004
number 104
call-forward b2bua noan 100 timeout 20

!--- Configure call forward noan to voicemail pilot.

call-forward b2bua busy 100 timeout 20

!--- Configure call forward busy to voicemail pilot.

allow watch

```

## Configure SIP Phone

Configure voice register pool parameters for each SIP phone.

**Note:** Voice register pool for SIP phones is identical to ephones for SCCP phones.

**Note:** This configuration is mandatory.

### Voice Register Pool Parameters Configuration

```

voice register pool 3
id mac 001A.A11B.500E

!--- Specify phone mac-address.

type 3911

!--- Specify phone type.

number 1 dn 3

!--- Assign button 1 dn tag 3.

dtmf-relay sip-notify

!--- Configure dtmf-relay sip-notify to work
!--- with Cisco Unity Express.

codec g711ulaw

!--- Specify codec.

username user1 password cisco

!--- Configure username and password for SIP registrar.

```

**Note:** Multiple methods for DTMF can be configured under voice register pool, but for each SIP phone that has a voicemail box on Cisco Unity Express, configure **dtmf-relay sip-notify**.

## Configure advanced parameters

In this section, you configure advanced parameters for SIP phones such as presence with Busy Lamp Field (BLF) status. Presence with BLF allows either a SCCP phone or SIP phone to monitor the status of another SIP extensions, which enables presence information between phones.

**Note:** This is an optional configuration.

These phones support SIP presence service on Cisco Unified Communications Manager Express.

### Restrictions

**BLF Call-List**

Supported only on Cisco Unified IP Phone 7941G, 7941GE, 7961G, 7961GE, 7970G, and 7971GE.

**BLF Speed-Dial**

Supported only on Cisco Unified IP Phone 7941G, 7941GE, 7961G, 7961GE, 7970G, and 7971GE.

### *Enable Presence for internal lines*

Complete these steps in order to enable the router to accept incoming presence requests from internal watchers and SIP trunks.

1. enable
2. configure terminal
3. sip-ua
4. presence enable
5. exit
6. presence
7. max-subscription number
8. presence call-list
9. end

Enable Presence for Internal Lines
<pre>Presence !--- Enable presence service. presence call-list !--- Enable BLF monitoring of directory numbers. max-subscription 120 !--- Configure max number watched sessions. ! sip-ua presence enable !--- Enable router to accept incoming presence request.</pre>

### *Enable a Directory Number to be watched*

Complete these steps in order to enable a line associated with a directory number to be monitored by a phone registered to a Cisco Unified Communications Express router. The line is enabled as a presentity and phones can subscribe to its line status through BLF call-list and BLG speed-dial features. There is no restriction on the type of phone that can have its lines monitored; any line on any IP phone or on an analog phone on supported voice gateways can be a presentity.

1. enable
2. configure terminal
3. voice register dn dn-tag
4. number number
5. allow watch
6. end

### Enable a Directory Number to be Watched

```
voice register dn 1
number 101
allow watch

!--- Allow this number to be watched.

name Phone1
label 4085251001
```

**Note:** Repeat this configuration for each extension number that needs to be watched. This step was already done when you first configured voice register dns.

### *Enable the SIP Phone to Monitor BLF Status for Speed-Dials and Call Lists*

A watcher can monitor the status of lines associated with internal and external directory numbers (presentities) through the BLF speed-dial and BLF call-list presence features. Complete these steps in order to enable the BLF notification features on a SIP phone:

1. enable
2. configure terminal
3. voice register pool pool-tag
4. number tag dn dn-tag
5. blf-speed-dial tag number label string
6. presence call-list
7. exit
8. voice register global
9. mode cme
10. create profile
11. restart
12. end

### Enable the SIP Phone to Monitor BLF Status for Speed-Dials and Call Lists

```
voice register pool 1
id mac 0016.47CD.9BD7
type 7970
number 1 dn 1
presence call-list

!--- Enable this phone to have presence call list.

dtmf-relay sip-notify
username user1 password cisco
codec g711ulaw
blf-speed-dial 2 102 label "Phone2"

!--- Enable this line to monitor extension 1002.

blf-speed-dial 3 103 label "3911-1"

!--- Enable this line to monitor extension 1003.

blf-speed-dial 4 104 label "3911-2"
```

```
!--- Enable this line to monitor extension 1004.
```

**Note:** Be sure to perform **restart** every time you change a SIP phone configuration.

**Note:** Refer to How to Configure Presence Service for more information on the configurations of the SIP Presence Service.

## Configure Parallel Hunt Group

In this section, extensions 102, 103, and 104 are assigned into a parallel hunt group. A parallel hunt group is a hunt group that rings all members in the group simultaneously.

### Parallel Hunt Group Configuration

```
voice hunt-group 1
pilot 180

!--- Configure Hunt group pilot number.

list 102, 103, 104

!--- Specify members in hunt-group.

final 100

!--- Specify final number as Voicemail Pilot.
```

## CME– SIP Implementation: Sample Configuration

This section provides the complete sample configuration for setting up a standalone Cisco Unified Communications Manager Express that uses SIP phones.

### CME– SIP Implementation: Sample Configuration

```
CME-SIP#show version
Cisco IOS Software, 2801 Software (C2801-IPVOICE-M), Version 12.4(11)XW2, RELEASE SOFTWARE (fc1)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2007 by Cisco Systems, Inc.
Compiled Mon 02-Jul-07 19:10 by prod_rel_team

ROM: System Bootstrap, Version 12.3(8r)T6, RELEASE SOFTWARE (fc1)

CME-SIP uptime is 18 hours, 55 minutes
System returned to ROM by reload at 17:01:34 UTC Wed Oct 3 2007
System image file is "flash:c2801-ipvoice-mz.124-11.XW2.bin"

Cisco 2801 (revision 4.1) with 235520K/26624K bytes of memory.
Processor board ID FHK084510HS
11 FastEthernet interfaces
1 terminal line
2 Voice FXO interfaces
3 DSPs, 48 Voice resources
1 cisco service engine(s)
DRAM configuration is 64 bits wide with parity disabled.
191K bytes of NVRAM.
62720K bytes of ATA CompactFlash (Read/Write)

Configuration register is 0x2102
```

```
CME-SIP#show running-config
```

```
Building configuration...
```

```
Current configuration : 6227 bytes
```

```
!  
version 12.4  
service timestamps debug datetime msec  
service timestamps log datetime msec  
no service password-encryption  
!  
hostname CME-SIP  
!  
boot-start-marker  
boot-end-marker  
!  
logging buffered 999999  
no logging console  
enable password cisco  
!  
no aaa new-model  
ip cef  
!  
!  
no ip dhcp use vrf connected  
ip dhcp excluded-address 10.10.10.1 10.10.10.10  
ip dhcp excluded-address 192.168.10.1 192.168.10.10  
!  
ip dhcp pool data  
    network 10.10.10.0 255.255.255.0  
    default-router 10.10.10.1  
!  
ip dhcp pool voice  
    network 192.168.10.0 255.255.255.0  
    option 150 ip 192.168.10.1  
    default-router 192.168.10.1  
!  
!  
no ip domain lookup  
multilink bundle-name authenticated  
!  
!  
!  
voice service voip  
    allow-connections sip to sip  
    sip  
        registrar server expires max 1200 min 300  
!  
!  
!  
!  
!  
voice register global  
    mode cme  
    source-address 192.168.10.1 port 5060  
    max-dn 20  
    max-pool 10  
    load 7970 SIP70.8-2-1S  
    load 3911 SIP3951.8-0-2-9  
    authenticate register  
    authenticate realm cisco.com  
    voicemail 100  
    tftp-path flash:  
    create profile sync 0000589556325309  
!  
voice register dn 1
```

```
number 101
call-forward b2bua noan 100 timeout 20
allow watch
name Phone1
label 4085251001
!
voice register dn 2
number 102
call-forward b2bua noan 100 timeout 20
allow watch
name Phone2
label 4085251002
!
voice register dn 3
number 103
call-forward b2bua noan 100 timeout 20
allow watch
name Phone3
label 4085251003
!
voice register dn 4
number 104
call-forward b2bua noan 100 timeout 20
allow watch
name Phone4
label 4085251004
!
voice register pool 1
id mac 0016.47CD.9BD7
type 7970
number 1 dn 1
presence call-list
dtmf-relay sip-notify
username user1 password cisco
codec g711ulaw
blf-speed-dial 2 102 label "Phone2"
blf-speed-dial 3 103 label "3911-1"
blf-speed-dial 4 104 label "3911-2"
!
voice register pool 2
id mac 0014.6948.1D52
type 7970
number 1 dn 2
dtmf-relay sip-notify
username user2 password cisco
codec g711ulaw
!
voice register pool 3
id mac 001A.A11B.4FCE
type 3911
number 1 dn 3
dtmf-relay sip-notify
username user3 password cisco
codec g711ulaw
!
voice register pool 4
id mac 001A.A11B.500E
type 3911
number 1 dn 4
dtmf-relay sip-notify
username user4 password cisco
codec g711ulaw
!
voice hunt-group 1 parallel
final 100
list 102,103,104
```

```
pilot 180
!
!
!
!
voice-card 0
!
!
!
archive
 log config
 hidekeys
!
!
!
interface Loopback0
 ip address 10.1.10.2 255.255.255.0
!
interface FastEthernet0/0
 no ip address
 shutdown
 duplex auto
 speed auto
!
interface Service-Engine0/0
 ip unnumbered Loopback0
 service-module ip address 10.1.10.1 255.255.255.0
 service-module ip default-gateway 10.1.10.2
!
interface FastEthernet0/1
 no ip address
 shutdown
 duplex auto
 speed auto
!
interface FastEthernet0/3/0
 description 7970 Phone
 switchport trunk native vlan 100
 switchport mode trunk
 switchport voice vlan 192
 spanning-tree portfast
!
interface FastEthernet0/3/1
 description 7970 Phone
 switchport trunk native vlan 100
 switchport mode trunk
 switchport voice vlan 192
 spanning-tree portfast
!
interface FastEthernet0/3/2
 description 3911 Phone
 switchport trunk native vlan 100
 switchport mode trunk
 switchport voice vlan 192
 spanning-tree portfast
!
interface FastEthernet0/3/3
 description 3911 Phone
 switchport trunk native vlan 100
 switchport mode trunk
 switchport voice vlan 192
 spanning-tree portfast
!
interface FastEthernet0/3/4
 description Phone
 switchport trunk native vlan 100
```

```
switchport mode trunk
switchport voice vlan 192
spanning-tree portfast
!
interface FastEthernet0/3/5
description Phone
switchport trunk native vlan 100
switchport mode trunk
switchport voice vlan 192
spanning-tree portfast
!
interface FastEthernet0/3/6
description Phone
switchport access vlan 192
switchport trunk native vlan 100
switchport mode trunk
switchport voice vlan 192
spanning-tree portfast
!
interface FastEthernet0/3/7
description Phone
switchport access vlan 192
switchport trunk native vlan 100
switchport mode trunk
switchport voice vlan 192
spanning-tree portfast
!
interface FastEthernet0/3/8
switchport access vlan 192
!
interface Vlan1
no ip address
!
interface Vlan100
ip address 10.10.10.1 255.255.255.0
!
interface Vlan192
ip address 192.168.10.1 255.255.255.0
!
ip route 10.1.10.1 255.255.255.255 Service-Engine0/0
!
!
ip http server
!
!
!
tftp-server flash:BOOT3951.0-0-0-9.zz
tftp-server flash:SIP3951.8-0-2-9.zz
tftp-server flash:DSP3951.0-0-0-1.zz
tftp-server flash:SIP3951.8-0-2-9.loads
tftp-server flash:SIP70.8-2-1S.loads
tftp-server flash:term70.default.loads
tftp-server flash:term71.default.loads
tftp-server flash:apps70.8-0-2-55.sbn
tftp-server flash:cnu70.8-2-0-55.sbn
tftp-server flash:cvm70.sip.8-2-0-55.sbn
tftp-server flash:dsp70.8-2-0-55.sbn
tftp-server flash:jar70.sip.8-0-2-25.sbn
!
control-plane
!
!
!
voice-port 0/1/0
!
voice-port 0/1/1
```



```
!  
!  
!  
!  
!  
dial-peer voice 2 voip  
  description ** cue voicemail pilot number **  
  translation-profile outgoing PSTN_CallForwarding  
  destination-pattern 100  
  b2bua  
  session protocol sipv2  
  session target ipv4:10.1.10.1  
  dtmf-relay sip-notify  
  codec g711ulaw  
  no vad  
!  
dial-peer voice 3 voip  
  description ** cue auto attendant number **  
  translation-profile outgoing PSTN_CallForwarding  
  destination-pattern 110  
  b2bua  
  session protocol sipv2  
  session target ipv4:10.1.10.1  
  dtmf-relay sip-notify  
  codec g711ulaw  
  no vad  
!  
!  
presence  
  presence call-list  
  max-subscription 120  
!  
sip-ua  
  presence enable  
!  
!  
telephony-service  
  max-ephones 24  
  max-dn 72  
  ip source-address 10.100.100.10 port 2000  
  system message CME1  
  time-zone 5  
  voicemail 100  
  max-conferences 8 gain -6  
  call-forward pattern .T  
  web admin system name cisco secret 5 $1$4FC/$CMer08o/KELF1VrhL5QR00  
  dn-webedit  
  time-webedit  
  transfer-system full-blind  
  transfer-pattern 9.T  
!  
!  
ephone-dn 11  
  number 800  
  mwi on  
!  
!  
ephone-dn 12  
  number 801  
  mwi off  
!  
!  
line con 0  
line aux 0  
line 66  
  no activation-character
```

```
no exec
transport preferred none
transport input all
transport output pad telnet rlogin lapb-ta mop udptn v120
line vty 0 4
password cisco
login
!
scheduler allocate 20000 1000
end
CME-SIP#
```

## Verify

There is currently no verification procedure available for this configuration.

## Troubleshoot

This section provides information you can use to troubleshoot your configuration.

### SIP IP Phone does not get dial tone

A common cause for SIP IP Phones that are not able to get a dial tone is that there is another phone with the same extension. As of Cisco Unified Communications Manager Express 4.2, shared line is not supported on SIP Phones. Thus, SIP phones can not share the same extension among multiple phones. Additionally, make sure that the SIP phone is provisioned with a proper extension.

In order to resolve this issue, make sure that these occur:

- The SIP phone has the extension configured and extension shows on SIP phone.
- There is not another SIP or SCCP phone configured with the same extension.

### IP Phone Cannot Upgrade to the Latest Firmware

The most likely causes for failure to be able to upgrade a phone is missing firmware files placed on the Cisco Unified Communications Manager Express flash or missing **tftp-server** commands.

Try these steps in order to resolve this issue:

- Check that the necessary firmware files are stored on the flash. Perform the **dir flash:** command in order to check flash for files.
- Check to see if you have updated the OS79XX.TXT file to reflect the correct firmware. The 79XX phones check this file in order to load the appropriate firmware and change from SCCP to SIP.
- Check to make sure that the correct **tftp-server** statements are added for each firmware file. See the Configure TFTP section.
- Make sure the **load** command under **voice register global** is added for each type of SIP phone. See the Configure Voice Register Global Parameters section.

In order to troubleshoot further, collect these debugs in order to see if the phone is able to get the appropriate phone loads from the Cisco Unified Communications Manager Express flash.


```
Debug tftp events
```

## Unable to Provision Phone

The most likely causes for not being able to provision a phone is that the phone does not have the proper IP address with TFTP server option.

- Check to see that the phone receives an IP address and the proper TFTP server IP address.
- Make sure that all proper **voice register global** commands are added. See the Configure Voice Register Global Parameters section.
- Check that you use the correct MAC address underneath each **voice register pool** configuration.

## Related Information

- [Cisco Unified SIP Phone 3911](#)
- [Cisco Unified Communications Manager Express System Administrator Guide](#)
- [Cisco Unified CME Documentation](#)
- [Voice Technology Support](#)
- [Voice and Unified Communications Product Support](#)
- [Troubleshooting Cisco IP Telephony](#) 
- [Technical Support & Documentation – Cisco Systems](#)

---

[Contacts & Feedback](#) | [Help](#) | [Site Map](#)

© 2014 – 2015 Cisco Systems, Inc. All rights reserved. [Terms & Conditions](#) | [Privacy Statement](#) | [Cookie Policy](#) | [Trademarks of Cisco Systems, Inc.](#)

---

Updated: Nov 09, 2007

Document ID: 99946

---