

## Working with the Flash File System

- Information About the Flash File System, on page 1
- Displaying Available File Systems, on page 1
- Setting the Default File System, on page 3
- Displaying Information About Files on a File System, on page 3
- Changing Directories and Displaying the Working Directory, on page 4
- Creating Directories, on page 5
- Copying Files, on page 6
- Creating, Displaying and Extracting Files, on page 7

## **Information About the Flash File System**

The flash file system is a single flash device on which you can store files. It also provides several commands to help you manage software bundles and configuration files. The default flash file system on the device is named flash:

As viewed from the active device, flash: refers to the local flash device, which is the device attached to the same device on which the file system is being viewed.

Only one user at a time can manage the software bundles and configuration files.

## **Displaying Available File Systems**

To display the available file systems on your device, use the **show file systems** privileged EXEC command as shown in this example for a standalone device:

```
Device# show file systems
File Systems:
Size(b) Free(b) Type Flags Prefixes
- - opaque rw system:
- - opaque rw tmpsys:
1651314688 1467920384 disk rw crashinfo:
* 11353194496 6942072832 disk rw flash:
7723847680 7646384128 disk ro webui:
- - opaque rw null:
- - opaque ro tar:
- network rw tftp:
```

```
2097152 2089932 nvram rw nvram:
- - network rw rcp:
- - network rw http:
- - network rw ftp:
- - network rw scp:
- - network rw https:
- - opaque ro cns:
118014062592 111933124608 disk rw usbflash1:
```

This example displays the usbflash1 filesystem format.

Device#show usbflash1: filesys Filesystem: usbflash1 Filesystem Path: /vol/usb1 Filesystem Type: ext4 Mounted: Read/Write

#### Table 1: show file systems Field Descriptions

| Field   | Value  |  |
|---------|--|--|
| Size(b) | Amount of memory in the file system in bytes.  |  |
| Free(b) | Amount of free memory in the file system in bytes.   |  |
| Туре    | Type of file system.   |  |
|         | <b>disk</b> —The file system is for a flash memory device, USB flash, and crashinfo file.  |  |
|         | <b>network</b> —The file system for network devices; for example, an FT server or and HTTP server.   |  |
|         | nvram—The file system is for a NVRAM device.   |  |
|         | <b>opaque</b> —The file system is a locally generated pseudo file system (for example, the system) or a download interface, such as brimus |  |
|         | <b>unknown</b> —The file system is an unknown type.  |  |
| Flags   | Permission for file system.  |  |
|         | ro—read-only.  |  |
|         | <b>rw</b> —read/write.   |  |
|         | wo—write-only.   |  |

| Field    | Value   |  |
|----------|---|--|
| Prefixes | Alias for file system.  |  |
|          | crashinfo:—Crashinfo file.  |  |
|          | flash:—Flash file system.   |  |
|          | ftp:—FTP server.  |  |
|          | http:—HTTP server.  |  |
|          | https:—Secure HTTP server.  |  |
|          | nvram:—NVRAM.   |  |
|          | <b>null:</b> —Null destination for copies. You can copy a remote file to null to find its size. |  |
|          | rcp:—Remote Copy Protocol (RCP) server.   |  |
|          | scp:—Session Control Protocol (SCP) server.   |  |
|          | <b>system:</b> —Contains the system memory, including the running configuration.                |  |
|          | tftp:—TFTP network server.  |  |
|          | usbflash0:—USB flash memory.  |  |
|          | usbflash1:—External USB flash memory.   |  |
|          | <b>ymodem:</b> —Obtain the file from a network machine by using the Ymodem protocol.            |  |

# **Setting the Default File System**

You can specify the file system or directory that the system uses as the default file system by using the **cd** *filesystem:* privileged EXEC command. You can set the default file system to omit the *filesystem:* argument from related commands. For example, for all privileged EXEC commands that have the optional *filesystem:* argument, the system uses the file system specified by the **cd** command.

By default, the default file system is *flash*:.

You can display the current default file system as specified by the **cd** command by using the **pwd** privileged EXEC command.

## **Displaying Information About Files on a File System**

You can view a list of the contents of a file system before manipulating its contents. For example, before copying a new configuration file to flash memory, you might want to verify that the file system does not already contain a configuration file with the same name. Similarly, before copying a flash configuration file to another location, you might want to verify its filename for use in another command. To display information about files on a file system, use one of the privileged EXEC commands listed in the following table.

**Table 2: Commands for Displaying Information About Files** 

| Command                          | Description   |
|----------------------------------|---|
| dir [/all] [filesystem:filename] | Displays a list of files on a file system.  |
| show file systems                | Displays more information about each of the files on a file system.   |
| show file information file-url   | Displays information about a specific file.   |
| show file descriptors            | Displays a list of open file descriptors. File descriptors are the internal representations of open files. You can use this command to see if another user has a file open. |

For example, to display a list of all files in a file system, use the **dir** privileged EXEC command:

```
Device# dir flash:
DDirectory of bootflash:/
                                                       .installer
616513 drwx
                      4096 Jul 15 2015 07:11:35 +00:00
                    33818 Sep 25 2015 11:41:35 +00:00 bootloader_evt_handle.log
608402
       -rw-
                     4096 Feb 27 2017 13:56:47 +00:00 .ssh
608403 drwx
608410 -rw-
                        0 Jun 5 2015 10:16:17 +00:00 dc stats.txt
                    20480 Sep 23 2015 11:50:13 +00:00 core
608411 drwx
624625 drwx
                      4096 Sep 23 2015 12:29:27 +00:00 .prst_sync
640849 drwx
                       4096 Feb 27 2017 13:57:30 +00:00 .rollback timer
608412 drwx
                     4096 Jun 17 2015 18:12:47 +00:00 orch_test_logs
608413 -rw-
                 33554432 Sep 25 2015 11:43:15 +00:00 nvram config
608417 -rw-
                        35 Sep 25 2015 20:17:42 +00:00 pnp-tech-time
608439 -rw-
                    214054 Sep 25 2015 20:17:48 +00:00 pnp-tech-discovery-summary
608419 drwx
                      4096 Jul 23 2015 07:50:25 +00:00
                                                       util
                     4096 Mar 18 2015 11:09:04 +00:00 onep
616514 drwx
                       556 Mar 18 2015 11:19:34 +00:00 vlan.dat
608442 -rw-
                  1131779 Mar 28 2015 13:13:48 +00:00 log.txt
608448 -rw-
616516 drwx
                   4096 Apr 1 2015 09:34:56 +00:00 gs_script
616517 drwx
                      4096 Apr 6 2015 09:42:38 +00:00 tools
                       252 Sep 25 2015 11:41:52 +00:00 boothelper.log
608440
       -rw-
                     4096 Apr 17 2015 06:10:55 +00:00 SD_AVC_AUTO_CONFIG
624626 drwx
608488 -rw-
                    98869 Sep 25 2015 11:42:15 +00:00 memleak.tcl
                    17866 Jul 16 2015 04:01:10 +00:00 ardbeg x86
608437 -rwx
                    4096 Aug 20 2015 11:35:09 +00:00 CRDU
632745 drwx
632746 drwx 4096
1595361
                       4096 Sep 16 2015 08:57:44 +00:00 ardmore
                            Jul 8 2015 11:18:33 +00:00
{\tt system-report\_RP\_0\_20150708-111832-UTC.tar.gz}
                67587176 Aug 12 2015 05:30:35 +00:00 mcln x86 kernel 20170628.SSA
608491 -rw-
608492 -rwx
                   74880100 Aug 12 2015 05:30:57 +00:00 stardust.x86.idprom.0718B
11250098176 bytes total (9128050688 bytes free)
```

# **Changing Directories and Displaying the Working Directory**

Follow these steps to change directories and to display the working directory:

Device#

### **Procedure**

|        | Command or Action      | Purpose   |
|--------|------------------------|---|
| Step 1 | enable                 | Enables privileged EXEC mode.   |
|        | Example:               | • Enter your password if prompted.  |
|        | Device> enable         |   |
| Step 2 | dir filesystem:        | Displays the directories on the specified file  |
|        | Example:               | system.   |
|        |                        | For <i>filesystem:</i> , use flash: for the system board                              |
|        | Device# dir flash:     | flash device.   |
| Step 3 | cd directory_name      | Navigates to the specified directory.   |
|        | Example:               | The command example shows how to navigate to the directory named <i>new_configs</i> . |
|        | Device# cd new_configs |   |
| Step 4 | pwd                    | Displays the working directory.   |
|        | Example:               |   |
|        | Device# pwd            |   |
| Step 5 | cd                     | Navigates to the default directory.   |
|        | Example:               |   |
|        | Device# cd             |   |

# **Creating Directories**

Beginning in privileged EXEC mode, follow these steps to create a directory:

### **Procedure**

|        | Command or Action             | Purpose   |
|--------|-------------------------------|---|
| Step 1 | dir filesystem:               | Displays the directories on the specified file system.  |
|        | Example:  Device# dir flash:  | For <i>filesystem:</i> , use flash: for the system board flash device.  |
| Step 2 | mkdir directory_name Example: | Creates a new directory. Directory names are case sensitive and are limited to 45 characters between the slashes (/); the name cannot contain |

|        | Command or Action         | Purpose   |
|--------|---------------------------|---|
|        | Device# mkdir new_configs | control characters, spaces, slashes, quotes, semicolons, or colons. |
| Step 3 | dir filesystem:           | Verifies your entry.  |
|        | Example:                  |   |
|        | Device# dir flash:        |   |

## **Removing Directories**

To remove a directory with all its files and subdirectories, use the **delete /force /recursive** *filesystem:/file-url* privileged EXEC command.

Use the **/recursive** keyword to delete the named directory and all subdirectories and the files contained in it. Use the **/force** keyword to suppress the prompting that confirms a deletion of each file in the directory. You are prompted only once at the beginning of this deletion process.

For *filesystem*, use **flash:** for the system board flash device. For *file-url*, enter the name of the directory to be deleted. All of the files in the directory and the directory are removed.



Caution

When directories are deleted, their contents cannot be recovered.

## **Copying Files**

To copy a file from a source to a destination, use the **copy** *source-url destination-url* privileged EXEC command. For the source and destination URLs, you can use **running-config** and **startup-config** keyword shortcuts. For example, the **copy running-config startup-config** command saves the currently running configuration file to the NVRAM section of flash memory to be used as the configuration during system initialization.

You can also copy from special file systems (**xmodem:**, **ymodem:**) as the source for the file from a network machine that uses the Xmodem or Ymodem protocol. SSH File Transfer Protocol (SFTP) is also another option to copy switch configuration or image files. For more information, refer the *Configuring SSH File Transfer Protocol* chapter of the *Security Configuration Guide*.

Network file system URLs include ftp:, rcp:, tftp:, scp:, http:, and https: and have these syntaxes:

- FTP—ftp:[[//username [:password]@location]/directory]/filename
- RCP—rcp:[[//username@location]/directory]/filename
- TFTP—tftp:[[//location]/directory]/filename
- SCP—scp:[[//username [:password]@location]/directory]/filename
- HTTP—http:[[//username [:password]@location]/directory]/filename
- HTTPS—https:[[//username [:password]@location]/directory]/filename



Note

The password must not contain the special character '@'. If the character '@' is used, the copy fails to parse the IP address of the server.

Local writable file systems include flash:.

Some invalid combinations of source and destination exist. Specifically, you cannot copy these combinations:

- From a running configuration to a running configuration
- From a startup configuration to a startup configuration

## **Deleting Files**

When you no longer need a file on a flash memory device, you can permanently delete it. To delete a file or directory from a specified flash device, use the **delete** [/force] [/recursive] [filesystem:]/file-url privileged EXEC command.

Use the /recursive keyword for deleting a directory and all subdirectories and the files contained in it. Use the /force keyword to suppress the prompting that confirms a deletion of each file in the directory. You are prompted only once at the beginning of this deletion process. Use the /force and /recursive keywords for deleting old software images that were installed by using the archive download-sw command but are no longer needed.

If you omit the *filesystem:* option, the device uses the default device specified by the **cd** command. For *file-url*, you specify the path (directory) and the name of the file to be deleted.

When you attempt to delete any files, the system prompts you to confirm the deletion.



Caution

When files are deleted, their contents cannot be recovered.

This example shows how to delete the file *myconfig* from the default flash memory device:

Device# delete myconfig

## **Creating, Displaying and Extracting Files**

You can create a file and write files into it, list the files in a file, and extract the files from a file as described in the next sections.

Beginning in privileged EXEC mode, follow these steps to create a file, display the contents, and extract it:

### **Procedure**

|        | Command or Action                                    | Purpose                              |
|--------|--|--------------------------------------|
| Step 1 | archive tar /create destination-url flash: /file-url | Creates a file and adds files to it. |

| Command or Action   | Purpose  |
|---|--|
| Device# archive tar /create tftp:172.20.10.30/saved. flash:/new-configs | For destination-url, specify the destination URL alias for the local or network file system and the name of the file to create:  |
|   | • Local flash file system syntax:  |
|   | flash: • FTP syntax:   |
|   | ftp:[//usemame/password/@/ocation/directory/-filename • RCP syntax:  |
|   | rcp:[[//username@location]/directory]/-filename • TFTP syntax:   |
|   | tftp:[[//location]/directory]/-filename.   |
|   | For <b>flash:</b> /file-url, specify the location on the local flash file system in which the new file is created. You can also specify an optional list of files or directories within the source directory to add to the new file. If none are specified, all files and directories at this level are written to the newly created file. |
| archive tar /table source-url   | Displays the contents of a file.   |
| Example:  Device# archive tar /table flash: /new_configs                | For <i>source-url</i> , specify the source URL alias for the local or network file system. The <i>-filename</i> . is the file to display. These options are supported:   |
|   | • Local flash file system syntax:  |
|   | flash:   |
|   | • FTP syntax:  |
|   | ftp:[[//username[pxissword]@loxation]/directory]-filename • RCP syntax:  |
|   | rcp:[[//username@location]/directory]/-filename • TFTP syntax:   |
|   | tftp:[[//location]/directory]/-filename.   |
|   | You can also limit the file displays by specifying a list of files or directories after the file. Only those files appear. If none are specified, all files and directories appear.  |
| archive tar /xtract source-url flash:/file-url [dir/file]               | Extracts a file into a directory on the flash file system.   |
| Example:  | For <i>source-url</i> , specify the source URL alias   |
|   | Example:  Device# archive tar /create tftp:172.20.10.30/saved. flash:/new-configs  archive tar /table source-url  Example:  Device# archive tar /table flash: /new_configs  archive tar /xtract source-url flash:/file-url [dir/file]  |

|        | Command or Action                                      | Purpose  |
|--------|--|--|
|        | tftp:/172.20.10.30/saved.<br>flash:/new-configs        | file from which to extract files. These options are supported:   |
|        |  | • Local flash file system syntax:  |
|        |  | flash: • FTP syntax:   |
|        |  | <pre>ftp:[//usemame[password]@/acation]/directory]-filename.</pre> • RCP syntax:   |
|        |  | <pre>rcp:[[//username@location]/directory]/-filename. • TFTP syntax:</pre>   |
|        |  | tftp:[[//location]/directory]/-filename.   |
|        |  | For <b>flash:</b> /file-url [dir/file], specify the location on the local flash file system from which the file is extracted. Use the dir/file option to specify a list of files or directories within the file to be extracted. If none are specified, all files and directories are extracted. |
| Step 4 | more [ /ascii   /binary   /ebcdic] /file-url  Example: | Displays the contents of any readable file, including a file on a remote file system.  |
|        | Device# more flash:/new-configs                        |  |

**Creating, Displaying and Extracting Files**