



Enable or Disable SSH and Web UI Access

- [Enable SSH Access, on page 1](#)
- [Disable SSH Access, on page 1](#)
- [Enable Web UI Access, on page 2](#)
- [Disable Web UI Access, on page 2](#)

Enable SSH Access

Procedure

- Step 1** To enable access to the SSH, use the following command:
- ```
Device# configure ssh enable
```
- Step 2** To verify whether SSH is enabled, use the following command:
- ```
Device# show ssh
```
- ```
SSH: enabled
```
- 

### Disable SSH Access

#### Procedure

---

- Step 1** To disable access to the SSH, use the following command:
- ```
Device# configure ssh disable
```
- Step 2** To verify whether SSH is disabled, use the following command:

```
Device# show ssh  
SSH: disabled
```

Enable Web UI Access

Procedure

Step 1 To enable Web UI access, use the following command:

```
Device# configure webui enable
```

Step 2 To verify whether web UI access is enabled, use the following command:

```
Device# show webui config  
Web-UI: enabled
```

Disable Web UI Access

Procedure

Step 1 To disable Web UI access, use the following command:

```
Device# configure webui disable
```

Step 2 To verify whether web UI access is disabled, use the following command:

```
Device# show webui config  
Web-UI: disabled
```
