




Upgrade the Device using GUI

- [Upgrade the device using GUI, on page 1](#)

Upgrade the device using GUI

Procedure

- Step 1** Launch the computer's web browser and enter the URL to open the URWB configurator login page.
- Step 2** Enter the username and password in their respective fields.
- Step 3** Click **Login**.
After successfully logging into the GUI, the URWB configurator page is displayed.
- Step 4** In the **MANAGEMENT SETTINGS**, click the **firmware upgrade** link to open the **FIRMWARE UPGRADE** window.
- Step 5** Click the **Browse** button to locate and select the firmware upgrade file.
- Step 6** Click the **Upgrade** button to initiate the upgrade process.
- Step 7** Click **OK** to confirm uploading the firmware file to the device.
Once the firmware is successfully uploaded to the device, the AP verifies the image and then reboots.



ULTRA RELIABLE
WIRELESS BACKHAUL

Cisco URWB IW9165E Configurator
5.81.160.164 - MESH END MODE

IW Service

Offline

IW Monitor

Disabled

QUADRO

GENERAL SETTINGS

- general mode

- wireless radio

- antenna alignment and stats

NETWORK CONTROL

- advanced tools

ADVANCED SETTINGS

- advanced radio settings

- static routes

- allowlist / blocklist

- multicast

- snmp

- radius

- ntp

- ethernet filter

- l2tp configuration

- vlan settings

- Fluidity

- misc settings

- smart license

MANAGEMENT SETTINGS

- remote access

- firmware upgrade

- status

- configuration settings

- reset factory default

- reboot

- logout

FIRMWARE UPGRADE

Firmware upgrade

Upload and upgrade the firmware using a firmware upgrade file.
Firmware upgrades are available to registered users at software.cisco.com.
WARNING: POWERING OFF OR UNPLUGGING A Cisco URWB UNIT DURING A FIRMWARE UPGRADE PROCEDURE WILL PERMANENTLY DAMAGE THE UNIT

Current version: **17.16.0.80**

Select the firmware file to upload and start the upgrade:

Browse

ap1g6m-k9c1-tar.17.16.0.88.tar

Upgrade

© 2024 Cisco and/or its affiliates. All rights reserved.