



System Accounts on the Cisco Vision Dynamic Signage Director Servers

First Published: 2016-11-30

This module describes the default system accounts implemented by Cisco Vision Dynamic Signage Director and Cisco Vision Dynamic Signage Director Remote for access and control of certain server functions. Aside from the admin account, these system accounts are generally separate from the user accounts that secure access to the Cisco Vision Dynamic Signage Director feature configuration and operation.

In addition, only a few of these accounts are intended for general modification after installation of the server. Other system accounts are reserved for special services or technical support and should not be modified unless you are instructed to do so, or you otherwise understand the impact to your server installation.

For information about user accounts and Role-Based Access Control (RBAC) in Cisco Vision Dynamic Signage Director, see [User Management in Cisco Vision Dynamic Signage Director, page 71](#).

Contents

- [Information About System Accounts, page 67](#)
- [How to Change System Account Passwords, page 69](#)

Information About System Accounts

All of the system accounts are automatically implemented upon installation of the Dynamic Signage Director software.

This section provides an overview of the default system accounts in Cisco Vision Dynamic Signage Director:

- [Common System Accounts, page 68](#)
- [Other System Accounts, page 69](#)

Common System Accounts

Table 1 on page 68 describes the common system accounts in Cisco Vision Dynamic Signage Director and Cisco Vision Dynamic Signage Director Remote that are intended for you to modify after deployment of your server, and on which server platform they are supported. These common system accounts are automatically implemented upon installation of the Dynamic Signage Director software.

Table 1 Description of Common System Accounts

Account	Purpose	Server Platform
Admin	<p>Cisco Vision Dynamic Signage Director</p> <p>Account that provides access to the administrator RBAC functions in the Cisco Vision Dynamic Signage Director user interface(UI).¹ It is automatically implemented upon installation of the Dynamic Signage Director software.</p> <p>The username is: admin</p> <p>The default password is: admin</p> <p>Using the Text Utility Interface (TUI) to change the admin account password allows an installer to recover access to the Cisco Vision Dynamic Signage Director UI. The password for the admin user account can also be changed in the Cisco Vision Dynamic Signage Director Control Panel Setup or by setting the option to force a password change upon initial login with the admin account.</p> <p>Cisco Vision Dynamic Signage Director Remote</p> <p>Account that provides access to the applications on the Cisco Vision Dynamic Signage Director Remote Main Menu, such as System State Reports and the Software Manager.</p> <p>The username is: admin</p> <p>There is not a default password. You must configure the password after the software is first installed.</p>	<p>Cisco Vision Dynamic Signage Director</p> <p>Cisco Vision Dynamic Signage Director Remote</p>
Installer	<p>Account that provides access to the TUI using a directly-connected console or SSH client.</p> <p>The username is: installer</p> <p>The default password is: cisco!123.²</p>	<p>Cisco Vision Dynamic Signage Director</p> <p>Cisco Vision Dynamic Signage Director Remote</p>
JMX	<p>Global account that implements monitoring services of Cisco Vision Dynamic Signage Director Remote servers in the Management Dashboard of the centralized Cisco Vision Dynamic Signage Director server.</p> <p>There is no default password. The password must be configured on both the Cisco Vision Dynamic Signage Director and Cisco Vision Dynamic Signage Director Remote servers.</p> <p>To support monitoring, the Cisco Vision Dynamic Signage Director Remote server JMX account must match what is configured in the centralized Cisco Vision Dynamic Signage Director server.³</p>	<p>Cisco Vision Dynamic Signage Director</p> <p>Cisco Vision Dynamic Signage Director Remote</p>

1. For more information on the administrator role in Cisco Vision Dynamic Signage Director, see [User Management in Cisco Vision Dynamic Signage Director, page 71](#).

2. For more information about the TUI, see [Cisco Vision Dynamic Signage Director Server Text Utility Interface, page 103](#).

3. For more information, see [Configuring Cisco Vision Dynamic Signage Director Remote Servers, page 43](#).

Other System Accounts

Table 2 describes some other default system accounts that are reserved for use in Cisco StadiumVision troubleshooting or other specialized access.

Table 2 Description of Reserved System Accounts

Account	Purpose	Server Platform
admgr	Reserved for use by special agreement with Cisco Systems to support the Media Planner Import API. ¹	Cisco Vision Dynamic Signage Director
MySQL	Reserved for internal use only to access the MySQL database account.	Cisco Vision Dynamic Signage Director
TAC user	Reserved for troubleshooting with remote shell access. This account should remain disabled and only activated when instructed by Cisco Technical Support for troubleshooting.	Cisco Vision Dynamic Signage Director Cisco Vision Dynamic Signage Director Remote

1. For more information about the Media Planner Import API and other API support in Cisco Vision Dynamic Signage Director, see the *Cisco StadiumVision Director Operations Guide*.

How to Change System Account Passwords

You can change system account passwords from the defaults on the Cisco Vision Dynamic Signage Director and Cisco Vision Dynamic Signage Director Remote servers using the TUI.

Note: To navigate through the TUI menus you must type the character that corresponds to the menu area where you want to go (a, b, c, and so on) and press Enter. To return to other menus, you must back out of the hierarchy of menus using one of the indicated keys to return you to prior menus.

To change system account passwords, complete the following steps:

1. On the Cisco Vision Dynamic Signage Director or Cisco Vision Dynamic Signage Director Remote server, log into the TUI by doing the following:
 - a. Use a directly connected console, or use an SSH client from a laptop computer that is connected to the Cisco Vision Dynamic Signage Director network to run a secure login to the primary Cisco Vision Dynamic Signage Director server using the IP address for your server.
 - b. When the login prompt appears, enter the **installer** userid followed by the installer password at the password prompt.
2. From the Main Menu, go to **System Accounts**.
3. Select the system account whose password you want to change.
4. At the prompt, type the new password.
5. When prompted to confirm, retype the password.
6. Press any key to return to the System Accounts menu.
7. Return to the Main Menu and exit the TUI.

How to Change System Account Passwords